 


LCD digital colour TV

C3770DVBT2 V1

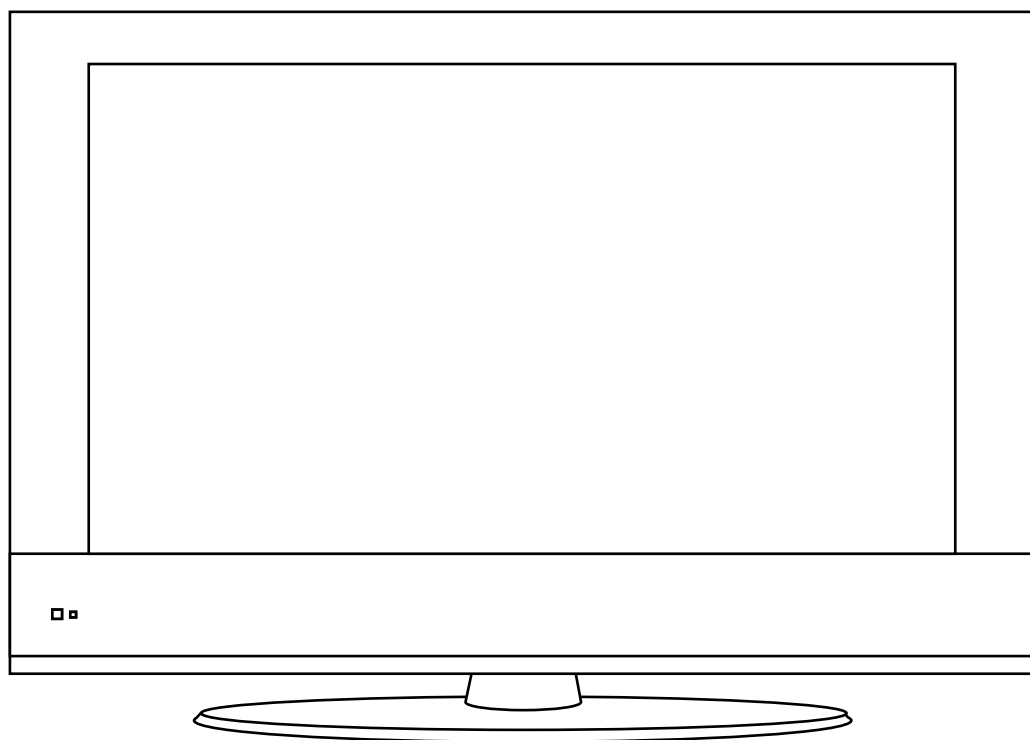

USER GUIDE

Introduction

Thank you for purchasing this TV which has been designed and manufactured to give you many years of trouble free service.

You may already be familiar with using a similar product but please take time to read these instructions which have been written to ensure you get the very best from your purchase.

HDMI

HDMI (High Definition Multimedia Interface) is the next generation of digital interface. Unlike conventional connections, it transmits uncompressed digital and audio signals using a single cable. This TV supports high-definition video input via the HDMI socket on the back of the TV.

Safety is important

To ensure your safety and the safety of others, please read the safety precautions BEFORE you operate this product.

Contents

You will find the following

- TV
- User Guide
- Quick Start Guide
- Remote Control
- 2 x AA Batteries

NOTE: If any of the items listed are damaged or missing please contact our technical helpline on 0871 288 7345

Contents

1	Introduction
2	Contents
3-5	Safety Information
<hr/>	
6-7	Unit and Accessories
8-11	Remote Control
12	Aerial connection
13-17	Connecting external devices
18	Common Interface slot
19	Auto installation setup
19	Source menu
20-27	Menu settings
28-30	Multimedia Operation
31-33	Recording Operation
<hr/>	
34	Simple Troubleshooting
35	Technical Specifications
36	Wall Mounting

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY BEFORE USE.

Take note of the following safety information which appears on the back of the TV.



CAUTION TO PREVENT ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS, NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates that there are important operating maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Keep these instructions

- Do not use this TV near water.
 - Clean only with a slightly damp cloth.
 - Do not block any ventilation openings.
 - Install in accordance with the supplied Quick Start Guide and this User Guide.
 - Protect the power chord from being walked on or pinched, particularly at plugs, and the point where it exits from the TV.
 - Do not allow the power chord to overhang the edge of a table.
 - Unplug this TV during lightening storms or when unused for long periods of time.
-



WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS TV TO RAIN OR MOISTURE. THE TV MUST NOT BE EXPOSED TO DRIPPING AND SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE TV.

NOTE: No naked flames such as candles should be placed on the TV.

IMPORTANT SAFETY INFORMATION (Continued)

This unit has been produced according to all current safety regulations. The following safety tips should safeguard users against careless use and the dangers connected with such use.

- Although this appliance has been carefully manufactured and rigorously checked prior leaving the factory, as with all electrical appliances it is possible for problems to develop. If you notice smoke, an excessive build up of heat or any other unexpected phenomena, you should disconnect the plug from the mains power socket immediately.
- Ensure that the unit is sufficiently ventilated! Never place next to or underneath curtains!
- The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- This set should only be connected to a mains power supply which matches that stated on the label on the rear of the TV – do not attempt to connect it to any other type of supply.
- The socket – outlet must be installed near the equipment and easily accessible.
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
- Apparatus with Class 1 construction shall be connected to a mains socket outlet with a protective earthing connection.
- Keep away from rodents. Rodents enjoy biting into electric flexes.
- Always hold the plug when pulling out the plug from the mains supply socket. Do not pull on the flex, the flex can become overloaded and cause a short circuit.
- Set up the unit so that no one is able to trip over the flex.
- Do not place heavy items on the flex, which may damage it.
- Take note that the flex cannot be reached and pulled by young children, avoiding injury.
- Do not set up the unit near to heat sources. The casing and the flex could be damaged by the impact of heat.
- The screen is made of plastic and can break if damage is done to it. Be careful when collecting sharp edged plastic splinters to avoid injury.
- Avoid placing the unit on any surfaces that may be subject to vibrations or shocks.
- To protect the unit during a thunderstorm unplug the AC power cable and disconnect the aerial. Caution: Do not touch the aerial (RF) connector.
- When you leave your home for long periods of time, unplug the AC power cable for safety reasons.
- The unit becomes warm when in operation. Do not place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked. Do not set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 5 cm (2") free space around the whole unit.
- Do not allow water or moisture to enter the TV. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Do not use this unit when moisture condensation may occur
- Any repairs must be carried out by qualified personnel only.
- Do not open this unit. A non – expert attempting to repair the unit could be dangerous and potentially cause a fire hazard.

IMPORTANT SAFETY INFORMATION (continued)

- Liquids spilt into the unit can cause serious damage. Switch the set OFF and disconnect the mains power supply, then consult a qualified service person before attempting to use the unit again.
- Do NOT remove the safety covers. There are no useable or serviceable parts inside. You may invalidate the warranty. Qualified personnel must only service this apparatus.
- Do NOT tap or shake the screen, you may damage the internal circuits. Take good care of the remote control, do not drop.
- Never place hot objects or open flame sources on or close to the TV.
- High temperatures can melt plastic and lead to fires.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp cloth with dilute detergent.

Headphone Warning

 
Loud music can damage your hearing irreversibly, therefore do not set the volume to a high level when listening through headphones, particularly for lengthy listening periods.

Where to install

Locate the television away from direct sunlight and strong lights, soft indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place the TV on a sturdy platform of which the surface should be flat and steady. This will prevent it from falling over.

Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or damage the screen, and so that small objects cannot be inserted into the ventilation slots or openings in the cabinet.

Unit and Accessories

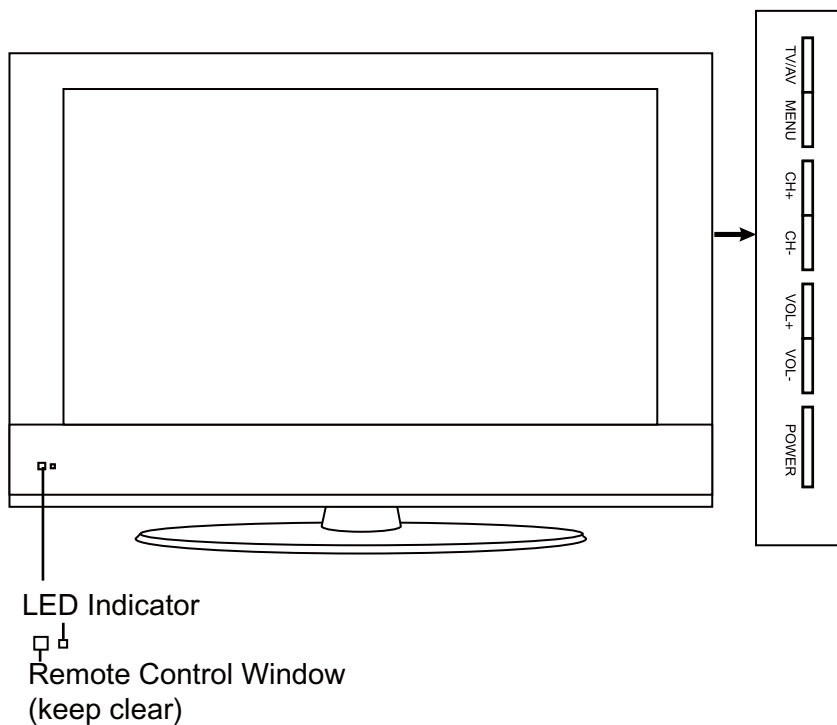

The functions of the TV buttons are described below.

Menu : Press to display the OSD menu, press again to exit the menu.

 
Vol +/- : Press to adjust the volume.

CH+/- : Press to skip through the channels.

TV/AV : Press to display the input source menu.

Power : Turn ON/OFF the TV set.

Unit and Accessories (continued)

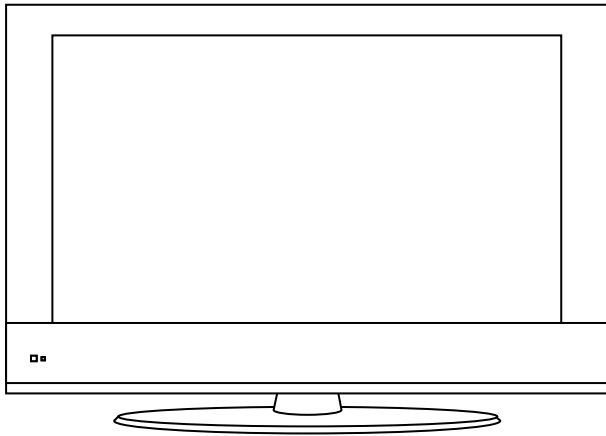

TV set



Remote Control



Batteries



 
Power cable




Converter cable for
AV and YPbPr video



Quick Start Guide

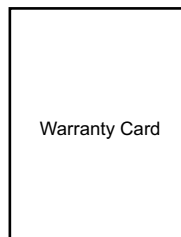

Warranty Card

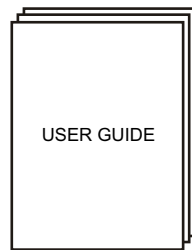 


User Guide

Remote control


- Functions of remote control buttons

 Dependant on the model of the TV some keys will have no function

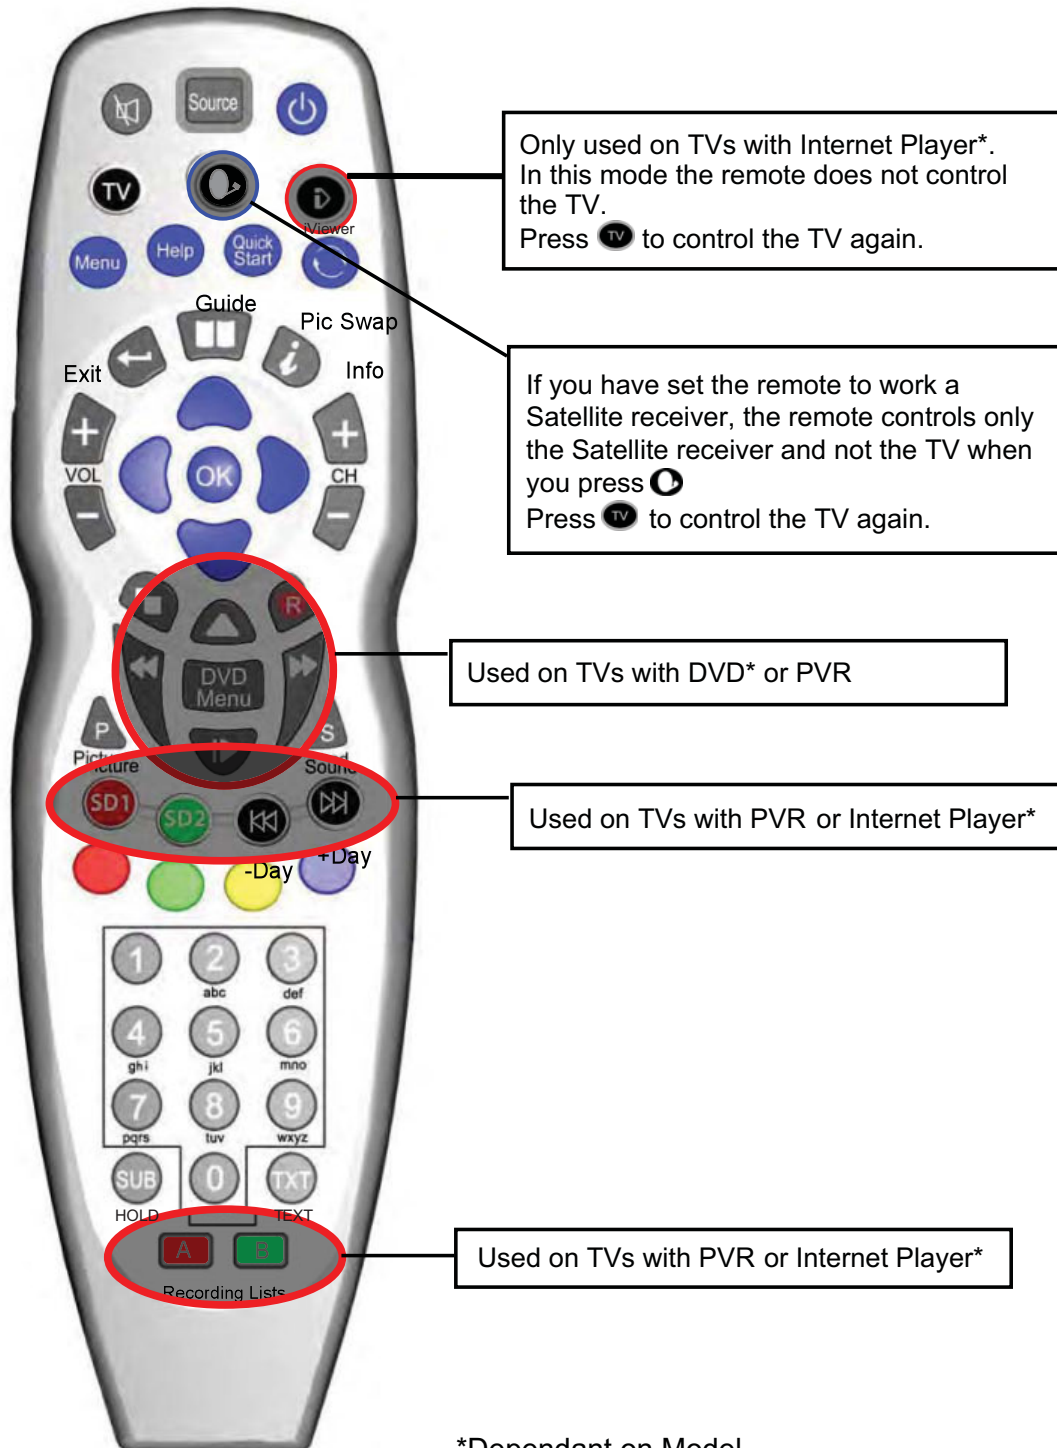

Remote control (continued)

 Dependant on the Model of the TV some keys will have no function

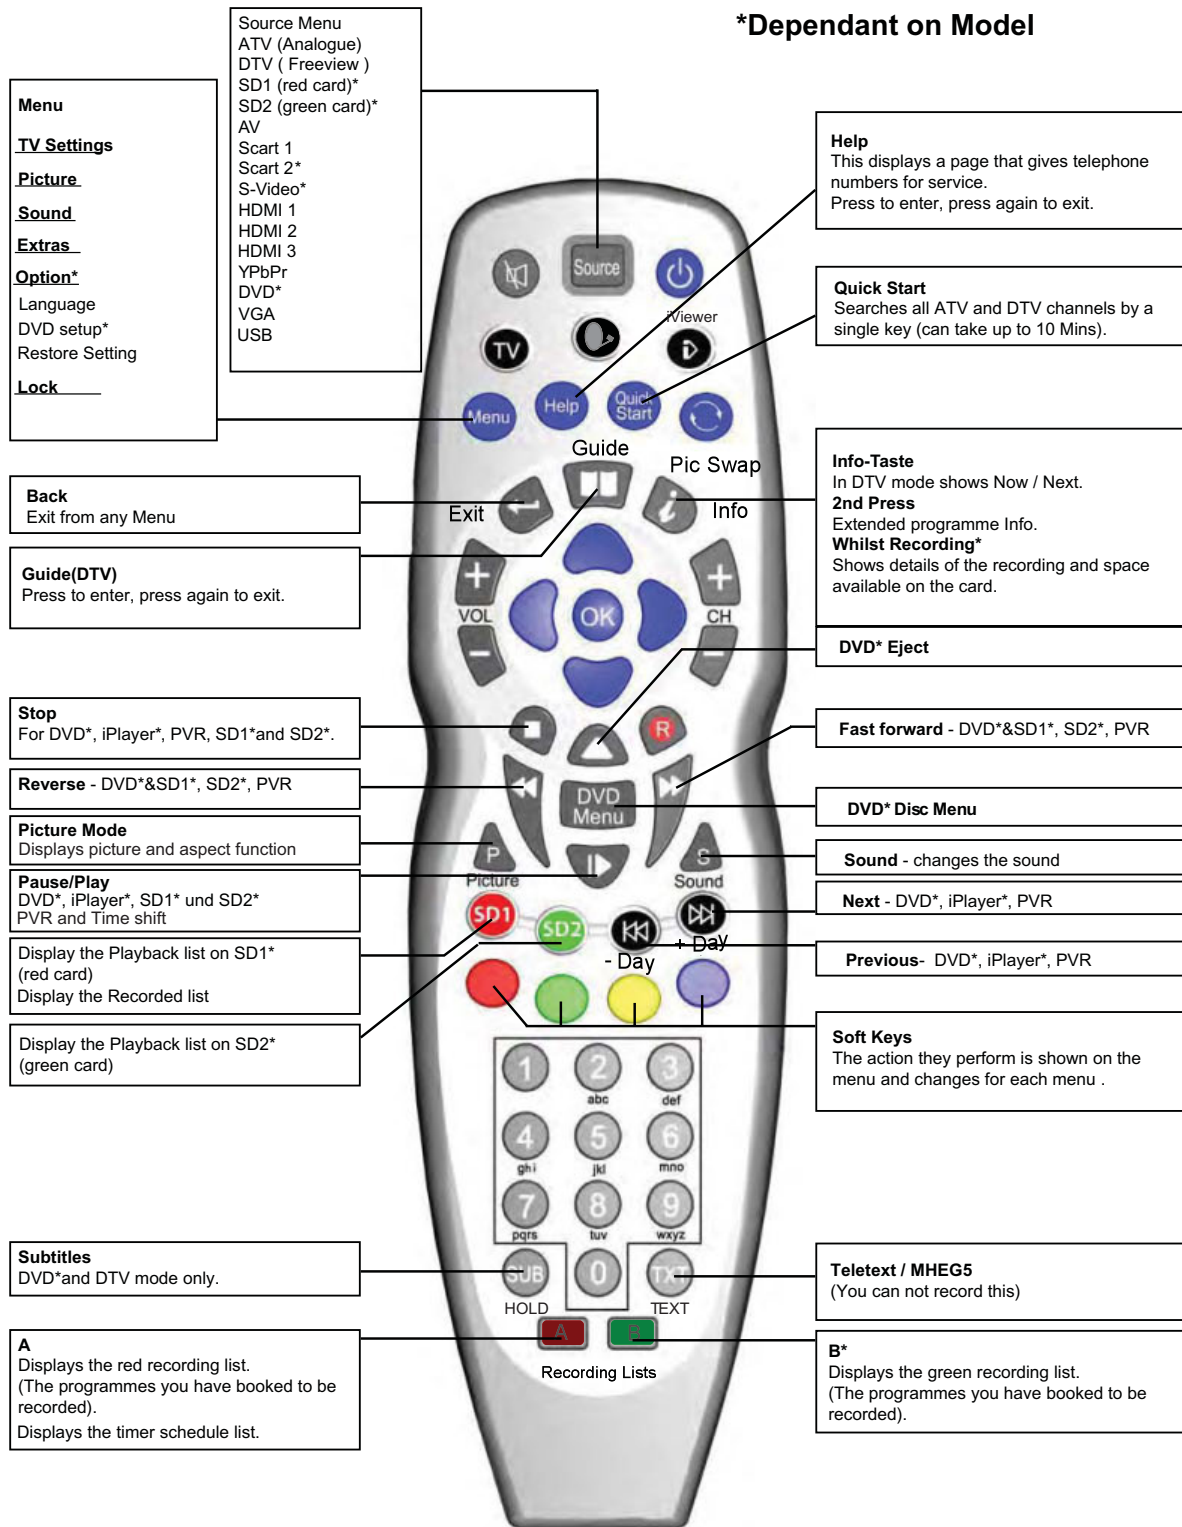

Remote control (continued)

Dependant on the model of TV some keys will have no function

*Dependant on Model



TV This button puts the Remote in TV control mode

Sat This button puts the Remote in a Multi Satellite control mode


* A number of modes are available. See below for details


Internet Player This button puts the Remote into an Internet Player mode

*This is only used on some TVs and Digital Boxes


To Set the Multi-Satellite Mode button


The Sat button  is programmable in the remote and can be set as follows:






To set the button if you have no Satellite Receiver:
Press  and at the same time press 0

If you have a Satellite Receiver with Recorder (Known as "Plus" type)
Press  and at the same time press 1

If you have a Satellite Receiver with High Definition (Known as "HD" type)
Press  and at the same time press 2

If you have a normal Digital Satellite Receiver (Known as "Digital" type)
Press  and at the same time press 3


If you want to use this button to switch on the DVD* Player
Press  and at the same time press 4
DVD* Player only fitted on certain models.

- | | |
|---|-----------------------|
|  | + 0 ~ NO SAT RECEIVER |
|  | + 1 ~ SAT + |
|  | + 2 ~ SAT HD |
|  | + 3 ~ SAT DIGITAL |
|  | + 4 ~ DVD |

Remote control (continued)

Installing Batteries in the Remote Control

 1. Remove the battery compartment cover at the rear of the remote control by pushing the retaining clip forward and pulling up.
2. Install the supplied batteries, ensuring the polarity matches what is shown in the battery compartment.
3. Replace the battery compartment cover.

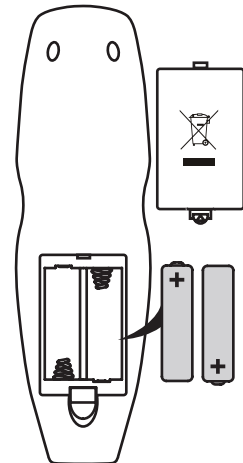

Using the Remote Control

To use the remote control point it at the TV and press the required buttons. You must be within 6 meters and at an angle of less than 30 degrees from the center of the TV.

NOTE: Sunshine or other strong light sources may interfere with the signal from the remote control. In this situation turn the TV away from the light source.



WARNING! DO NOT LEAVE BATTERIES IN THE REMOTE CONTROL FOR EXTENDED PERIODS AS THEY CAN LEAK OR CORRODE CAUSING DAMAGE TO THE REMOTE CONTROL. CHECK THEM PERIODICALLY AND REPLACE THEM AS REQUIRED.



WARNING! DO NOT MIX BATTERY TYPES. WHEN INSERTING BATTERIES, REPLACE ALL BATTERIES AT THE SAME TIME. DO NOT MIX OLD AND NEW BATTERIES.



WARNING! EXHAUSTED BATTERIES MUST BE TREATED WITH CARE AND DISPOSED OF ACCORDING TO ANY SAFETY OR RECYCLING REGULATIONS IN FORCE IN YOUR LOCAL AREA, NEVER DISPOSE OF BATTERIES INTO GENERAL WASTE, OR FIRE.



WARNING! NEVER EXPOSE BATTERIES TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.

 
Aerial connection

WARNING! ENSURE THE TV AND ALL ANCILLARY EQUIPMENT IS UNPLUGGED FROM THE MAINS BEFORE MAKING ANY CONNECTIONS!

Connecting the TV Antenna

Connect the TV Antenna to the aerial socket with a 75 ohm co-axial plug. For best results use a high gain TV aerial, preferably roof or loft mounted.

- To improve picture quality in a poor signal area, purchase and install a signal amplifier.
- If the antenna needs to be split for two TVs, use a 2-Way Signal Splitter (not supplied).

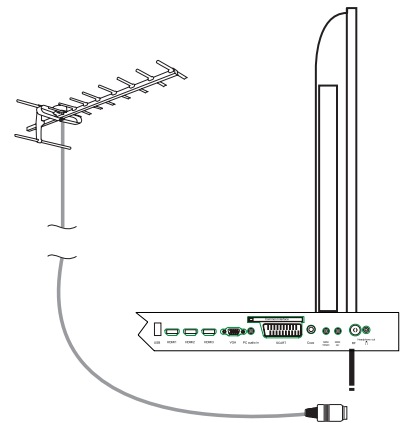

Connecting external devices

This instruction manual shows the simplest and most effective way of connecting your TV to ancillary equipment. Alternate methods are listed below.

HDMI Lead

You can connect this TV to a compatible device using a HDMI lead. This method will give the best picture.

Connect the cable from the HDMI equipment to the TV HDMI socket.

 
SCART Lead

You can connect this TV to a compatible device using a SCART lead. The connection uses component video signals, i.e. the red, green and blue (RGB) content of the video are sent on separate signals.

VGA Cable

You can use your TV as a monitor for your personal computer by using a VGA cable. Sound from your personal computer may also be played through the TV.

Connecting external devices (continued)

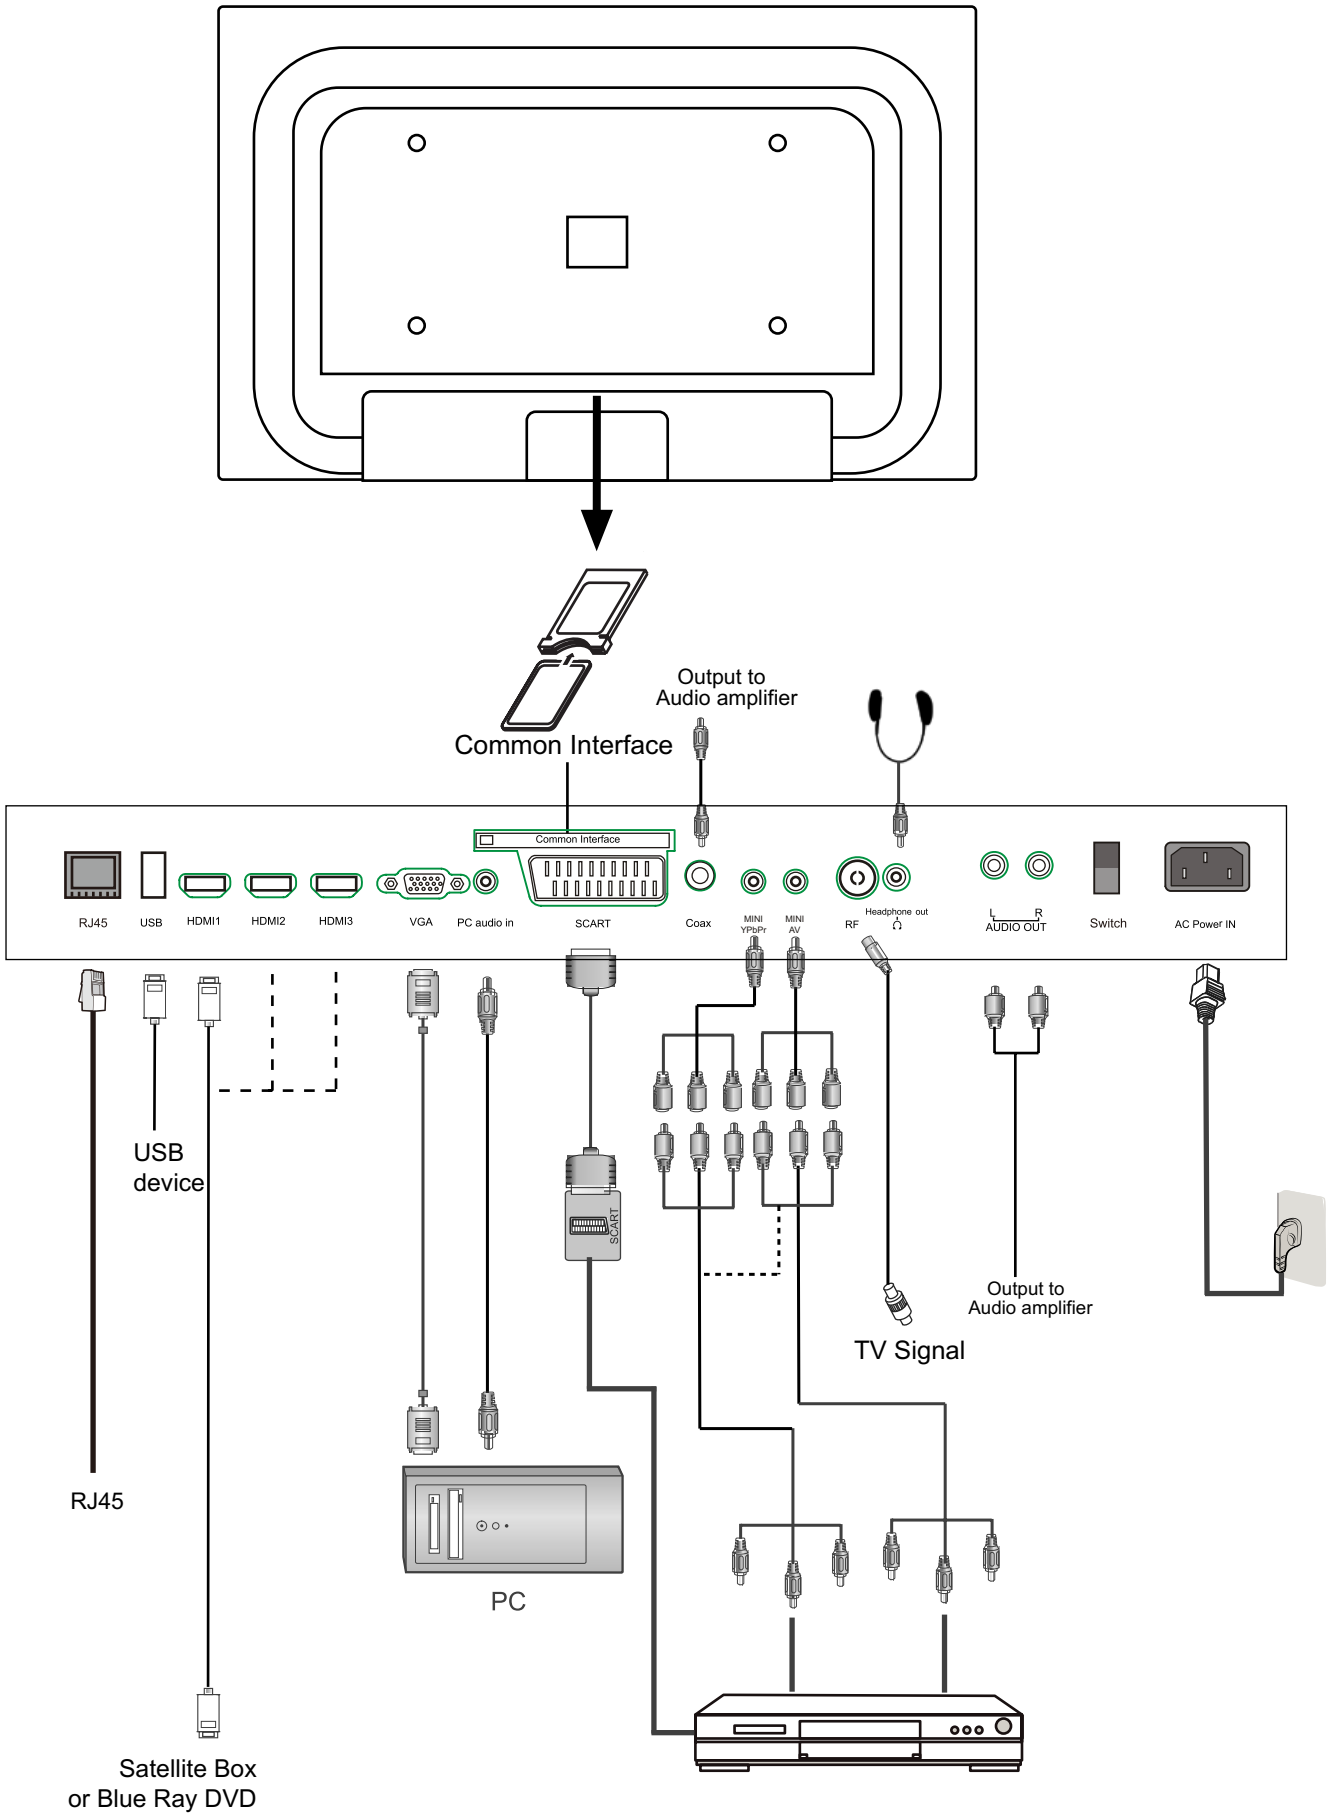

Connecting external devices (continued)

CONNECTIONS

Name		Function Description
AC POWER IN		Connect to power supply
SWITCH		Turn on/off the power supply
USB		Connect to USB device for multimedia
HDMI1/2/3		Connect to the HDMI socket of your DVD or Satellite Box
VGA		Connect to the PC VGA output to display PC graphics
PC audio in		PC audio input
SCART		Connect to the scart input / output of external devices
CI		CI slot (pay as you view card slot)
COAX		Output to audio amplifier
mini YPbPr		Connect to the YPbPr output on external devices with the converter cable
mini AV	VIDEO	Connect to the video output of external devices with the converter cable
	Audio L/R	Connect to the audio signal input for AV with the converter cable (Shared with YPbPr)
RF		Connect to antenna or cable source
Ω Headphone		Connect Headphone
(AUDIO)L/R out		Output to audio amplifier
RJ45		For automatic upgrades for MHEG5(Digital Text interactive services) and HD services.

Caution:

Before connecting external devices:

- Make sure to disconnect the appliances from the power supply in order to avoid any potential damage from occurring.
- Make sure to establish the required connection.
- Make sure that the connectors are properly and correctly attached before connecting the appliances to the power supply.

Connecting external devices (continued)

PC connection

As PCs are sometimes still supplied with a 'conventional' CRT monitor, you may need to adjust the display settings of your PC's graphics card, otherwise the pictures may not appear correctly. Switch on your PC (still with your original monitor connected) now select the screen resolution, and select 60Hz refresh rate. Switch off your PC, then connect it to your TV while both appliances are still switched off.

VGA, HDMI PC Connection

 
Use a PC-VGA cable (not supplied) to connect the TV to your PC. You can also use an HDMI cable to connect to your PC (if your PC Graphic card supports HDMI). When the HDMI cable is used, the PC audio cable is no longer required. If you use the HDMI to DVI cable, you will need to use the PC audio cable. Connect all cables carefully and do not bend or break the connector pins.

When using the VGA cable

- Switch on the TV
- Switch on the PC
- Select PC/VGA as input source

When using the HDMI cable

- Select HDMI as input source

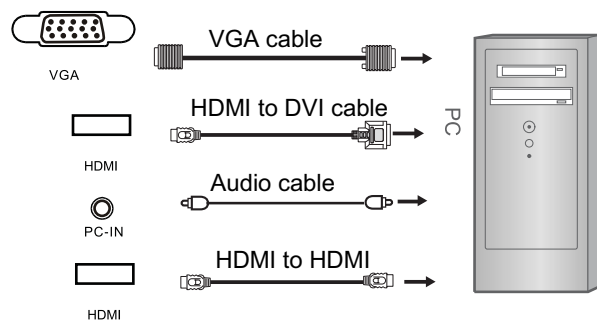

(All illustrated cables are not supplied)

Connecting external devices (continued)

Connecting Video camera and Video recorder

Video camera

- Connect the AV cable to the TV and to the video camera.
- Turn on both video camera and the TV.
- Select AV/CVBS source
- You can now see the playback picture from the video camera.

Note:

 
- To connect the video camera using other cables, refer to the video camera instruction manual.

Video recorder

- Connect the Scart cable to the TV and video recorder.
- Turn on both video recorder and the TV.
- Select Scart source
- You can now see the playback picture from the video recorder.

Note:

- To connect the video recorder using other cables, refer to the video recorder instruction manual.

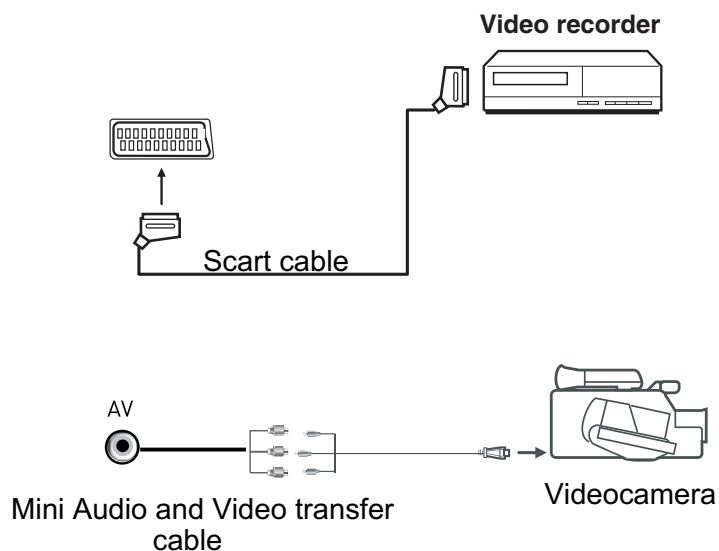


(MiniAVcables are supplied)

Connecting external devices (continued)


Connecting an audio system

 You can supply the TV sound to the stereo system (A) via either the analogue Cinch audio output or the digital audio output (coaxial) (B).

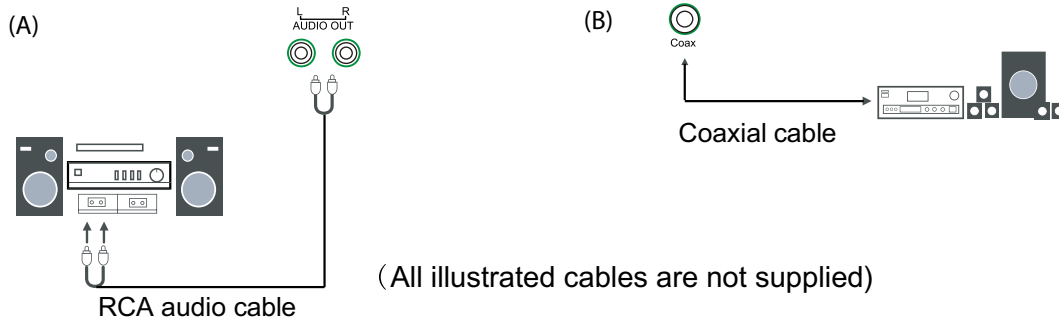

Using the coaxial Digital Audio Output

 
If you have a digital sound amplifier / decoder (B), use a coaxial cable to connect the digital audio output (coaxial) of your TV set to the corresponding digital audio input of your digital sound system. (Please consult your digital audio system's instructions for details)

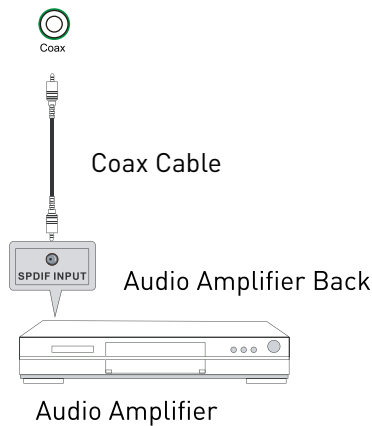

Connect to Audio Amplifier device to the COAX output jack on the TV.

Connecting a DVD player

 Connect a DVD player using either a SCART cable or the HDMI cable. (only if your external equipment supports HDMI).

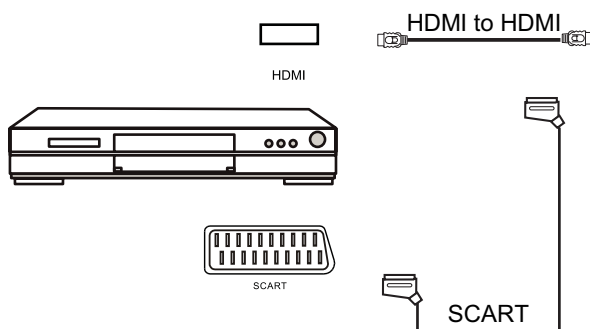

When using the SCART cable

- Switch on the TV
- Switch on the DVD player
- Select SCART as input source

When using the HDMI cable

- Select HDMI as input source

(All illustrated cables are not supplied)

Common Interface Slot

 
USING YOUR COMMON INTERFACE SLOT

Common Interface

The Common Interface (CI) slot is designed to accept the Conditional Access Module (CAM) and Smart Card in order to view the pay TV programmes and additional services. Contact your Pay Per View TV service provider to get more information about the modules and subscriptions.

NOTE: Conditional Access Module and Smart Cards are sold separately.

WARNING! SWITCH OFF YOUR TV BEFORE ANY MODULE IS INSERTED INTO THE COMMON INTERFACE SLOT, THEN ADD THE SMART CARD TO THE CAM.

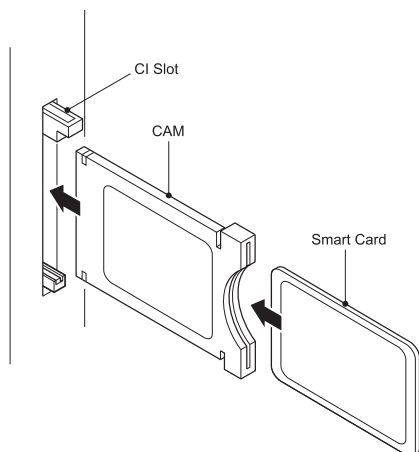

1. Turn on the TV and ensure 'DTV' Source is selected.
2. If the CAM is detected the TV will display the following message on the screen. "Common Interface Module inserted" wait for a few moments until the card is activated.
3. Select the relevant digital Pay Per View channel.
4. Detailed information on the Smart Card in use is displayed
5. Press the Ok button to access the card menu. Refer to the Module Instruction Manual for setting details.
6. When the module is removed, the following message will appear on the screen. "Common Interface module removed".

Auto installation setup



Power On / Off the TV


Press the power button on the LCD TV or the  button on the remote control, the standby indicator will light green.

To turn off the TV

 
Press the power button on the LCD TV or the  button on the remote control, the standby indicator will light red.

When you initially turn on the TV you will see the first time installation menu as below:

Ensure that the aerial is plugged into the TV, Make sure your Remote is in TV mode (by pressing  button), switch on the TV by pressing . You will see the first time installation menu.



Press the  button on the remote control to start the tuning procedure. This process will find all available ATV and DTV channels and store them.

By pressing the Quick Start button the first time installation can be recalled at any time.

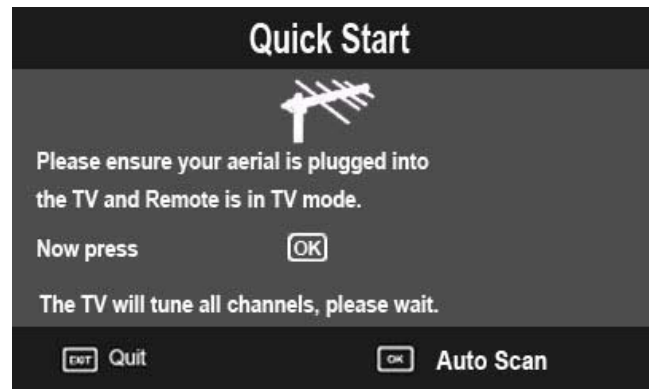

Source Menu

  You can select the input source menu by pressing the Source button on the remote control or the TV / AV button on the TV.

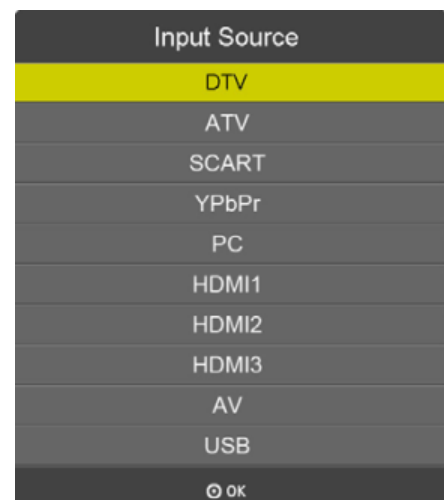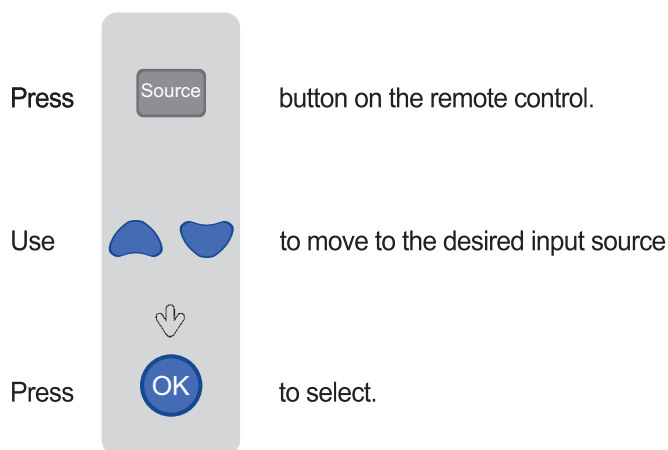


Menu Settings

1. Turn the TV on.
2. Press the MENU button on the Remote Control.
3. Use the ◀ and ▶ buttons to navigate through the menu.
4. Press the EXIT button to exit the Menu.


TV SETTINGS MENU

 Allows you to search channels and set up a variety of channel options.
(Select DTV source for example)

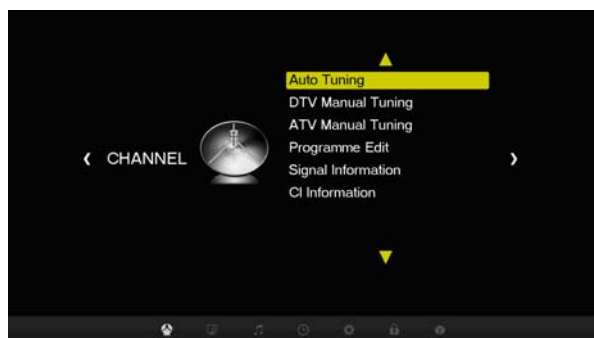


PICTURE MENU:

 Allows you to make adjustments to your picture settings.
(Select DTV source for example)

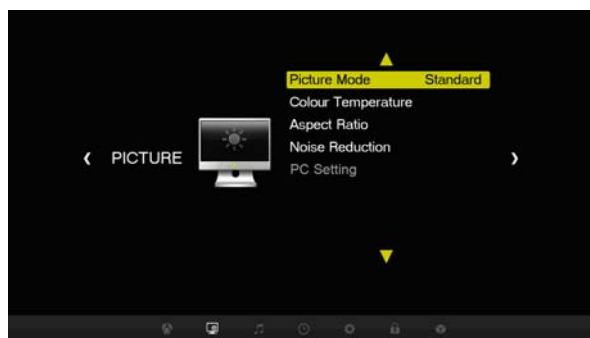


SOUND MENU:

 Allows you to customize the sound options and effects.
(Select DTV source for example)

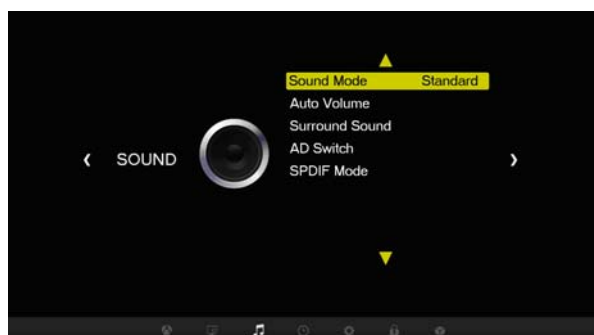


TIME MENU:

 Allows you to setup a variety of time options.
(Select DTV source for example)

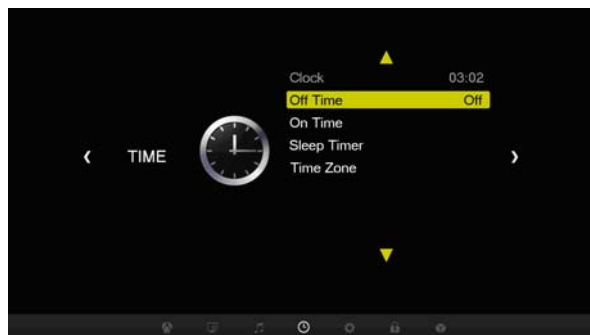


OPTIONS MENU:

 Allows you to setup a variety of setup options.
(Select DTV source for example)

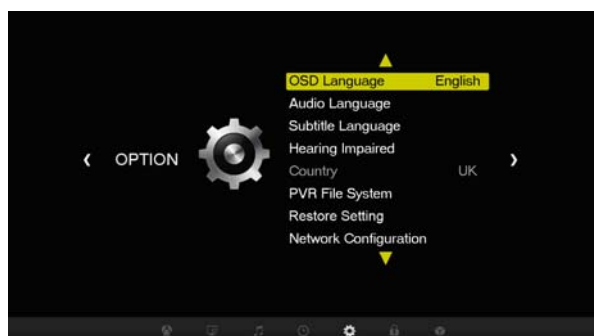

LOCK MENU:

 
Allows you to set up a variety of lock and setup options.
(Select DTV source for example)

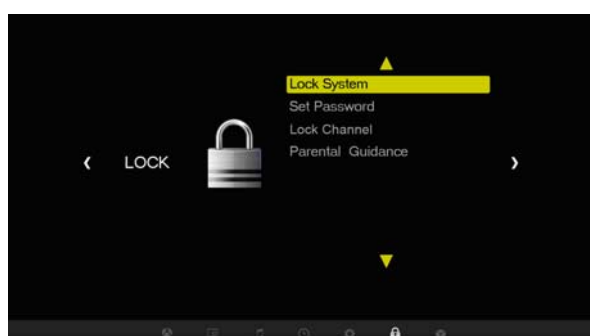

Note: Use the left right up down navigation buttons to select the required options in the menus.

Menu Settings (continued)

 1. TV SETTINGS menu

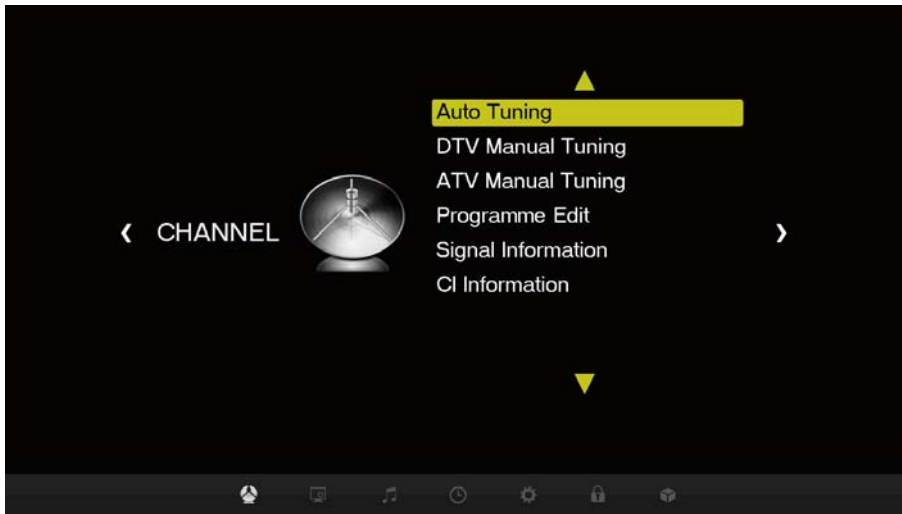

Description

 
Auto Scan

Press the **OK** button to enter the menu, and select the Channel Tuning mode and the Country for the TV, then press **OK** button start the auto tuning.



DTV Manual Tuning

Press the **OK** button to enter the DTV Manual Tuning menu, select a DTV channel, press the **OK** button to start searching.

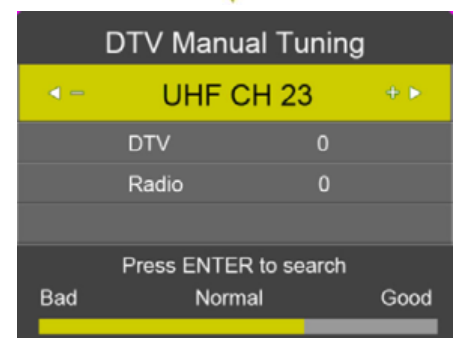

ATV Manual Tuning

Press the **OK** button to enter the ATV Manual Tuning menu.

Storage To: Select a position for storing the programme.

System: Select a TV system for searching.

Current CH: Select the channel you want to manually tune.

Search: Press ◀ / ▶ buttons to manually search.

Fine Tune: Press ◀ / ▶ buttons to fine-tune.

Frequency: Displays the current frequency.

Note: Press the RED button to save your settings



Menu Settings (continued)

Programme Edit

Press the **OK** button to enter the Programme Edit menu as below.



Delete: Select a channel and press the **RED** button to delete it.

Rename: Select an **ATV** channel and press the GREEN button to change the name of the channel by using the ◀▶▲▼ buttons. (ATV mode only)

Move: Select an **ATV** channel, and press the **YELLOW** button, then you use ▲ and ▼ buttons to change the position of the programme, press **YELLOW** again to confirm the change. Press menu to exit and your new changes will be saved. (ATV mode only)

Skip: Select a channel and press the **BLUE** button, this will label the channel. As long as the channel has a skip label it will be skipped when searching through the channels using the CH+/- buttons.

Signal Information

 
Displays the digital TV-signal information (DTV mode only).

CI Information

Please contact your “pay perview” provider who can supply a viewing card and cam unit with instructions for their use.

Menu Settings (continued)

2. PICTURE menu

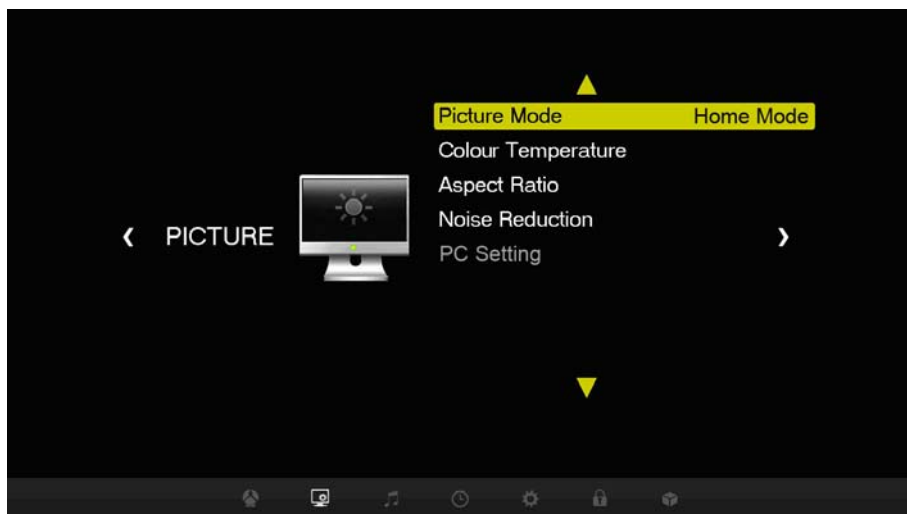

Description

Picture Mode: Press **OK** button to enter the picture setup menu.

Choose from Home Mode, Mild, User, Energy Save and Dynamic.

Note: When you select the "Energy Saving" option, the TV is in an Energy saving status.

Note: Contrast, Brightness, Colour and sharpness are only available and can be adjusted in the User mode option.

Contrast:

Controls the difference between the brightest and darkest regions of the picture.

Brightness:

Controls the overall brightness of the picture.

 
Colour:

Control the colour

Sharpness:

Increase this setting to see crisp edges in the picture; decrease it for soft edges.

Colour Temperature: Press **OK** button to enter the picture setup menu.

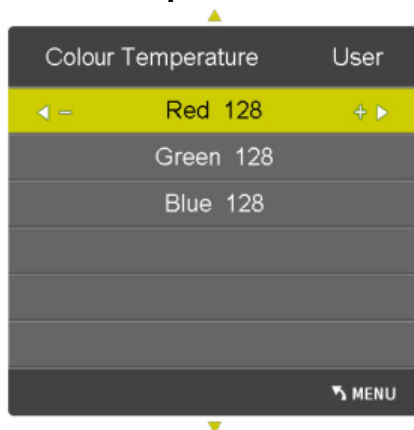

Choose from User, Cool, Standard and Warm.

Note: Red, Green and Blue are only available and can be adjusted in the User mode option.

Red: Controls the red colour of the picture.

Green: Controls the green colour of the picture.

Blue: Controls the blue colour of the picture.

 
Menu Settings (continued)

Aspect Ratio: Press OK button to enter the menu to choose the aspect ratio from 4:3, 16:9, Zoom1, Zoom2 and Panorama.

Noise Reduction: Press OK button to enter the menu to choose the aspect ratio from Off, Low, Middle, High and Auto.

PC Setting(PC mode only): Press the **OK** button to enter the submenu to adjust the Horizontal / Vertical position or Size and Phase of the picture, or auto adjust by selecting “Audio adjust”.

3. SOUND menu

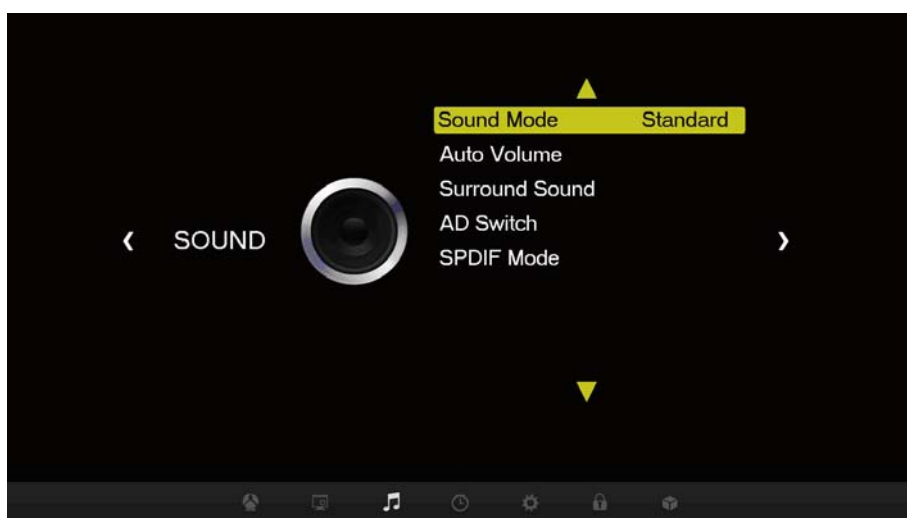

Description

Sound Mode: Allows you to select among: Standard, Music, Movie, Sports and User, and you could adjust by yourself when select User mode.

Auto Volume: This feature automatically adjusts the audio level when the TV is turned on. This function is activated by selecting “On”.

Surround Sound: Turn on / off the surround sound function by selecting “off” or “surround”.

AD Switch: Turn on the AD Switch function for amblyopia people.

SPDIF Mode: Allows you to select the output mode of the sound from PCM and Auto.

Menu Settings (continued)

4. TIME menu



Description

Clock: Display the current time.

Off Time: Press the OK button to enter the Sub menu, this option allows you to set the time for the TV to automatically switch off into standby mode.

 
On Time: Press the OK button to enter the Sub menu, this option allows you to set the time for the TV to automatically switch on.

Sleep Timer: Activate the timer by choosing from the options 10,20,30,60,90,120,180, 240mins.

Time Zone: Allows you to select the time zone.

Menu Settings (continued)

5. OPTIONS menu

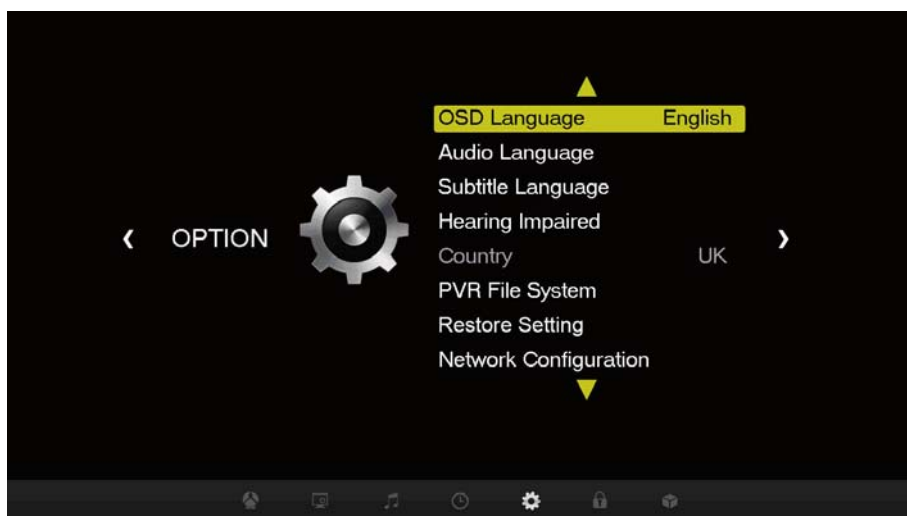

Description

OSD Language: Allows you to select the on screen display menu language.

Audio Language (can only be selected in DTV mode): Select the audio language.

Subtitle Language (can only be selected in DTV mode): Select the subtitle language.

Hearing Impaired: Turn on/off the Hearing Impaired function.

Country: Display the current Country. This is defaulted to UK, but can be changed by using the Auto tune function.

 
PVR File System: Setup the PVR file system.

Note: The options PVR File System are described on pages 31 -33.

Restore Setting: Press the **OK** button to restore the factory default settings.

Menu Settings (continued)

6. LOCK menu

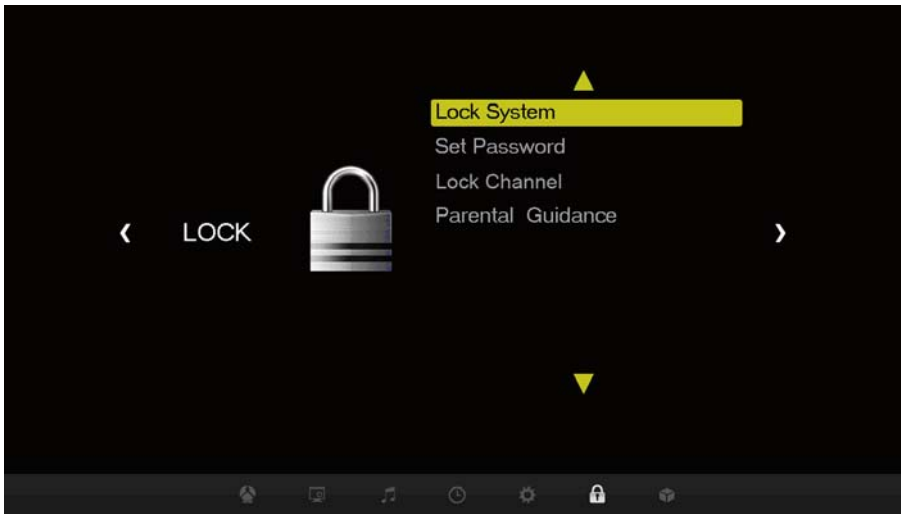

Description

Lock System: Turn on/off the Lock System function.

Note: Enter your password to operate this menu.(the default password is 0000)

Set Password: If the Password has been changed you must enter the current password.

New: Enter the new password.

Confirm: Enter the new password.

Lock Channel: You must enter the password to view channels that have been locked. Use ▲ and ▼ buttons to select the channel and press the GREEN button on the remote control to lock the channel.

 


Parental Guidance: Control your childs viewing using the Parental Guidance mode.

Multimedia Operation

Basic Operation

1). Press the SOURCE button on the remote control to display the input source menu, select the USB source with the ▼▲ buttons and press the OK button to enter the Multimedia menu below.

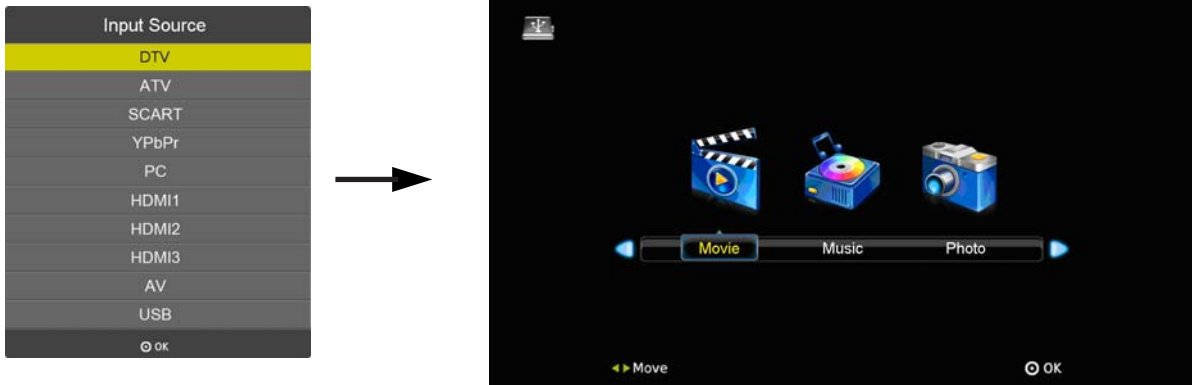

2). Insert the USB device.

3). Press ◀ / ▶ button to select the files on the USB device (PHOTO, MUSIC, MOVIE) , and press OK button to view the files.



Press ◀ / ▶ / ▲ / ▼ buttons to select and the OK button to activate the file or open folder. Press ▶ button to play the files in full screen mode. When in full screen mode press the OK button to show the navigation option menu on the bottom of the screen or press ■ stop button to return to files.

Multimedia Operation (continued)

1. Photo

Photo viewing



Press ◀/▶ buttons to select the option on the menu, and press the **OK** button to activate.

Previous/Next: View the previous/next photo.

Pause: Play/pause the photo view.

Stop: Stop the photo view.

Rotate: Rotate the photo clockwise/counterclockwise.

Zoom In/Out: Zoom In/Out of your photos.

Move: Move the photo in Zoom out mode.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Music: Play/Pause the background music of your choice.

Playlist: Display the playlist on the screen and select the photo of your choice.

Info: Display the information of the file.

2. Music

Listen to music



Press ◀/▶ buttons to select the option on the menu, and press the **OK** button to activate.

Previous/Next: Play the previous/next file.

Pause: Play/pause the music.

Stop: Stop the music.

FB/FF: Fast backward/fast forward.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

 
Playlist: Display the playlist on the screen and select the photo of your choice.

Info: Display the information of the file.

Multimedia Operation (continued)

3. Movie

Watch a film

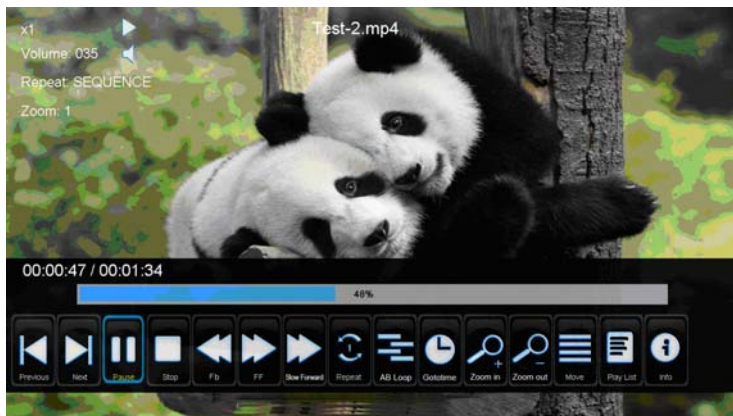

Press ◀/▶ buttons to select the option on the menu, and press **OK** button to activate.

Previous/Next: Play the previous/next file.

Pause: Play/pause the music.

Stop: Stop the music.

FB/FF: Fast backward/fast forward.

Slow Forward: Play the movies at slow speed, press button to cancel.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

A-B Loop: Select and play the preferable part of the file by setting A and B at the beginning and end. Press **OK** button to cancel.

Goto Time: Program the movie form the time you set.

Zoom out/in: Zoom out/in the movie screen.

Move: Move the photo in Zoom in mode.

Playlist: Display the playlist on the screen.

 
Info: Display the information of the movie.

Recording Operation

PVR settings

1). PVR File System

Press the MENU button, select OPTION menu, and select “PVR File System”, then press OK button to enter the setting menu.

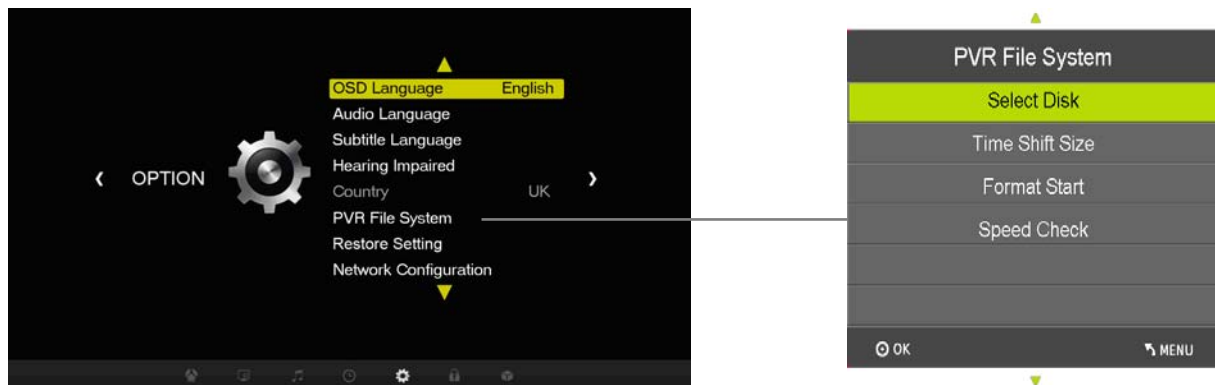

Select Disk: Select the device for the Record files.

Time Shift Size: Display the size of the USB device (The device has been formatted).

Format Start: Format the USB device for PVR operating.

Speed Check: Display the speed of the USB device (The device has been formatted).

2). EPG menu

Display the programme guide by pressing the **Guide** button.

Press the **BLUE** button to highlight the top of the table in yellow, and press the ◀ / ▶ to select the guide mode from CHANNEL and TIME.

 


Press ▼ / ▲ button to highlight the date, then press the ◀ / ▶ buttons to select the date you want to view (7 day EPG)

Press the ▼ / ▲ buttons to highlight the channel option, press ◀ / ▶ buttons to select the channel you want to view.

Recording Operation (continued)

Record from EPG: Press the RED button on the remote control to display the record mode menu, and set the time for recording. When the programme starts it will be recorded to the USB device automatically.

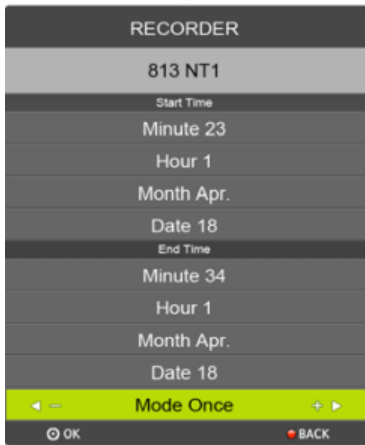

Remind: Press the GREEN button to display the remind menu, and set the time. When the programme starts the TV will automatically switch to this programme.

Schedule: Press the YELLOW button to display the schedule list.

Schedule List		02:24 18 Apr.			
	Time	Date	Programme Title	Channel Name	
⬆	02:32	Fri. 18 Apr.2008	Papa baston	NT1	✖

To Top: Press the BLUE button to return to and highlight the top of the table.

3) Start Recording

Record and Time shift function buttons

REC **Recording:** Press to start recording.

▶ : Press to enter the timeshift mode, press again to play the recording.

■ **Stop:** Press to stop recording or timeshift.

A: Displays the list of programmes scheduled for recording.

a) Recording menu

When you press **REC** REC button, the screen will display the recording menu as below:



Note: a. Display and exit full mode by pressing the **REC** REC or Exit buttons.

b. Press the STOP button to stop the recording and exit the recording mode.

c. Press the PLAY button to play the programme you are recording from the beginning.

Recording Operation (continued)

b) Timeshift menu

Press **||▶** PAUSE button to enter the Timeshift mode, and the picture will be paused, the recording will begin.



Note: a. Press the STOP button to exit the Timeshift mode.

b. Press **||▶** PLAY button to play the programme you are recording from the beginning.

Simple Troubleshooting

If the TV display or performance fails check the TV in accordance with the following instructions. If the TV still fails to function correctly contact your dealer for assistance.

SYMPTOM	POSSIBLE CAUSE	REMEDY
GENERAL		
Dead. No LED Lit	No power to the TV.	Check all connections to the TV.
Dead Led lit red	Set still in standby.	Press either the Power button or on the Remote control.
Blue screen.	No signal.	
	Incorrect source selected.	Press Source button to select correct source.
Noisy, snowy, ghosting picture (TV)	Poor aerial signal.	If using an indoor aerial, try moving the aerial. Check aerial connections.
No sound	Sound "Mute".	Turn sound "Mute" OFF.
	Volume set too low.	Check volume settings.
	External leads not connected "if used".	Check all external leads are connected.
Remote control does not work	Remote are not in the correct status	Ensure remote is in TV mode by pressing TV button.

If none of the suggestions seem to work, try switching your TV off and then on again. If this does not work contact our technical helpline 0871 288 7345.

NOTE: The TV must only be repaired by a qualified registered service person. Never attempt to remove the back cover as the TV has dangerous voltages inside that may cause fatality or fire.

TECHNICAL SPECIFICATIONS

Specifications of the TV that you have just purchased may vary from the information in this table due to technical innovations.

TV Specifications

TVSystem	PAL/BG/DK/ I/SECAM/BG/DK/L/L'
Audio System	BG/DK/I/L/L'
Screen size	37 "(Diagonal)
Resolution	1920 x 1080 Pixels(RGB)
Aerial input	75 Ω (unbalanced)
Audio output power	2 x 8W
Power requirements	100-240V ~ 50/60Hz
Power consumption	240W
Standby power consumption	<1W
Weight	20.4 kg


Remote control specifications

Type	Infrared
Control distance	6m
Control angle	30 degrees(Horizontal)
Batteries	2 x 1.5V, SizeAA
Dimensions	60 x204 x32mm
Weight	140g(without batteries)

Wall Mounting

1. The stand must first be removed. Place the TV face down.
2. Remove the six screws that secure the stand.
3. Remove and store the stand and screws.
4. Use four machine screws to mount the TV on the bracket.

 This unit is VESA-Compliant and designed to be wall mounted with a VESA-Compliant 400mm x 200 mm mounting kit. Mount this unit according to the instructions of the wall bracket (not supplied)

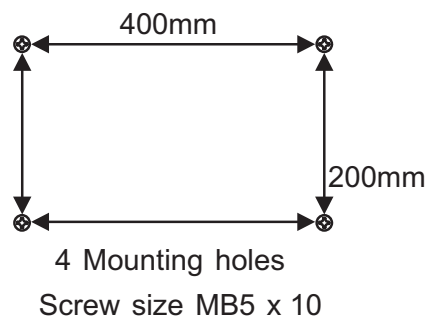

Waste Electrical Recycling

Correct disposal of Product



This sign indicates that this product may not be disposed of with your regular household waste. The recycling and separate collection of such products is your responsibility. Please drop off the above mentioned waste at a designated place for recycling waste electrical and electronic equipment. If you do not know where to drop off your waste equipment for recycling, please contact your local city office or household waste collection service.



The crossed out wheeled dust bin symbol indicates that batteries and /or accumulators must be collected and disposed of separately from household waste.

If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemicals symbols for lead(Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.



By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased this product.



This appliance complies with European Safety and Electrical directives.