

LCD Colour Television

LCD-Farb-TV-Gerät

Télévision Couleur LCD

Televisione a Colori LCD

Televisor Color LCD Digital

Televisão a cores LCD

Ψηφιακή Έγχρωμη Τηλεόραση LCD

**37LD8A20**

**37LD8A20 A**

**HDMI**<sup>TM</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE

**HD**  
ready

**HITACHI**  
Inspire the Next

Instructions for use	<b>GB</b>
Bedienungsanleitung	<b>D</b>
Notice d'utilisation	<b>F</b>
Istruzioni per l'uso	<b>I</b>
Manual de Instrucciones	<b>E</b>
Televisão a cores	<b>PT</b>
Οδηγίες χρήσης	<b>GR</b>



**HITACHI**

# Contents

<b>Safety Precautions</b> .....	<b>3</b>	<i>PIP Source</i> .....	12
<b>Features</b> .....	<b>5</b>	<i>PIP Programme</i> .....	12
<b>Accessories</b> .....	<b>5</b>	<i>PIP Swap</i> .....	12
<b>Rear View and Peripheral Connections</b> .....	<b>6</b>	<b>PAP</b> .....	12
<b>Remote Control Buttons</b> .....	<b>7</b>	<i>PAP ON-OFF</i> .....	13
<b>Preparation</b> .....	<b>8</b>	<i>PAP Picture</i> .....	13
<b>Before Switching On Your TV</b> .....	<b>8</b>	<i>PAP Source</i> .....	13
Power Connection .....	8	<i>PAP Programme</i> .....	13
Connections to the Aerial Input Socket .....	8	<i>PAP Swap</i> .....	13
Inserting Batteries in the Remote Control		Sleep Timer .....	13
Handset .....	8	Child Lock .....	13
Handling the Remote Control .....	8	Language .....	13
Operating Range for the Remote Control .....	8	EXT2 Out .....	13
<b>Switching the TV ON/OFF</b> .....	<b>9</b>	PC Audio In .....	13
<b>Navigating the Menu System</b> .....	<b>9</b>	Blue Background .....	13
<b>Initial Settings</b> .....	<b>9</b>	Menu Background .....	13
<b>Basic Operations</b> .....	<b>9</b>	Menu Timeout .....	13
Volume Setting .....	9	Teletext Language .....	13
Programme Selection .....	9	Default Zoom .....	13
Entering Main Menu .....	9	Install Menu .....	14
AV Mode .....	10	Program Table .....	14
Volume Setting .....	10	<i>Name</i> .....	14
Programme Selection (Previous or next programme) .....	10	<i>Insert</i> .....	14
Programme Selection (direct access) ..	10	<i>Delete</i> .....	14
<b>Menu System</b> .....	<b>10</b>	<i>APS (Auto Programming System)</i> .....	14
Picture Menu .....	10	A.P.S. (Auto Programming System)	
Mode .....	10	Country .....	14
Contrast/Brightness/Sharpness/Colour/ Hue .....	10	Program .....	14
Colour Temp .....	10	Band .....	15
Noise Reduction .....	10	Channel .....	15
Film Mode .....	10	Colour System .....	15
3D Comb .....	11	Sound System .....	15
Picture Zoom .....	11	Fine Tune .....	15
Reset .....	11	Search .....	15
Store .....	11	Store .....	15
Sound Menu .....	11	Install menu in AV modes .....	15
Volume .....	11	<i>Colour System</i> .....	15
Equalizer .....	11	<i>VCR</i> .....	15
Balance .....	11	Store .....	15
Headphone .....	11	Source menu .....	15
<i>volume</i> .....	11	<b>PC Mode</b> .....	<b>16</b>
<i>sound mode</i> .....	11	Installation .....	16
<i>balance</i> .....	11	Menu System in PC mode .....	16
Sound Mode .....	11	Sound Menu/Feature Menu .....	16
AVL .....	11	PC Picture Menu .....	16
Effect .....	11	PC POSITION Menu .....	16
Dynamic Bass .....	11	Autoposition .....	16
Subwoofer .....	11	H (Horizontal) Position .....	16
Store .....	12	V (Vertical) Position .....	16
Features Menu .....	12	Phase .....	16
<b>PP</b> .....	12	Dot Clock .....	16
<i>PIP ON-OFF</i> .....	12	Sound in PC mode .....	16
<i>PIP Picture</i> .....	12	<b>Other Features</b> .....	<b>17</b>
<i>PIP Position</i> .....	12	TV Status .....	17
		Mute Indicator .....	17
		PIP and PAP Modes .....	17
		AV Modes .....	17

Personal Preference .....	17
Zoom Modes .....	17
Auto .....	17
Zoom .....	17
Cinema .....	17
16:9 Zoom .....	17
Subtitle .....	17
4:3 .....	18
14:9 Zoom .....	18
Panoramic .....	18
Freeze Picture .....	18
<b>Teletext .....</b>	<b>18</b>
Special Teletext Functions .....	18
Fastext .....	19
TOP text .....	19
<b>Connect Peripheral Equipment .....</b>	<b>19</b>
High Definition .....	19
Via The Scart .....	19
Via Aerial Input .....	19
Decoder .....	19
Connect a decoder with an aerial socket to the TV .....	19
Connect a decoder without an aerial socket to the TV .....	19
TV And Video Recorder .....	19
Playback NTSC .....	19
Copy Facility .....	20
Camera And Camcorder .....	20
To Connect to AV Input .....	20
To Connect To S-VHS Input .....	20
Connect the Decoder to the Video Recorder	20
Connecting Headphones (optional) .....	20
Connecting Subwoofer .....	20
Audio Lineout .....	20
<b>Tips .....</b>	<b>20</b>
Care Of The Screen .....	20
Poor Picture .....	20
No Picture .....	20
Sound .....	20
Remote Control .....	20
<b>Appendix A: PC Input Typical Display Modes .....</b>	<b>21</b>
<b>Appendix B: Aerial Connection .....</b>	<b>21</b>
<b>Appendix C: Connect Peripheral Equipment .....</b>	<b>21</b>
<b>Appendix D: AV and HDMI Signal Compatibility .....</b>	<b>22</b>
<b>Specifications .....</b>	<b>23</b>
S-input connector pin specifications .....	24
HDMI connector pin specifications .....	24
SCART connector pin specifications .....	24
Signal Input .....	24
PC RGB Terminal (D-sub 15-pin connector)	24
<b>UK Guarantee .....</b>	<b>25</b>

## Safety Precautions

Please read the following recommended safety precautions carefully for your safety.

### IMPORTANT SAFETY INFORMATION ON OPERATING YOUR TV

#### Do's and Don'ts

#### DO's

This Television has been designed and manufactured to meet international safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.



**DO** read the operating instructions before you attempt to use the equipment.

**DO** consult your dealer if you are in any doubt about installation, operation or safety of your equipment.

**DO** be careful with glass panels or doors on equipment.

This TV is supplied with a fitted mains plug. This plug must not be cut off as it may contain a special radio interference filter, the removal of which could lead to impaired performance. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer.

Observe the manufacturers instructions when connecting extension leads to the TV. Check the fuse rating on the new plug, this should be fitted with a 5 Amp fuse which conforms to either ASTA or BSI (BS1 362) approvals, these are easily

identifiable by either the  or  symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician.

#### DON'Ts

**DON'T** continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way switch off, withdraw the mains plug and consult your dealer.

**DON'T** place water filled vessels on top of T.V. cabinets.

**DON'T** remove any fixed cover as this may expose dangerous voltages.

**DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

**DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

**DON'T** obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

**DON'T** use makeshift stands and NEVER fix legs or stands to the TV with any screws other than those provided - to ensure complete safety always use the manufacturers approved stand with the fixings provided.

**DON'T** allow electrical equipment to be exposed to rain or moisture.

#### ABOVE ALL

- **NEVER let anyone, especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electric shock.**
- **NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry!**

#### 1. Power Source

The set should be operated only from a 220-240V AC, 50 Hz. outlet. Ensure you select the correct voltage setting for your convenience.

#### 2. Power Cord

Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short

#### Be sure to ground the connection properly.

Connect the ground terminal of the AC inlet of this display with the ground terminal provided at the power outlet using the enclosed power cord. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.



Surely connect the ground wire.

circuit or electric shock. Never make a knot in the cord or tie it with other cord. The power cord should be placed in such a way that they are not likely to be stepped on.

A damaged power cord can cause fire or give you an electric shock. When it is damaged and need to be changed, it should be done by qualified personnel.

### 3. Moisture and Water

Do not use this equipment in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this equipment to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases on top of the set. Avoid from dripping or splashing.

If any solid object or liquid falls into the cabinet, unplug the set and have it checked by qualified personnel before operating it any further

### 4. Cleaning

Before cleaning, unplug the set from the wall outlet. Do not use liquid or aerosol cleaners. Use soft and dry cloth.

### 5. Ventilation

The slots and openings on the receiver are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

### 6. Heat and Flames

The set should not be placed near to naked flames and sources of intense heat, such as an electric heater. Ensure that no naked flame sources, such as lighted candles, are placed on top of the set

### 7. Lightning

In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.

### 8. Replacement Part

When replacement parts are required, be sure the service technician has used replacement parts which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock, or other hazards.

### 9. Servicing

Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock.


**WARNING:** When the device is not in use for a long time, disconnect from power.

#### Instructions for waste disposal:

- Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.

- Battery, including those which is heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environmentally sound manner. Find out about the legal regulations which apply in your area.
- Cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury, please follow local ordinances or regulations for disposal.
- The mains plug of the power supply is used as disconnect device and therefore shall remain readily operable.

**Warning:** To prevent injury, this device must be securely attached to the floor/wall in accordance with the installation instructions.

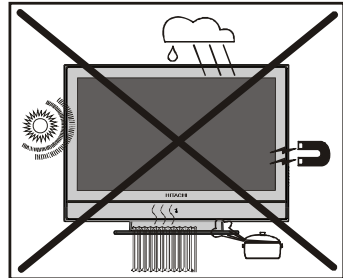

“The LCD panel is very high technology product with about a million thin film transistors, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.”

“DO NOT LEAVE YOUR TV AT STAND-BY OR OPERATING WHEN YOU LEAVE YOUR HOUSE”

#### Information for users applicable in European Union countries



This symbol on the product or on its packaging means that your electrical and electronic equipment should be disposed at the end of life separately from your household wastes. There are separate collection systems for recycling in EU. For more information, please contact the local authority or the dealer where you purchased the product.

## Features

- Remote controlled colour LCD TV.
- Integrated Analog TV Receiver.
- 100 programmes from VHF, UHF bands or cable channels can be preset.
- It can tune cable channels.
- Controlling the TV is very easy by its menu driven system.
- It has 2 Scart sockets for external devices (such as video, video games, audio set, etc.)
- Stereo sound system (German+Nicam).
- Full function Teletext (1000 pages).  
Fastext, TOP text.
- Headphone connection.
- A.P.S. (Automatic Programming System).
- All programmes can be named.
- Forward or backward automatic tuning.
- Sleep timer.
- Child Lock.
- Automatic sound mute when no transmission.
- NTSC Playback.
- AV in and S-VHS in are available.
- It has VGA connector for external devices such as computer.
- It has an HDMI connector for Digital Video and Audio.  
This connection is also designed to accept High Definition signals.
- AVL (Automatic Volume Limiting)
- When no valid signal is detected, after 5 minutes the TV switches itself automatically to stand-by mode.
- PLL (Frequency Search)
- PC Input
- Plug&Play for Windows 9X, ME, Vista, 2000, XP
- Audio Line Out
- PIP, PAP, PAT is available.

## Accessories

Check the supplied accessories before installation. In case of missing or damaged items please contact your dealer immediately.



 
UK Plug



EU Plug



Remote Controller  
RC 1072



Batteries  
2 X AAA





Instruction Book



Quick Guide

## Rear View and Peripheral Connections

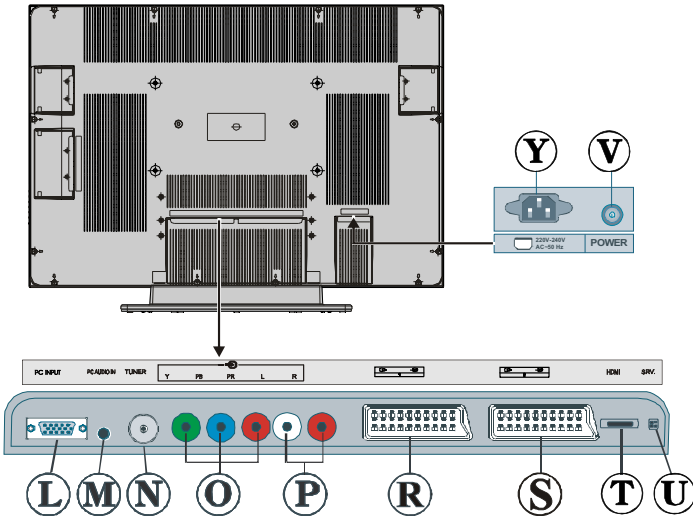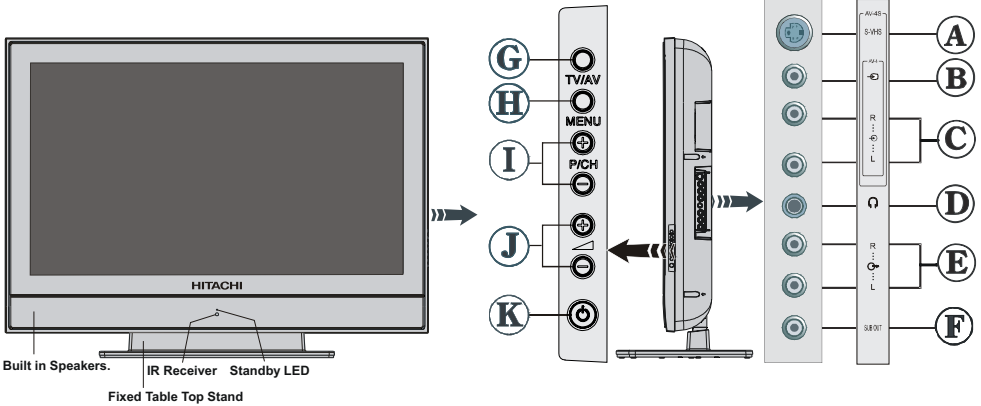


- |                                |   |                                 |
|--------------------------------|---|---------------------------------|
| <b>A</b> S-Video Input (S-VHS) | <b>I</b> -P/CH+                         | <b>P</b> Component Audio Inputs |
| <b>B</b> Video Input (FAV)     | <b>J</b> -VOLUME+                       | <b>R</b> SCART 1 (EXT-1)        |
| <b>C</b> Audio Inputs          | <b>K</b> STAND-BY                       | <b>S</b> SCART 2 (EXT-2)        |
| <b>D</b> Headphone             | <b>L</b> PC VGA Input (PC RGB)          | <b>T</b> HDMI Input (HDMI)      |
| <b>E</b> Audio Line Outs       | <b>M</b> PC Audio Input                 | <b>U</b> For Service Use Only   |
| <b>F</b> Subwoofer             | <b>N</b> RF (Antenna)                   | <b>V</b> Power On/Off Switch    |
| <b>G</b> TV/AV                 | <b>O</b> Component Video Inputs (YPbPr) | <b>Y</b> Power Cord Input       |
| <b>H</b> MENU                  |   |                                 |

*Note: Because FAV CVBS and SVHS Y are connected parallelly, the picture may blend if the two peripherals are used at the same time. Likewise, because SVHS C and SCART II R are connected parallelly, the picture may blend if the two peripherals are used at the same time. Thus these two are not to be used at the same time.*

## Remote Control Buttons

- 1 = Stand By
- 2 **YELLOW / FEATURE** = Feature Menu / Fastext Button
- 3 **BLUE / INSTALL** = Install Menu / Fastext Button
- 4 = Update / PAP Mode
- 5 = Hold
- 6 / **GUIDE** = Index Page / No Function
- 7 / **PC** = Reveal / PC
- 8 **0 - 9** = Direct Programme
- 9 **- / - - / EXIT** = No Function
- 10 **V +** = Volume Up
- 11 **P +** = Programme Up
- 12 / **DTV** = TV / Quit Menu
- 13 **AV** = External Source  
(TV, EXT1, EXT2, EXT2 S, FAV, S-VIDEO, HDMI, YPBPR, PC)
- 14 **PP** = Personal preference
- 15 = Cursor Up
- 16 = Cursor Right
- 17 **OK/SELECT** = OK (Store)
- 18 = Cursor Down
- 19 **M** = Menu
- 20 = Cursor Left
- 21 **I-II** = Mono/Stereo - Dual I-II
- 22 / **INFO** = Info
- 23 **- P** = Programme Down
- 24 = Mute
- 25 **- V** = Volume Down
- 26 **P<P** = Previous Programme
- 27 / **WIDE** / = Image size / Expand
- 28 / = PIP Mode / Mix
- 29 = Teletext
- 30 = Time
- 31 **RED / SOUND** = Sound Menu / Fastext Button
- 32 **GREEN / PICTURE** = Picture Menu / Fastext Button

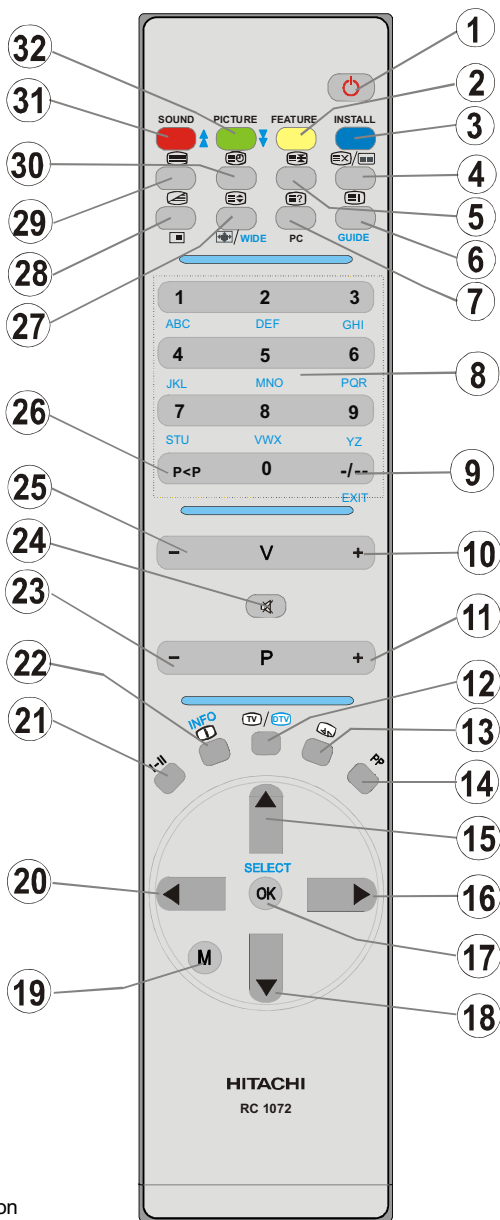




## Preparation

For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

**Use this product in moderate climates, operating temperature range for this product is 0-40 Degrees Celsius.**

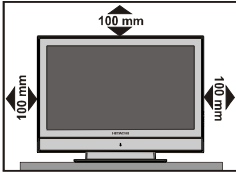

## Before Switching On Your TV


### Power Connection

**IMPORTANT:** The TV set is designed to operate on 220-240V AC, 50 Hz.

- After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.

### Connections to the Aerial Input Socket


- Connect the aerial or cable TV plug to the Aerial input socket located at the rear of the TV and connect the cable plug coming out from the TV out socket located on the devices (VCR, DVB etc.) to this socket as well.

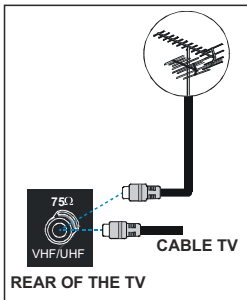

### Inserting Batteries in the Remote Control Handset

**WARNING :** Remote control is battery included. A plastic protector is used to disconnect the batteries in order to prevent the battery life from reducing. Please remove the plastic protector before the first use.

- Remove the battery cover located on the back of the handset by gently pulling backwards from the indicated part.
- Insert two **AAA/R03** or equivalent type batteries inside. Place the batteries in the right directions and replace the battery cover.

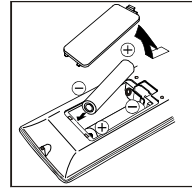

**Note:** Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of battery.


### Handling the Remote Control

- It could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.
- Never mix used and new batteries in the device.
- Replace all the batteries in a device at the same time.
- Remove the batteries if the remote control is not going to be used for an extended period of time.
- To avoid possible failure, read the following instructions and handle the remote control properly.
- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under the direct sunlight or near sources of excessive heat.

**Note:** Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of battery.

### Operating Range for the Remote Control

- Point the top of the remote control toward the LCD TV's remote sensor LED while pressing a button.

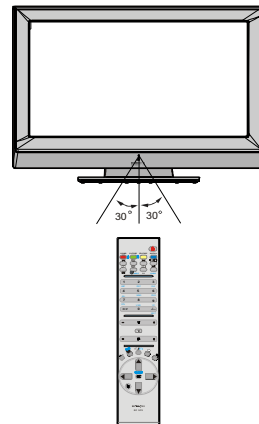

Remote range is approximately 7m/23ft.

## Switching the TV ON/OFF

### To switch the TV on

Your TV will switch on in two steps:

1- Connect the power supply cord to the system. Press Power On/Off button. Then the TV switches itself to stand-by mode (Optional).

2- To switch on the TV from stand-by mode either:

Press a digit button on the remote control so that a programme number is selected, or Press the “-P/CH” or “P/CH+” button on the TV or press the “P-” or “P+” button on the remote control, so that last mode switched off is selected.


By either method the TV will switch on.

### To switch the TV off

• Press the “ (stand-by)” button on the remote control or On/Off switch on the TV, so the TV will switch to stand-by mode.

To power down the TV completely, press Power On/Off button or unplug the power cord from the mains socket.

## Navigating the Menu System

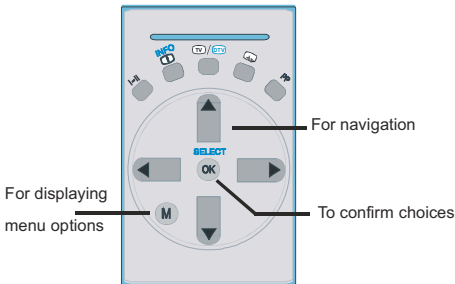


- 1- Press **M** to display the menu.
- 2- Press “▼” or “▲” button to select an icon. Press “▶” for more options.
- 3- Use “▼” or “▲” button to highlight.
- 4- Press “◀” or “▶” buttons to change the settings. Press **OK** to set as default.
- 5- To exit the menu or return from sub-menu screen, press **M**.

*These explanations are available for the navigation of the whole Menu System. To select options that are explained in the following parts, refer to “Navigating The Menu System”.*

## Initial Settings

When the TV is turned on for the first time, Auto Programme menu will be displayed on the screen

Because this is the first time the TV is used, there are no channels stored in the memory and the following message appears on the screen.

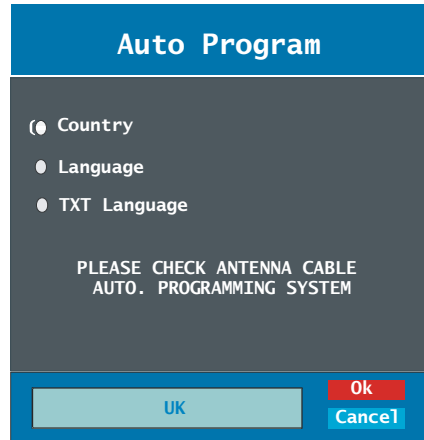

By pressing ◀ or ▶ button, adjust the **Country** item and press ▼ to highlight “**Language**” item. Use ◀ or ▶ button to set “**Language**”. Use ▲ or ▼ buttons to select “**TXT Language**” and set it by using ◀ or ▶ buttons. Press “**OK**” button to continue:

For more information on this process, see “**Install Menu**” section.

## Basic Operations

*You can operate your TV using both the remote control and onset buttons.*

### Operation with the buttons on the TV

#### Volume Setting

- Press “◄ -” button to decrease volume or “▲ +” button to increase volume, so a volume level scale (slider) will be displayed at the middle of the bottom on the screen.

#### Programme Selection

- Press “**P/CH +**” button to select the next programme or “**P/CH -**” button to select the previous programme.

#### Entering Main Menu

- Press the “**MENU**” button to enter Main menu. In the Main menu select sub-menu using “**P/CH -**” or “**P/CH +**” buttons and enter the sub-menu using “◄ -” or “▲ +” buttons. To learn the usage of the menus, refer to the Menu System sections.

## AV Mode

Press the "TV/AV" button at the control panel on the the TV to switch your TV to AV modes.

## Operation with Remote Control

The remote control of your TV is designed to control all the functions of the model you selected. The functions will be described in accordance with the menu system of your TV.

Functions of the menu system are described in the following sections.

### Volume Setting

Press "V +" button to increase volume. Press "V -" button to decrease volume. A volume level scale (slider) will be displayed in the middle at the bottom of the screen.

### Programme Selection (Previous or next programme)

- Press "P-" button to select the previous programme.
- Press "P+" button to select the next programme.


### Programme Selection (direct access)

Press digit buttons on the remote control to select programmes between 0 and 9. TV will switch to the selected programme. To select programmes between 10-99 press the digit buttons consecutively which programme you want to select (eg. for programme 27, first press 2 and then 7). When it is too late to press second digit button only the first digit programme will be displayed. The limit of the delay time is 3 seconds.

Press directly the programme number to reselect single digit programmes.

## Menu System

### Picture Menu

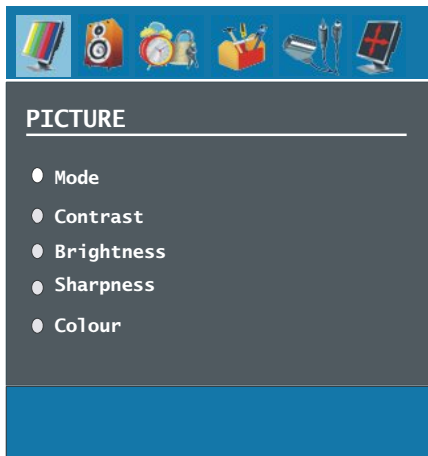

In picture menu if PC, YPbPr or HDMI modes are selected, resolution information is displayed at the bottom of the menu osd.

#### Mode

By pressing ▲ / ▼ button, select **Mode**. Press ◀ / ▶ button to choose from one of these options: **Cinema**, **Dynamic** and **Natural**.

#### Contrast/Brightness/Sharpness/Colour/Hue

By pressing ▲ / ▼ button, select the desired Option.

Press ◀ / ▶ button to set the level.

*Hint: Hue is displayed in picture menu when the TV receives an NTSC signal.*

#### Colour Temp

- By pressing ▲ / ▼ button select **Colour Temp**.
- Press ◀ / ▶ to choose from one of these options: **Cool**, **Normal** and **Warm**.

#### Noise Reduction

By pressing ▲ / ▼ button select **Noise Reduction**. Press ◀ / ▶ to choose from one of these options: **Low**, **Medium**, **High** or **Off**.

#### Film Mode

Films are recorded at a different number offrames per second to normal television programmes.

By pressing ▲ / ▼ button, select Film Mode.

Press ◀ / ▶ button to set this feature On or Off. Turn this feature on when you are watchingfilms to see the fast motion scenes clearly.

### 3D Comb

3D Comb is used to improve colour transitions and colour quality of pictures.

By pressing ▲ / ▼ button, select 3D Comb. Press ◀ / ▶ button to set this feature On or Off.

**Note:** 3D Comb feature is not functional in NATURAL picture mode.

### Picture Zoom

By pressing ▲ / ▼ button select **Picture Zoom**. Use ◀ / ▶ buttons, to change picture zoom to **Auto, 16:9, 4:3, Panoramic, 14:9 Zoom, Cinema, Subtitle, or Zoom**.


### Reset

By pressing ▲ / ▼ button, select **Reset**. Press ▶ or "OK" button to reset the picture modes to factory default settings.

### Store

- By pressing ▲ / ▼ button select **Store**.
- Press ▶ or "OK" button to store the adjustments. "Stored" will be displayed on the screen.

### Sound Menu

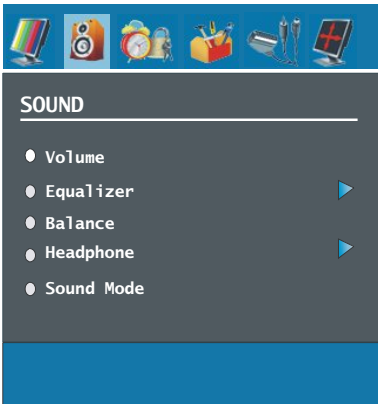

### Volume

By pressing ▲ / ▼ select **Volume**. Press ◀ / ▶ button to change the level of the Volume.

### Equalizer

By pressing ▲ / ▼ select **Equalizer**. Press ◀ / ▶ button to change the Equalizer setting. In equalizer menu, the mode can be changed to **Pop, Rock, Jazz, Flat, Classic or User**. Select the desired frequency by ▲ / ▼ button and increase or decrease the frequency gain by pressing ◀ / ▶ button.

**Note:** Equalizer menu settings can be altered only when the Equalizer Mode is in User.

### Balance

By pressing ▲ / ▼ select **Balance**. Press ◀ / ▶ button to change the level of the balance. Balance level can be adjusted between -32 and +32.

### Headphone

By pressing ▲ / ▼ button, select Headphone. Press ▶ button to enter headphone menu.

### volume

By pressing ▲ / ▼ button, select Volume. Press ▶ button to increase hp volume level. Press ◀ button to decrease hp volume level. Headphone volume level can be adjusted between 0 and 63.

### sound mode

By pressing ▲ / ▼ button, select Sound Mode. Press ◀ / ▶ button to change sound mode.

Sound mode is used to identify sound mode of the headphone and can be set to mono, stereo, dual I or dual II according to the transmission.

### balance

By pressing ▲ / ▼ button, select Balance. Press ▶ button to increase balance to the right. Press ◀ button to decrease balance to the left. Balance level can be adjusted between -32 and +32.

Press the "M" button to return to the previous menu.

### Sound Mode

By pressing ▲ / ▼ select **Sound Mode**. Press ◀ / ▶ button, you can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode.

### AVL

By pressing ▲ / ▼ select **AVL**. Press ◀ / ▶ button to set the AVL as on or off.

### Effect

By pressing ▲ / ▼ select **Effect**. Press ◀ / ▶ button to set Effect as on or off.

### Dynamic Bass

Dynamic Bass is used to increase bass effect of the TV set.

By pressing ▲ / ▼ button, select Dynamic Bass. By pressing ◀ / ▶ button set Dynamic bass to Low, High or Off. It is not recommended to select High if listening at high volume levels. There is a subwoofer output that can accept an active subwoofer if you wish to create very high levels of Bass.

Subwoofer is active only if Dynamic Bass is set to Off.

### Subwoofer

It is possible to connect an external, active subwoofer to the set to give a much deeper bass effect.

By pressing ▲ / ▼ button, select Subwoofer. Subwoofer can be set to On or Off.


Dynamic Bass is not available if Subwoofer is set to On.

Set Subwoofer to On when you connect an external subwoofer to the set.

### Store

- By pressing ▲ / ▼ button select **Store**.
- Press ► or "OK" button to store the adjustments. "Stored" will be displayed on the screen.

### Features Menu

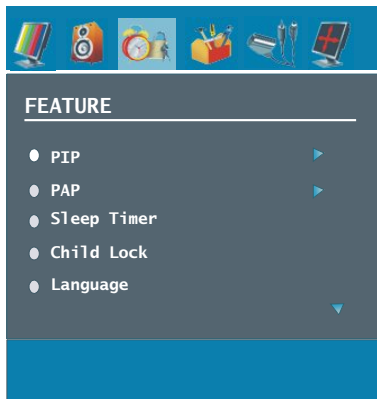

### PIP

In the "Feature" menu, highlight "PIP" item by pressing ▲ / ▼ buttons. Press ► button to enter "PIP" submenu:



### PIP ON-OFF

You can activate or deactivate PIP mode by pressing ◀ / ▶ button.

### PIP Picture

Press "►" button to enter "PIP Picture" submenu. Adjustments of Contrast, Brightness, Sharpness, Colour, Hue, Reset and Store items in this part are identical with "Picture" menu in the Menu System. Refer to "Picture" menu explanations in the previous parts.

### PIP Position

Select PIP Picture item by using ▲ / ▼ button. Use ◀ / ▶ button to adjust PIP position. PIP Position info will be displayed at the bottom of the menu OSD.

### PIP Source

Select PIP Source item by using ▲ / ▼ button. Use ◀ / ▶ button to set PIP source.

**Note:** When main picture source is TV, EXT-1, EXT-2, FAV or S-VIDEO, PIP Window can only be set to HDMI, YPBPR, PC source or vice versa.

### PIP Programme

Select PIP Programme item by using ▲ / ▼ button. PIP Programme is displayed at the bottom of menu OSD. Use ◀ / ▶ button to set PIP Programme. You can also use digit buttons on the remote control to set PIP Programme.

If the source is set to HDMI, PC or YPBPR; "PIP Programme" line will be visible in PIP menu. Otherwise, this line will not be visible.

### PIP Swap

Select Swap item by using ▲ / ▼ button. Use ◀ / ▶ button. This function enables to swap between the main and the PIP picture.

### PAP

In the "Feature" menu, highlight "PAP" item by pressing ▲ / ▼ buttons. Press ► button to enter "PAP" submenu:



## PAP ON-OFF

You can activate or deactivate PAP mode by pressing “◀” / “▶” button.

## PAP Picture

Press “▶” button to enter “PAP Picture” submenu. Adjustments of Contrast, Brightness, Sharpness, Colour, Reset and Store items in this part are identical with “Picture” menu in the Menu System. Refer to “Picture” menu explanations in the previous parts.

## PAP Source

Select PAP Source item by using “▲ / ▼” button. Use “◀” / “▶” button to set PAP source.

**Note:** When main picture source is TV, EXT-1, EXT-2, FAV or S-VIDEO, PIP Window can only be set to HDMI, YPBPR, PC source or vice versa.

## PAP Programme

Select PAP Programme item by using “▲ / ▼” button. PAP Programme is displayed at the bottom of menu OSD. Use “◀” / “▶” button to set PAP Programme. You can also use digit buttons on the remote control to set PAP Programme.

## PAP Swap

Select PAP Swap item by using “▲ / ▼” button. Use “◀” / “▶” button. This function enables to swap between the main and the PAP picture.

## Sleep Timer

By pressing ▲ / ▼ select “**Sleep Timer**”. Press ◀ / ▶ button to set the Sleep Timer.

The timer can be programmed between Off and 120 minutes in steps of 10 minutes.

## Child Lock

By pressing ▲ / ▼ select **Child Lock**.

Press ◀ / ▶ button to set the Child Lock on or off. When on is selected, the TV can only be controlled by the remote control handset. In this case the control panel buttons will not work. Hence, if one of these buttons is pressed, “**Child Lock On**” will be displayed on the screen when the Menu screen is not visible.

\* *except standby button.*

## Language

By pressing ▲ / ▼ button, select **Language**. Use ◀ / ▶ button to select the language.

**Available languages are:** English, French, German, Italian, Spanish, Portuguese, Dutch, Greek, Swedish, Norwegian, Danish, Finnish, Turkish, Croatian, Slovenian, Polish, Czech, Hungarian, Russian, Bulgarian, Greek, Slovak.

## EXT2 Out

By pressing ▲ / ▼ select **EXT2 Output**. Use ◀ / ▶ button, to set Ext-2 Out to **TV, EXT1, FAV, YPbPr Audio or PC Audio**.

*Note: When TV Source is set to HDMI, HDMI Audio setting will be available among EXT-2 Out options.*

## PC Audio In

By pressing ▲ / ▼ select **Pc Audio In**. By pressing ◀ / ▶ button, you can change the PC Audio In to **TV, EXT-1, EXT-2, FAV, YPbPr Audio or PC Audio**.

## Blue Background

You can set the TV to automatically change to a blue screen if the signal is weak or absent, or when there is no input from an external device.

The Blue Background feature can be turned on or off by pressing ◀ / ▶ button.

## Menu Background

By pressing ▲ / ▼ button, select Menu Background. Transparency level is adjusted by pressing ◀ / ▶ button.

## Menu Timeout

By pressing ▲ / ▼ button, select Menu Timeout. Press ◀ / ▶ button to change menu timeout to 15 sec, 30 sec or 60 sec.

## Teletext Language


By pressing ▲ / ▼ button, select Teletext Language. Press ◀ / ▶ button to change Teletext Language to West, East, Turk/Gre, Cyrillic or Arabic.

## Default Zoom

Default zoom is a feature that provides the zoom mode of the TV set to be switched to the selected default zoom mode (Panoramic, 4:3, 14:9 zoom, 16:9) in case no WSS or 4:3 signal by end-user.

By pressing ▲ / ▼ button, select **Default Zoom**. You can set **Default Zoom** to **Panoramic, 4:3, 14:9 Zoom or 16:9** by pressing ◀ / ▶ button.

## Install Menu

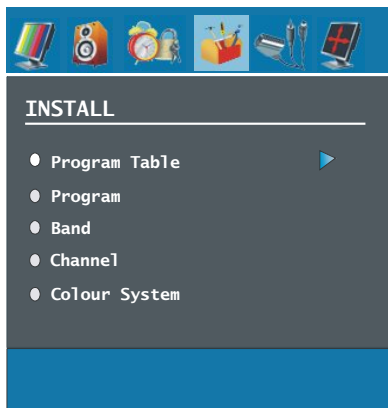

### Program Table

By pressing ▲ / ▼ button, select Program Table. Press ► to display Program Table.

Program Table			
P01	BBC 1	P11	S 18
P02	C 04	P12	S 29
P03	C 05	P13	S 31
P04	BBC 1	P14	S 33
P05	CH 4	P15	S 34
P06	BBC 2	P16	S 35
P07	C 04	P17	S 36
P08	C 07	P18	S 37
P09	C 12	P19	S 40
P10	C 15	P20	C 21

Name	Insert
Delete	APS

By moving the cursor in four directions you can reach 20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except the AV mode). By cursor action, programme selection is done automatically.

### Name

To change the name of a decided programme, select the programme and press the RED button.

The first letter of the selected name will be highlighted. Press ▲ / ▼ button to change that letter and ◀ / ▶ button to select the other letters. By pressing the RED button, you can store the name.

### Insert

Select the programme which you want to insert by


navigation buttons. Press the GREEN button. By navigation buttons move the selected programme to the decided programme space and press the GREEN button again.

### Delete

To delete a programme, press the YELLOW button. Pressing the YELLOW button again erases the selected programme from the programme list, and the programmes below shift one up.

### APS (Auto Programming System)


When you press the BLUE button for APS, Auto Programming System Menu will appear on the Screen.

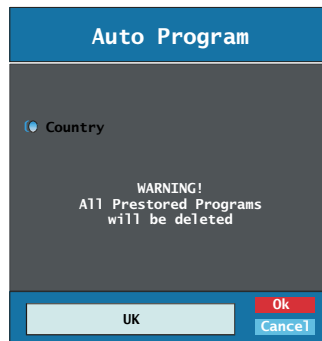

### A.P.S. (Auto Programming System) Country

Press ◀ / ▶ button to select your country. If you want to exit from A.P.S. function, press the "BLUE" button.

When you press OK or RED button for starting APS, all stored programs will be erased and the following screen will be displayed:

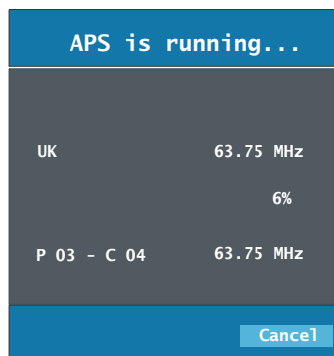

Whenever you press the "BLUE" button, A.P.S. function stops and Program Table appears on the screen.

If you wait until the end of A.P.S., Program Table is displayed with the programmes found and located.

### Program

By pressing ▲ / ▼ button, select Program. Press ◀

/ ► button to select the program number. You can also enter a number via digit buttons on the remote control. There are 100 program storage between 0 and 99.

### Band

Band can be selected either “C” or “S” by press ◀ / ► button.

### Channel

Channel can be changed by ◀ / ► button or Digit Buttons.

### Colour System

By pressing ▲ / ▼ button, select Colour System. Press ◀ / ► button to change the colour system to PAL, SECAM, PAL60 or AUTO.

If Sound System is set to I, SECAM is not available for the Colour System.

Note: In EXT mode, you can choose NTSC 3.58 and NTSC 4.43 as well.

### Sound System

By pressing ▲ / ▼ button, select Sound System. Press ◀ / ► button to change the sound system to BG, I, L, L', DK.

### Fine Tune

By pressing ▲ / ▼ button, select Fine Tune. Press ◀ / ► button to adjust the tuning.

### Search


By pressing ▲ / ▼ button, select Search. Press ◀ / ► button to start program searching. You can also enter the desired frequency via digit buttons when search item is highlighted.

### Store

By pressing ▲ / ▼ button, select Store. Press “►” or “OK” button to store the adjustments. “Stored...” will be displayed on the screen.

### Install menu in AV modes

The following screen appears in the install menu:

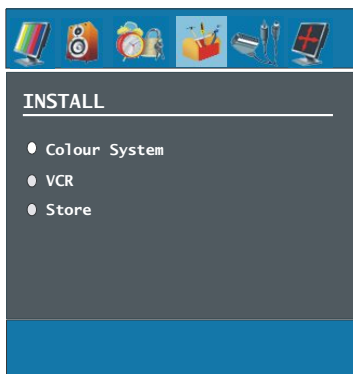

### Colour System

By pressing ▲ / ▼ select **Colour System**. By pressing ◀ / ► button, you can change the colour system to **PAL, SECAM, PAL 60, NTSC 4,43, NTSC 3,58 or AUTO**.

### VCR


By pressing ▲ / ▼ select **VCR**. By pressing ◀ / ► button, you can set the VCR to ON or OFF.

### Store

By pressing ▲ / ▼ button, select Store. Press ► or “OK” button to store the adjustments. “Stored...” will be displayed on the screen.

### Source menu

By pressing ◀ / ► button, select the fifth icon. Source menu appears on the screen.

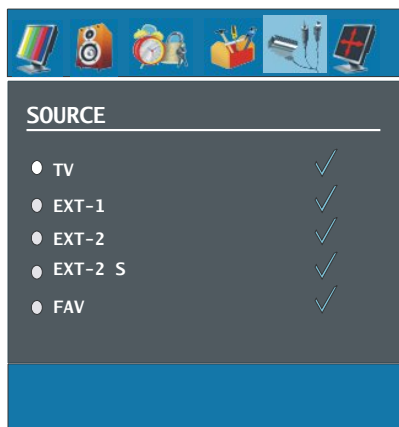

In source menu, highlight a source by pressing ▲ / ▼ button and switch to that mode by pressing “►” or “OK” button. Source options are; **TV, EXT-1, EXT-2, EXT-2 S, FAV, S-VIDEO, HDMI, YPBPR and PC**.

**Note:** You can mark desired source options by pressing **OK** button. Therefore, when (AV) button is pressed, only the marked source options will be available.



## PC Mode

### Installation

- Power off both Computer and Display before making any connections.
- Set your PC's resolution correctly before connecting to the TV. See the table on Appendix page 21.
- Use 15-pin display cable to connect a PC to the LCD TV.

**Note:** PC menu will not be active for TV sets without a PC input.

### Menu System in PC mode

#### Sound Menu/Feature Menu

The items in these menus are described at **Sound & Feature Menu** explained in "Menu System".


#### PC Picture Menu

By pressing **▲ / ▼** button, select the second icon. PC Picture menu appears on the screen.

Brightness, Contrast and Colour Temperature adjustments in this menu are identical to adjustments defined in TV picture menu in "**MENU SYSTEM**".

#### PC POSITION Menu

By pressing **▲ / ▼** button, select the sixth icon. PC POSITION menu appears on the screen.

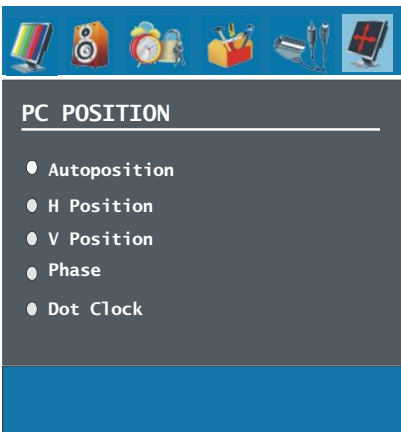

#### Autoposition

If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically.

- Select Autoposition item by using **▲ / ▼** buttons. Press or "**OK**" button.

**Warning:** Auto position adjustment recommended to be done with the full screen image for the proper adjustment.

#### H (Horizontal) Position

This item shifts the image horizontally to right hand side or left hand side of the screen.

- Select H Position item by using **▲ / ▼** button.
- Use **◀ / ▶** button to adjust the value.

#### V (Vertical) Position

This item shifts the image vertically towards the top or bottom of the screen.

- Select V Position item by using **▲ / ▼** button.
- Use **◀ / ▶** button to adjust the value.

#### Phase

Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

- Use **◀ / ▶** button to adjust the value.

#### Dot Clock

Dot Clock adjustments correct interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

- Use **◀ / ▶** button to adjust the value.

#### Sound in PC mode

- Connect the PC's Audio output to the TV's **PC Audio In** socket with an audio cable.

## Other Features

 
### TV Status

**Programme Number, Programme Name, Sound Indicator** and **Zoom Mode** are displayed on the screen when a new programme is entered.


### Mute Indicator



It is placed in the upper side of the screen when enabled.

Mute


To cancel mute, there are two alternatives; the first one is pressing the  button and the second one is increasing the volume level.



### PIP and PAP Modes

PIP picture is displayed on the screen by pressing "" button. At PIP Mode, a small picture (PIP picture) is displayed in the main picture.

When PIP Mode is entered, the default active window is PIP window and the active window is indicated by a red frame around it. The active window can be changed by pressing "" / "" buttons.

Press the "" button again to exit the PIP mode.

PAP picture is displayed on the screen by pressing "" button. At PAP mode, two pictures with equal sizes are displayed on the screen. Aspect Ratios of the windows are fixed.

When you switch to PAP Mode, main window in PAP Mode is displayed on the right side of the screen. The active window can be changed by pressing "" / "" button.

Press the "" button again to exit the PAP mode.

**Note:** When main picture source is TV, EXT-1, EXT-2, FAV or S-VIDEO; PAP or PIP window can only be set to HDMI, YPBPR, PC source or vice versa.

### AV Modes

By pressing the AV button you can switch your TV to AV modes (except being in teletext). Pressing this button consecutively will switch the TV in one of the optional AV modes: **TV, EXT1, EXT2, EXT2 S, FAV, S-VIDEO, HDMI, YPBPR or PC.**

### Personal Preference

By pressing PP button, you may change Picture Mode settings.

### Zoom Modes

Zoom mode can be changed by pressing the **WIDE** button. You can change the screen size according to

the picture aspect ratio. Select the optimum one from the following **ZOOM** modes.

#### Note:

- In YPBPR and HDMI modes, while in 720p-1080i resolutions, only FULL mode is available.
- In PC mode, only 4:3 and 16:9 modes are available.

 
#### Auto

When a **WSS (Wide Screen Signalling)** signal, which shows the aspect ratio of the picture, is included in the broadcast signal or the signal from an external device, the TV automatically changes the **ZOOM** mode according to the **WSS** signal.

- When the **AUTO** mode does not function correctly due to poor **WSS** signal quality or when you want to change the **ZOOM** mode, change to another **ZOOM** mode manually.

#### Zoom


This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



- For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the **Full** mode to restore the picture to its original shape.

#### Cinema

 This zooms up the wide picture (16:9 aspect ratio) to the full screen.



#### 16:9 Zoom

This zooms up the wide picture (16:9 aspect ratio) to the full screen.



#### Subtitle

This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen.



### 4:3

Use to view a normal picture (4:3 aspect ratio) as this is its original shape.



### 14:9 Zoom

This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.



### Panoramic

This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural.



The top and bottom of the picture are slightly cut off.

### Freeze Picture

You can freeze the picture on the screen by pressing the "OK" button.

**Note:** This feature will be unavailable to be used while watching DTV, PC, YPbPr and HDMI sources.

## Teletext





 

 
 




You can display Teletext information on your TV. Each channel which broadcasts teletext, transmits a page with information on how to use its teletext system (usually page 100). Depending on the TV channel, teletext is transmitted in different systems. The colours used in the options line correspond with the colour buttons of your remote control.

- Ensure that the TV is receiving a good signal, or some text errors may occur.
- When four coloured items appear at the bottom of the text page, Fasttext is available. Fasttext allows you to access pages quickly and easily. Press the corresponding coloured button to access the page.

### Special Teletext Functions

 To Display a page of text.

The view text services press . To return normal viewing press again. Programmes cannot be changed until text is cancelled.

- To select a page, press the number buttons or program buttons (P+, P-).
- To select index page, press  button.
- To select superimposed over the programme on the screen, press .
- Press  once to enlarge top half of the page, press again to enlarge the bottom half of the page. Press again to revert normal size.
- To discover solutions on quiz and games press .
- At times it is convenient to hold a page of text. Press  to hold a page. The page will be held on screen until the button pressed again.
- To select subcode pages press . Subcode pages are subsections of long Teletext pages that can only be displayed on the screen one section at a time.
- Time information will be displayed on screen after pressing  button. If the programme does not have teletext transmission, no information will be displayed.
- When  button is pressed while in teletext mode, the screen will be splitted into two windows, one displaying the teletext and the other displaying the current channel. Press the  button or  /  button to exit from teletext.
- To exit text press .

**Note:** If the signal becomes insufficient, the teletext mode will be quitted.

## Fastext

Your TV supports the 1000 page Teletext system. When the page number of any of the 1000 pages in memory is entered, the system will not search for the requested page; instead it will display the page automatically. If the requested page is not in memory, the system will search for the requested page number and save the 1000 pages including the requested page into memory after finding it.

- Press the ▲ button to move the Teletext screen forward one page at a time.
- Press the ▼ button to move the Teletext screen backward one page at a time.

## For Fastext

The subject-heading for the information may have a particular colour.

- Press an appropriate **RED, GREEN, YELLOW** or **BLUE** button in order to reach the relevant page quickly.

## TOP text

TOP text mode of operation will be activated automatically according to the transmission.

- If TOP text transmission is present, colour coded buttons will appear in status row.
- If TOP text transmission is not present, status row will not appear.

The subject-heading for information may be located in colored box.

In Top mode the “-P/CH” or “P/CH+” commands will request the next or previous page respectively. If TOP text transmission is not available, in case of operation of these commands, wraparound occurs. For example page 100 appears to be one greater than page 199.

## Connect Peripheral Equipment

### High Definition

Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be connected via the HDMI socket or Component Socket. These socket can accept either 720p or 1080i signals.

**Note:** *When it is desired to watch HDMI source with a DVI to HDMI cable; in order to enable audio, Audio Input (which is located at the left side of the antenna input) is to be used to get DVI device's audio signals.*

### Via The Scart

The TV has 2 Scart sockets. If you want to connect peripherals (e.g. video, decoder, etc.) which have Scart sockets to the TV, you can use SCART socket of the TV.

**Note:** *If an external device is connected via the Scart sockets, the TV will automatically switch to AV mode. If both sockets are employed at the same time, SCART 1 becomes the preferential.*

### Via Aerial Input

If the device you want to connect does not have a Scart socket, you should connect it to the Aerial input of the TV.

**If the VCR is connected via Aerial input, it is suggested to use Programme 0.**

### Decoder

If you are subscribed to cable TV offers, the organisation will supply you a corresponding decoder unit to allow the programmes to be unscrambled.

*For further information consult your dealer.*

### Connect a decoder with an aerial socket to the TV

- Connect the aerial cable.

### Connect a decoder without an aerial socket to the TV

- Connect the decoder to the EXTERNAL socket of TV with a RCA cable. Through the SCART/RCA socket of the decoder, you may attain a better display resolution.

### TV And Video Recorder

- Connect the aerial cables.

Better picture quality can be obtained if you also connect a Scart cable to **SCART** sockets.

### Playback NTSC

- Connect NTSC VCR player to a Scart socket of the TV.

Then, press the “**AV**” button to select EXT1 or EXT2.

## Copy Facility

Source selection for **VCR** recording.

- Select **Feature** menu.
- Select **SCART 2 Out** by pressing ◀ / ▶ button.
- For copying the picture that comes from the tuner, select SCART 1.

## Camera And Camcorder

### To Connect to AV Input

Connect your camera or camcorder to AV input of the TV.

- Connect your equipment to the TV via **VIDEO** (yellow), **AUDIO R** (red) and **AUDIO L** (white) inputs. You must connect the jacks into the input with the same colour.

### To Connect To S-VHS Input

Connect your camera or camcorder S-VHS input of the TV.

- Connect your equipment to the TV via S-VHS input and audio inputs of AV inputs by using S-VHS cables.

## Connect the Decoder to the Video Recorder

Some video recorders have a special Scart socket for decoder.

- Connect a Scart cable to the Scart socket of your decoder and to the special Scart socket of your video recorder. Refer to the booklet of your video recorder.

## Connecting Headphones (optional)

Use the stereo headphone socket of the TV, to connect headphones.

**Note:** *If you want to connect more equipment to your TV, consult your dealer.*

## Connecting Subwoofer

Use **Subwoofer Out** socket to connect an external, active subwoofer to the set to give a much deeper bass effect.

## Audio Lineout

To connect the external speakers to your TV, use the Headphone Line Out of the TV. Additionally, turn “Line out” setting on in the “Sound Menu”.

**Note:** *While watching PC or YPbPr sources, Lineout selection could only be the current source.*

## Tips

### Care Of The Screen

Clean the screen with a slightly damp, soft cloth. Do not use abrasive solvents as they may damage the TV screen coating layer.

### Poor Picture

Have you selected the correct TV system? Is your TV set or house aerial located too close to non-earthed audio equipment or neon lights, etc.?

Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.

Is the picture or Teletext unrecognisable? Check if you have entered the correct frequency.

 
The picture quality may degrade when two peripherals are connected to the TV at the same time. In such a case, disconnect one of the peripherals.

### No Picture

Is the aerial connected properly? Are the plugs connected tightly to the aerial socket? Is the aerial cable damaged? Are suitable plugs used to connect the aerial? If you are in doubt, consult your dealer.

**No Picture** means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more.

### Sound

You can not hear any sound. Did you perhaps interrupt the sound, pressing the  button?

Sound is coming from only one of the speakers. Is the balance set to one extreme? See **Sound** menu.

### Remote Control

Your TV no longer responds to the remote control. Perhaps the batteries are exhausted. If so you can still use the local buttons at the bottom of the TV.


## Appendix A: PC Input Typical Display Modes

The display has a maximum resolution of 1360 x 768, frequency range of 56-75 Hz.


The following table is an illustration of some of the typical video display modes.

Mode	Resolution		Frequency	
	Horizontal	Vertical	Hor.(kHz)	Ver.(Hz)
1	640	480	31,5	60
2	640	480	37,9	72
3	640	480	37,5	75
4	800	600	35,2	56
5	800	600	37,9	60
6	800	600	48,1	72
7	800	600	46,9	75
8	1024	768	48,4	60
9	1024	768	56,5	70
10	1024	768	60	75
11	1280	1024	64	60
12	1280	768	47,8	60
13	1360	768	47,7	60

## Appendix B: Aerial Connection

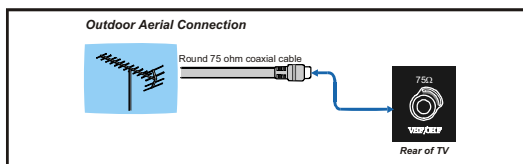

## Appendix C: Connect Peripheral Equipment

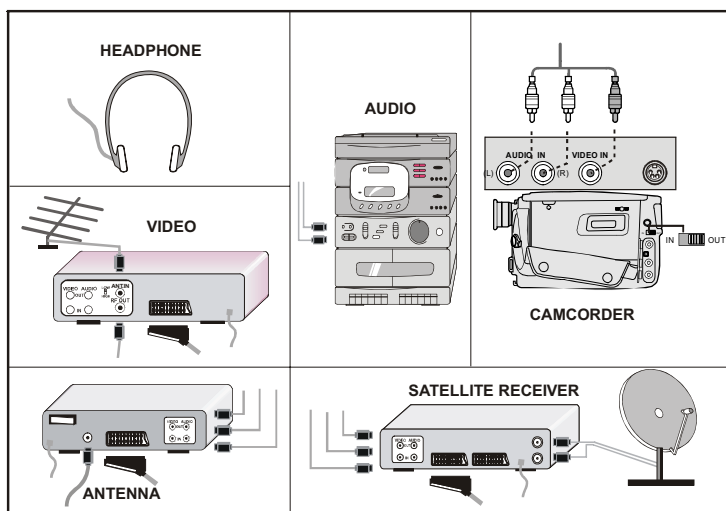

## Appendix D: AV and HDMI Signal Compatibility

Source	Supported Signals		Available
<b>EXT-1 (SCART 1)</b>	PAL 50/60		<b>O</b>
	NTSC 60		<b>O</b>
	RGB 50		<b>O</b>
	RGB 60		<b>O</b>
<b>EXT-2 (SCART-2)</b>	PAL 50/60		<b>O</b>
	NTSC 60		<b>O</b>
	S-VHS 50		<b>O</b>
	S-VHS 60		<b>O</b>
	RGB 50		<b>O</b>
	RGB 60		<b>O</b>
<b>YPbPr</b>	480I	60Hz	<b>O</b>
	480P	60Hz	<b>O</b>
	576I	50Hz	<b>O</b>
	576P	50Hz	<b>O</b>
	720P	50Hz	<b>O</b>
	720P	60Hz	<b>O</b>
	1080I	50Hz	<b>O</b>
	1080I	60Hz	<b>O</b>
<b>FAV</b>	PAL 50/60		<b>O</b>
	NTSC 60		<b>O</b>
<b>S-Video</b>	PAL 50/60		<b>O</b>
	NTSC 60		<b>O</b>
<b>HDMI</b>	480I	60Hz	<b>O</b>
	480P	60Hz	<b>O</b>
	576I	60Hz	<b>O</b>
	576P	60Hz	<b>O</b>
	720P	60Hz	<b>O</b>
	720P	50Hz	<b>O</b>
	1080I	50Hz	<b>O</b>
	1080I	50Hz	<b>O</b>
	1080P	50Hz	<b>X</b>
	1080P	60Hz	<b>X</b>
	1080P	24 HZ	<b>X</b>

(X: Not Available, O: Available)

**Note:** In some cases a signal on the LCD TV may not be displayed properly. The problem may be a inconsistency with standards from the source equipment (DVD, Set-top box, etc...). If you do experinece such a problem please contact your dealer and also the manufacturer of the source equipment.

# Specifications

## DISPLAY

Size/Diagonal	37" (16:9 Display)
Viewable screen size/Diagonal	82,36 x 46,48 (cm) / 94,57 (cm)

## VIDEO STANDARDS

Video	PAL/NTSC/SECAM
TV Tuner (Analog)	PAL/SECAM/B/G D/K K' I/I' L/L' VHF (BAND I/III) UHF (BAND U) HYPERBAND CABLE TV (S1-S20 / S21-S41) 100 Preset Channels Fast Text 1000 Pages TOP
Formats	4:3, 16:9, 14:9, Panoramic, Default Zoom, Auto Wide

## AUDIO

German + Nicam Stereo

## FREQUENCY RANGE PC

Horizontal Frequency:	64 Khz (max)
Vertical Frequency:	75 Hz (max)
Clock Frequency:	108 Mhz (max)
Resolutions:	1360 x 768 (max)
Formats:	4:3, 16:9

## INPUT CONNECTIONS

PC	D-SUB 15 (VGA)
VIDEO	TV TUNER: IEC 75 Ohms input resistance SCART1: CVBS, RGB SCART2: CVBS, S CVBS: 1 x RCA Y/C (S-Video) MiniDIN YPbPr: 3 x RCA HDMI x 1: Multimedia Interface
AUDIO	SCART1: Audio L/R SCART2: Audio L/R Y/C or CVBS: Audio Phono L/R YPbPr: Audio Phono L/R PC: 3.5mm Jack Stereo Headphones: 3.5mm Jack Stereo

## OUTPUT CONNECTIONS

Line Out	Audio Phono L/R
Subwoofer	1 x Phono (Mono)
Audio Speaker Output	2 x 8W (RMS) 10% THD
Synchronization	Sync on green, composite sync with automatic detection separate H and V sync.
Operator Control Keys	On/Off, Standby, Vol+, Vol-, Prog +, Prog -, Menu, TV/AV.

## OPERATING CONDITIONS

Temperature	0°C ~40°C (in operation)
Air Humidity	20%~80% (no condensation)
Atmospheric Pressure	800~1114 HPa

## POWER SUPPLY

Voltage Supply	220-240V AC
Mains Frequency	50Hz
Power Consumption	180W, 1W (Standby)

## DIMENSIONS AND WEIGHT

Display with stand D x L x H:	300 x 933 x 703 (mm)
Display without stand: D x L x H:	107 x 933 x 647 (mm)
Weight Display:	19 kg
Weight Stand:	3,5 kg
Weight (net):	22,5 kg




# Specifications

## Signal Input

### PC RGB Terminal (D-sub 15-pin connector)

Pin	Input signal
1	R
2	G or sync on green
3	B
4	No connection
5	No connection
6	R.GND
7	G.GND
8	B.GND
9	No connection
10	GND
11	No connection
12	[SDA]
13	H.sync or H/V composite sync
14	V.sync. [V.CLK]
15	[SCL]

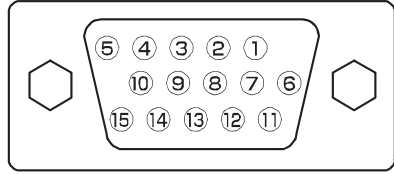


- When different kinds of input signals are simultaneously input to the monitor via a graphics board or the like, the monitor will automatically select the signals in the following priority order:

Sync signal type	Priority
H/V separate sync.	1
H/V composite sync.	2
sync.on Green *	3

- Even in the case of the recommended signals shown on the following page, there may be instances when correct display is not possible. In this case, use H/V separate sync, H/V composite sync.


### S-input connector pin specifications

Pin	Input signal
1	Y
2	Y-GND
3	C
4	C-GND
Frame	GND

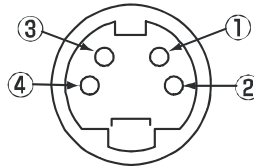


### HDMI connector pin specifications

Pin	Input signal	Pin	Input signal
1	TMDS Data2+	11	TMDS Clock Shield
2	TMDS Data2 Shield	12	TMDS Clock-
3	TMDS Data 2-	13	CEC
4	TMDS Data 1+	14	Reserved (N.C. on device)
5	TMDS Data1 Shield	15	SCL
6	TMDS Data1-	16	SDA
7	TMDS Data0+	17	DDC/CEC Ground
8	TMDS Data0 Shield	18	+5V Power
9	TMDS Data0-	19	Hot Plug Detect
10	TMDS Clock+		

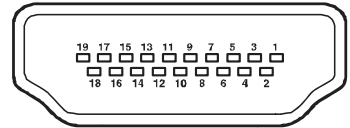

### SCART connector pin specifications

Pin	Input signal	Pin	Input signal
1	AUDIO OUT (RIGHT)	12	Not used
2	AUDIO IN (RIGHT)	13	RGB-R GND
3	AUDIO OUT (LEFT/MONO)	14	GND
4	AUDIO GND	15	RGB-R / S.VHS CHROMINANCE IN
5	RGB-B GND	16	BLANKING SIGNAL
6	AUDIO IN (LEFT/MONO)	17	COMPOSITE VIDEO GND
7	RGB-B IN	18	BLANKING SIGNAL GND
8	AUDIO / RGB SWITCH / 16:9	19	COMPOSITE VIDEO OUT
9	RGB-G GND	20	COMPOSITE VIDEO / S.VHS LUMINANCE IN
10	Not used	21	GND / SHIELD (CHASSIS)
11	RGB-G IN		

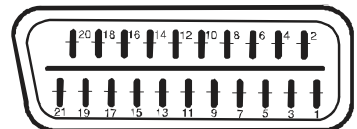

## UK Guarantee

# Your Guarantee of Excellence

Thank you for purchasing this Hitachi Television.

In the unlikely event that this product should develop a fault, we undertake to replace or repair any part of the product which fails due to a manufacturing defect within 12 months of the date of purchase provided that:

- i) The product has been installed and used only in accordance with the instructions supplied with the product
- ii) The product has not been repaired, maintained, or modified by any person other than an Hitachi authorised engineer
- iii) The product serial number has not been removed or altered

This guarantee does not apply to product acquired second hand or for commercial or communal use

This guarantee does not cover the replacement of exhausted batteries, the adjustment of user controls, or aerial alignment.

Any parts replaced under this guarantee shall become the property of Hitachi Europe Ltd.

Please note that evidence of the date of purchase will be required before any service under this guarantee is carried out.


**THIS GUARANTEE DOES NOT AFFECT YOUR STATUTORY RIGHTS.**

**IN ALL CASES OF DIFFICULTY PLEASE CONSULT YOUR HITACHI DEALER**

**!** IMPORTANT - If placing TV into cabinet or alcove, ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the TV. This is to allow for adequate ventilation during operation. Please read the main Users Guide for more safety information before installation.


## 1

### insert the batteries into your handset

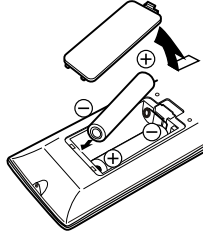


## 2a

### either connect the aerial straight to your TV...

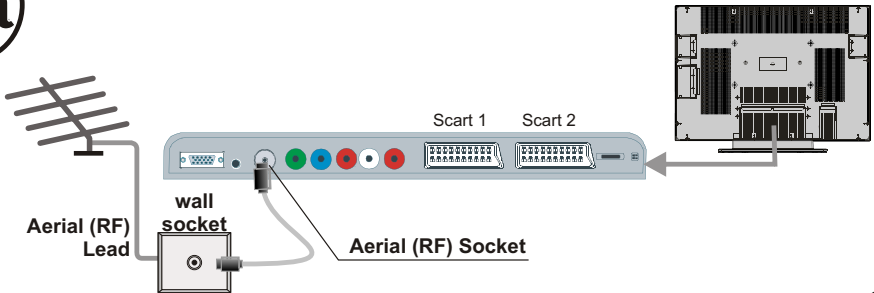

## 2b


### ...or connect the aerial through a VCR...

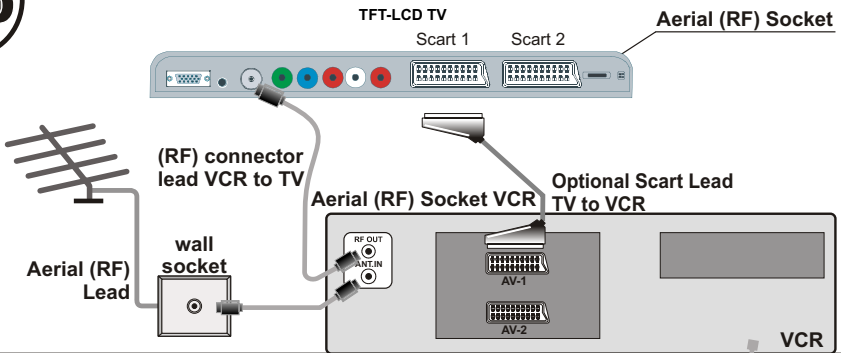

• It is recommended that a scart lead should be fitted between your TV and VCR to enhance your picture and sound quality. Scart leads are essential if you have a stereo TV and VCR and wish to obtain stereo sound from your equipment. These leads can be purchased from your Hitachi dealer or any good High Street electrical retailer.


2c

...or through a satellite decoder...

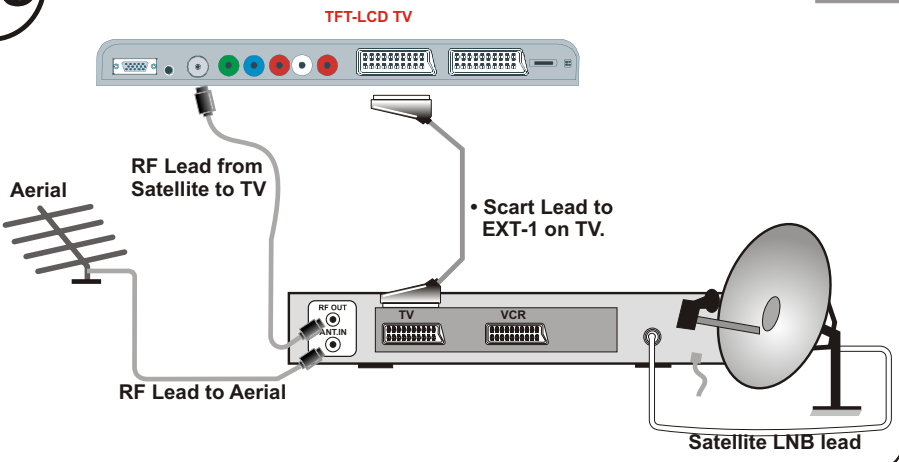




2d

...or through a VCR and satellite decoder.

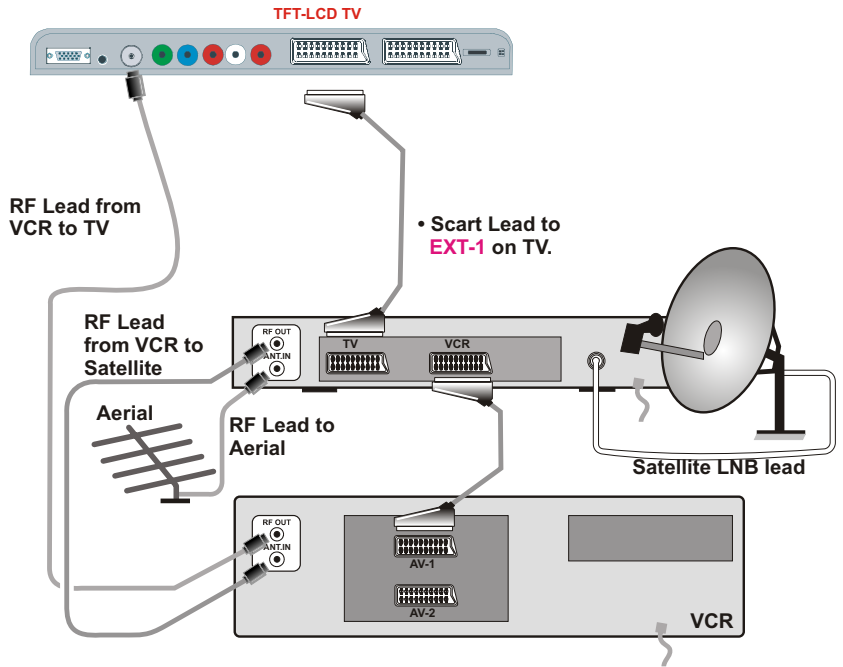


3

### connect the TV plug to the mains socket

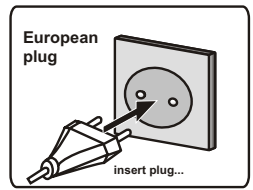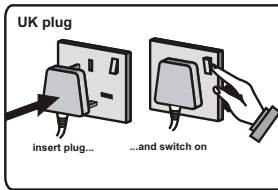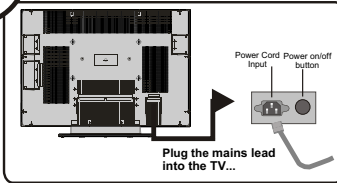


4

### switch your TV on by pressing the On/Off button

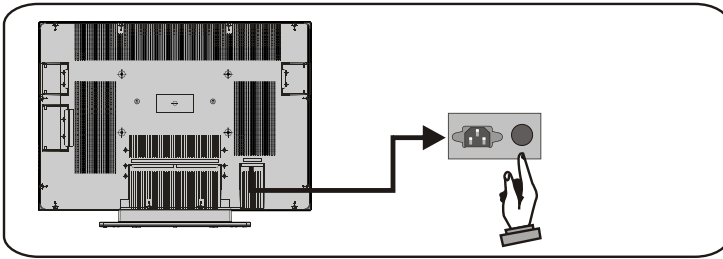

**NB:** When the set is first switched on, the set will be in standby and the indicator on the front of the set will illuminate red. Press the channel up down (P-, P+) or numeric buttons (1, 2, 3, ...) to operate.

#### basic functions of remote control

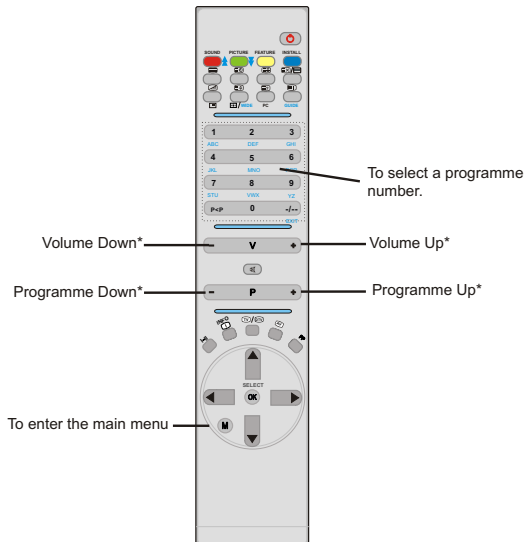

## important note before starting Auto Setup

If you have a Video Cassette Recorder or a Satellite receiver connected to your TV please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a pre-recorded tape and begin playback of your equipment. These measures ensure that all your external equipment is tuned in during the Auto Setup procedure.

## 5


### start A.P.S. (Auto Programming System)

1

First of all choose **Language**, **Country** and **TXT Language** by using  $\blacktriangle$  /  $\blacktriangledown$  and  $\blacktriangleleft$  /  $\blacktriangleright$  buttons. This will affect the sort process in APS. To start APS, press the **RED** or "OK" button.

2

Press the **BLUE** button when search is completed.

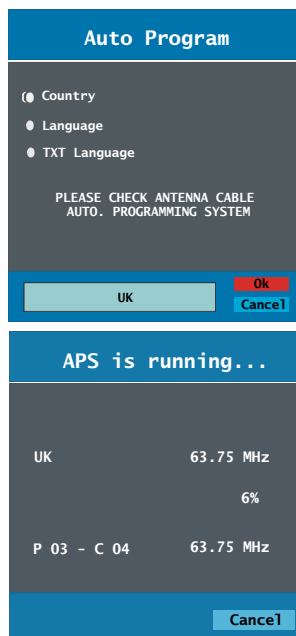

## important note.

Once the TV has found all your local stations, they are then automatically assigned a programme number and name, if available from the broadcast.

If you would like to change the programme number or order, please refer to the Program Menu section of the instruction book.

# HITACHI

## Inspire the Next

Hitachi, Ltd.  
Consumer Business Group  
Shin-Otemachi Bldg 5f, 2-1, Otemachi 2-Chome,  
Chiyoda-Ku, Tokyo 100-0004 Japan

### HITACHI EUROPE LTD.

Consumer Affairs Department  
PO Box 3007  
Maidenhead

Berkshire SL6 8ZE

### UNITED KINGDOM

Tel: 0870 405 4405

Email: [consumer.mail@hitachi-eu.com](mailto:consumer.mail@hitachi-eu.com)

### HITACHI EUROPE S.A.

364, Kifissias Ave. & 1, Delfon Str.  
152 33 Chalandri  
Athens

### GREECE

Tel: 210 6837200

Fax: 210 6835694

Email: [dmgservice.gr@hitachi-eu.com](mailto:dmgservice.gr@hitachi-eu.com)

### HITACHI EUROPE GmbH

Munich Office

Dornacher Strasse 3

D-85622 Feldkirchen bei München

### GERMANY

Tel: 089-991 80-0

Fax: 089 - 991 80 -224

Hotline: 0180 - 551 25 51 (12ct/min.)

Email: [dmg-mun.service@hitachi-eu.com](mailto:dmg-mun.service@hitachi-eu.com)

### HITACHI EUROPE S.A.

Gran Via Carles III, 86 Planta 5ª

Edificios Trade - Torre Este

08028 Barcelona

### SPAIN

Tel: 93 409 2550

Fax: 93 491 3513

Email: [atencion.cliente@hitachi-eu.com](mailto:atencion.cliente@hitachi-eu.com)

### HITACHI EUROPE S.r.l.

Via T. Gulli n.39

20147 MILAN

### ITALY

Servizio Clienti

Tel. 02 38073415

Email: [customerservice.italy@hitachi-eu.com](mailto:customerservice.italy@hitachi-eu.com)

### HITACHI EUROPE AB

Box 77

S-164 94 KISTA

### SWEDEN

Tel: 08 562 711 00

Fax: 08 562 711 11

Email: [csgswe@hitachi-eu.com](mailto:csgswe@hitachi-eu.com)

### HITACHI EUROPE S.A.S

Digital Media Group

Cité Internationale

94 Quai Charles de Gaulle,

69463 LYON cedex 06

### FRANCE

Tel: 04 72 14 29 70

Fax: 04 72 14 29 99

Email: [france.consommateur@hitachi-eu.com](mailto:france.consommateur@hitachi-eu.com)

### HITACHI EUROPE AB

(Norway Branch Nuf)

Strandveien 18

1366 Lysaker

### NORWAY

Tel: 67519030

Fax: 67519032

Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

### HITACHI EUROPE LTD.

Benelux Branche Office

Bergensesteenweg 421

1600 Sint-Pieters-Leeuw

### BELGIUM

Tel : 0032/2 363 99 01

Fax: 0032/2 363 99 00

Email : [info@hitachi.be](mailto:info@hitachi.be)

### HITACHI EUROPE AB

Egebækvej 98

2850 Nærum

### DENMARK

Tel: 43 43 60 50

Fax: 43 43 60 51

Email: [csgden@hitachi-eu.com](mailto:csgden@hitachi-eu.com)

### HITACHI EUROPE LTD.

Kodanska 46

101 00 Praha 10

### CZECH REPUBLIC

Tel : 234 064 514

Fax: 234 064 513

Email : [dmg.eeu@hitachi-eu.com](mailto:dmg.eeu@hitachi-eu.com)

### HITACHI EUROPE AB

Lars Sonckin kaari 16

FIN-02600 ESPOO

### FINLAND

Tel: 010-8503085

Fax: 010-8503086

Email: [info.finland@hitachi-eu.com](mailto:info.finland@hitachi-eu.com)