



USER MANUAL



Thank you for purchasing the HITACHI LCD Television.
Please read this user manual carefully before operating
this product.

To ensure proper operation, please read and follow ALL
the instructions, especially the "IMPORTANT SAFETY
INSTRUCTIONS" and "SAFETY PRECAUTIONS".
Please keep this user manual for future reference.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
INSTRUCTIONS	4
About This Manual	4
Trademark Credits	4
About Software	4
SAFETY PRECAUTIONS	5
About the Symbols	5
Cleaning and Maintenance	8
ABOUT LCD PANEL	9
Common phenomena of LCD Panel	9
FEATURES	10
SUPPLIED ACCESSORIES	10
COMPONENT NAMES	11
Main Unit	11
Remote Control	12
PREPARATION	13
Remote Control Batteries Installation	13
Handling the Remote Control	13
Caution When Moving the Main Unit	13
Safety Precaution on Main Unit Installation	14
Anti-Tumble Measures	14
CONNECTION	15
Terminal Positions	15
Connecting Procedure	15
BASIC OPERATION	20
Power On/Off	20
First time Setup	21
Volume UP/DOWN	21
Mute	22
Input Switching to DTT/TV/AV1~3, HDMI and RGB	22
Input Signal Screen Display	23
TV SETUP OPERATION	24
How to use the On-Screen Display (OSD) system	24
Setup Menu (TV mode)	25
Setup Menu (RGB mode)	27
Picture Menu (TV/AV mode)	28
Picture Menu (RGB mode)	30
Audio Menu	31
Timer Menu	32
Analog Teletext	33
DIGITAL TERRESTRIAL TELEVISION (DTT) OPERATION	34
How to use the On-Screen Display (OSD) system	34
DTT Main Menu List	34
Installing Channels	35
Restoring Channels	35
Channel Selections	36
Making Favorite List	37
Utilizing the Information Tool	38
Configuring Setting	40
Checking DTT System Information	41
TV Setup Menu	41
FUNCTION	42
Size Switching	42
Picture Freezing	43
Audio Switching	44
Power Save Mode	45
TROUBLESHOOTING	46
When Following Messages Appear on the Screen	46
Symptom and Check List	46
PRODUCT SPECIFICATIONS	49
Signal Input	50
Recommended Signal List	51

IMPORTANT SAFETY INSTRUCTIONS

- Read this instruction thoroughly.
- Retain this instruction for future reference.
- Heed all warnings and cautions to prevent possible danger.
- Follow all instructions. Improper handling could cause personal injury and/or serious damage to the unit that may shorten its service time.
- Do not block any ventilation openings.
- Install the product in accordance with the manufacture's instructions.
- Before calling for the technical support or service technician, read "TROUBLESHOOTING" (46-48) to determine the symptoms when problems occur during installation or operation of the product.
- If serious problems happen (such as smoke or an abnormal odor from the unit), turn off the Main Power, unplug the Power Cord, and then, contact your local dealer immediately.

INSTRUCTIONS

Thank you for purchasing the HITACHI LCD Television. We hope that you will enjoy the great performance with this product. This LCD Television has been designed to meet the International standards. However, it could cause personal injuries and property damage if improperly handled. In order to prevent potential danger and obtain maximum benefit from your set, please observe the following instructions when installing, operating, and cleaning the product. Keep this manual for future reference, and record the serial number of your set in the space provided on the front cover page of this manual.

About This Manual

- The information in this manual is subject to change without notice.
- This manual has been created with extra care. In case that you have any comments or questions regarding this manual, please contact your local dealer or our Customer Service Center.
- Before operating this set, please fully understand the prerequisite such as specifications or constraints of the hardware and software. We are not responsible and have no liability for any loss, damage or injury as a result of misuse.
- Reproduction, copying, use, modification, and/or transmission in whole or in part of this manual are prohibited without any prior written permission
- All other products and company names used in this manual are trademarks or registered trademarks of their respective owners.

Trademark Credits

- VGA and XGA are trademarks of International Business Machines Corporation.
- VESA is a registered trademark of the Video Electronics Standard Association.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- DVB is registered trademark of the DVB Project.

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

About Software



You may not alter, decompile, disassemble, decrypt, or otherwise reverse-engineer the Software installed in this product, which are prohibited by law.

SAFETY PRECAUTIONS




For your safety, please read the following precautions carefully before using this product. Improper use would cause serious personal injuries and/or damage to your property or this product.

About the Symbols

The following are the symbols used in this manual and affixed on the unit itself. Please fully understand the meanings of the symbols before reading the precautions in this section.

	WARNING	Never ignore the instruction. There are risks of serious injuries or possible death to the user.
	CAUTION	Do not ignore the instruction. There are possibilities of personal injuries and/or property damage.

Other Symbols

	The triangle with illustration is intended to alert the users that there are possibilities of fire, burst, or high temperature if the product is handled improperly. Each illustration within the triangle specifies the contents in detail. (The figure on the left is an example.)
	The circle with diagonal line and illustration is intended to prohibit the users from doing the indicated actions when handle the product. Each illustration within this symbol specifies the contents in detail. (The figure on the left is an example.)
	The blacked out circle with illustration is intended to constrain the users to follow the indicated actions when handle the product. Each illustration within this symbol specifies the contents in detail. (The figure on the left is an example.)

WARNING

There is a risk of fire, electric shock, or serious injury.

■ **Unplug the power cord immediately when serious problems happen.**

Serious problems such as

- Smoke, abnormal odor or sound comes out from the product.
- No picture, no sound or distorted picture on the display.
- Foreign objects (such as water, metals etc) get inside the unit.

Do not continue using the product under these abnormal conditions.

Turn off the Main Power, unplug the Power Cord, and contact your dealer immediately.

For your safety, never try to repair the product by yourself.



Disconnect the plug from the power outlet.

■ **Do not insert liquids or any foreign objects (such as metals or flammable items) inside the unit.**

- In case it happens, turn off the main power, unplug the Power Cord, and contact your dealer immediately.
- Use special caution when younger children are around the unit.















■ **Do not remove cover, or modify the product.**

- High-voltage components are installed inside of the unit. Removing covers can expose you to high voltage, electrical shock, and other dangerous conditions.
- Contact your local dealer to perform servicing such as inspection, adjustment, or repair work.
















Do not disassemble.




SAFETY PRECAUTIONS (continued)

 WARNING	
There is a risk of fire, electric shock, or serious injury.	
<p>■ Install the unit at a proper area where it does not expose anyone to any danger.</p> <ul style="list-style-type: none"> ● If you hit against the edge of the unit, you may be injured. 	
<p>■ Do not place any objects on top of the unit.</p> <p>Objects such as</p> <ul style="list-style-type: none"> ● Liquid containers (vase, fish tank, flowerpot, cosmetics or liquid medicine). ● If water or any liquid spill onto the unit, it may cause short-circuit and result in fire or electrical shock. ● In case that it happens, turn off the Main Power, unplug the Power Cord, and contact your dealer immediately. ● Do not place anything heavy on top of the unit. ● Do not climb on or hang from the unit. ● Do not let your pets get on top of the unit 	
<p>■ Do not expose this unit to rain or moisture.</p> <ul style="list-style-type: none"> ● Never use this unit in the bathroom or shower room. ● Beware when you use this product outside, especially in rainy or snowy weather, and at the beach or waterfront. ● When the product gets wet, it could cause fire or electrical shock. 	 
<p>■ Unplug this unit during lightning storm.</p> <ul style="list-style-type: none"> ● To reduce the risk of electrical shock, do not touch the product when starts lightning. 	  <p style="text-align: right; font-size: small;">Disconnect the plug from the power outlet.</p>
<p>■ Do not do anything that may damage the Power Cord.</p> <ul style="list-style-type: none"> ● Do not damage, modify, twist, forcibly bend, heat, or pull excessively the Power Cord. ● Do not place heavy objects (including the unit itself) on top of the Power Cord. ● If the Power Cord is damaged, contact your dealer for repairs or exchange. 	
<p>■ Use only with designated power supply voltage.</p> <ul style="list-style-type: none"> ● To prevent the risk of fire and electrical shock, operate this product only with the power supply voltage indicated on the unit. 	
<p>■ Beware not to drop or have any impact on the unit.</p> <ul style="list-style-type: none"> ● Take extra care while moving the unit. ● There is no protection glass on the surface of the LCD panel. Thus, do not press the panel surface with your fingers or hands. Or do not hit anything against the television. These actions would damage the LCD cells or the panel surface and could cause the failure or personal injuries. ● In case that you drop the unit or the cabinet is damaged, turn off the Main Power, unplug the Power Cord and contact your local dealer immediately. ● Continuing use of the product with above conditions would cause fire or electrical shock. 	
<p>■ Clean dust or metals on or around the blade of the power plug regularly.</p> <ul style="list-style-type: none"> ● Continuing use of the product with above condition may cause fire or electrical shock. ● Always unplug the Power Cord first, and clean the blade with dry cloth. 	
<p>■ Do not place the unit on an unstable surface.</p> <p>Unstable places such as</p> <ul style="list-style-type: none"> ● Sloped place or shaky rack, table, stand or trolley. ● If the unit falls down, it could cause personal injury. 	

 **CAUTION**

<p>■ Do not place the unit at the dusty place. It could cause malfunction.</p>	
<p>■ Do not cover or block any ventilation holes on the product. The television would overheat, and it could cause fire or damage the product which may shorten its service life.</p> <ul style="list-style-type: none"> ● Install the product in accordance with the instructions in this manual. ● Do not place the unit with ventilation side down. ● Do not install the unit on the carpet or bedclothes. ● Do not cover the television with tablecloth etc. 	
<p>■ Be sure to ground the earth cable correctly.</p> <ul style="list-style-type: none"> ● Especially when you use Power Cord adapter, be sure to connect the earth cable to the ground terminal. Incorrect connection would cause fire or electrical shock. ● For your safety, always make sure to unplug the Power Cord before connect or disconnect the earth cable. 	 Supply connect the ground wire.
<p>■ Follow the Anti-tumble measures in this manual.</p> <ul style="list-style-type: none"> ● If the television tumbles down, there is a risk of personal injury and possible death. Also, it would damage the product seriously. 	
<p>■ Do not install this product near the medical devices.</p> <ul style="list-style-type: none"> ● To prevent malfunction of the medical devices, do not use this product and the medical devices in the same room. 	
<p>■ Do not place the CRT-based television near the speaker of the LCD Television.</p> <ul style="list-style-type: none"> ● It could cause the partial discoloration or blurring of the image on the CRT-based television. ● Please install it away from the speaker of the LCD Television. 	
<p>■ Disconnect all of the external connection cables and detach the anti-tumble measures before moving the unit.</p> <ul style="list-style-type: none"> ● It may cause fire, electrical shock, or personal injuries. 	
<p>■ Connect the power plug securely.</p> <ul style="list-style-type: none"> ● Improper connection will cause overheat and may result in fire. ● Do not touch the blade of the plug while connecting it to the wall socket. It could cause electrical shock. ● If the plug is not fitted for the wall socket, contact your dealer for replacement. 	 
<p>■ Do not handle the Power Cord with wet hands.</p> <ul style="list-style-type: none"> ● It could result in electrical shock. 	
<p>■ Do not pull the cord when you unplug the Power Cord.</p> <ul style="list-style-type: none"> ● It may damage the cord and could result in fire or electrical shock. ● Hold the plug when disconnecting it. 	
<p>■ Unplug the Power Cord when unused the product for long periods of time.</p>	
<p>■ Handle the batteries properly.</p> <ul style="list-style-type: none"> ● Improper or incorrect use of the batteries may cause corrosion or battery leakage, which could cause fire, personal injury or taint damage to the property. ● Use only the types of the batteries which are indicated in this manual. ● Do not install new batteries with used ones. ● Install the batteries correctly by following the polarity (+ and -) indications on the battery compartment. ● Do not dispose the used batteries as domestic waste. Dispose them in accordance with the local regulations. 	

SAFETY PRECAUTIONS (continued)

PRECAUTIONS	
<p>■ Do not install the unit in high temperature.</p> <p>It could damage the cabinet or parts of the product.</p> <ul style="list-style-type: none"> ● Do not install near any heat sources such as radiator, heat registers, stoves, or other apparatus that produce heat. ● Keep the unit out of direct sunlight. It could increase the temperature of the unit and cause malfunction. 	
<p>■ Viewing Advice</p> <ul style="list-style-type: none"> ● The lighting of the environment in which the product is used should be appropriate. Too bright / dark environment is not good for your eyes. ● Take time to relax your eyes occasionally. ● When you use this product, keep away from the television 3~7 times of the vertical length of the panel. This is the best viewing distance in order to protect your eyes against eyestrain. ● Adjust the volume in appropriate level, especially during the night. 	
<p>■ When transporting this product:</p> <ul style="list-style-type: none"> ● When the product needs to be transported due to moving or repair, use the carton box and buffer material comes with this product. ● Do not keep this product lying sideways during transportation. It could damage the panel surface or degrade the phosphors of the panel. 	
<p>■ Keep away from the television when you use radio.</p> <p>This television is designed to meet the international EMI standards due to prevent the interference against the radio. However, the unit may generate noise in the radio.</p> <ul style="list-style-type: none"> ● If the noise is in the radio, please try the following actions. <ul style="list-style-type: none"> ● Adjust the direction of the radio antenna in order not to receive the interference radio wave from the unit. ● Keep the radio away from the television. ● Use coaxial cable for the antenna. 	
<p>■ About the infrared communication devices:</p> <ul style="list-style-type: none"> ● The infrared communication devices such as cordless microphone or cordless headphone may not be available around the television. It is because of the communication failure. Please note that this is not malfunction. 	
<p>■ When you dispose this product at the end of its life, follow the regulations at your residential area.</p> <ul style="list-style-type: none"> ● For more information, contact the local authority or the dealer where you purchased the product. 	
<p>■ Please avoid installing the TV directly on the wooden floor. Depending on the quality and condition of floor, the desktop stand may stick to the floor face, and surface could come off when the TV is lifted up.</p>	

Cleaning and Maintenance

Please make sure to unplug the power cord before cleaning the television.

<p>■ How to clean the LCD panel of the television.</p> <ul style="list-style-type: none"> ● Wipe the panel with a lint-free and dry cloth in order to prevent damage to the panel surface. ● Do not use a chemical cloth or cleaner. Depending on the ingredients, it may cause discoloration and damage the panel surface. ● Do not wipe with a hard cloth or rub hard. It may hurt the panel surface. ● In case of the greasy dirt such as fingerprint, wipe with a lint-free cloth moistened by a diluted neutral detergent solution, and then wipe with a soft and dry cloth. ● Do not use a spray cleaner. It could cause malfunction.
<p>■ How to clean the cabinet of the television.</p> <ul style="list-style-type: none"> ● The following may cause crack, deformation, and paint peeling. <ul style="list-style-type: none"> ● Do not wipe the cabinet with benzene, thinner, and other chemical products. ● Do not spray volatile solutions such as insecticide over the cabinet. ● Do not leave the cabinet in prolonged contact with plastic or rubber materials. ● Do not use a chemical cloth, cleaner or wax. Depending on the ingredients, it may cause crack and deformation. ● Use a lint-free cloth to clean the cabinet and control panel of the television. In case of the heavy dirt, wipe with a soft cloth moistened by a diluted neutral detergent solution, and then wipe with a soft and dry cloth. ● Never use the following detergents. It could cause crack, discoloration, and scratch. <ul style="list-style-type: none"> ● Acid/ alkaline detergent, alcoholic detergent, abrasive cleaner, powder soap, OA cleaner, car wax, glass cleaner, etc.

ABOUT LCD PANEL

Common phenomena of LCD Panel

The following are the common phenomena when operating LCD Panel due to its structural reason. Please note that they are not malfunctions.

- **Defective Spots on Panel**

The LCD panel is manufactured with high-precision technology. However, there might be some spots that are not emitted, brighter than the others, or in different colors, etc.

- **Surface on Panel**

The LCD panel displays images by blinking the fluorescent lamps internally. This could raise the temperature of the display surface.

In addition, do not impact strongly on the surface of the panel because LCD panel is made with fine processing glass.

- **Residual image**

When a still image or menu is displayed on the screen for a short time (about a minute) and then switches to another image, it may leave an "after-image" on the screen.

The residual image will disappear on its own.

- **The Usage under the Low Temperature Environment**

Because of the structural characteristics of the LCD panel, the response speed of the LCD panel becomes slower when the ambient temperature around the television becomes too low. In some cases, it may cause the residual image.

The residual image will disappear on its own as the temperature goes up and back to normal.

FEATURES

Enjoy not only beautiful and high quality pictures on the display, but also various kinds of useful and convenient functions in your daily life!

- Large-screen and high-definition LCD panel.
- Improved Digital signal processor.
- Accept more digital input devices with HDMI terminals.
- Great diversity of connecting terminals to cover wide range of audio-visual equipments.
- Enjoy the image from PC with large, high-definition LCD screen.
- Easy-to-use On-Screen Display system operating with Remote control.
- Low power consumption with Power Saving feature.

SUPPLIED ACCESSORIES

Check the supplied accessories before installation.
Remove the protection film from the Remote Control before using.
In case of missing or damaged, please contact with dealer immediately.

User Manual



Remote Control



AA size batteries
X2




Power Cord



COMPONENT NAMES

Main Unit


Front Panel

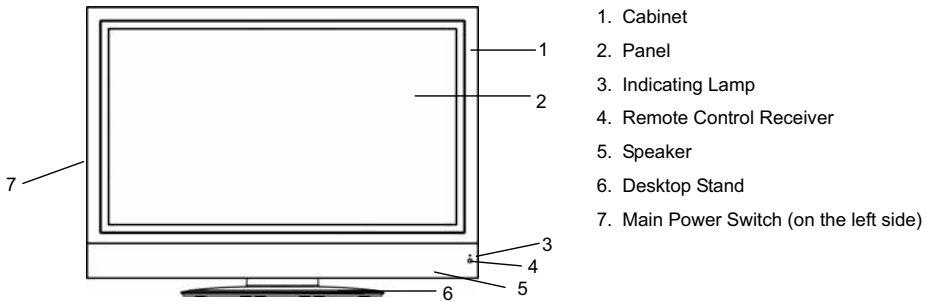

Rear Panel


1. Side Input
2. Power Cord Socket
3. Terminal Board (External Device Connection)
4. Control Panel (see below for details)

Please refer to [15] ~ [19] for the detailed information for the connections.

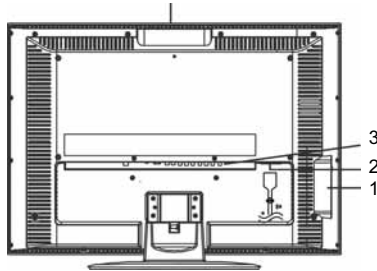


Control Panel

These buttons are located on the top.

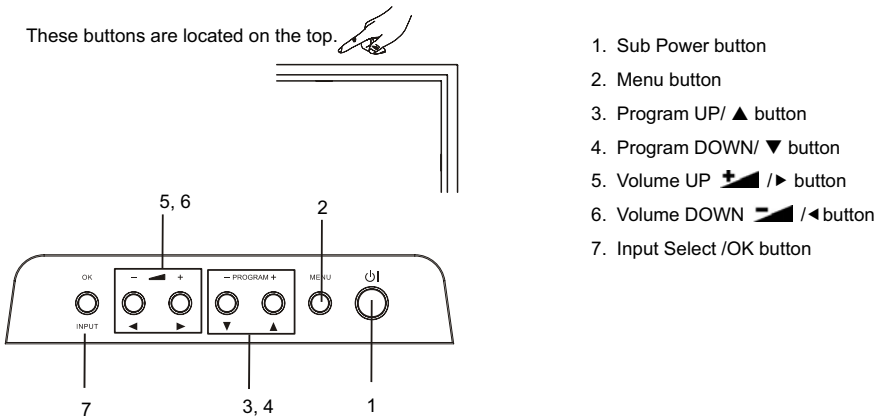

COMPONENT NAMES (continued)

Remote Control

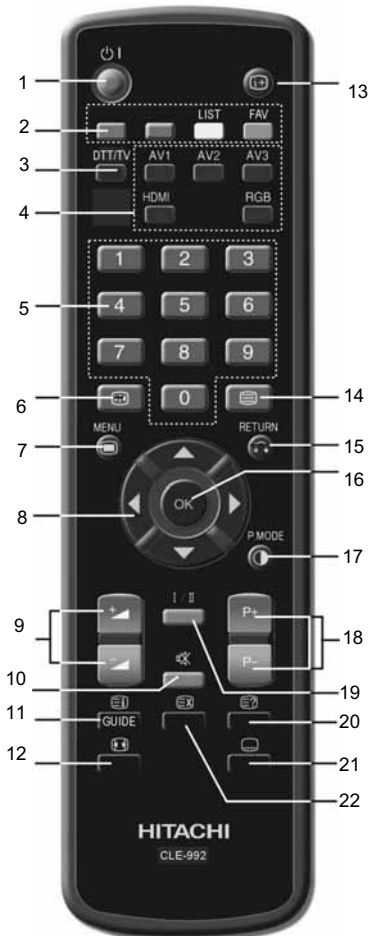

1. **Power ON/OFF**
2. **[Color (Red, Green, Yellow, Blue)]**
Yellow: It displays program list in DTT mode
Blue: It displays favorite program in DTT mode
3. **TV Select (DTT/TV)**
Press this button to change input to DTT/TV.
4. **Input Select (AV1/AV2/AV3/HDMI/RGB)**
Press this button to change input mode.
5. **Program Select**
Press these buttons to select a TV program directly.
6. **Freeze [Hold]**
Press this button to change the picture to freeze mode.
Press it again to return to normal picture.(Also, it hold the page in teletext mode.)
7. **MENU**
8. **Cursor**
9. **Volume Up/Down**
10. **MUTE**
11. **GUIDE[Index]**
It displays EPG screen in DTT mode
12. **Picture Size**
Press this button to change picture size.
13. **Recall**
Pressing this button shows the input signal status.
14. **[TV ↔ Text]**
Teletext mode can be changed each time pressed in the following sequence. TV→Teletext→Mix mode
15. **Return**
You can use this to return to the previous menu.
16. **OK**
17. **Picture Mode**
Picture mode can be changed each time pressed in the following sequence. Dynamic→Natural→ Cinema
18. **Channel Up/Down[P+ / P-]**
19. **CHI/II**
This is exclusively for TV audio A2/NICAM mode.
20. **[Reveal]**
21. **[Sub Title]**
22. **[Cancel]**

NOTE ➔

Some buttons are only for Teletext mode, and other buttons have different functions in Teletext mode from the use of TV mode. Those buttons are indicated by []. Refer to "Analog Teletext" on [33](#).


PREPARATION

Remote Control Batteries Installation

This remote control operates on 2 "AA" batteries.


1. Open the battery compartment cover.

- Slide opens the battery compartment cover on the backside of the remote control in the direction of an arrow.

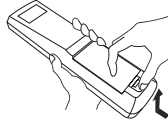


2. Installing the batteries.

- Install 2 "AA" batteries (included) making sure the polarities match the indication inside the compartment.

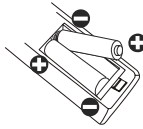


3. Close the battery compartment cover.

 - To close the battery compartment cover, slide the cover in the direction of an arrow till it clicks shut.



Handling the Remote Control

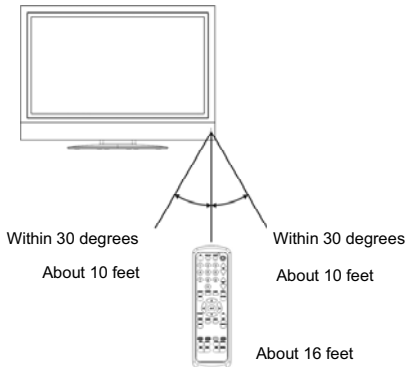

CAUTION

It could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.

- Never mix used and new batteries in the device.
- Replace all the batteries in a device at the same time.
- Remove the batteries if the remote control is not going to be used for an extended period of time.


To avoid possible failure, read the following instructions and handle the remote control properly.

- Do not drop or have an impact on the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on the wet object.
- Do not place the remote control under the direct sunlight or near sources of excessive heat.

Caution When Moving the Main Unit

As this product is heavy, whenever it is moved, two people are required to transport it safely.

When moving the unit, hold it by the top and bottom frame of the LCD screen. (See the figures below for details.)

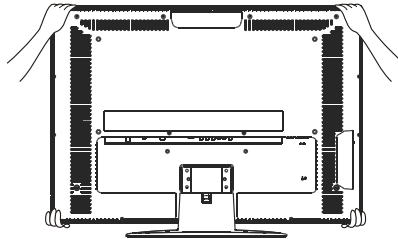

PREPARATION (continued)

Safety Precaution on Main Unit Installation

Read **SAFETY PRECAUTIONS** (3 to 8) carefully besides this page.



The Desktop Stand has been used for the illustration in this manual.

When installing the main unit, be sure to use the specified mount units in order to obtain maximum performance and maintain the safety.
We assume no responsibility or liability for personal injuries or property damages caused by use of other mount units or improper installation.

As for the installation instruction, please read each user manual of the mount units: for Desktop Setup, Wall Mounting, and Ceiling Mounting.

In case of using Wall or Ceiling Mounting unit, by contacting your local dealer, ask the specified installation specialist to set up. Never attempt to install it by yourself. It could cause injuries or damages

Please leave the adequate space around this television in order to avoid increasing the internal temperature.
Make sure not to block any ventilation holes.
Do not install the television in the small space such as inside the rack, closet or the box.
Leave more than 10cm of clearance from each side of television and 30cm from the top of television to wall.

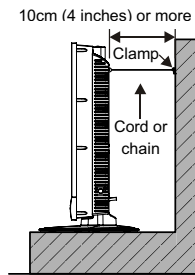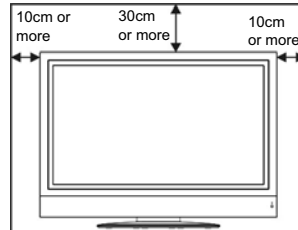


Anti-Tumble Measures

Install in a stable place and implement safety measure against overturning.

Securing to a wall or pillar

Using a commercially available cord, chain and clamp, secure the set to a firm wall or pillar.

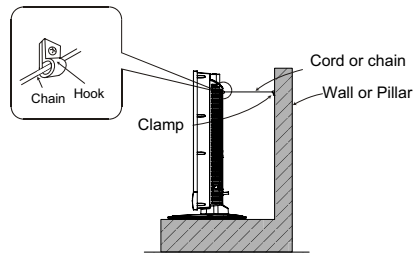

Securing to ceiling


Using a commercially available cord, chain, and clamp secure the set to a ceiling.

NOTE

- For more information regarding the mounting of the unit, please contact your dealer.
- Please install the unit at a proper area where it does not expose anyone to the danger of hitting themselves (for example their hands, head or face, etc) against the edge of the unit and cause personal injury.

CONNECTION

Terminal Positions

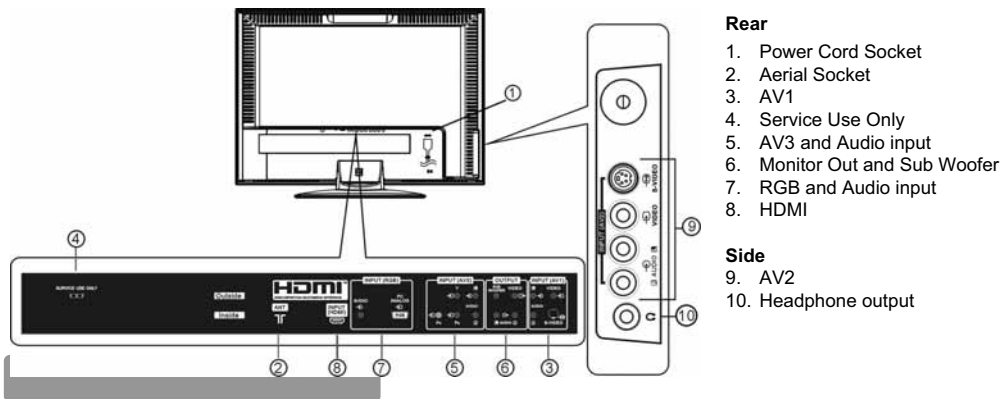

Rear

1. Power Cord Socket
2. Aerial Socket
3. AV1
4. Service Use Only
5. AV3 and Audio input
6. Monitor Out and Sub Woofer
7. RGB and Audio input
8. HDMI

Side

9. AV2
10. Headphone output

Your television is ready for various kinds of connections. Make a connection in the following steps. Be sure to turn off the Main Power first when connecting external equipments.

1. Connect Power Cord to the rear panel.
2. Connect Aerial Lead.
3. Connect your external equipments to the television if any.
4. Connect the Power Plug to the Wall Socket.

1. Connect Power Cord to Rear Panel.

Connect Power Cord to the television.

* Make sure not to connect the Power Plug to the Wall Socket until all connections are completed.





2. Connecting Aerial Lead.


There are two ways to connect Aerial Lead.

(1) When you do not have any other external equipment: STB

Connect the Aerial Lead directly into the Socket at rear panel.

(2) When you have one or more external devices to connect:

1. Use RF cable to connect between each equipment and Antenna.
2. Connect the Aerial Lead to an equipment "In" Socket marked .
3. Connect the RF cable from the equipment "Out" to the other equipment "In".
4. Then, connect from the equipment "Out" to "ANT" on the LCD screen Socket marked .

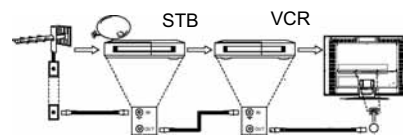

[Example: Connecting Antenna through STB and VCR.]

Precautions when connecting the aerial

- Please use a coaxial cable which is free from interference to connect the aerial. Avoid using a parallel flat feeder wire as interference may occur, causing reception to be unstable and stripe noise to appear on the screen.
- Avoid using indoor aerial as this may be affected by interference. Please use CATV net or outdoor aerial.
- For safety, install an external aerial conforming to AS1417.1 (applicable for Australia only)
- If there are noise appearances in the picture of VHF-Low band channel, please use the double-shielded cable (not provided) for RF LEADS to reduce the noise.


CONNECTION (continued)

Connecting Procedure (continued)

3. Connecting to External Equipment


- Terminals on Rear

AV1 can be connected to the equipment with an S-Video output and Composite output.

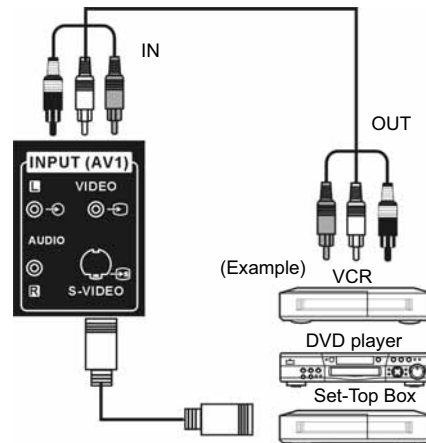


If your external device has a S-video terminal, S-VIDEO connection is recommended for higher quality picture.

AV3 can be connected to the equipment with Component output.

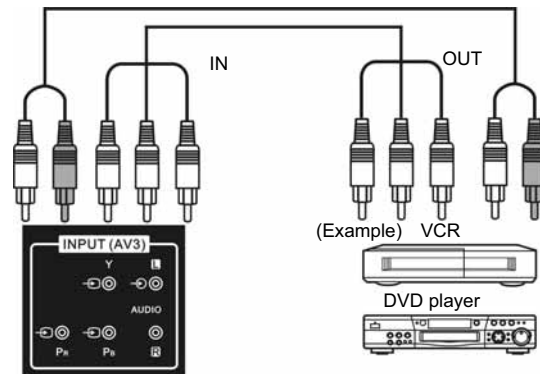


If your external device has a Component terminal, COMPONENT / AUDIO connection is recommended for higher quality picture.


Monitor Out can be used to display same image as main unit on another television. When this output terminal is connected to an external television with a 75 Ohm terminal, the same image from composite (AV1, AV2), or DTT/TV signal can be displayed to the external television.

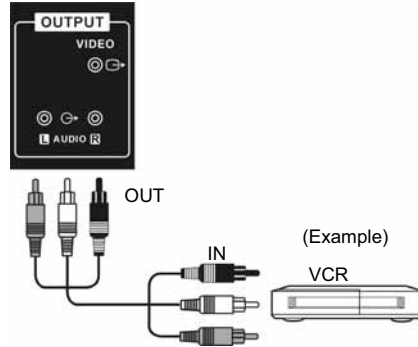

Sub Woofer terminal can provide the deep bass sound signal to Sub woofer Amplifier.

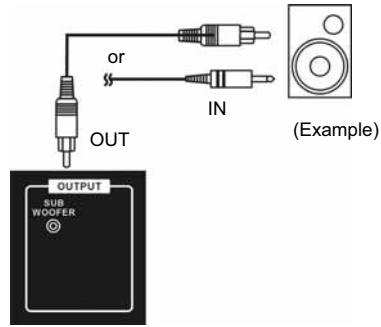


PC terminal (D-sub 15 pin or audio) is connected to PC, which allows Analog RGB signal.

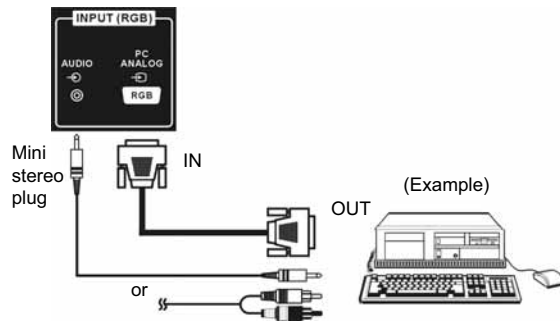

CONNECTION (continued)

Connecting Procedure (continued)

HDMI terminals can be connected to the devices with HDMI output.

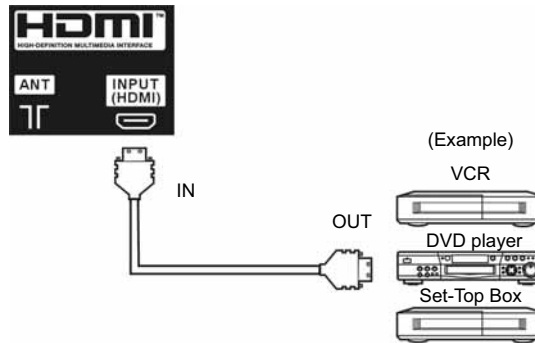

Information


HDMI (High Definition Multimedia Interface) is next-generation multimedia I/O interface. Only one cable is used to transmit all video/audio/control signals, which creates easy connection. Moreover, those digital signals can produce high quality data without any degradation.

If your external device has a HDMI terminal, HDMI connection is recommended for higher quality picture and sound.

• Terminals on Side


Since the following terminals are located on the side, it is very convenient to use the extra device on a temporary basis after done the connections on the rear panel.

AV2 can be connected to the equipment with an S-Video output and composite output.

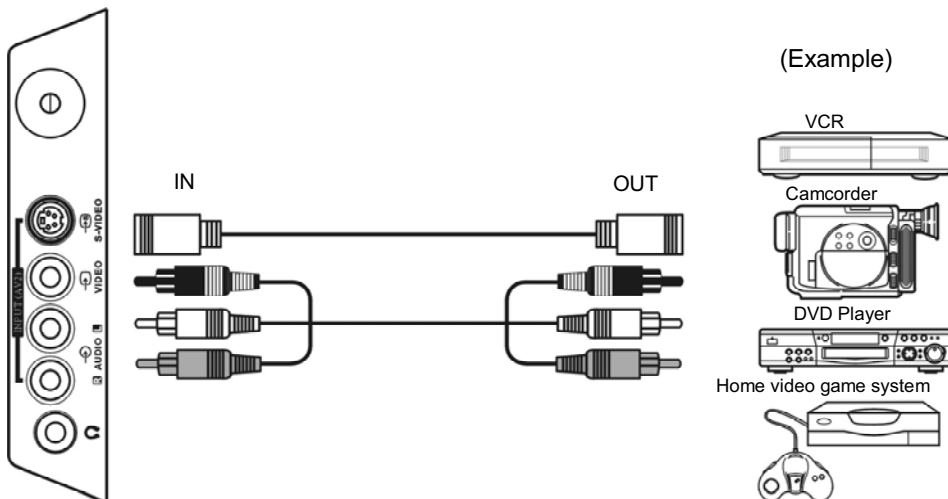

If your external device has an S-video terminal, S-VIDEO connection is recommended for higher quality picture.

Headphone The detail settings can be adjusted from Audio Menu on page 31.

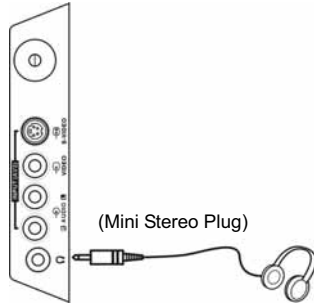


The audio from the speaker will be muted when connecting the headphone to this terminal.

4. Connecting the plug into the wall socket

Connect the Power Cord after completing all other connections.

- (1) Connect the power cord to this device.
- (2) Fix the power cord cable to the clamp.
- (3) Connect the power cord to the power outlet.

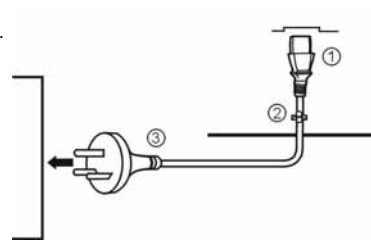

CAUTION


- Use only the Power Cord provided.
- Do not use a power supply voltage other than that indicated (AC110-240V, 50/60Hz). It may cause fire or electric shock.
- For the LCD panel, a three-core power cord with a ground terminal is used for efficiency protection. Always be sure to connect the Power Cord to a three-pronged grounded outlet and make sure that the cord is properly grounded. If you use a power source converter plug, use an outlet with a ground terminal and screw down the ground line.
- Ensure that both ends of power cord are easily accessible.
- If you have to change the power cord, please use the certified power cord that meets your region's safety standard.

Information

• How to secure the cable

After connecting all of the cable to the terminals, secure them with the band.

When you secure the cables, please be careful not to tighten too much.

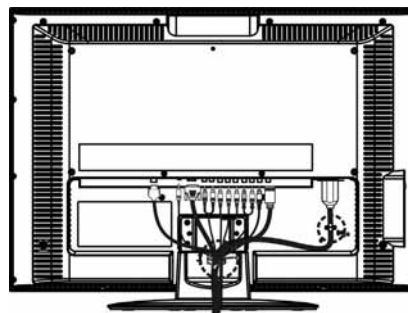


BASIC OPERATION

POWER On/Off

Now, turn On the main power of the unit. Make sure that the Power Cord has plugged into the wall socket.

Main Power switch (on the left side) →

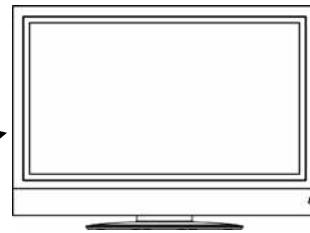

Indicating Lamp

• To turn On the power of the television:

1. Press the **Main Power switch** on the television.
 - The Indicating Lamp will illuminate in **Red** (Standby mode).
2. Press **Sub Power button** either on the control panel or on the remote control.
 - The color of the Indicating Lamp turns into **Green**, and the image will display on the screen.

Sub Power button



• To turn Off the power of the television:

1. Press **Sub Power button** either on the control panel or on the remote control.
 - The image disappears from the screen and the Indicating Lamp turns into **Red** (Standby mode).
2. Press **Main Power switch** to completely turn Off the power of the unit.

Sub Power button



The Indicating Lamp Status Check

Indicating Lamp Status	Power Status	Power Switch Status
Off	Off	Main power → Off
Red	Standby mode	Main power → On Sub Power button → Off
Green	On	Main power → On Sub Power button → On
Orange	Power Save mode*	Main power → On Sub Power button → On

* About Power Save mode, see [Power Save Mode] and [When Following Messages Appear on the Screen] on [45](#) and [46](#) for details.

NOTE →

- If the image does not appear on the screen at all, or have any problem, see TROUBLESHOOTING on [46](#) ~ [48](#). It may help you to solve the problems.
- You can turn ON the power only by pressing the **Sub Power** button during the Standby mode.
- Do not switch the power On/Off repeatedly in a short period of time. It could cause malfunction.
- To avoid sudden surges of electricity when the power comes back on, turn Off the main power of the unit before you leave if there is a blackout during use of the unit.


First time Setup


When you turn ON the TV for the first time, the TV is at "the original factory setting" and cannot display the image normally.

• DTT mode

When you turn ON the TV for the first time, a message show up to lead to the DTT channel installation.

1. The message "**Database is Empty Press MENU for installation**" appears.

 
2. Press  button to access DTT main menu.


3. Select "**Installation**" form DTT main menu and press  button.


4. The password box will appear as "****", and enter "**0000**" as your initial password.



5. Select one of the scanning method from "**Manual scan**," "**Quick scan**," or "**Auto scan**."

NOTE

- "Quick scan" and "Auto scan" are easier method for the first time. See "  35 " for the details.

- Use "" button to go back a previous menu condition, and use

 button to return to the DTT main menu.

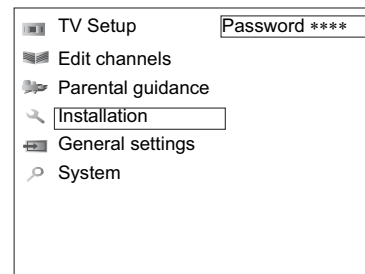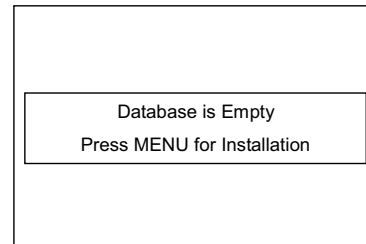



<DTT Main Menu>

• TV mode


When you use the TV mode for the first time, please enter the OSD function.

1. Press  button to access TV Main Menu. See "  24 " for the details.


2. Select "**Setup**" form Main Menu and press  button.

3. Select one of the scanning method from "**Auto scan**." See "  25 " for the details.

Volume UP/DOWN

1. To increase the sound volume, press  button on the remote control, or **Volume Up** button on the control panel.

- The Volume Indicator value on the screen will shift right.

2. To decrease the sound volume, press  button on the remote control or **Volume Down** button on the control panel.

- The Volume Indicator value on the screen will shift left.






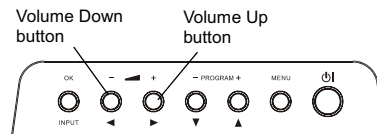
Volume Up/Down button

Mute button


BASIC OPERATION (continued)

Mute

- To mute the sound, press  button on the remote control.
 - The sound of the unit is temporarily turned Off.
 - When the audio mode is set to **Mute**, mute icon  will be displayed at the left-bottom corner of the TV.
- To turn the sound back, press  button again, or Volume Up button on either remote control or the control panel.



 
NOTE


You can decrease the volume by pressing  button while muted the volume.




Input Switching to DTT/TV/AV1~3, HDMI, and RGB

By pressing Input Select button, you can switch the input.

- To watch actual broadcast, press Input Select button on the control panel, the numeric buttons or Channel Up / Down button on the remote control.
 - To display the image outputting from the external equipments connected to each terminal (DTT/TV, AV1~3, HDMI and RGB), select corresponding mode.
- Press Input Select buttons on the remote control.
(Use " " button to switch between DTT and TV mode.)
 - The Input modes can be also switched by using Input Select button on the control panel.

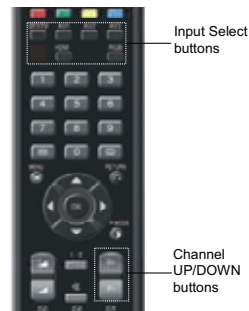


Each time this button is pressed, the screen displays corresponding mode by following order.

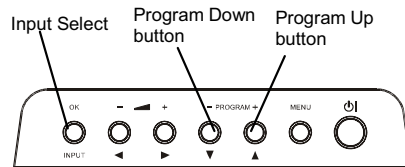

- To directly go back to **DTT** mode, pressing channel Up/Down buttons on remote control or pressing Program UP/Down on the control panel.


Also, you can use the numeric buttons on the remote control.

Input Signal Screen Display


The input signal status can be displayed on the screen by pressing the  button of the remote control.

- The display in DTT mode will appear as changing the channels and go out in set time. (Refer to [38](#))
- The display will go out in approximately 5 seconds.

DTT

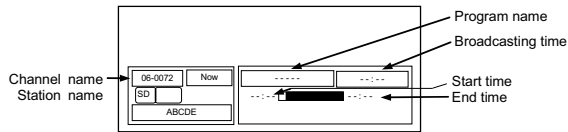


TV

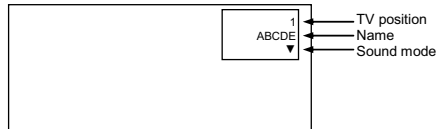

VIDEO



RGB

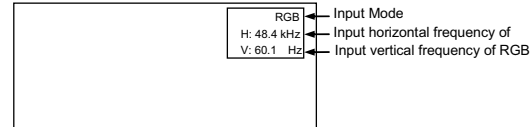

 

 
 

 
 




TV SETUP OPERATION

How to use the On-Screen Display (OSD) system


With the On-Screen Display system, you can access the various kinds of the features and functions in this product.

• Basic Operation


1. Press  button on the remote control or Menu button on the control panel of the unit. The Main Menu is displayed on the screen as shown on the right.
2. To select the item, press  or  buttons.
The selected item will be highlighted in Green.
3. Press  button to set your selection.
The selected menu page will be displayed on the screen.
4. Use  or  buttons to choose the item on the MENU page.
Press  button to set your selection.
5. Use  or  buttons to adjust the item values or choose options.
Press  button to set your selection.
6. To exit from the menu, press  button.

NOTE

The OSD menu screen will be closed automatically when no operation has been made for about 30 seconds.

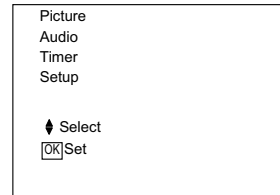


<Main Menu>

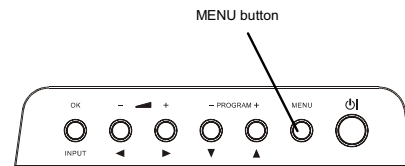

Setup Menu (TV mode)

With this menu, you can access various kinds of features relating to TV channel settings.

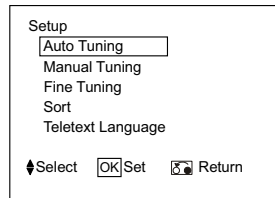

Selected Items		Setup hint
Auto Tuning	Mode	Position Select the way to display the channels on the screen. The position numbers are displayed on the screen. (1~125)
		Direct The channel number 1~69 are displayed as C* *, and the channel number 101~146 are displayed as S* *.
	Search Tune the local channels automatically. Press button to start searching.	
Manual Tuning	Position Press buttons to input position number (1~125) or channel number (C* * or S* *).	
	Frequency When Auto Tuning Mode is set to [position], search the frequency by using buttons. When Auto Tuning Mode is set to [Direct], this function is not available (grayed out).	
		Name 1. Move the cursor to the first digit and select the letters with buttons. 2. Move to the next digit with button. 3. Press button again when you finish inputting all the letters. • The selectable letters are as follows: "0"~"9", "A"~"Z", "+", " " (blank), "-", "_ " (under line), and "." (Period).
	Sound System	Auto
		B/G
I		
D/K		
M		
Select the sound system from 5 different modes.		

NOTE

When you turn ON the television for the first time, your television is at "the original factory setting" and cannot display the image normally on the TV screen. Please select **Auto Tuning** and set TV channel.


TV SETUP OPERATION (continued)

Setup Menu (TV mode) (continued)

Selected Items		Setup hint	
Manual Tuning	Color System	Auto	Select the color system from 5 different modes.
		NTSC3.58	
		PAL	
		SECAM	
		NTSC4.43	
	Skip	Off	It allows you to skip unregistered channels automatically when you use channel up (P+) down (P-) buttons to select channels. Regarding the unavailable channels, this function will be set to [On] automatically to skip.
On			
Antenna Att.	Off	The noise on the screen or interference could be reduced in case that the receiving airwaves are too strong. The selection on this item is applied to all channel.	
	On		
Fine Tuning	-56~56	<p>▶: Increase the frequency data for the main tuner.</p> <p>◀: Decrease the frequency data for the main tuner.</p>	
Sort		<p>You can change the order of channels as follows.</p> <ol style="list-style-type: none"> 1. Move the cursor to the Channel row you want to change order and then, press OK button. 2. The color of the letters on the designated line will be turned into green bracket and with []. 3. Move the designated row by using ▲ ▼ buttons. 4. Press OK button to fix the position. <p>• This function is not available (grayed out) when the Auto Tuning Mode is set to [Direct].</p>	
Teletext Language		<p>Select Teletext Language from 5 different categories (West Europe, East Europe, Russian, Arabic and Farsi) according to the area.</p> <p>Example:</p> <p>West Europe: Asian countries where the Teletext is broadcasting in English such as Singapore, Australia, and Malaysia.</p> <p>East Europe : Poland, Sweden, Hungary</p> <p>Russian : Russia</p> <p>Arabic : Arab countries</p> <p>Farsi : Persian</p>	

Setup Menu (RGB mode)

With this menu, you can adjust the display condition of the image which is inputting from the RGB terminals.

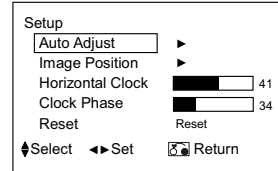

Selected Items		Setup hint
Auto Adjust		Adjust Horizontal Position, Vertical Position, Horizontal Clock, and Clock Phase automatically. <ul style="list-style-type: none"> Press or to start auto adjustment. The message "Auto Adjusting" is displayed. Depending on the type of the signal, there is a possibility that the display may not be adjusted in its optimum condition with this function. In that case, please adjust
Image Position*		<ul style="list-style-type: none"> Press button and button to adjust the horizontal and vertical display positions.
Horizontal Clock*	0~100	Minimize the vertical stripes on the screen.
Clock Phase*	0~63	Minimize the blurring of the letters and stripes on horizontal row. <ul style="list-style-type: none"> Make sure to adjust <u>Horizontal Clock first</u> before adjusting Clock Phase.
Reset		Image Position on this menu screen can be restored to the original factory settings by pressing button.


Information

The items indicated by "*" can be automatically stored the setting depending on the signal mode.

TV SETUP OPERATION (continued)

Picture Menu (TV/AV mode)


In this menu, you can make specific adjustments for the picture based on your preference.
By pressing **.** button at the ▼ bottom of each menu page, the next Picture menu page will appear on the screen.

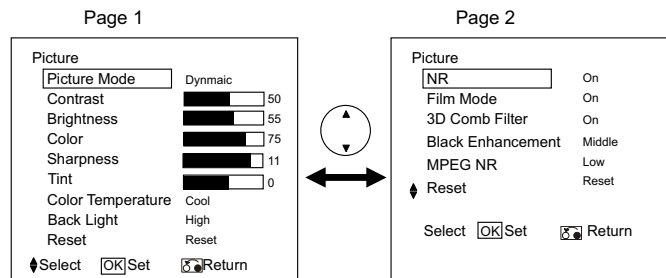

Selected Items		Setup hint
Picture Mode	Dynamic	You can make the better selection from 3 modes depending on the lighting condition and intended use. Dynamic: Suitable for the brighter conditions. Natural: Suitable for the normal lighting condition. Cinema : Suitable for watching movie.
	Natural	
	Cinema	
Contrast*	0~100	This adjusts the contrast to meet the lighting environment by using ◀▶.
Brightness*	0~100	With this function, black is adjusted to change the overall brightness by using ◀▶.
Color*	0~100	It can adjust color density based on your preference by using ◀▶.
Sharpness*	0~12	Preferred sharpness can be adjusted by pressing ◀ button for Softer image or ▶ button for Sharper image.
Tint*	-45~45	Pressing ◀ button enhances red and weakens green, while pressing ▶ button weakens red and enhances green. The setup Tint is adjusting for the realistic skin color. This is not available by PC mode when receiving RGB signal.
Color Temperature*	Cool	You can select from 4 settings (default) depending on the color condition with ◀▶ buttons.
	Normal	
	Warm	
	User	
Back Light	High	Adjust the brightness of the Back Light for the maximum visibility.
	Middle	
	Low	
Reset		Each item on this menu screen can be restored to the original factory settings by pressing (OK) button.

Information

The items indicated by “*” can be stored the setting for each of inputs and picture modes (Dynamic/Natural/Cinema).
You can enjoy different setting depending on the selected input such as VCR in AV1.

Selected Items		Setup hint
NR	Off	The noise on the screen or interference could be reduced, especially at the area of weak electric field.
	On	
Film Mode	Off	On: Automatically identify if it is the movie film and faithfully reproduces the original film images.
	On	Off: Set to Off if the image does not look natural during turning on.
3D Comb Filter	Off	This is available only when receiving NTSC/PAL composite signal. This reduces the dot and color blurring in minute scales so that it can reproduce purer color.
	On	
Black Enhancement	Off	Adjusts the black level compensation.
	Low	
	Middle	
	High	
MPEG NR*	Off	This is a noise reduction system for MPEG picture signal. (ex. against mosquito noise and block noise)
	Low	
	High	
Reset		Each item on this menu screen can be restored to the original factory settings by pressing  button.


 **Information**

The item indicated by “*” can be automatically stored the setting depending on the signal mode.

TV SETUP OPERATION (continued)

Picture Menu (RGB mode)

In this menu, you can make specific adjustments for the RGB picture based on your preference.

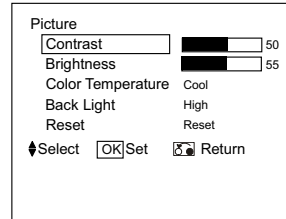


Selected Items		Setup hint
Contrast	0~100	This adjusts the contrast to meet the lighting environment by using ◀▶.
Brightness	0~100	With this function, black is adjusted to change the overall brightness by using ◀▶.
Color Temperature	Cool	You can select from 4 settings (default) depending on the color condition with ◀▶ buttons.
	Normal	
	Warm	
	User	
Back Light	High	Adjust the brightness of the Back Light for the maximum visibility.
	Middle	
	Low	
Reset		Each item on this menu screen can be restored to the original factory settings by pressing button.

Information

There is a useful function to automatically store the setting on menu in almost every item so that you do not have to reset every time.

Audio Menu

With this menu, you can adjust and customize the audio condition as you like.

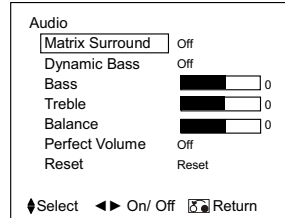

Selected Items		Setup hint
Matrix Surround	Off	The surround sound is mixed to left and right in order to create the illusion of virtual surround speakers. (Recommendation: when the Matrix Surround is on, ensure the Balance is set to "0" for optimum surround sound effect.)
	On	
Dynamic Bass	Off	Dynamic Bass gives you the enhanced bass sound. Low frequency signals can be boosted while the output signal amplitude is measured.
	On	
Bass	-10~10	Adjust the Bass of the sound.
Treble	-10~10	Adjust the Treble of the sound.
Balance	-10~10	Adjust the balance of the sound comes out from right and left side of the speakers. (Notice: When Matrix Surround is enabled, adjusting the Balance will not completely mute any one speaker.)
Perfect Volume	Off	Automatically adjusts audio input levels to stay within a safe volume range. For example, when the input sound is too loud, the volume is automatically decreased.
	On	
Reset		Reset all the set values on this Menu Page to the original factory settings by pressing button.


Information

There is a useful function to automatically store the setting on menu in almost every item so that you do not have to reset every time.

TV SETUP OPERATION (continued)

Timer Menu

This allows your television to turn Off (Standby mode) at set time automatically, which you may find useful.

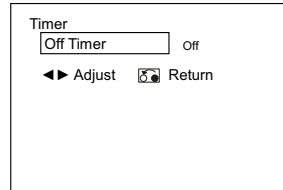

Selected Items		Setup hint
Off Timer	Off	This function automatically sets the power to Standby mode when the selected time period has elapsed.
	30Min.	
	60Min.	
	90Min.	
	120Min.	

Information

One minute before the time you set, the screen will display "Time off within one minute".


Analog Teletext

● What is "Teletext"

Teletext is the written information services provided by each TV channel.

Most TV channels provide information via Teletext such as:

- TV program schedule
- Weather forecasts
- Sports results
- Newsflash

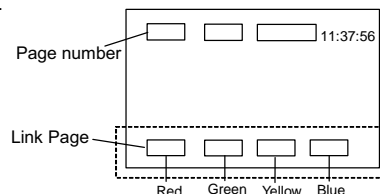

● How to operate the Teletext

You can display the Teletext simply by pressing the remote control buttons.

NOTE ➔

Select Teletext language from Setup Menu shown on [26](#)

Operation	Press
To switch Teletext mode: Teletext mode can be changed each time pressed in the following sequence. TV→Teletext→Mix mode When user TV signal cable is not having Teletext signal. That will show "No Teletext Function" OSD message.	 [TV ⇄ Text]
To display Index page.	 [Guide]Index
To access Subtitle service directly (if the channel has the Subtitle service broadcasting).	 [Subtitle]
To display Hidden text. ex. The answers of the Quiz or the Game page. Press again to close the revealed answer.	 [Reveal]
To return to actual broadcast temporarily while searching for the Teletext page you request. When the search is done, the designated page # will be displayed on the upper left of the screen. Press again to return to Teletext page.	 [Cancel]
To access the link pages which are displayed at the bottom of the page. (Select the buttons corresponding to the colors of the letters on screen.)	 [Color]
To hold the text picture.	 [Hold]
To change Teletext page #: ex. Press P+/P- to increase/decrease page number of Teletext.	 [P+ / P-]

Information






- Some Teletext pages do not display Link Pages at the bottom of the screen. Press button to display them.
- When in Teletext mode, press button that can show the "Back light" function of OSD menu. User can easily control brightness of the panel.


DIGITAL TERRESTRIAL TELEVISION (DTT) OPERATION

How to use the On-Screen Display (OSD) system

With the On-Screen Display system, you can access the various kinds of the features and functions.

Basic Operation

1. Press  button on the remote control or **MENU** button on the control panel of the unit. The DTT **Main Menu** is displayed on the screen as shown on the right.
2. To select the item, press **▲** or **▼** buttons.
The selected item will be highlighted.
3. Press  button to set your selection.
The selected menu page will be displayed on the screen.
4. Use **▲** or **▼** buttons to choose the item on the MENU page.
Press  button to set your selection.
5. Use **◀** or **▶** buttons to adjust the item values or choose options.
Press  button to set your selection.
6. To exit from the menu, press  button.

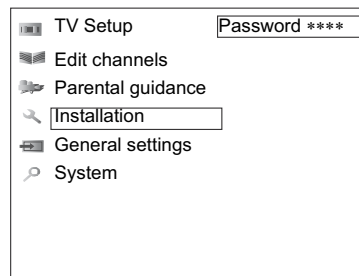

(DTT Main Menu)



NOTE

- The OSD menu screen will be closed automatically when no operation has been made for about 30 seconds.




DTT Main Menu List

Check the reference page for details.

Menu	Function	Page
TV Setup	This jumps to the TV main menu containing Analog TV functions, such as Picture menu and Audio menu.	41
Edit channels	You can set a list of favorite channels.	37
Parental guidance	This blocks programs with the selected rating.	40
Installation	This searches the available channels.	
Manual scan	Search by its channel number, frequency, bandwidth, or priority.	35
Quick scan	Search by the resident area.	35
Auto scan	Automatically search one by one.	35
Restore default	Restore the channel setting.	35
General settings		
Option setup	Set up the display time of information banner.	38
Change pin	Change the Password.	40
Local time	Set up the local time.	40
Subtitle setting	Enable or disable the subtitle.	39
System	This displays the current DTT system information.	41


Installing Channels

You can search available channels in any of the following 3 methods.


1. Press  button on the remote control in DTT mode.
2. Select "Installation", on the DTT main menu with ▲ or ▼ buttons and press  button.
3. The password is required to enter the Installation menu. The initial password is 0000.
4. You can select either of the followings by pressing  button.

- **Manual scan:** Searches by individual settings manually. The box shown on the right appears. Fill out the following 4 items as needed.

Channel num	Use ◀ and ▶ buttons or numeric button to enter the number. (Ch2-Ch69) *In case of tuning Ch9A, select Ch2 (Frequency: 205.5MHz.).
Frequency	Use numeric button to enter the frequency.
Bandwidth	Select either 7MHz or 8MHz by using ◀ and ▶ buttons. Set to 7MHz normally.
Priority	Select High or Low by using ◀ and ▶ buttons. Set to High normally.

Then, press  button on "Start scan" of "Manual scan" column. If it finds a channel, "Success" shows up. If not, "Timeout error" is displayed.

- **Quick scan:** Searches channels of the selected area.

The list of the area shows up. Select one of those with ▲ and ▼ buttons and press  button.

NOTE

- If you are uncertain about the area, please select "Auto scan" method or contact the local dealer in your area.





- **Auto scan:** Searches every channel.

The message "Auto scan will take more than 10 minutes. Do you want to continue?"

Select "Yes" and press  button to precede it.

Restoring Channels

This restores the all channel settings.

1. Press  button on the remote control in DTT mode.
2. Select "Installation", on the DTT main menu with ▲ or ▼ buttons and press  button.
3. The password is required to enter the Installation menu. The initial password is 0000.
4. Select "Restore default" and press  button. The message "All setting would be lost" appears. Select "Yes" and press  button.

NOTE

- The password will return to the default setting when activating "Restore default".

DIGITAL TERRESTRIAL TELEVISION (DTT) OPERATION (continued)

Channel Selections

There are 4 ways to select the channels: stepping through the channel, selecting by number, selecting from the program/favorite list, and using the Electronic Program Guide (EPG).

Stepping through the Channel


 


Press CHANNEL UP/DOWN button to switch the next or previous channel on the list. Information banner is displayed every time channel is switched.


Refer to [38](#) about the information banner.

Selecting from the Program / Favorite List

• Program List:

All tuned channel is selectable from Program List.

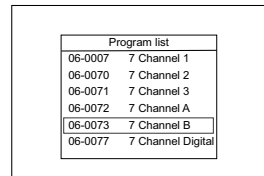



1. Press  [Yellow] button on the remote control to show up the Program List.
2. Use  or  buttons to select and press  button. Then it jumps to the selected channel.




Program list	
06-0007	7 Channel 1
06-0070	7 Channel 2
06-0071	7 Channel 3
06-0072	7 Channel A
06-0073	7 Channel B
06-0077	7 Channel Digital

• Favorite List:

 Your favorite channels can be selected from Favorite List.


1. Press  [Blue] button on the remote control to show up the Favorite List.
Each time pressed, it switches to Favorite list 1, Favorite list 2 and off.
2. Use  or  buttons to select and press  button. Then it jumps to the selected channel.
About how to set the channel in Favorite list, please refer to [37](#).

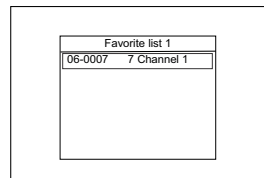

Favorite list 1	
06-0007	7 Channel 1

 
 
 



Selecting by Number


Enter the number (the last 4 digits) based on the list by using numeric buttons on the remote control. An empty information banner shows up with the entered number. Channel is switched if the number is valid. If the entered number is not valid for one of the setup channels, it automatically selects the closest channel.




Using the Electronic Program Guide (EPG)

  The EPG screen displays a list of the stored channel (4 channels per page) along with the now & next program name. You can select a channel from the EPG channel List.



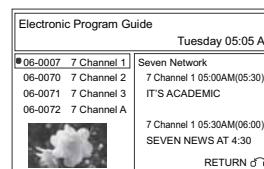 

 
 


1. Press  button to access EPG screen.
2. Use  or  buttons to select and press  button. Then it jumps to the selected channel.
3. Press  button or  button again to return to normal screen.






Electronic Program Guide		Tuesday 05:05 AM
06-0007	7 Channel 1	Seven Network
06-0070	7 Channel 2	7 Channel 1 05:00AM(05:30)
06-0071	7 Channel 3	IT'S ACADEMIC
06-0072	7 Channel A	7 Channel 1 05:30AM(06:00)
		SEVEN NEWS AT 4:30
		RETURN 



Making Favorite List

The “Edit channels” menu allows you to select your favorite channels and make a Favorite List in order to access easily to the channel you watch most often.

 1. Press  button on the remote control and select “Edit channels” and press  button.
2. Use  or  buttons to select the channel, and  button to select **Fav. 1** or **Fav. 2**.
3. Press  button to set up as Fav. List. The  mark will show up, which means as favorite channel. Pressing  button again on the mark will cancel the setting.

You can display favorite list by pressing  [Blue] button. (Refer to )

CH No.	CH name	Fav.1	Fav.2
06-0007	7 Channel 1		
06-0070	7 Channel 2		
06-0071	7 Channel 3		
06-0072	7 Channel A		
06-0073	7 Channel B		
06-0077	7 Channel Digital		



Press   to select. Then press [OK].

 
DIGITAL TERRESTRIAL TELEVISION (DTT) OPERATION (continued)

Utilizing the Information Tool

Information Banner




 
 
Whenever a channel is switched, the TV displays the picture along with an information banner at the bottom of screen.


The information banner also appears by pressing Recall button  while watching DTT. While displaying information banner, press Recall button  button one more time, the description currently being broadcast shows up. Pressing it again, the description of next program appears.



• Set up the display time

The display time of information banner can be set up from 1 to 20 sec.

1. Press  button on the remote control.
2. Select "General settings" and press  button.
3. Select "Option setup" and press  button.
4. The box shows up, and selects the display time by using  or  buttons.

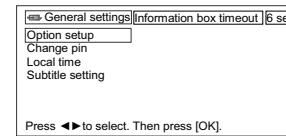


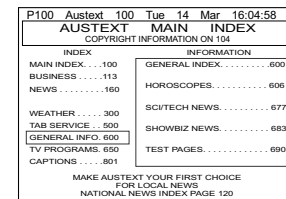
NOTE







- When you select "0 sec" for "Information box timeout", the information banner will not show up.

Digital Teletext

Teletext can provide various information with text on the screen.

  Press  button to access. Press it again to return to the normal screen.



Operation	Press
To activate Teletext mode.	
To exit from the Teletext mode.	
To move to the next or previous page.	 
To jump to the indicated page.	 ~ 







NOTE


- See [33](#) how to operate at Analog teletext.

The service of digital broadcasting signal varies depending on the area.

Electronic Program Guide (EPG)

The EPG screen displays a list of the stored channels (4 channels per page) along with information the now & next program name.

1. Press  button to display EPG screen.
2. Select the desired channel with ▲ or ▼ buttons and press  button.
3. Press  button or  button to return to the normal screen.

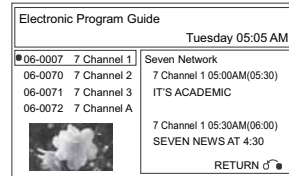







NOTE


- Not all channels broadcast all program information data. Some channels do not provide program name and details. In that case, only channel name are displayed.

Subtitle

The enables (/ disable) the subtitle if available as your useful tool.

1. Press  button to display DTT main menu.
2. Select "General settings" and press  button.
3. Select "Subtitle settings" and press  button.
4. With ▲ or ▼ buttons select "Enable" and press  button.

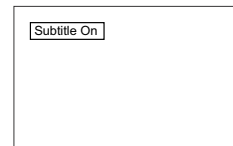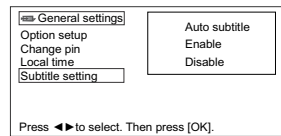

You can also activate the subtitle by pressing  button on the remote control. "Subtitles On" or "Subtitles Off" will appears on the upper left corner.

NOTE



 


- Once Turing TV off, "Auto subtitle" returns to "Disable".

DIGITAL TERRESTRIAL TELEVISION (DTT) OPERATION (continued)



Configuring Setting

Parental guidance

Any channel can be locked so that it cannot be selected for viewing without 4 digits pin code.



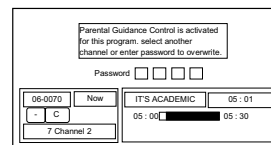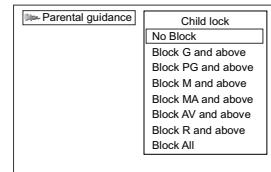

1. Press  button on the remote control.
2. Select **"Parental guidance"** and press  button.
3. The password is required to enter. (The initial password is 0000.)
4. With  or  buttons, select the rating and press  button.


After this protection, when encounter the channel blocked, the message show up and the password is required to view the channel.



Audio language




The available Audio language can be selected.

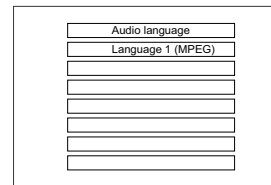
1. Press  button on the remote control in DTT mode.
2. The available audio language appears.
3. With  or  buttons, select the audio language and press  button.



Change pin

To use the locks effectively, do change the pin number from the default setting, which should be known and remembered only by you. The default setting is 0000.

1. Press  button on the remote control.
2. Select **"General setting"** and press  button.
3. Select **"Change pin"** and  button.
4. The box appears to fill out the old and new password, and the confirmation of the new password.
5. Use the numeric number to enter.

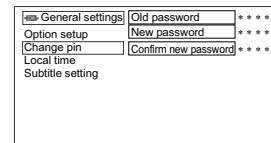

 





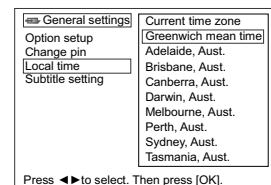
NOTE

- In case that you forget your password, please refer to Troubleshooting on [48](#).

Local time

Make sure to select your resident area to set up the correct local time.




1. Press  button on the remote control.
2. Select **"General setting"** and press  button.
3. Select **"Local time"** and  button.
4. With  or  buttons, select the area and press  button.




Press  to select. Then press [OK].

Checking DTT System Information

This can display current DTT system information.

1. Press  button on the remote control.
2. Select **"System"** and press  button.
3. Pressing  button on **"Status"** shows up System information.
(H/W version, S/W version, and Release time)

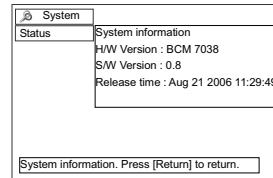


*The above is an example

TV Setup Menu

"TV Setup" menu can be accessed from the DTT main menu.


It jumps to the TV main menu containing Analog TV function, such as Picture menu and Audio menu.

Refer to [24](#) ~ [33](#) regarding the setting form the details.

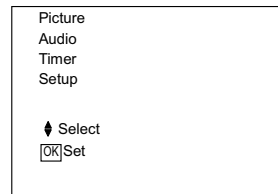

FUNCTION

 
Size Switching

Each time  button of the remote control is pressed, the screen display size is switched in sequence, and the status will be displayed at the bottom of the screen.

DTT/TV/AV signal input

- **Watching standard Definition Picture(480i,480p,576i,576p)**


 
 

 
 

TV/AV1/AV2/AV3 /HDMI



- **Watching High Definition Picture(720P,1080i)**

DTT/AV3/HDMI: Only Full mode signal output.

You can display the image at optimum condition by selecting display size depending on the current output image as Shown below.


Input Signal	Display Screen	Display Size	To display suitable screen as follows.
When Watching SD Pictures:			
 (4:3 Signal)		4:3	Play a 4:3 image on screen faithfully. Blanking occurs on both sides.
		Panoramic	Play a 4:3 image which enlarges horizontal and vertical size of the middle in equal scales, and displays both sides appearing much wider.
 (Cinema)		Cinema	Play a 21:9 image in 4:3 frame (Cinema size) expanding vertically. *In some case, slight blanking may remain at the top and bottom.
 (Squeeze)		Full	Play a 4:3 image faithfully in the standard vertical size and horizontally squeezed.

Information

Aspect ratio represents horizontal: vertical ratio on screen.

NOTE →

The size will fix as Full mode and not change when receiving DTT signal the AV3 component signal, HDMI signal of 720p/50,720p/60, 1080i/50, and 1080i/60.

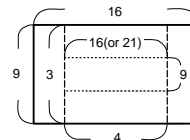

Picture Size



CAUTION

Using a wide-screen television

 
 
- This television has a screen mode selection feature. If an incompatible screen mode is selected to play certain software, such as a TV program, the image would appear different from the original. Take this into consideration when making screen mode choices.
- Use of the wide feature displaying enlarged pictures in coffee shops, hotel and other establishments for commercial or public viewing purposes could infringe on the copyright holder's right protected by Copyright Law.
- When a normal 4:3 image (not wide screen) is displayed over the entire screen in the Panoramic mode, the peripheral image may disappear partly and/or appear distorted in some cases. Use 4:3 mode to view the image reflecting original intention.

RGB signal input


You can select a suitable size depending on the resolution.

Full → 4:3
↑

Display Area Selection Diagram

Display	Full	4:3
640 X 480 (VGA)		
800 X 600 (SVGA)		
1024 X 768 (XGA)		

Picture Freezing


By pressing  button, you can change to freeze mode easily anytime you like. Press it again to return to normal picture.



FUNCTION (continued)

Audio Switching

Sound Multiplex (TV mode)

 
You can make optimum use of available audio by pressing  bottom of remote control. Audio can be switched only if receiving sound multiplex signals; otherwise, pressing this button will have no effect, such as when only mono sound is received.


These can be divided into two main categories: Bilingual/Dual Sound broadcast and Stereo broadcast.

Bilingual/Dual Sound broadcast

Bilingual broadcast is the broadcast available on the main and sub languages, while dual sound broadcast is available on the primary and secondary sounds; for example, some sports programs contain broadcast commentary on a game as primary sound, and a commentary about a team as the secondary.

When bilingual program is received, sound mode display appears in yellow as shown.

Each time  button is pressed, the display is switched in the sequence of following.

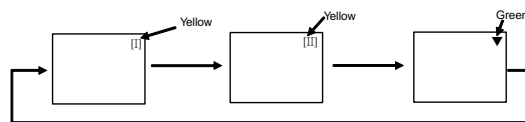

[I]...Main language/Primary Sound
[II]...Sub language/Secondary Sound

▼...force mono: This selects main language or primary sound.

 
Stereo broadcast

With stereo broadcast, you can enjoy different sound from either side.

When a stereo program is received, sound mode display will appear in red as shown.

Press  button to switch between stereo and mono sound.

Sound multiplex signal



◉...Stereo

▼.....Force Mono

NOTE

- Please select ▼ (force mono) in case of poor reception, noise, poor stereo sound due to signal condition so that you can receive a clear mono sound.
- ▼ represents the Mono broadcast.

Power Save Mode

When the RGB input is selected

- When this unit is connected to a VESA DPMS computer, the Power Save mode (Operation mode: Off) can be set to be activated automatically when the computer is not being used to reduce power consumption by this unit.

RGB sync signal	Horizontal	Yes	No	Yes	No
	Vertical	Yes	Yes	No	No
PC signal		Active (normal display)		Blank (no display)	
Operation mode		On		Off	
Indicating lamp		Lights Green		Lights Orange	

Returning to operating status

- Operate the personal computer, then input computer's H. sync, V. sync or press the **Sub Power** button of the control panel or the remote control to restart the television.



 

TROUBLESHOOTING

Before calling service technician, check the following tables first. If the problem is not be solved with the suggested procedures, contact your local dealer. For your safety, NEVER try to repair the product by yourself.





When Following Messages Appear on the Screen

Message	Condition / Action	Page
Power Save	This indicates it is in Power Save mode. (in RGB mode) The indicating lamp lights in orange.	20, 45
No Sync. Signal	The unit cannot detect any signals from any input terminals. <ul style="list-style-type: none"> • Check if the cable is connected correctly and firmly. • Check if the power of the external equipments is ON. • Check if the input selection matches the connection terminal. • Check if the PC is in Power Save mode or not. 	16, 18
Auto Adjust	This indicates that it is in the process of auto adjusting. (in RGB mode)	27
Invalid Scan Freq	The unit receives unsupported signals. <ul style="list-style-type: none"> • Check if the cable is connected correctly and firmly. • Check if the input signal is compatible with the specification of the television. 	49, 50
Not Available	This shows when the selected operation is not available.	
Check Antenna	Check the connection status when this message appears.	15
Weak signal	<ul style="list-style-type: none"> • Check aerial lead if it is disconnected/damaged/misaligned. (in DTT mode) • Check with your dealer if it is out of signal area or not. (in DTT mode) 	
Bad or No signal		









Symptom and Check List

Symptoms	Check list	Page
No picture – no sound	<ul style="list-style-type: none"> • Check the Indicating lamp status (Off, Red, Green, or Orange). • Check the connection of the Power Cord and/or other cables. • Check if the Main Power of the unit or external equipments is ON. • Check if the TV mode is selected. • Check if the TV is in "Standby mode" or "Power Save mode". • Adjust the values in "Picture menu" and "Audio menu". 	15, 20, 23, 45
Snowy picture-poor sound	 <ul style="list-style-type: none"> • Check the aerial connection and direction. • The TV station may have broadcast difficulties. • Try another channel. 	15
Multiple images-normal sound	 <ul style="list-style-type: none"> • Check the aerial connection and direction. • Fine tuning the TV. • Check the connection of the external equipments. • The TV station may have broadcast difficulties. Try another channel. 	15, 26
Intermittent interference	 <ul style="list-style-type: none"> • Check if the source of interference is shielded well. • Remove those kinds of electrical devices away from the TV. 	
Normal picture, but no sound	<ul style="list-style-type: none"> • Check the volume level. • Check if the  button has been press or not. • Make sure that the headphone is NOT connected. • Check the connection of the external equipments. 	21, 22

 Symptom and Check List (continued)

 Symptoms	Check list	Page
No picture – normal sound	<ul style="list-style-type: none"> Check the value level of "Brightness" and "Contrast" in "Picture Menu". 	28, 29
The remote control does not work.	<ul style="list-style-type: none"> Check if the batteries are installed correctly. The batteries might be exhausted. Replace them with new ones. Remove all the obstructions in front of the sensor window on the unit. Check if the buttons of the control panel can work. 	12, 13
Normal picture but no color-normal sound	<ul style="list-style-type: none"> Check the connection of the external equipments. Check the "Color" in "Picture Menu". 	16, 18 25, 29
<ul style="list-style-type: none"> No picture The Indicating lamp → Off 	<ul style="list-style-type: none"> Check if the Power Cord is plugged into the socket firmly. Check if the Main Power is ON. 	19, 20
<ul style="list-style-type: none"> No picture The Indicating lamp → Orange It means that the unit is in "Power Save Mode". 	<ul style="list-style-type: none"> Check if all the cables of the external equipments are connected correctly and firmly. Check if the power of the external equipments is ON. Check if the TV/AV mode has been selected correctly. Check if the PC is in Power Save mode or not. Refer to "Power Save mode" and "When following messages appears on the screen" 	45, 46
<ul style="list-style-type: none"> No picture The indicating lamp → Green 	<ul style="list-style-type: none"> Check if the signal cable is connected correctly and firmly. Adjust the level of Brightness and Contrast lower. 	16, 18
<ul style="list-style-type: none"> The top of the television and surface of the panel heat up. 	<ul style="list-style-type: none"> It may happen when you use the unit for long hours. Turn off the Main Power of the unit for a while. Please note that this is not malfunction. 	49, 51
<ul style="list-style-type: none"> Image cannot be displayed in the correct position. 	<ul style="list-style-type: none"> Press Recall button  to check if the input signal of the displayed image is compatible with the specification of the television. 	27, 49, 51
<ul style="list-style-type: none"> When the VCR is in special playback features (Fast forward or Rewind), the screen gets dark and cannot see the image at all. 	<ul style="list-style-type: none"> It could happen when the VCR is connected to Component output, such as 480i. This is not malfunction. Try Composite output or S-video output and check the picture again. 	
<ul style="list-style-type: none"> Some screen display size cannot be switched correctly. 	<ul style="list-style-type: none"> The display size is fixed at "Full" when the receiving signals are 1080i/60Hz, 1080i/50Hz, 720p/60Hz, or 720p/50Hz. Check the signal status by pressing the Recall button  on the remote control. 	42, 43
<ul style="list-style-type: none"> Cannot be displayed the image from HDMI. 	<ul style="list-style-type: none"> Check if the cables are connected correctly. Check the output format of the equipments. (Please refer to "Connecting Procedure" and "Recommended Signal List".) 	50, 51
<ul style="list-style-type: none"> No Picture or sound is output. (DTT mode only) 	<ul style="list-style-type: none"> It might occur because it is tuned to digital teletext channel. Return to another channel. 	38
<ul style="list-style-type: none"> Forgotten password. (DTT mode only) 	<ul style="list-style-type: none"> Press and hold down  [Freeze],  [Teletext] buttons on the remote control simultaneously for over 3 seconds so that the password returns to the default setting (0000). Please note that all tuned channels 	40
<ul style="list-style-type: none"> Due to the bad reception, block noise (DTT mode only) 	<ul style="list-style-type: none"> Check the aerial system to improve signal quality. 	15

Symptom and Check List (continued)

Symptoms		Check list	Page
<ul style="list-style-type: none"> Local time displays incorrectly. (DTT mode only) 		<ul style="list-style-type: none"> Check if you select correct area in "Local time" from "General setting". 	39
<ul style="list-style-type: none"> The image on the screen is moving in an oblique direction. (in RGB mode only) 		<ul style="list-style-type: none"> Adjust "Horizontal Clock" and "Clock Phase". 	27
<ul style="list-style-type: none"> The coarse horizontal stripes could be seen in full-display mode. (in RGB mode only) 		<ul style="list-style-type: none"> Adjust "Horizontal clock". 	27
<ul style="list-style-type: none"> The part of the image is lacking. (in RGB mode only) 		<ul style="list-style-type: none"> Try "Auto Adjust". 	27
<ul style="list-style-type: none"> The horizontal stripes are moving vertically with flickering screen. (in RGB mode only) 		<ul style="list-style-type: none"> Check the Signal status of the PC by pressing Recall button  on the remote control. If the Vertical Frequency of the PC is set to less than 70Hz, adjust its level higher (up to 70Hz). 	27
<ul style="list-style-type: none"> When the characters are displayed on the whole screen, <u>the vertical stripes appear and some of the characters are blurred.</u> (in RGB mode only) 		<ul style="list-style-type: none"> Try "Auto Adjust". If the display condition is not improved with Auto Adjust, adjust "Horizontal Clock". 	27
<ul style="list-style-type: none"> When the letter string is displayed in full-screen, <u>all of the characters on the screen is blurred.</u> (in RGB mode only) 		<ul style="list-style-type: none"> Try "Auto Adjust". If the condition is not improved with Auto Adjust, adjust "Clock Phase" till you get clearest image. 	27
<ul style="list-style-type: none"> When the small patterns are displayed on the screen, the entire screen is flickering. (in RGB mode only) 		<ul style="list-style-type: none"> Try "Auto Adjust". If the condition is not improved with Auto Adjust, adjust "Clock Phase" till you gets flicker-free display. 	27
<ul style="list-style-type: none"> The thickness of the letters, lines, etc is <u>not</u> displayed evenly. (in RGB mode only) 		<ul style="list-style-type: none"> It could happen when the image with more than 768 lines of vertical resolution is displayed. Please note this is not malfunction. 	51

PRODUCT SPECIFICATIONS

SPECIFICATION		
Panel	Display dimensions	Approx. 37 inches (820 (H) x461 (V)mm, diagonal 941mm)
	Resolution	1366 (H) x 768 (V) pixels
Net dimensions		including Stand: 910.5(W)x681.5(H)x308.5(D) mm excluding Stand: 910.5(W)x627(H)x122(D) mm
Net weight		including Stand:24.8kg excluding Stand:22.2kg
Ambient conditions	Temperature	Operating: 5°C to 35°C, Storage: 0°C to 40°C
	Relative Humidity	Operating: 20% to 80%, Storage: 20% to 90% (non-condensing)
Power supply		AC110 - 240V, 50/60Hz
Power consumption/at standby		190W<1W
Audio output	Speaker total	20W
(VIDEO input)		
Input terminals		AV1.2: composite video input terminal (RCA) S video input terminal L/R audio input terminal (RCA) AV3: component video input terminal (RCA) L/R audio input terminal (RCA) HDMI : HDMI input terminal
Input signals		Composite video: PAL, SECAM, NTSC3.58, NTSC4.43, PAL60 Component video: 480i, 576i, 480p, 576p, 720p/50, 720p/60, 1080i/50, 1080i/60
Output signals		OUTPUT (MONITOR): composite video monitor-output terminal (RCA) OUTPUT (MONITOR): L/R audio monitor- output terminal (RCA) OUTPUT (HEADPHONE): L/R audio monitor- output terminal (Mini-pin) OUTPUT (SUB-WOOFER): Woofer output terminal
(RF input)		
Input terminal / Receiving range		ANT: 75Ω Unbalanced / 44~870MHz
RF Video System		PAL B, G, H / I / D, K SECAM B, G / D, K / K1 NTSC-M DVB-T
(RGB input)		
Input terminals		Analog RGB input terminal (D-sub 15-pin) Audio input terminal (3.5mm Stereo Mini Jack)
Input signals		0.7 V, analog RGB (Recommended Signal)
Sync signals		H/V separate, TTL level [2kΩ]


- The television takes at least 30 minutes to attain the status of optimal picture quality.

PRODUCT SPECIFICATIONS (continued)

Signal Input

RGB terminal (D-sub 15-pin connector)


Pin	Input signal
1	R
2	G
3	B
4	No connection
5	No connection
6	R.GND
7	G.GND
8	B.GND
9	No connection
10	GND
11	No connection
12	[SDA]
13	H. sync
14	V.sync. [V.CLK]
15	[SCL]

 

When different kinds of input signals are simultaneously input to the television via a graphics board or the like, the television only support H/V separate sync signal.


S-input connector pin specifications

Pin	Input Signal
1	Y
2	Y-GND
3	C
4	C-GND
Frame	GND

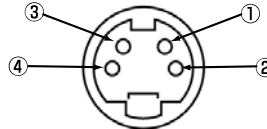

HDMI connector Input pin specifications

Pin	Input Signal	Pin	Input Signal
1	T.M.D.S. Data2+	11	TMDS Clock Shield
2	T.M.D.S. Data2	12	TMDS Clock
3	T.M.D.S. Data2-	13	CEC
4	T.M.D.S. Data1+	14	Reserved (N.C.)
5	T.M.D.S. Data1	15	SCL
6	T.M.D.S. Data1-	16	SDA
7	T.M.D.S. Data0+	17	DDC/CED Ground
8	T.M.D.S. Data0	18	+5V Power
9	T.M.D.S. Data0-	19	Hot Plug Detect
10	T.M.D.S. Clock+		

 

Recommended Signal List

With HDMI INPUT

No.	Signal mode			Horizontal frequency (kHz)	Dot clock frequency (MHz)	Remarks
	Signal Name	Resolution	Vertical frequency (Hz)			
1	VGA	640x480	59.94	31.47	25.18	
2	480i	720(1440)x480	60.00	15.75	27.00	
3	480p	720x480	60.00	31.50	27.00	
4	576i	720(1440)x576	50.00	15.63	27.00	
5	576p	720x576	50.00	31.25	27.00	
6	720P/60	1280x720	60.00	45.00	74.25	
7	720P/50	1280x720	50.00	37.50	74.25	
8	1080i/60	1920x1080	59.94	33.75	74.25	
9	1080i/50	1920X1080	50.00	28.13	74.25	

With RGB input

No.	Signal mode			Horizontal frequency (kHz)	Dot clock frequency (MHz)	Remarks
	Signal Name	Resolution	Vertical frequency (Hz)			
1	VGA	720 x 400	70.09	31.47	28.32	
2	VGA	640 x 480	59.94	31.47	25.18	
3	SVGA	800 x 600	56.25	35.16	36.0	
4	SVGA	800 x 600	60.32	37.88	40.0	
5	SVGA	800 x 600	72.19	48.08	50.0	
6	XGA	1024 x 768	60.00	48.36	65.0	
7	XGA	1024 x 768	70.07	56.48	75.0	

- The type of video board or connecting cable used may not allow for correct displays adjustment of Horizontal Position, Vertical Position, Horizontal Clock and Clock Phase.
- The television may fail to display an animation image correctly when a signal having a vertical frequency of 72Hz or higher is input to it.
- The television differentiates the signal modes according to the horizontal and vertical frequencies and the horizontal and vertical sync signal polarities. Note that different signals having all these elements alike may be handled as the same signal.
- Displaying images with more than 768 lines of vertical resolution a Full display (compressed display) can result in the interpolation of stripes.