

**HITACHI**

## **USERS GUIDE**

C2142N/S

 
CL2142AN/S

CP2142AN/S

C2842N/S

CL2842AN/S

CP2842AN/S

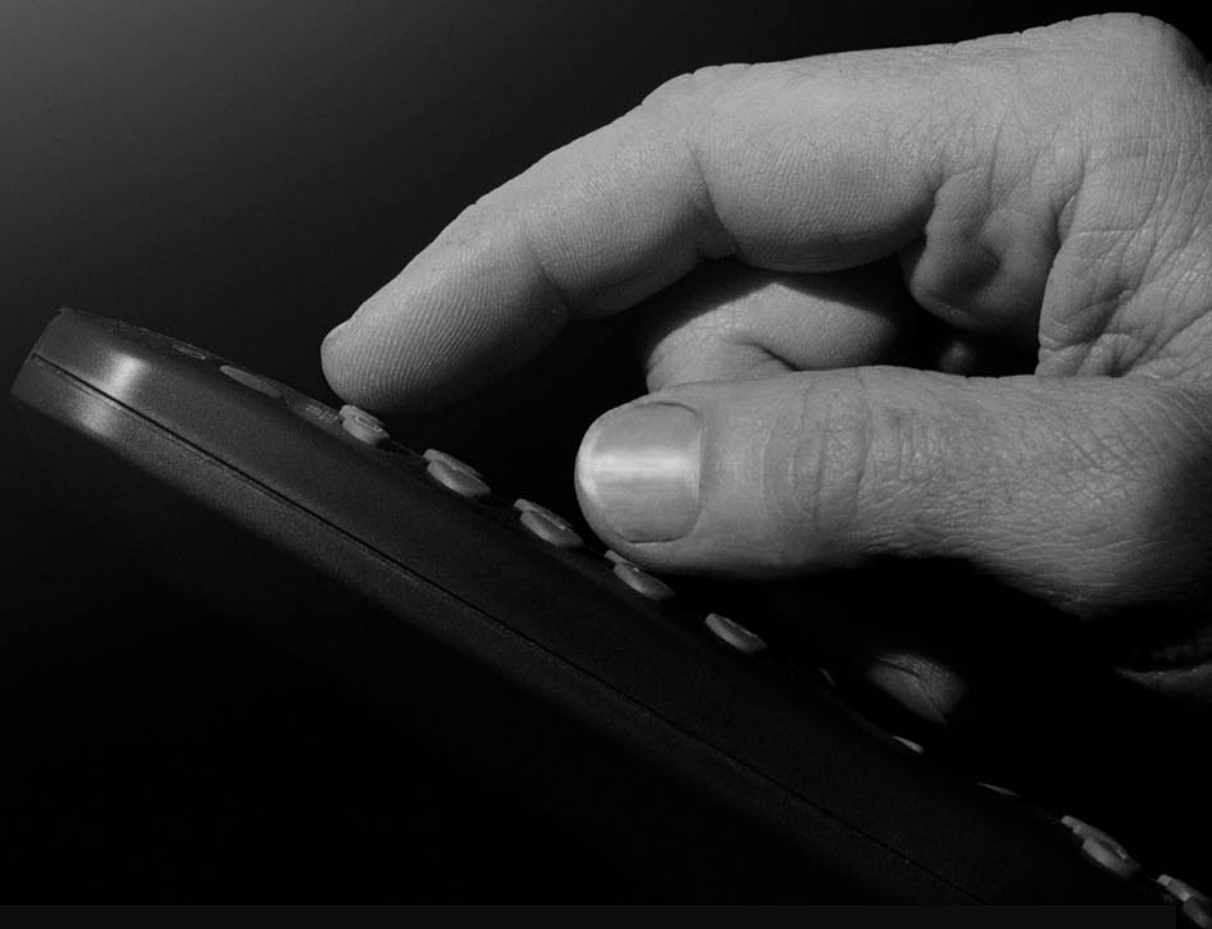


**HITACHI**

# Contents

<b>Remote Control Buttons</b> .....	<b>2</b>	<b>Picture Menu</b> .....	<b>13</b>
<b>Control Panel Buttons</b> .....	<b>3</b>	To change picture settings: .....	13
<b>Connect Peripheral Equipment</b> .....	<b>4</b>	Setting Brightness: .....	13
Via the SCART connector .....	5	Setting Colour: .....	13
Via Ant Input .....	5	Setting Contrast: .....	13
Decoder .....	5	Setting Sharpness: .....	13
Connecting a decoder with an aerial socket to the TV .....	5	Setting Hue: .....	13
Connecting a decoder without an aerial socket to the TV .....	5	Picture Mode Menu: .....	14
TV and Video Recorder .....	5	To Store the Settings: .....	14
Playback NTSC .....	5	<b>Feature Menu</b> .....	<b>14</b>
Copy Facility .....	5	Sleep Timer: .....	14
Camera and Camcorder .....	5	Child Lock: .....	14
Connect the decoder to the video recorder .....	5	<b>Installation Menu</b> .....	<b>14</b>
Connecting Headphones .....	5	Tuning Menu .....	14
<b>Preparation</b> .....	<b>6</b>	<i>Automatic Search</i> .....	15
Features .....	6	<i>To name a Programme</i> .....	15
<b>Safety Precautions</b> .....	<b>6</b>	<i>To change Standard</i> .....	15
<b>Before Switching on your TV</b> .....	<b>9</b>	Direct Channel Access .....	15
Power connection .....	9	<i>Fine Tuning</i> .....	15
Aerial Connections .....	9	Program (Programming) Menu .....	15
How to connect other devices .....	9	<i>To delete a channel from a programme         number: .....</i>	16
Inserting batteries in the remote control handset .....	9	<i>To insert a channel into a programme         number: .....</i>	16
<b>Switching the TV ON/OFF</b> .....	<b>9</b>	<i>APS (Automatic Programming System):</i>	16
To switch the TV on .....	9	TV Setup Menu .....	16
To switch the TV off .....	9	<i>Selecting Menu Language</i> .....	16
<b>Operating the TV</b> .....	<b>9</b>	<i>Selecting Country</i> .....	17
APS (Automatic Programming System) .....	9	<i>Setting External Source Output</i> .....	17
Operating with the onset buttons .....	10	<b>Other Features</b> .....	<b>17</b>
Operating with Remote Control .....	10	Sound Mute .....	17
<b>Menu System</b> .....	<b>11</b>	Bilingual Broadcast .....	17
Information Menu .....	11	Information on Screen .....	17
Sound Menu .....	11	<b>Teletext</b> .....	<b>18</b>
To change sound settings .....	11	To operate Teletext .....	18
Setting Volume: .....	11	To select a page of Teletext .....	18
Setting Bass Level: .....	11	To Select Index Page .....	18
Setting Treble Level: .....	12	To Reveal "concealed" Information .....	18
Setting Balance: .....	12	To Stop Automatic Page Change .....	18
Setting Sound Effect: .....	12	To Select a Subpage Page .....	18
To Store the Settings: .....	12	8 Page Fastext and Toplevel .....	18
To Change Headphone Sound Settings: .....	12	For Fastext and Toplevel .....	18
<i>Setting Headphone Volume:</i> .....	12	For TOPTXT .....	18
<i>Setting Headphone Sound Mode:</i> .....	12	To exit Teletext .....	19
<i>To Store the Settings:</i> .....	12	To Display the Time .....	19
		<b>Tips</b> .....	<b>19</b>
		<b>Specifications</b> .....	<b>20</b>
 
# Remote Control Buttons


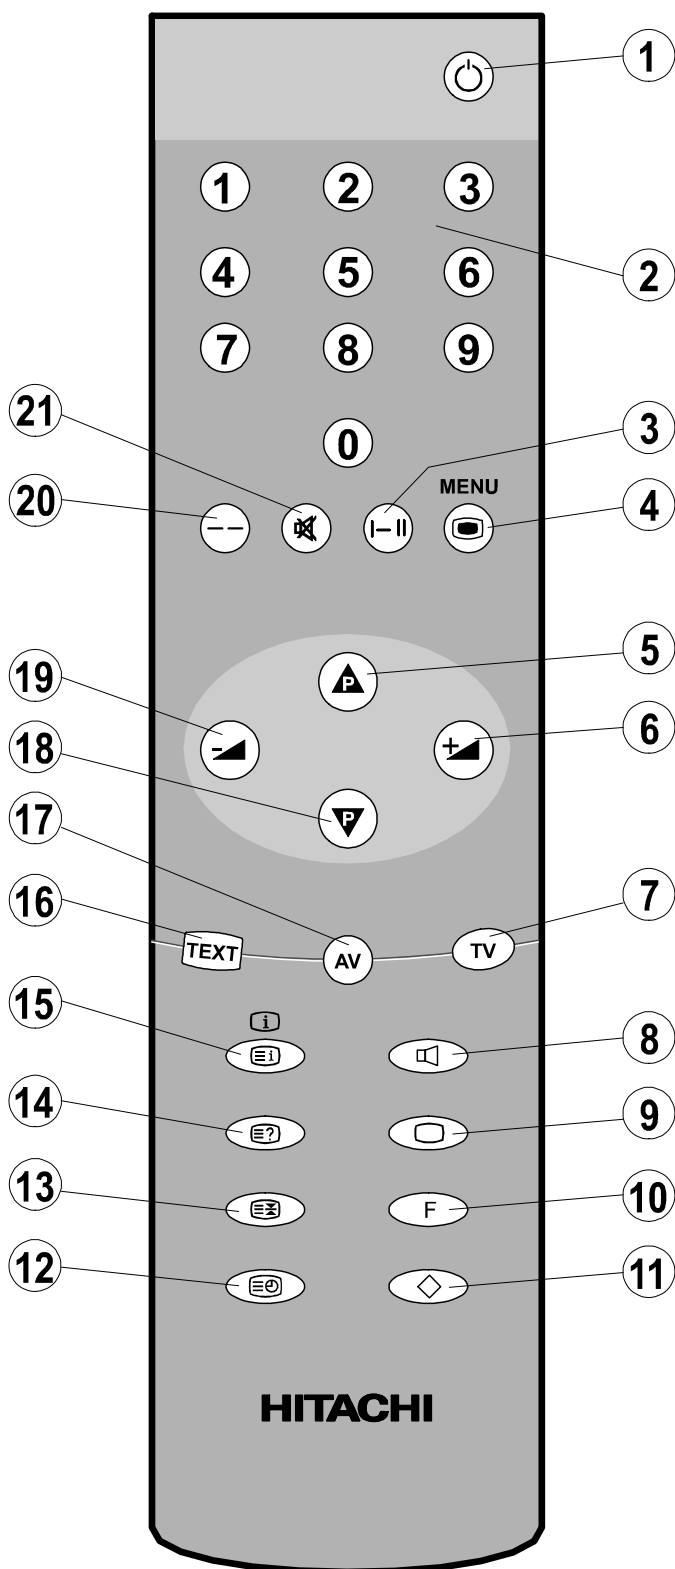


- ① = Stand By
- ② **0 - 9** = Direct Program
- ③ **I-II** = Mono/Stereo - Dual I-II
- ④ **MENU = MENU**
- ⑤ = Programme Up (Cursor Up)
- ⑥ = Cursor Right / Volume +
- ⑦ **TV** = TV / Quit Menu
- ⑧ (**Red**) = Sound Menu
- ⑨ (**Green**) = Picture Menu
- ⑩ **F (Yellow)** = Feature Menu
- ⑪ (**Blue**) = Installation Menu

## Teletext Buttons

  - ⑫ = Time
- ⑬ = Hold
- ⑭ = Reveal
- ⑮ = Index Page
- ⑯ = Teletext
- ⑰ **AV** = External Source  
(AV1, AV2, AV3)
- ⑱ = Programme Down (Cursor Down)
- ⑲ = Cursor Left / Volume -
- ⑳ **--** = Two Digit Program Number Entry
- ㉑ = Mute

## Control Panel Buttons

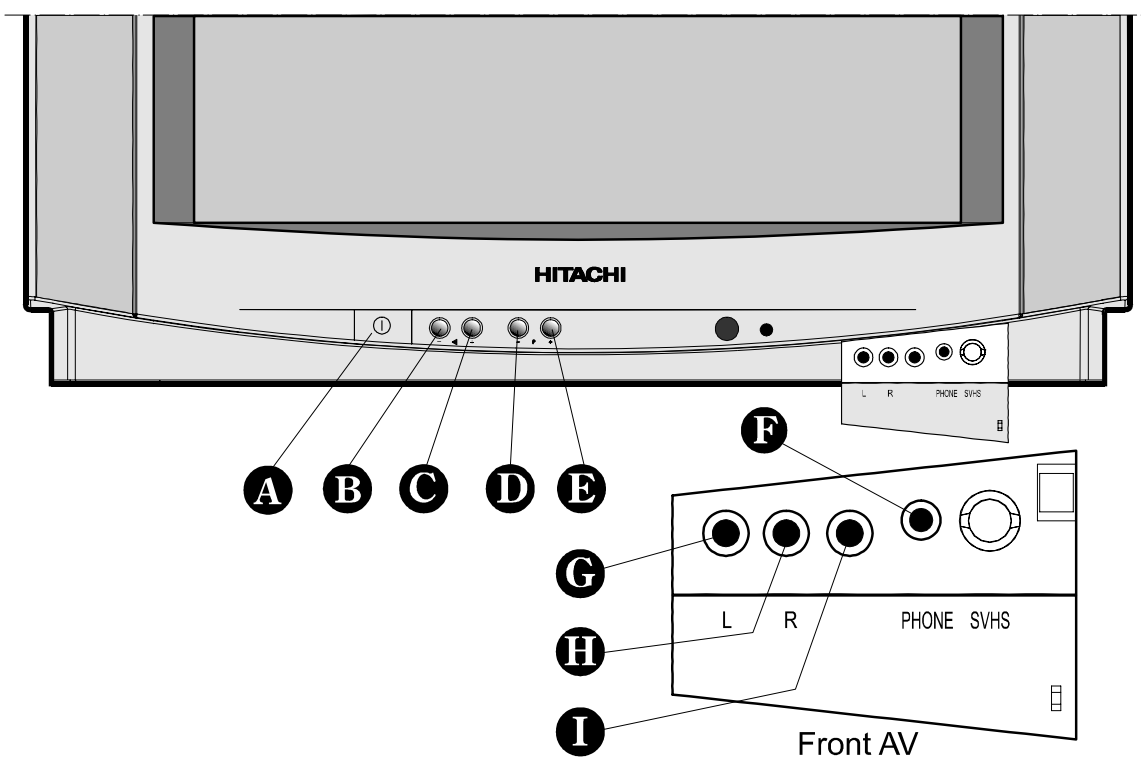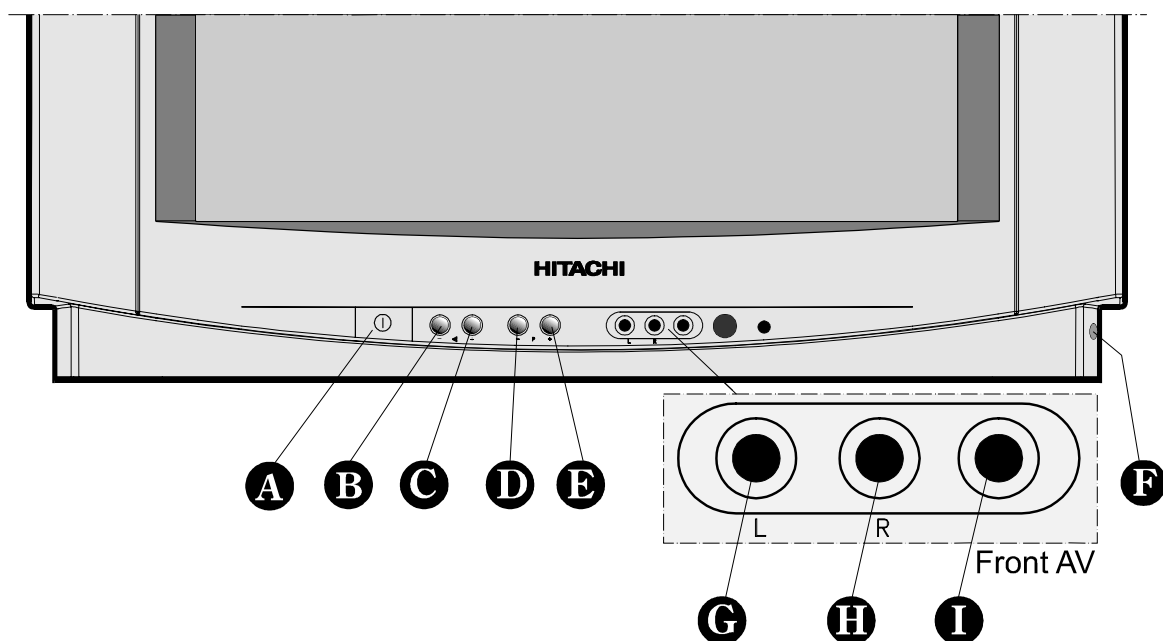

**A** ⏻ = Power On / Off

**B** ▾ = Volume -

**C** ▴ = Volume +

**D** - P = Program -

**E** P + = Program +

**F** H-PHONE = Headphone 3,6 mm Ø

### Front AV input

**G** AUDIO L = Audio left (white)

**H** AUDIO R = Audio right (red)


**I** VIDEO = VCR (yellow)

# Connect Peripheral Equipment


There is a wide range of audio and video equipment that can be connected to your TV.

The following connection diagrams show you where the different equipment should be connected at the back or the front side of the TV.
 
## 21" REAR PANEL

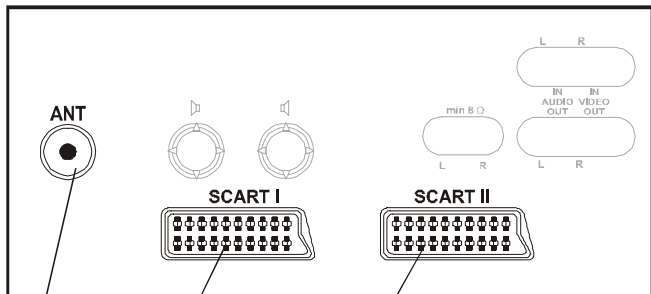

## 28" REAR PANEL

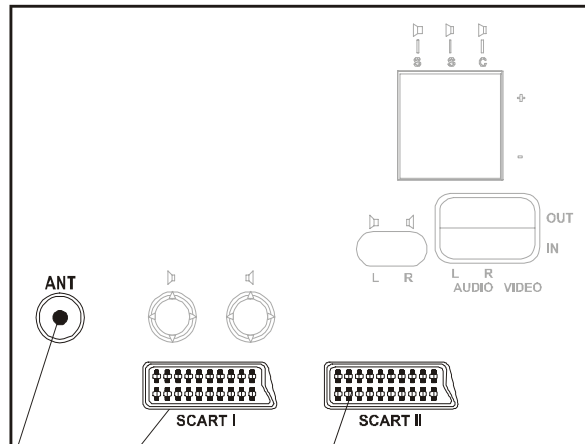 

**A** ANTENNA


**B** External 1

**C** External 2

**A**

 **B**

**C**

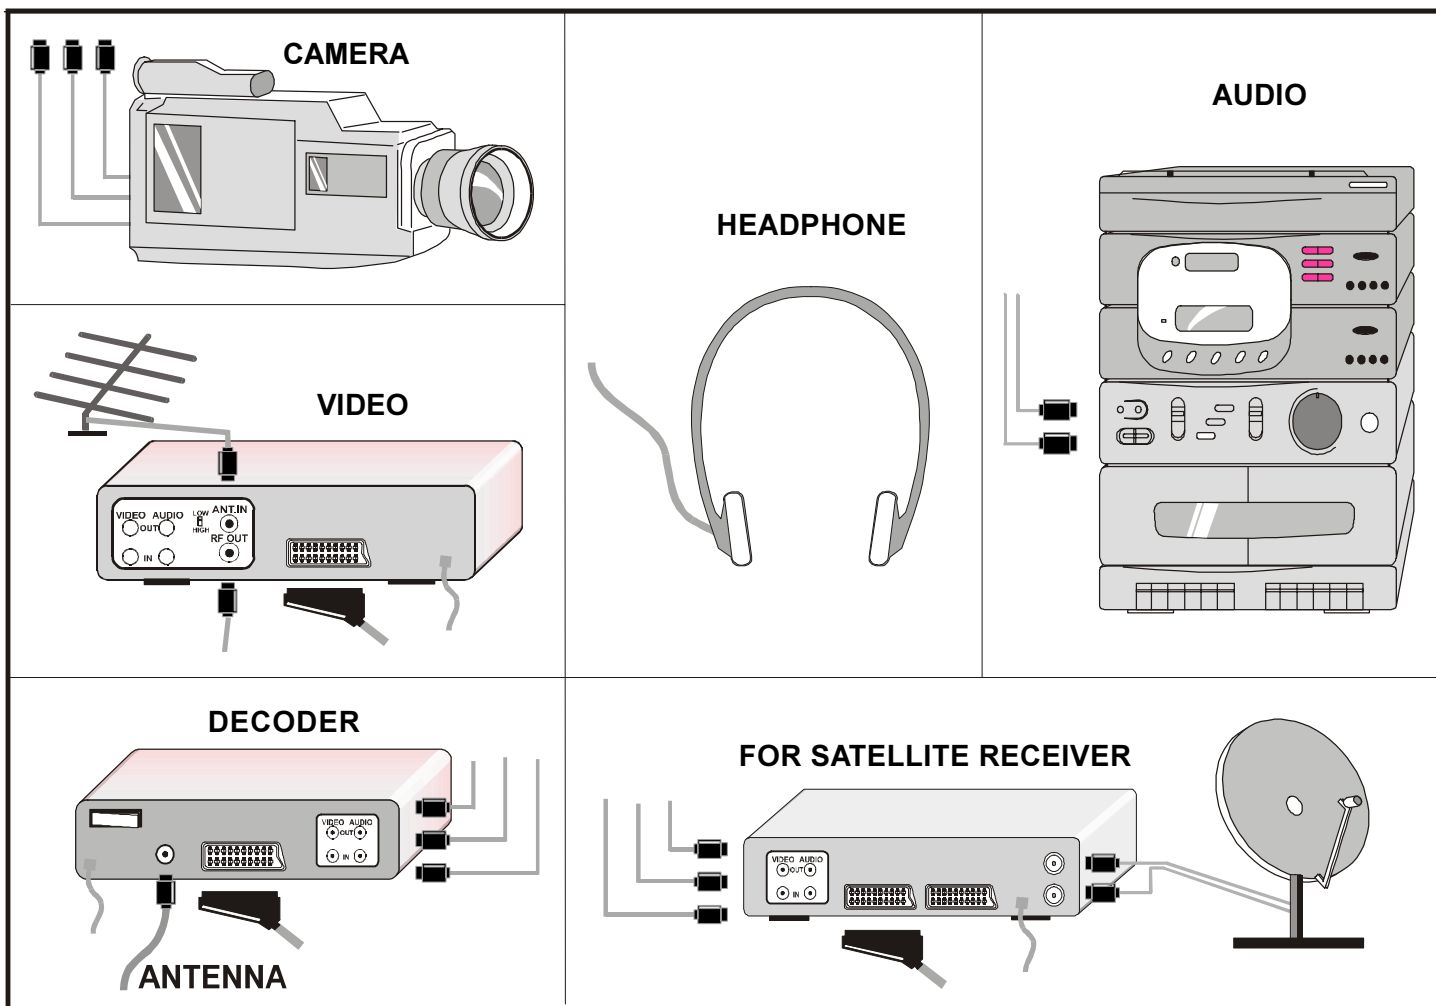

## Via the SCART connector

---

Your TV set has two SCART connector sockets. If you want to connect peripherals (e.g. video, decoder, etc.) which have SCART connectors, to your TV, use **EXT1** and **EXT2** inputs.

## Via Ant Input

---

If you want to connect to your TV, peripherals like video-recorders or decoders, but the device you want to connect does not have SCART connector you should connect it to the ANT input of your TV set.

## Decoder

---

Cable TV offers you a wide choice of programs. Most of them are free, others are to be paid for by the viewer. This means that you will need to subscribe to the broadcasting organisation whose programmes you wish to receive. This organisation will supply you with a corresponding decoder unit to allow the programmes to be unscrambled.

For further information ask your dealer. See also the booklet supplied with your decoder.

### Connecting a decoder with an aerial socket to the TV

---

- Connect the aerial cable.

### Connecting a decoder without an aerial socket to the TV

---

- Connect the decoder to your TV with a SCART lead to **EXTERNAL1** or **EXTERNAL 2**. When your decoder has a SCART connector you can obtain better picture quality if you connect a SCART lead to **EXTERNAL**.
- Then select the appropriate AV mode by pressing the “**AV**” button.

## TV and Video Recorder

---

- Connect the aerial cables.

Better picture quality can be obtained if you also connect a SCART lead to **EXTERNAL 2**.

## Playback NTSC

---

Connect NTSC VCR player to Euroconnector at the back of the TV or RCA JACK at the front of the TV.

Then, press “**AV**” button to select AV-1, AV-2 or AV3.



**NTSC 4.43** system can be watched at this mode automatically.

## Copy Facility

---

Source selection for VCR recording.

Select **TV Setup** Menu in the Installation Menu.

- Select AV-2 OUTPUT source pressing “” or “” button.

## Search for and store the test signal of the video recorder

---

- Unplug the aerial cable from the aerial socket “**ANT**” of your video recorder.
- Switch on your TV and put the video recorder on the test signal. (See the handbook for your video recorder.)
- Enter the Tuning menu via the Installation menu.
- Search for the test signal of your video recorder in the same way as you searched for and stored the TV signals. See Tuning, Search and Store TV channels. Store the test signal either under programme number 0 or between 55 and 99.
- Replace the aerial cable in the aerial socket “**ANT**” of your video recorder once you have stored the test signal.

## Camera and Camcorder

---

### To connect to Front-AV input

---

Connect your camcorder to the front of your TV.

- Connect your equipment to the TV via **VIDEO** (yellow), **AUDIO R** (red) and **AUDIO L** (white) inputs . You should connect the jacks to the input of the same colour.

### Connect the decoder to the video recorder

---

Some video recorders have a special SCART connector for decoder.

- Connect a SCART lead to the SCART connector of your decoder and to the special SCART connector of your video recorder. See also the handbook of your video recorder.
- To connect your video recorder to the TV, see TV and Video Recorder section.

If you want to connect more equipment to your TV, consult your dealer.

## Connecting Headphones

---

Use the stereo headphone socket (HP) to connect headphones. This socket is located on the front / right hand side of the television.

# Preparation

Place TV on a solid surface.

For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

## Features

---

- It is a remote controlled colour television.
- 100 programmes from VHF, UHF bands or cable channels can be preset.
- It can tune cable channels.
- Controlling the TV is very easy by its menu driven system.
- It has SCART connector socket for external devices (video, video games, audio set, etc.)
- Second SCART connector socket is available.
- Stereo sound system (Nicam Stereo).
- Full function Teletext.
- It is possible to connect headphone.
- Direct channel access.
- APS (Automatic Programming System).
- All programmes can be named.
- Forward or backward automatic tuning.
- Sleep timer.
- Automatic sound mute when no transmission.
- 5 minutes after the broadcasting (closedown), the TV switches itself automatically to stand-by mode.

# Safety Precautions

## IMPORTANT SAFETY INFORMATION ON OPERATING YOUR TV

---

### Do's and Don'ts

---

#### DO's

---



This Television has been designed and manufactured to meet international safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

**DO** read the operating instructions before you attempt to use the equipment.

**DO** consult your dealer if you are in any doubt about installation, operation or safety of your equipment.

**DO** be careful with glass panels or doors on equipment.

This TV is supplied with a fitted mains plug. This plug must not be cut off as it may contain a special radio interference filter, the removal of which could lead to impaired performance. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer.

Observe the manufacturers instructions when connecting extension leads to the TV. Check the fuse rating on the new plug, this should be fitted with a 5 Amp fuse which conforms to either ASTA or BSI (BS1 362) approvals, these are easily identifiable by either the  or  symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician.

.....

## **DON'Ts**

---

**DON'T** continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way switch off, withdraw the mains plug and consult your dealer.

**DON'T** place water filled vessels on top of T.V. cabinets.

**DON'T** remove any fixed cover as this may expose dangerous voltages.

**DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

**DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

**DON'T** obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

**DON'T** use makeshift stands and NEVER fix legs or stands to the TV with any screws other than those provided - to ensure complete safety always use the manufacturers approved stand with the fixings provided.

**DON'T** allow electrical equipment to be exposed to rain or moisture.

.....

### ***ABOVE ALL***

---

- ***NEVER let anyone, especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electric shock.***
- ***NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry!***

.....

### **1. Power Source**

---

The receiver should be operated only from a **220-240V AC, 50 Hz.** outlet. Ensure you select the correct voltage setting.

### **2. Power Cord**

---

The power supply cord should be placed so that they are not likely to be walked on or pinched by items placed upon them or against them. Pay particular attention to cord where they enter the plug, power outlet, and the point where they exit from the receiver.

### **3. Moisture and Water**

---

Do not use this equipment in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this equipment to rain or water, as this may be dangerous.

### **4. Cleaning**

---

Before cleaning, unplug the receiver from the main supply, outlet. Do not use liquid or aerosol cleaners. Use with soft and dry cloth.

### **5. Ventilation**

---

The slots and openings on the receiver are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.



## 6. Lightning

In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet and also remove aerial socket.

## 7. Replacement Part

When replacement parts are required, be sure the service technician has used replacement parts which are specified by the manufacturer or have the same specifications as the original one. Unauthorized substitutions may result in fire, electrical shock, or other hazards.

## 8. Servicing

Please refer all servicing to qualified personnel. Do not remove cover as this may result in electric shock.

## 9. X-rays

 
The x-rays generated in this television are shielded sufficiently. Beam potential is max. 30kV.

### **Warning!**

*Any intervention contrary to regulations, in particular, any modification of high voltage or a replacement of the picture tube may lead to an increased concentration of x-rays. Any television modified in this way no longer complies with license and must not be operated.*

### **Instructions for waste disposal:**

*Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.*

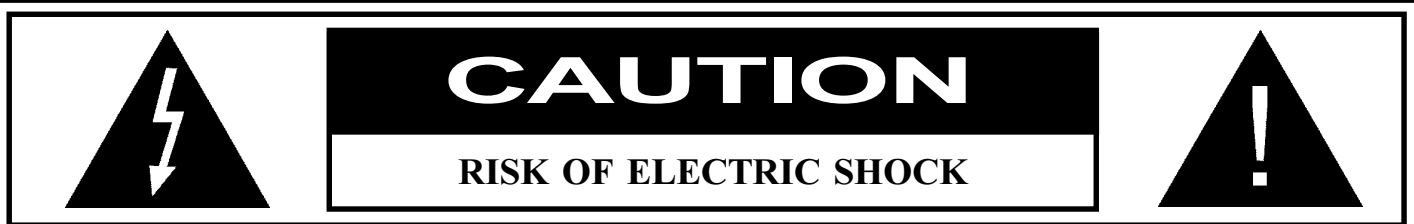

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock of persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## SET TOP BOX OPERATION

If you are watching a Digital TV broadcast and you wish to change to a normal TV broadcast, press the TV button\* on your Set Top Box handset to revert to normal TV operation. If you do not, you may experience a "rolling" of the picture on your TV. (An example is shown in the illustration opposite)

\* **PLEASE NOTE :** The TV button on your Set Top Box handset will be labelled "TV, TV/SAT or TV/DTV", whichever is appropriate to your type of Set Top Box.



**"DO NOT LEAVE YOUR TV IN STAND-BY OR OPERATING WHEN LEFT UNATTENDED FOR A LONG TIME"**

## Before Switching on your TV

### Power connection

**IMPORTANT:** The TV set is designed to operate on **220-240V AC, 50 Hz.**

- After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.

### Aerial Connections

- Connect the aerial plug to the aerial input socket located at the back of the TV.

### How to connect other devices

 
**IMPORTANT:** Switch off the TV before connecting any external device.

Sockets for external connections are on the back of the TV.

For connection of other devices via SCART connector (or RCA Jack) refer to the manuals of the related devices.

### Inserting batteries in the remote control handset

- Remove the battery cover located on the back of the handset by gently pulling upwards from the indicated part.
- Insert two **MN2400 AAA** or equivalent type batteries inside.
- Replace the battery cover.

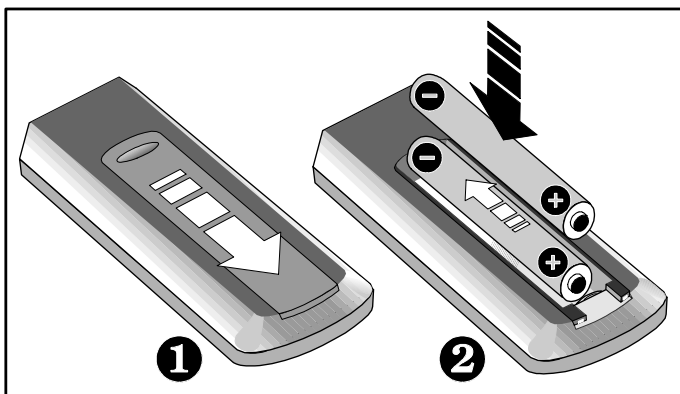

**NOTE:** Remove batteries from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries.

## Switching the TV ON/OFF

*You can operate your TV either using the remote control handset or directly using the TV onset buttons.*

### To switch the TV on

Your TV will switch on in two steps:

**1-** Press the power button located on the front of the TV. Then the TV switches itself to standby mode and the **RED LED** located below the TV turns on.

**2-** To switch on the TV from stand-by mode either:

Press a digit button on the remote control so that a programme number is selected,

or,

Press Programme Up and Down buttons on the front of the TV or on the remote control respectively, so the TV will switch on and the **RED** Led will turn **GREEN**.

### To switch the TV off

- Press the stand-by button on the remote control, so the TV will switch to stand-by mode and the **GREEN LED** will become **RED**, or,
- Press the power button located on the front of the TV.

## Operating the TV


**You can operate your TV both using the remote control handset and onset buttons.**

 
 
 
### APS (Automatic Programming System)

When you turn on your TV for the first time, "**Auto Setup**" menu will be displayed. Auto programming system automatically programmes your TV according to the transmission of programme systems in your area. In this menu if the language setting is incorrect, use "**▲**" or "**▼**" buttons to highlight "**Language**" and select the available one using the "**-▲**" or "**▲**" buttons. Then use the "**▲**" or "**▼**" buttons to highlight "**Country**". If country setting is in correct, use "**▲**" or "**▼**" buttons to highlight "**Country**", and select using the "**-▲**" or "**▲**" buttons. Finally use "**▲**" or "**▼**" buttons to highlight "**▶ Start**" and use "**-▲**" or "**▲**" buttons to begin "Auto-Programming".

After APS is finalised, a rank list will appear on the screen. In the rank list you will see the programme numbers and names assigned to the programmes. At the first programme with programme number 1 will be displayed and the programme number 1 will be selected. Using "**▲**" or "**▼**" or "**-▲**" or "**▲**" key you can move the flashing number and then display the

programme corresponding to the flashing number pressing RED button.

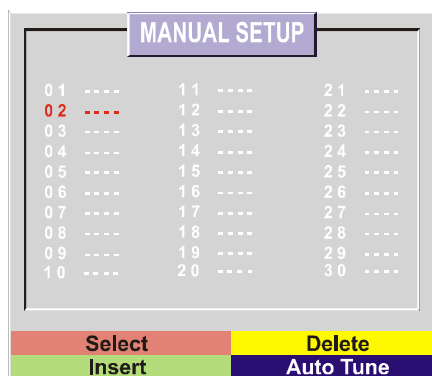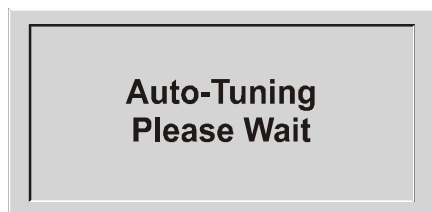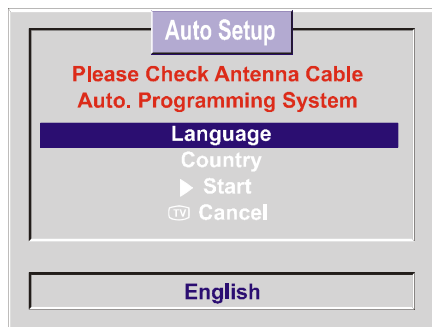

If you do not accept the correspondence between programme numbers and names and want to change them, press “ MENU” button and then BLUE button, so that you enter the Installation menu. In the Installation menu select TUNING menu and enter it. To use tuning menu, refer to the Tuning submenu in the Installation Menu section of this manual.



## Operating with the onset buttons

Volume setting and programme selection can be made using the buttons on the front panel.

### Volume Setting

- Press “” button to decrease volume or “” button to increase volume, so a volume level scale will be displayed on the screen.

### Programme Selecting


- Press Programme Up button to select next programme or Programme Down button to select the previous programme.


## Operating with Remote Control

The remote control handset of your TV is designed to control all the functions of the model you selected. The functions will be described in accordance with the menu system of your TV.



Functions which you can use out of menu system are described below.

 
### Volume Setting

Press “” button to increase volume.

Press “” button to decrease volume.

### Programme Selecting (Previous or next programme)

- Press “” button to select the next programme.
- Press “” button to select the previous programme.

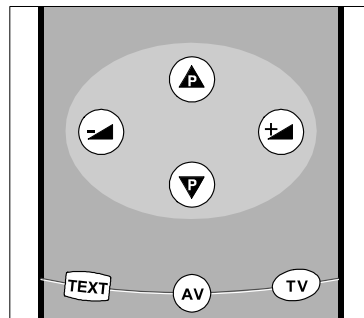


### Programme Selecting (direct access):

Press digit buttons on the remote control handset to select programmes between 0 and 9.

Press “- -” button to select programmes between 10 and 99. “- -” will be displayed on the screen. Then press the programme number. (e.g. for programme 27, press 2 and 7)

 Press directly the programme number to reselect single digit programmes.

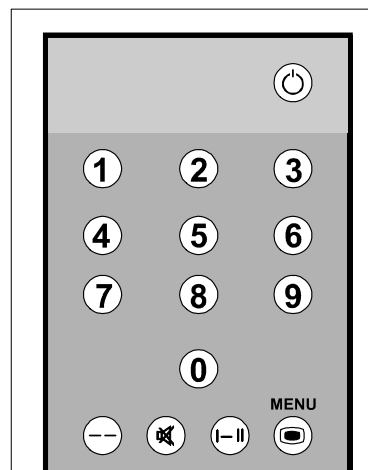

## Menu System

Your TV has been designed with a menu system, to provide an easy manipulation of a multifunction system. The TV is controlled by choosing the commands displayed on the screen.

Below is described the use of the menu system.

- Press Menu “**MENU**” button. Main menu will be displayed on the screen.

 
 
On the remote control each option is identified with a different colour. To select an option, press the button with the corresponding colour, on the remote control handset. For example for sound settings, press **RED** button, for picture settings, press **GREEN** button etc.

### Information Menu

When you press the information button “**i**” in any menu an explanation is given of how to:

- Select and go to a submenu
- Select and change items
- go to the previous menu
- exit that menu

is given.

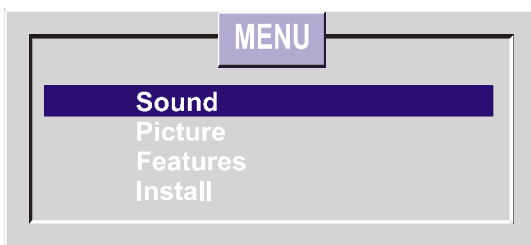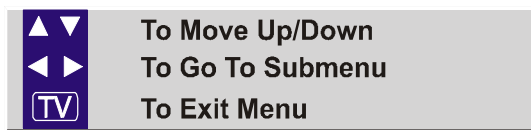

If the “**i**” button is pressed when none of the menus activated, the TV status including “Program number, name and Sound Mode” will be displayed.

In all the menus, pressing “**▲**” or “**▼**” button one of the items can be selected, pressing “**▶**” or “**◀**” button item can be changed or you can go to submenu, pressing the “**MENU**” button you can go to the previous menu and by pressing the “**TV**” button you will exit the menu.

## Sound Menu

### To change sound settings

- Enter the Sound Menu directly, pressing the Red button “**■**” or,
- Press “**MENU**” button, now you are in main menu. In the main menu, select **SOUND** using “**▲**” or “**▼**” button, then enter the sound menu pressing “**▶**” or “**◀**” button.

### Setting Volume:

As you enter the sound menu, Volume will be the first selected option.

 
- Press “**+**” button to increase volume.
- Press “**-**” button to decrease volume.

Or you can directly change the volume settings using “**+**” (to increase) or “**-**” (to decrease) button.




### Setting Bass Level:

- Using “**▲**” or “**▼**” button select Bass.
- Press “**+**” button to increase bass level.
- Press “**-**” button to decrease bass level.

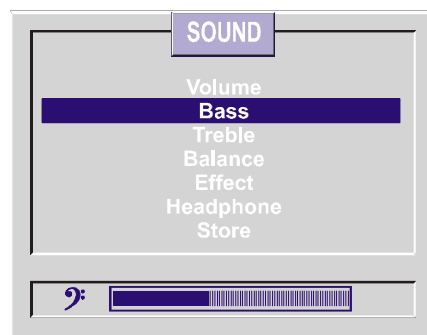


### Setting Treble Level:

 - Using “▲” or “▼” button select Treble.
- Press “+” button to increase treble level.
- Press “-” button to decrease treble level.

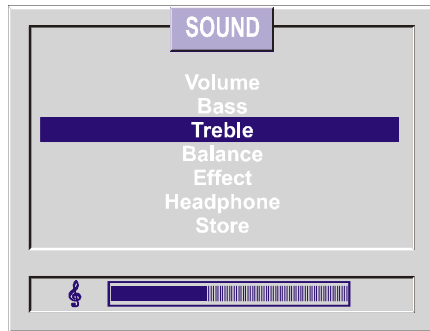


### Setting Balance:

 - Using “▲” or “▼” button select Balance.
- Press “+” button to change balance rightwards.
- Press “-” button to change balance leftwards.

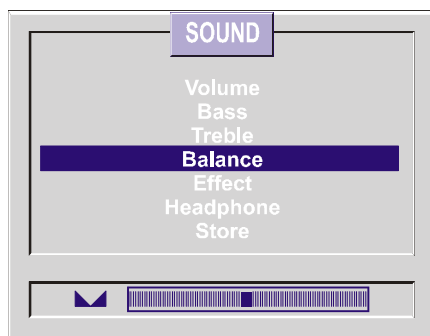

### Setting Sound Effect:

 You can use this feature to switch on and off sound effect. Pressing “-” or “+” button will turn on and off this feature. If the current sound system is **MONO** and the sound effect is set ON, then the sound will be heard as if it is **STEREO**. If the current sound system is **STEREO**, switching this effect on will make the sound deeper. Switching it off will make no change in **MONO** and **STEREO**.

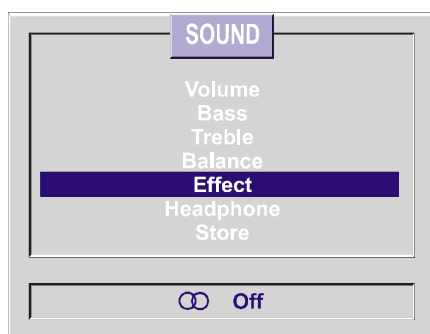

### To Store the Settings:

 
- Using “▲” or “▼” button select Store. Press “-” or “+” button to store current sound settings. The stored values will be valid for all the programmes.

### To Change Headphone Sound Settings:

When you connect headphones, you can change the headphone sound settings entering the headphone menu. To do this, select headphone using “▲” or “▼” button then enter headphone menu pressing “-” or “+” button.

### Setting Headphone Volume:

- As you enter the Headphone sound menu, Volume will be the first selected option.
- Press “+” button to increase volume.
- Press “-” button to decrease volume.

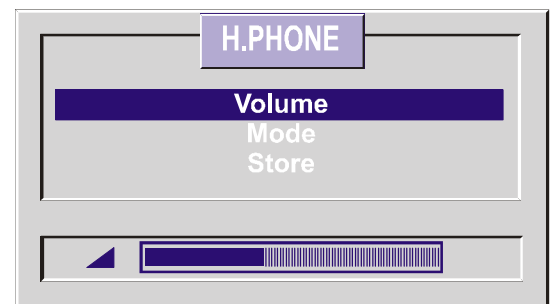

### Setting Headphone Sound Mode:

- Using “▲” or “▼” button select Mode.

Pressing “-” or “+” button will change the current sound mode. (e.g.: If the current sound mode is stereo, it will be stereo or visa versa).



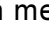
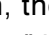
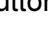

In case of bilingual broadcast, you can select original or dubbed language again using mode menu. So when somebody listens to the original language from the loudspeakers, somebody else can listen to the dubbed language from headphone.

### To Store the Settings:



- Using “▲” or “▼” button select Store. Press “-” or “+” button to store current headphone volume and balance. The stored values will be valid for all the programmes.

 
## Picture Menu
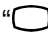
### To change picture settings:





- Enter the Picture Menu directly, pressing the **GREEN** button “” or,
- Press “ MENU” button, now you are in main menu. In the main menu, select **PICTURE** using “” or “” button, then enter the picture menu pressing “” or “” button.

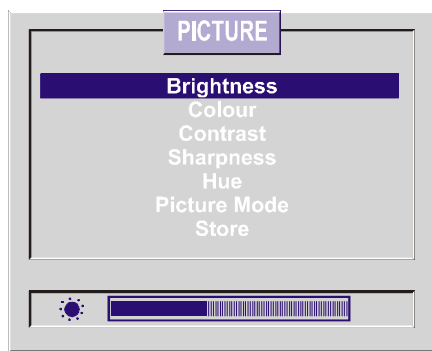
### Setting Brightness:

 - As you enter the picture menu, Brightness will be the first selected option.
- Press “” button to increase brightness.
- Press “” button to decrease brightness.





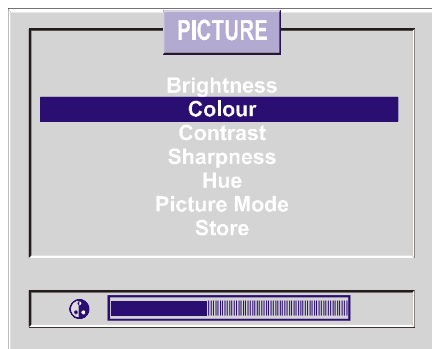


### Setting Colour:

 - Using “” or “” button select Colour.
- Press “” button to increase colour level.
- Press “” button to decrease colour level.





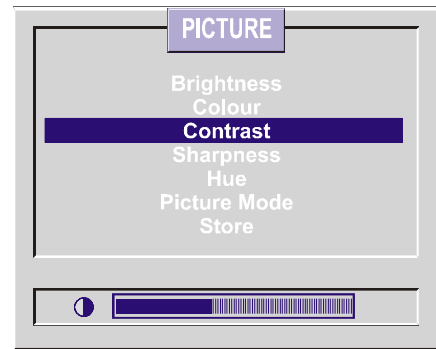


### Setting Contrast:

 - Using “” or “” button select Contrast.
- Press “” button to increase contrast level.
- Press “” button to decrease contrast level.





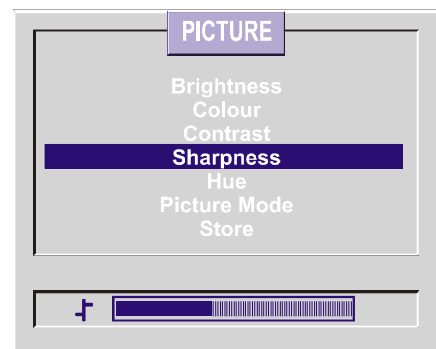

### Setting Sharpness:

 
- Using “” or “” button select Sharpness.
- Press “” button to increase sharpness level.
- Press “” button to decrease sharpness level.



### Setting Hue:

(If your TV set has a Playback NTSC system, this will appear) (In AV mode only) :


- Using “” or “” button select Hue.
- Press “” button to increase hue level.
- Press “” button to decrease hue level.

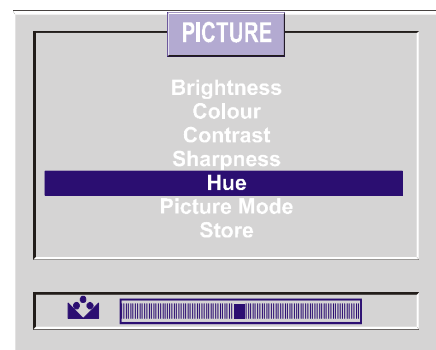

## Picture Mode Menu:


This menu is used to change the picture size according to the coming transmission.

 - If auto function is selected, then the picture size will be automatically changed according to the transmission.
- Selecting 4 : 3 mode forces picture ratio size to 4 : 3.
- Selecting 16 : 9 mode forces picture ratio size to 16 : 9.

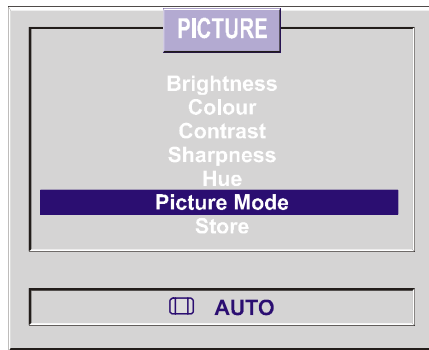

## To Store the Settings:

 - Using “▲” or “▼” button select Store. Press “-▲” or “+▼” button to store current picture settings. The stored values will be valid for all the programmes. Picture Mode setting is stored for each program individually.

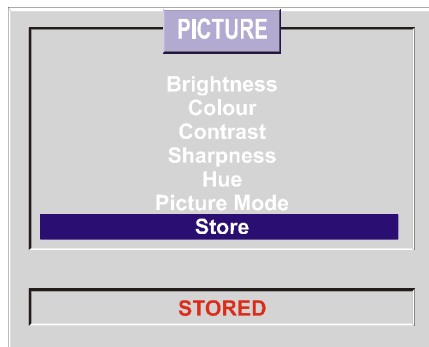


## Feature Menu

- Enter the Feature Menu directly, pressing the **YELLOW** button “F” or,
- Press “**MENU**” button, now you are in main menu. In the main menu, select **FEATURE**, using “▲” or “▼” button. Then enter the feature menu pressing “-▲” or “+▼” button.

## Sleep Timer:

 
- As you enter the feature menu, Sleep Timer will be the first selected option.
- Use “-▲” or “+▼” button to change the value of the sleep timer between Off, **0:15, 0:30, 0:45, 1:00, 1:15, 1:30, 1:45, 2:00** hours. Your TV will get into standby mode when the period you selected passes after you make the selection.

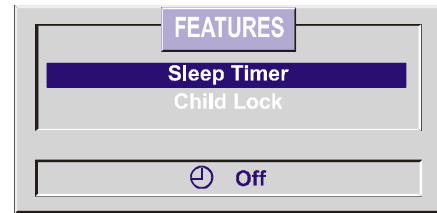

## Child Lock:


You can use this feature to prevent display of any programme you do not want to be watched.

 - The Child Lock feature may be set to either On or Off. When Off is selected, there will be no difference in the operation of your TV. When On is selected, the TV can only be controlled by the remote control handset. In this case, the front panel buttons (except the Switch On/Off button) will not work.

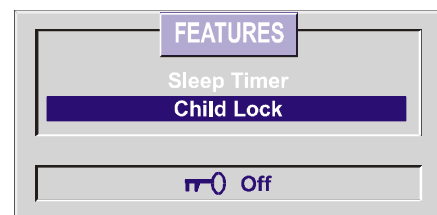


## Installation Menu

 This menu consists of Tuning, Program. (Programming) and TV Configuration submenus.

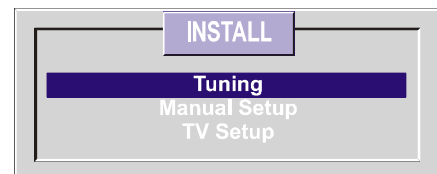

## Tuning Menu

 - Press “**MENU**” button so that you enter the main menu. In the main menu select **Installation** using “▲” or “▼” button and open the installation menu pressing “-▲” or “+▼” button. (To open the **Installation Menu** directly, do not enter the main menu, but only press the **BLUE** button). In the installation menu select **TUNING**. Pressing “-▲” or “+▼” button, enter the **TUNING** menu.

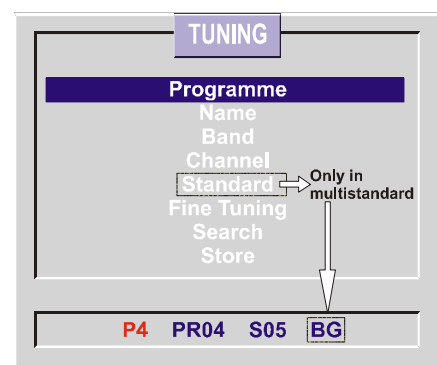

## Automatic Search

- **Programme** will be the first selected item as you enter the **TUNING** menu. Pressing “” or “” button select the programme where you want the tuned station to be stored. (You may also type the programme number using the digit buttons.)
- Press “” or “” button to select **Band**. Using “” or “” button, select the band in which search is to be made.
- With the “” or “” button, select **Search**. Search can be made either forward, pressing “” button or backwards, pressing “” button.
- If the tuned station is not the desired one, you can continue searching pressing “” or “” button again.
- When the desired station is tuned, select **STORE** using “” or “” button and store it to the programme number you selected pressing “” or “” button.
- To stop searching before a channel is found, press the reverse direction button (for example when searching is made in forward direction, press backwards direction button to stop searching).

## To name a Programme

First select the programme number you want to name. Then select name option using “” or “” button. After that press “” or “” button to select the position of the letter to be changed and press “” or “” button to change that letter. After that select and change the other letters as well in order to name the programme correctly. Finally to store the name, select store option using “” or “” button and store it pressing “” or “” button.

## To change Standard

*(You can change this menu only between standards which your TV set supports.)*

Pressing “” or “” button selects the Broadcast Standard required. Then select the standard you want pressing “” or “” button. When changing the standard this way, if the previous channel is not defined for the new selected standard, then also the channel will be changed to the first defined channel of that standard (For example: When changing BG to K1 and the previous channel is C12, after changing the standard, the channel will be C4, because the first defined channel of standard K1 is C4). After that, if it is returned to the previous standard back, the channel will not be changed to the previous one anymore (That means, in the example above, when it is returned from K1 to BG again, the channel will not change to C12 anymore and keep C4). Defined channels for different standards are given as following:

**B/G** : C01-C69, S01-S41  
**D/K** : C01-C12, C21-C69, S01-S19, S22-S41  
**I\*** : C21-C69  
**I\*\*** : C01-C17, C21-C69, S01-S19, S22-S41  
**L/L'** : C01-C11, C21-C69, S01-S41  
**K1** : C04-C09  
\* U.K. I (UHF)  
\*\* IRELAND I (VHF, UHF)

## Direct Channel Access

- If you know the broadcast band and channel number of the station you want to tune, you do not need to make search; select **Band**, using “” or “” button in the TUNING menu. Select the band of the station, pressing “” or “” button. Then select **Channel** pressing “” or “” button. Press “” or “” button to find the channel number or directly type it using the digit buttons. As you change the channel numbers the corresponding stations will be displayed.

To store the station to the programme number selected, select **STORE** option using “” or “” button and then press “” or “” button to store it.

## Fine Tuning

Picture or sound quality can be poor in areas where the reception is weak. In such cases, picture and sound quality can be improved by fine tuning. To make fine tuning:

- In the tuning menu, press “” or “” button to select the **Fine Tuning** item. Pressing the “” button continuously will cause the fine tuning be made forward while pressing the “” button continuously will cause the fine-tuning to be made backwards. When you are satisfied with the reception of transmission, store it. To store the fine tuning setting select the **STORE** option using either the “” or “” button and store it to the selected programme number by pressing either of the “” or “” buttons.

## Program (Programming) Menu

 
**Program. (Programming)** menu is used to display the programme names and numbers. You can use this menu to delete a channel, to insert a channel and to autostore the programmes. You can access this menu directly via “” **INFO** button in no menu condition.

Select the **PROGRAM** Menu pressing the “” or “” button and open it by pressing “” or “” buttons. When you enter the programme menu, all the programme numbers and names will be displayed on the screen. The programme name and number of the tuned channel will be displayed in red. All the other channel numbers will be black and at first the programme number 1 will be flashing. You can move the flashing number using the “” or “” buttons. As you pass through the programme numbers this way, to reach the programme number you want, the channels



corresponding to the programme numbers you pass through will not be tuned.

Pressing the RED button will tune the channel on the flashing programme number. Now the colour of the flashing programme number will be red. Again you can use the “▲” or “▼” or “-▲” or “+▲” buttons.

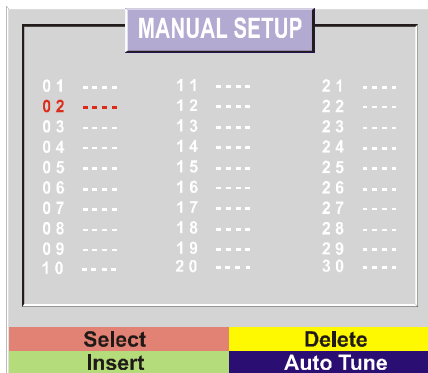

### To delete a channel from a programme number:

- Move the flashing onto the channel you want to delete.
- Press the **YELLOW** button. Now the corresponding channel will be deleted and all the other channels below this programme number will be moved one programme number up.

### To insert a channel into a programme number:

- Move the flashing onto the selected channel.
- Press the **RED** button, so that channel will be displayed on the screen.
- Move the flashing onto the selected programme number. Now pressing the **GREEN** button will insert the channel on screen displayed into that programme number. If a channel is moved to a lower programme number, channels between the previous and current position of the selected channel will be moved one programme number up and if a channel is moved to a upper programme number, channels between the previous and current position of the selected channel will be moved one programme number down.

### APS (Automatic Programming System):

The **APS** menu will appear when you first switch on your TV for the first time. **APS** automatically programmes your TV, according to the transmission of programme systems in your area.

 
If you want to run **APS** at any other time:

- Press **BLUE** button. Now you are in the **Auto Tune** menu.
- Select **Program** menu using “▲” or “▼” button.
- Press either the “-▲” or “+▲” button to enter the **Program** menu.

- In the program menu enter the **Auto Tune** menu by pressing the **BLUE** button. Now a warning message is displayed. If you do not want the channels to be stored automatically, cancel by pressing the “TV” button. If you want to continue, start APS by pressing the “+▲” button.


After APS is finalised, a rank list will appear on the screen. In the rank list you will see the programme numbers and names, assigned to the programmes. First the programme with programme number 1 will be displayed and it will be flashing. Using the “▲” or “▼” or “-▲” or “+▲” buttons you can move the flashing number and then display the programme corresponding to that flashing number by pressing the **RED** button.

If you do not accept the line up between the programme numbers and names and want to change them, press the “MENU” button and then the **BLUE** button, so entering the Installation menu. In the Installation menu select the **TUNING** menu and enter it. To use the **TUNING** menu, refer to the Tuning submenu in the Installation Menu section of this manual.

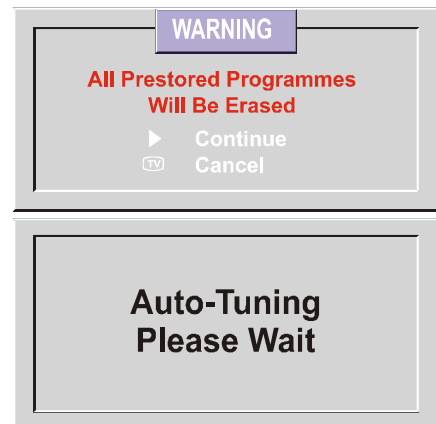

### TV Setup Menu

 This menu is used to select the Menu Language, the Country name and to select source of AV-2 Out (Scart2).

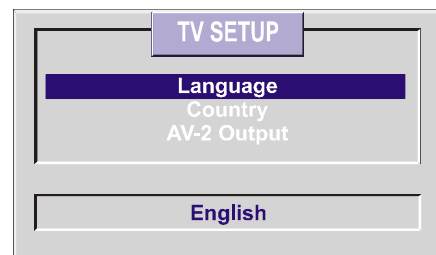


### Selecting Menu Language

To select menu language:


- Press “MENU” button so that you enter the main menu.
- In the main menu select **Installation** using “▲” or “▼” button.
- Open the installation menu pressing the “-▲” or “+▲” button. (To open the **Installation Menu** directly, do not enter the main menu but only press the **BLUE** button).

 
- In the installation menu select **TV Setup** using “▲” or “▼” button.
- Open the **TV Setup** menu using “-▲” or “+▲” button.
- In the **TV Setup** menu select **Language** and you can change the language to the one you require, using the “-▲” or “+▲” buttons. As soon as you change the language, the menu items will be displayed in the selected language.

### Selecting Country

- Press “ MENU” button so that you enter the main menu.
- In the main menu select **Installation** using “▲” or “▼” button.
- Open the installation menu pressing the “-▲” or “+▲” button. (To open the **Installation Menu** directly, do not enter the main menu but only press the BLUE button).
- In the installation menu select **TV Setup** using “▲” or “▼” button.
- Open the **TV Setup** menu using “-▲” or “+▲” button.
- In the **TV Setup** menu select **Country** using “▲” or “▼” button. Change the country pressing “-▲” or “+▲” button.

### Setting External Source Output

- You can use this menu to select the internal or external source that will be output at euroscart2. To set AV-2 Output:
- Press “ MENU” button so that you enter the main menu.
- In the main menu select **Installation** using “▲” or “▼” button.

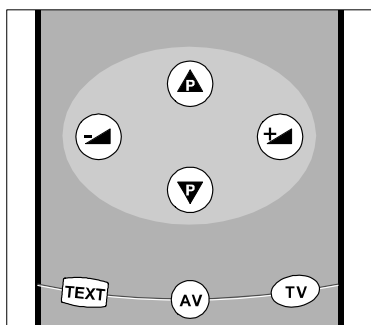




- Open the installation menu pressing “-▲” or “+▲” button. (To open the **Installation Menu** directly, do not enter the main menu but only press the BLUE button).
- In the installation menu select **TV Setup** using “▲” or “▼” button.

- Open the **TV Setup** menu using “-▲” or “+▲” button.
- In the **TV Setup** menu select AV-2 Output using “▲” or “▼” button. Then select the source you want to be output at scart2 pressing “-▲” or “+▲” button (one of the sources: TV, AV-1 (Scart1) or AV-3 (Front AV)).

## Other Features
 
### Sound Mute

To cut off the sound of the TV press “” button. The sound will be muted. To cancel mute, press “” or “-▲” or “+▲” buttons. The volume level will return to the level it was before the sound was muted.

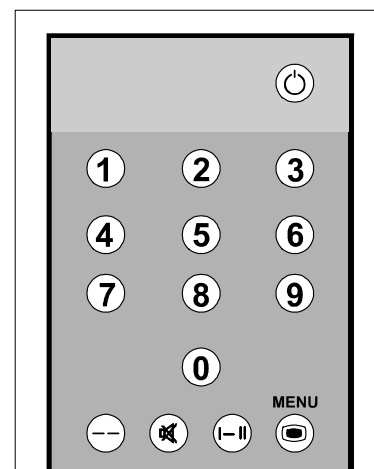


### Bilingual Broadcast

- If the TV channel you are watching broadcasts in two languages (e.g. Eurosport), you can select the dubbed or the original language, pressing the I-II button.

### Information on Screen

After the selection of a TV programme from peripheral, equipment, e.g. VCR, DVD player, satellite receiver or decoder, the following information will appear on your screen:

- The programme number and name of the selected TV channel.
- The currently selected mode (not with a programme coming from a peripheral or through a decoder).
- Dual I or Dual II in case of bilingual broadcast if your TV has stereo sound system.

Also “” sound muted sign will be displayed when the sound is temporarily interrupted.

## Teletext

 
Teletext is an information system that displays text on your TV screen. Using the Teletext information system you can view a page of information on a subject that is available in the list of contents (index).

No on screen display will be available in text mode.

No contrast, brightness or colour control, but volume control is available in text mode.

### To operate Teletext

- Select a TV station on which Teletext is being transmitted.
- Press (TELETEXT) “**TEXT**” button. Usually the list of contents (index) is displayed on the screen.

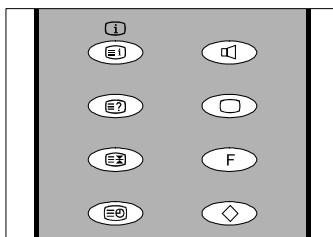


### To select a page of Teletext

- Press the appropriate digit buttons for the required Teletext page number.

The selected page number is displayed at the top left corner of the screen. The Teletext page counter searches until the selected page number is located, so that the desired page is displayed on the screen.

 - Press “**▲**” button to move the Teletext screen forward one page at a time.
- Press “**▼**” button to move the Teletext screen backward one page at a time.

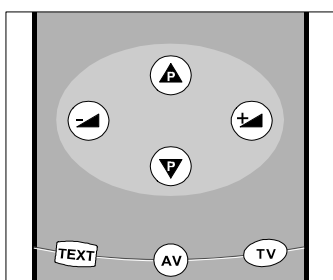

### To Select Index Page

- To select the page number of the index (generally page 100), press “**≡ i**” button.

### To Reveal “concealed” Information

- Pressing “**≡ ?**” button once will reveal answers on a quiz or games page.
- Pressing “**≡ ?**” button again will conceal the revealed answers.

### To Stop Automatic Page Change

The teletext page you have selected may contain more information than what is on the screen; the rest of the information will be displayed after a period of time.

- Press “**≡ ⏏**” button to stop the automatic page change.
- Press “**≡ ⏏**” button again to allow the next page to be displayed.

### To Select a Subpage Page

Subpage pages are subsections of long Teletext pages that can only be displayed on the screen one section at a time.

- Select the required Teletext page.
- Press “**≡ 0**” button.
- Select the required Subpage page number by pressing four digit buttons (e.g. 0001).
- Teletext page number will be displayed on the upper left corner of the screen when the selected page is found.

### 8 Page Fasttext and Toptext

Teletext mode will be selected according to transmission automatically.

Your CTV supports the 8 page Teletext system. When the page number of any of the 8 pages in memory is entered, the system will not search for the requested page; instead it will display the page automatically.

- Press “**▲**” button to move the Teletext screen forward one page at a time.
- Press “**▼**” button to move the Teletext screen backward one page at a time.

### For Fasttext and Toptext

The subject-heading for the information may have a particular colour or can be in a form located in a coloured box.

- Press an appropriate **RED**, **GREEN**, **YELLOW** or **BLUE** button in order to reach the relevant page quickly.

### For TOPTXT

If a Toptext transmission is present, colour coded buttons will appear in a status row.

If Toptext transmission is not present, status row will not appear.

In Toptext mode the “**▲**” or “**▼**” commands will request the next or previous page. If Toptext transmission is not available, in case of operation of these commands, wraparound occurs. For example page 100 appears to be one greater than page 199.



## To exit Teletext

---

- Press “**TV**” button. The screen will switch to TV mode.

## To Display the Time

---

- While watching a TV programme with Teletext transmission press “” button. The current time information, captured from Teletext will be displayed at the upper right corner of the screen.
- If the programme being watched does not have Teletext transmission, only a blue box will be displayed at the same location.
- The time information will disappear after pressing “” button again.

When time information is displayed on screen, entering another menu will remove it, but after leaving that menu time information will appear again.

## Tips

### Care of the Screen

---

Clean the screen with a slightly damp, soft cloth. Do not use abrasive solvents as they may damage the TV screen coating layer.

### Poor Picture

---

Have you selected the correct TV system? Is your TV set or house aerial located too close to the loudspeakers, non-earthed audio equipment or neon lights, etc. ?

Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.

The picture quality may degrade when two peripherals are connected to the TV at the same time. In such a case, disconnect one of the peripherals.

### No Picture:

---

Is the aerial connected properly? Are the plugs connected tightly to the aerial socket? Is the aerial cable damaged? Are suitable plugs used to connect the aerial? If you are in doubt, consult your dealer.

**No Picture** means that your TV is not receiving any transmission. Have you pressed the correct keys on the remote control? Try once more.

### Sound:


---

Sound is coming from only one of the speakers. Is the balance set to one direction extreme? See **SOUND** menu.

## Remote Control:

---

Your TV no longer responds to the remote control. Press the “**TV**” button on the remote control once more. Perhaps the batteries are exhausted. If so you can still use the local keys at the front of your TV.

Have you selected the wrong menu? Press “**TV**” key to return to TV mode or press “ **MENU**” to return to the previous menu.

### No solution:

---

Switch your TV set off and on. If this does not work, call the service personnel; never attempt to repair it yourself.

## Specifications

TV BROADCASTING STANDARD .....	PAL B/G PAL SECAM B/G L/L'	(CP2142AN), (CP2842AN) (CL2142AN), (CL2842AN)
RECEIVING CHANNELS .....	VHF (BAND I/III) UHF (BAND U) HYPERBAND CABLE TV (S1-S20/ S21-S41)	
NUMBER OF PRESET CHANNELS .....	100	
CHANNEL INDICATOR.....	On Screen Display	
RFAERIAL INPUT .....	75 Ohm (unbalanced)	
OPERATING VOLTAGE .....	<b>220-240V AC, 50 Hz.</b>	
AUDIO OUTPUT .....	Stereo (German, Nicam or German+Nicam)	

### FOR 21"

---

AUDIO OUTPUT POWER ( $W_{RMS}$ ) (%10 THD) .....	2 x 8
POWER CONSUMPTION (W) (nom.).....	65
ST-BY POWER CONSUMPTION (W) .....	<5
PICTURE TUBE .....	21" (51 cm.)
DIMENSIONS (mm)	
D .....	473
L .....	563
H .....	442
WEIGHT (kg) .....	18.5

### FOR 28"

---

AUDIO OUTPUT POWER ( $W_{RMS}$ ) (%10 THD) .....	2 x 8
POWER CONSUMPTION (W) (nom.).....	90
ST-BY POWER CONSUMPTION (W) .....	<5
PICTURE TUBE .....	28" (66 cm.)
DIMENSIONS (mm)	
D .....	465
L .....	692
H.....	540
WEIGHT (kg) .....	34.5

# HITACHI

Hitachi, Ltd. Tokyo, Japan  
International Sales Division  
**THE HITACHI ATAGO BUILDING,**  
No. 15-12 Nishi Shinbashi, 2-Chome,  
Minato-Ku, Tokyo 105-8430, Japan.  
Tel: 03 35022111

## HITACHI EUROPE LTD,

Whitebrook Park  
Lower Cookham Road  
Maidenhead  
Berkshire  
SL6 8YA

## UNITED KINGDOM

Tel: 01628 643000  
Fax: 01628 643400  
Email: [consumer-service@hitachi-eu.com](mailto:consumer-service@hitachi-eu.com)

## HITACHI EUROPE S.A.

364 Kifissias Ave. & 1, Delfon Str.  
152 33 Chalandri  
Athens

## GREECE

Tel: 1-6837200  
Fax: 1-6835964  
Email: [service.hellas@hitachi-eu.com](mailto:service.hellas@hitachi-eu.com)

## HITACHI EUROPE GmbH

Munich Office  
Dornacher Strasse 3  
D-85622 Feldkirchen bei München

## GERMANY

Tel: +49-89-991 80-0  
Fax: +49-89-991 80-224  
Hotline: +49-180-551 25 51 (12ct/min)  
Email: [HSE-DUS.service@hitachi-eu.com](mailto:HSE-DUS.service@hitachi-eu.com)

## HITACHI EUROPE S.A.

Gran Via Carlos III, 101-1  
08028 Barcelona

## SPAIN

Tel: 93 409 2550  
Fax: 93 491 3513  
Email: [atencion.cliente@hitachi-eu.com](mailto:atencion.cliente@hitachi-eu.com)

## HITACHI EUROPE srl

Via Tommaso Gulli N.39, 20147  
Milano, Italia

## ITALY

Tel: +39 02 487861  
Tel: +39 02 38073415 Servizio Clienti  
Fax: +39 02 48786381/2  
Email: [customerservice.italy@hitachi-eu.com](mailto:customerservice.italy@hitachi-eu.com)

## HITACHI Europe AB

Box 77 S-164 94 Kista

## SWEDEN

Tel: +46 (0) 8 562 711 00  
Fax: +46 (0) 8 562 711 13  
Email: [csgswe@hitachi-eu.com](mailto:csgswe@hitachi-eu.com)

## HITACHI EUROPE S.A.S

Lyon Office  
B.P. 45, 69671 BRON CEDEX

## FRANCE

Tel: 04 72 14 29 70  
Fax: 04 72 14 29 99  
Email: [france.consommateur@hitachi-eu.com](mailto:france.consommateur@hitachi-eu.com)

## HITACHI EUROPE LTD (Norway) AB

STRANDVEIEN 18

1366 Lysaker

## NORWAY

Tel: 67 5190 30  
Fax: 67 5190 32  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## HITACH EUROPE AB

Egebækgård  
Egebækvej 98  
DK-2850 Nærum

## DENMARK

Tel: +45 43 43 6050  
Fax: +45 43 60 51  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## HITACHI EUROPE AB

Neopoli / Niemenkatu 73  
FIN-15140 Lahti

## FINLAND

Tel : +358 3 8858 271  
Fax: +358 3 8858 272  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## Hitachi Europe Ltd

Bergensesteenweg 421  
1600 Sint-Pieters-Leeuw

## BELGIUM

Tel: +32 2 363 99 01  
Fax: +32 2 363 99 00  
Email: [sofie.van.bom@hitachi-eu.com](mailto:sofie.van.bom@hitachi-eu.com)

## HITACHI EUROPE LTD

Na Sychrove 975/8  
101 27 Praha 10 – Bohdalec

## CZECH REPUBLIC

Tel: +420 267 212 383  
Fax: +420 267 212 385  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

[www.hitachidigitalmedia.com](http://www.hitachidigitalmedia.com)