

# HITACHI


Inspire the Next

## DVD RECORDER

(DVD RECORDER with VIDEO CASSETTE RECORDER)

### Instruction Manual

Model No. **DV-RV8500E (UK)**

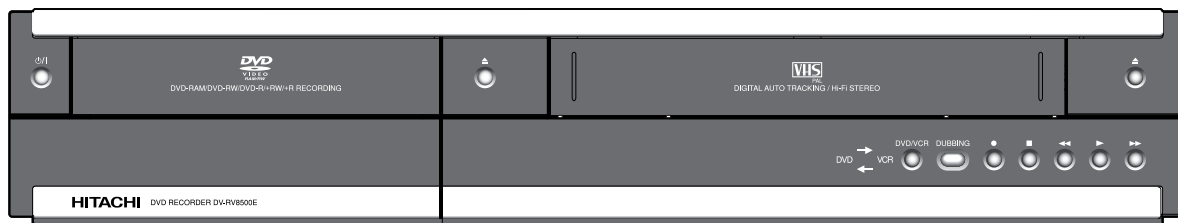

VIDEO Plus+ and PlusCode are registered trademark of Gemstar Development Corporation. The VIDEO Plus+ system is manufactured under licence from Gemstar Development Corporation.

### ***Dear customer***

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.

# Safety Precautions



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

CLASS 1 LASER PRODUCT  
KLASSE 1 LASER PRODUKT  
LUOKAN 1 LASER LAITE  
KLASS 1 LASER APPARAT  
CLASSE 1 PRODUIT LASER

## CAUTION:

This DVD Recorder employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference should the unit require maintenance, contact an authorised service location (see service procedure).

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. **DO NOT STARE INTO BEAM.**

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

## **N** NOTES ON COPYRIGHTS:

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.

This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs on a VCR, picture noise will appear.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection tech-

nology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

**SERIAL NUMBER:** The serial number is found on the back of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_



## Information for users applicable in European Union countries

This symbol on the product or on its packaging means that your electrical and electronic equipment should be disposed at the end of life separately from your household wastes.

There are separate collection systems for recycling in EU.

For more information, please contact the local authority or the dealer where you purchased the product.

## Important for United Kingdom

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse, the value of which is indicated on the pin face of the plug. Should the fuse need to be replaced, an ASTA or BSI approved BS1362 fuse must be used of the same rating.

If the fuse cover is detachable never use the plug with the cover omitted.

If a replacement fuse cover is required, ensure it is of the same colour as that visible on the pin face of the plug. Fuse covers are available from your dealer.

**DO NOT** cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer. If there is no alternative to cutting off the mains plug, ensure that you dispose of it immediately, having first removed the fuse to avoid a possible shock hazard by inadvertent connection to the mains supply.

## IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue = Neutral, Brown = Live

As these colours may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows:

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

On no account connect either of these wires to the terminal marked E or by the earth symbol  $\perp$  or coloured green or green and yellow.

## CAUTIONS

This product satisfies CE regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

# Table of Contents

## INTRODUCTION

Safety Precautions	2
Table of Contents	3-4
Overview	5-10
Accessory	5
Recordable Discs	5
Playable Discs	5
Disc-related terms	6
About Symbols	6
• About the $\circ$ symbol display	6
• About the disc symbols for instructions	6
About DVD-R and DVD-RW disc	7
• What are 'recording modes'?	7
• Is editing a DVD like editing a video tape?	7
• About word 'Original' and 'Playlist'	7
About DVD+R and DVD+RW disc	7
About DVD recording	8
• Disc types and recording formats, modes, and settings	8
• Notes for recording	8
• Recording TV audio channels	8
• Restrictions on video recording	9
• What is 'CPRM'?	9
• Copyright	9
Precautions	10
• Handling the unit	10
• Cleaning the unit	10
Notes on Discs	10
• Handling discs	10
• Storing discs	10
• Cleaning discs	10
Remote Control Operation Range	10
• Remote Control Battery Installation	10
Reset the Recorder	10
Front Panel	11
Function Display Window	12
Remote Control Overview	13
Rear Panel	14

## HOOKUP

Connections	15-18
Connecting to the Aerial	15
Connections to Your TV	15
Connecting to a cable box or satellite receiver	16
Connecting an external decoder box	16
Connecting to an Amplifier	17
Accessory Audio/Video (A/V) Connections to Recorder	18
Connecting a Digital Camcorder	18
Before Operation	19-32
Initial Settings	19
• General Operation	19
GENERAL	19-23
• Auto Programming	19
• Program Edit	20-21
• Auto Clock Set	22
• Manual Clock Set	22
• TV Aspect	22
• VCR Play Aspect	22
• VCR Play System	23

• AV2 Connection	23
• Progressive Scan	23
• Factory Setting	23
Language	23
• Display Menu	23
• Disc Menu	23
Audio	24
• Dolby Digital	24
• DTS	24
• MPEG	24
• Sampling Frequency	24
• DRC (Dynamic Range Control)	24
• Vocal	24
Lock (Parental Control)	25-26
• Set Password	25
• Rating	25
• Area Code	26
Record	26-27
• Disc Record Mode	26
• VCR Record Mode	26
• VCR Record System	27
• DV Record Audio	27
• Auto Chapter	27
Disc	27-29
• Initialize	27
• Finalize	28
• Disc Label	28
• Disc Protect	29
• Manual Skip	29
• About DivX <sup>®</sup>	29
General Explanation of On-Screen Display	30-32
• Displaying Information on-screen	30-32
• Displaying Information While Watching TV	30
• Changing TV Channels	30
• Changing TV Audio Channel	30

## PLAYBACK

Operation with DVD and Video CD	33-36
Playing a DVD or Video CD	33
General Features	33
• Moving to another TITLE	33
• Moving to another CHAPTER/TRACK	33
• Search	33
• Still Picture and Frame-by-Frame Playback	34
• Slow Motion	34
• Random	34
• Repeat	34
• Repeat A-B	34
• Time Search	34
• Manual Skip	34
• Zoom	35
• Marker Search	35
• Checking the Contents of DVD Video Discs: Menus	35
• Title Menu	35
• Disc Menu	35
• Camera Angle	35
• Changing the Audio Soundtrack	35
• Changing the Audio Channel	36
• 3D Surround	36

# Table of Contents

• Subtitles	36
• Finding Locations on a Disc	36
• Last Condition Memory	36
<b>Playing a DivX® Movie Disc</b>	<b>37</b>
Playing a DivX® Movie Disc	37
<b>Audio CD and MP3/WMA Operation</b>	<b>38-39</b>
Playing an Audio CD or MP3/WMA Disc	38
Music menu options	38
• Pause	39
• Moving to Another Track	39
• Repeat Track/All(Folder)/Off	39
• Random	39
• Changing the Audio Channel	39
• Search	39
• Repeat A-B	39
Notes on MP3/WMA Recordings	39
<b>Programmed Playback with Audio CD and MP3/WMA</b>	<b>40</b>
• Program List menu options	40
<b>JPEG File Operation</b>	<b>41-42</b>
Viewing a JPEG File	41
• Photo menu options	41
• Photo-CD menu options	41
• Skip Images	42
• Rotate Images	42
• View Slide Shows	42
• Notes on JPEG Recordings	42
<b>VCR Mode Tape Playback</b>	<b>43</b>
Preparation	43
Normal Playback	43
• Tracking Control	43
Special Effect Playback	43
• Search	43
• Still Picture and Frame-by-Frame Playback	43
• Slow Motion	43
• Counter Memory Function	43
<b>RECORDING</b>	
<b>Basic Recording</b>	<b>44-46</b>
Basic Recording from a TV	44
Instant Timer Recording	44
Copying from DVD to VCR	45
Copying from VCR to DVD	46
<b>Timer Recording</b>	<b>47</b>
<b>Timer Recording with VIDEO Plus+</b>	
<b>System</b>	<b>48-49</b>
Checking Timer Recording Details	48
Canceling a Timer Recording	48
Stopping a Timer Recording in Progress	48
Timer Recording Troubleshooting	48
Playing while you are recording	49
<b>Recording from an External Input</b>	<b>50-51</b>
Recording from External Components	50
Recording from a Digital Camcorder	50
What is DV?	51
• DV-Related Messages	51
• Troubleshooting	51




## EDITING

<b>Title List and Chapter List Menu</b>	<b>52-56</b>
Using the Title List-Original menu	
RAM VR	52
Using the Chapter List-Original menu	
RAM VR	52
Using the Title List-Playlist menu	RAM VR 53
Using the Chapter List-Playlist menu	
RAM VR	53
Using the Title List menu	Video 54
Deleting a Title	Video 54
If the disc has already been finalized	54
Using the Title List menu	+RW 55
Using the Chapter List menu	+RW 55
Using the Title List menu	+R 56
Using the Chapter List menu	+R 56
<b>Title and Chapter Editing</b>	<b>57-62</b>
Titles, Chapters and Parts	57
Adding Chapter Markers	57
Changing Title Thumbnails	57
Making a New Playlist	58
Adding Additional Title/Chapters to the Playlist	58
Deleting a Title/Chapter	59
Deleting a Part	59
Naming a Title	60
Combining Two Chapters Into One	60
Moving a Playlist Chapter	61
Protect a Title	61
Hide a Title/Chapter	62
Divide One Title Into Two	62
<b>Additional Information</b>	<b>63</b>
Overwrite Recording	63
Viewing Title List menu displayed on other DVD recorders or players	63
Playing Your Recordings on other DVD Players (Finalizing a Disc)	63

## REFERENCE

<b>Language Code List</b>	<b>64</b>
<b>Area Code List</b>	<b>65</b>
<b>Controlling Your TV with the Supplied Remote</b>	<b>66-68</b>
<b>Troubleshooting</b>	<b>69-70</b>
<b>Specifications</b>	<b>71</b>

### About the symbols for instructions

-  Indicates hazards likely to cause harm to the unit itself or other material damage.
-  Indicates special operating features of this unit.
-  Indicates tips and hints for making the task easier.

# Overview

## Accessory

Check for the supplied accessories below.

- Video/Audio Cable
- RF Cable for TV
- Remote Control
- Batteries for Remote Control (AAA Size)
- SCART Cable
- Instruction Manual

Dispose of batteries according to local environmental regulations. Do not put them in the household rubbish.

## Recordable Discs



### DVD-RW (Digital Video Disc - ReWritable):

These Discs can be recorded on repeatedly. Recordings can be erased, then you can record again on the same Disc. When a brand-new DVD-RW disc is inserted, the screen for formatting the disc will appear: Choose the VR mode or Video mode, and then format the disc before use.



### DVD-R (Digital Video Disc - Recordable):

These Discs can be recorded only once. After you finalize a DVD-R, you cannot record on it or edit it any more.



DVD+ReWritable

### DVD+RW (Digital Video Disc + ReWritable):

These Discs can be recorded on repeatedly. Recordings can be erased, then you can record again on the same Disc. When a brand-new DVD+RW disc is inserted, the screen for formatting the disc will appear: Format the disc before use. When a DVD+RW disc recorded on this recorder is removed, it will automatically be finalized, but if you enter a title after finalization, you will need to manually finalize it.



DVD+R

### DVD+R (Digital Video Disc + Recordable):

These Discs can be recorded only once. After you finalize a DVD+R, you cannot record on it or edit it any more.



VIDEO RAM/RW

### DVD-RAM (DVD - Random Access Memory)

DVD-RAM discs can be formatted for VR mode recording. These Discs can be recorded on repeatedly. Recordings can be erased, then you can record again on the same Disc. Playable on DVD-RAM compatible players. Recordings can be extensively edited. Only DVD-RAM standard Version 2.0, 2.1 and 2.2 discs can be used in this unit. You cannot use the cartridge-type DVD-RAM disc in this unit. When a brand-new DVD-RAM disc is inserted, the screen for formatting the disc will appear: Format the disc before use. In the case of an 8-cm DVD-RAM on which photos were recorded on a Hitachi DVD video camera/recorder, no editing of Disc Navigation or play list can be performed on this recorder (recording on it and creating a play list are possible).

## Notes

- This recorder cannot record CD-R or CD-RW discs.
- DVD-R/RW, DVD+R/RW and CD-R/RW discs recorded using a personal computer or a DVD or CD recorder may not play if the disc is damaged or dirty, or if there is dirt or condensation on the recorder's lens.
- If you record a disc using a personal computer, even if it is recorded in a compatible format, there are cases in which it may not play because of the settings of the application software used to create the disc. (Check with the software publisher for more detailed information.)
- The company does not hold any responsibility to compensate the contents which should have been recorded, and any losses or damages (e.g. losses of business profit, or business intermission) that may arise from malfunction of this recorder (not recording/editing as intended). Problems arising in the following situations are included.
  - When a DVD disc recorded on this recorder is used in a DVD recorder of another manufacturer, or used (insertion, playback, recording or editing) in a personal computer DVD drive.
  - When a DVD that has been used as above is used again in this recorder.
  - When a DVD disc recorded in a DVD recorder of another manufacturer, or in a personal computer DVD drive is used.

## Playable Discs



DVD  
(8 cm/12 cm disc)



Video CD (VCD)  
(8 cm / 12 cm disc)



Audio CD  
(8 cm/12 cm disc)

In addition, this unit can play DVD-R/DVD-RW discs; DVD+R/DVD+RW discs; CD-R/CD-RW discs that contain audio titles, MP3 files, WMA files, or JPEG files; and VCD.

## Notes

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/±RW) disc itself, some CD-R/RW (or DVD±R/±RW) discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labelled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). Doing so may result in malfunctions.

## Overview (Continued)


### Regional code of the DVD Recorder and DVDs

This DVD Recorder is designed and manufactured for playback of Region 2 encoded DVD software. The region code on the labels of some DVD discs indicates which type of DVD Recorder can play those discs. This unit can play only DVD discs labelled 2 or ALL. If you try to play any other discs, the message "Incorrect region code. Can't play back" will appear on the TV screen. Some DVD discs may not have a region code label even though their playback is prohibited by area limits.







## About Symbols













### About the symbol display

" " may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not available on that specific disc.

### About the disc symbols for instructions

A section whose title has one of the following symbols are applicable only to those discs represented by the symbol.

Many functions of this recorder are dependent on the recording mode. One or more of the symbols (  ,  ,  ,  ) appear by each function explained in this manual so that you can see at a glance whether it's relevant for the disc loaded.

	DVD-RAM disc
	DVD-R/RW with Video recording mode
	DVD-RW with VR recording mode
	DVD+RW disc
	DVD+R disc
	DVD-Video disc
	Video CDs
	Audio CDs
	MP3 CDs
	JPEG CDs
	DivX <sup>®</sup> CDs
	VHS Tape.

The finalized DVD disc is as DVD-Video disc.

### DivX<sup>®</sup>

DivX<sup>®</sup> is the name of a revolutionary new video codec which is based on the new MPEG-4 compression standard for video. You will be able to play DivX<sup>®</sup> movies using this recorder.

DivX is a registered trademark of DivX, Inc. and is used under license.

### otes on DVDs and Video CDs

Some playback operations of DVDs and Video CDs may be intentionally fixed by software manufacturers. As this unit plays DVDs and Video CDs according to disc content designed by the software manufacturer, some playback features of the unit may not be available or other functions may be added.

Refer also to the instructions supplied with the DVDs and Video CDs. Some DVDs made for business purposes may not be played on the unit.

## Disc-related terms

### Title (DVD only)

The main film content or accompanying feature content or music album.

Each title is assigned a title reference number enabling you to locate it easily.

### Chapter (DVD only)

Sections of a picture or a musical piece that are smaller than titles. A title is composed of one or several chapters. Each chapter is assigned a chapter number to enable you to locate the chapter you want. Depending on the disc, chapters may not be labelled.

### Track (Video CD and audio CD only)

Sections of a picture or a musical piece on a video CD or an audio CD. Each track is assigned a track number, enabling you to locate the track you want.

### Scene

On a video CD, moving pictures and still pictures are divided into sections called "Scenes". Each scene available is displayed on the Scene menu and assigned a scene number, enabling you to locate the scene you want.

A scene may be composed of one or several tracks.



## Overview (Continued)

### About DVD-R and DVD-RW disc

#### How are DVD-R and DVD-RW discs different?

The essential difference between DVD-R and DVD-RW is that DVD-R is a record-once medium, while DVD-RW is a re-recordable/erasable medium. You can re-record/erase a DVD-RW disc approximately 1,000 times.

#### Can I play my recordable discs in a regular DVD player?

Generally, DVD-R discs and DVD-RW discs recorded in Video mode are playable in a regular DVD player, but they must be 'finalized' first. This process fixes the contents of the disc to make them readable to other DVD players as DVD-Video discs. DVD-RW discs recorded in VR (Video Recording) mode are playable in some players.



This indicates a product feature that is capable of playing DVD-RW discs recorded with Video Recording format.

#### What are 'recording modes'?

There are two recording modes available using this recorder: VR mode and Video mode. When recording to a DVD-R disc, recordings are always in Video mode. DVD-RW discs can be formatted for VR mode recording or Video mode recording.

#### VR mode recording

- 4 different picture quality/recording time settings available (XP, SP, LP, EP)
- Not playable on regular DVD players
- Recordings can be extensively edited

#### Video mode recording

- 4 different picture quality/recording time settings available (XP, SP, LP, EP)
- Playable on regular DVD players (after finalizing)
- Limited editing features



DVD-Video Format (Video mode) is a new format for recording on DVD-R/RW and DVD+R/RW discs that was approved by the DVD Forum in 2000. You may therefore experience problems playing recordable DVD discs in some players. Symptoms include video artifacts, audio and/or video dropouts and playback suddenly stopping. Our company cannot take responsibility for problems playing discs recorded on this recorder in other players.

#### Is editing a DVD like editing a video tape?

No. When you edit a video tape you need one video deck to play the original tape and another to record the edits. With DVD, you edit by making a 'Playlist' of what to play and when to play it. On playback, the recorder plays the disc according to the Playlist.

#### About word 'Original' and 'Playlist'

Throughout this manual, you will often see the words Original and Playlist to refer to the actual content and the edited version.

- **Original:** content refers to what's actually recorded on the disc.
- **Playlist:** content refers to the edited version of the disc — how the Original content is to be played.

### About DVD+R and DVD+RW disc

#### How are DVD+R and DVD+RW discs different?

The essential difference between DVD+R and DVD+RW is that DVD+R is a record-once medium, while DVD+RW is a re-recordable/erasable medium. You can re-record/erase a DVD+RW disc approximately 1,000 times.

#### DVD+RW mode recording

- 4 different picture quality/recording time settings available (XP, SP, LP, EP)
- Playable on regular DVD players
- The edited contents is playable on regular DVD players only after finalizing
- Recordings can be edited the title/chapter

#### DVD+R mode recording

- 4 different picture quality/recording time settings available (XP, SP, LP, EP)
- Playable on regular DVD players (after finalizing)
- Any edited contents are not be compatible on regular DVD players. (Hide, chapter combine, added chapter mark, etc.)
- Limited title/chapter editing features

## Overview (Continued)

### About DVD recording

#### Notes

- This recorder cannot make recordings on CD-R or CD-RW discs.
- Our company takes no responsibility for recording failure due to power cuts, defective discs, or damage to the recorder.
- Fingerprints and small scratches on a disc can affect playback and/or recording performance. Please take proper care of your discs.

### Disc types and recording formats, modes, and settings

This recorder can play five different kinds of DVD disc: pre-recorded DVD-Video discs, DVD-RW, DVD-R, DVD+RW and DVD-RAM discs. The disc format for DVD-R discs is always 'Video format'—the same as pre-recorded DVD-Video discs. This means that once finalized, you can play a DVD-R in a regular DVD player. The DVD-RAM disc format is Video Recording (VR) format.

By default, the DVD-RW disc format is Video Recording format, though you can change this to Video format, if required. (Reinitializing the disc will erase the contents of the disc.)

The recording mode is closely related to the disc format. If the disc format is Video Recording format, then the recording mode is VR mode; if the disc format is Video mode, then the recording mode is Video mode (except for DVD-Video, which is not recordable, and so does not have a recording mode).

Within the recording modes (which are fixed for the whole disc) are the record settings. These can be changed as required for each recording and determine the picture quality and how much space the recording will take up on the disc.

### Notes for recording

- The recording times shown are not exact because the recorder uses variable bit-rate video compression. This means that the exact recording time will depend on the material being recorded.
- When recording a TV broadcast, if the reception is poor or the picture contains interference, the recording times may be shorter.
- If you record still pictures or audio only, the recording time may be longer.
- The displayed times for recording and time remaining may not always add up to exactly the length of the disc.
- The recording time available may decrease if you heavily edit a disc.
- If using a DVD-RW disc, make sure you change the recording format (Video mode or VR mode) before you record anything on the disc. See page 27 (Initialize) for how to do this.
- When using a DVD-R disc, you can keep recording until the disc is full, or until you finalize the disc. Before you start a recording session, check the amount of recording time left on the disc.
- When using a DVD-RW disc in Video mode, recording time available will only increase if you erase the last title recorded on the disc.
- The Erase Title option in the Title List-Original menu only hides the title, it does not actually erase the title from the disc and increase the recording time available (except for the last recorded title on a DVD-RW disc in Video mode).
- The overwrite recording is available with DVD+RW disc.

### Recording TV audio channels

This recorder can record either NICAM or regular audio. If the NICAM setting (page 21) is set to Auto, then if the broadcast is NICAM, you can record the NICAM audio. If the broadcast is non-NICAM, the regular audio is always recorded.

Disc type	Disc format	Recording mode	Functions
DVD-Video	Video format	n/a	Playback only
DVD-RW	Video Recording format (default)	VR mode	Playback, recording, Original/Playlist editing
	Video format	Video mode	Playback, limited recording, limited editing
DVD-R	Video format	Video mode	Playback, limited recording, limited editing
DVD+RW	+RW Video format	DVD+RW	Playback, limited recording, Title/Chapter editing
DVD+R	+R Video format	DVD+R	Playback, limited recording, limited Title/Chapter editing



## Overview (Continued)

### Restrictions on video recording

- You cannot record copy-protected video using this recorder. Copy-protected video includes DVD-Video discs and some satellite broadcasts. If copy-protected material is encountered during a recording, recording will pause or stop automatically and an error message will be displayed on-screen.
- Video that is 'copy-once only' can only be recorded using a DVD-RW disc in VR mode or DVD-RAM disc with CPRM (see below).
- NTSC format signals from the analogue or the DV inputs is not recorded correctly with this recorder.
- Video signals in SECAM format (from the built-in TV tuner or from the analogue inputs) are recorded in PAL format.

### What is 'CPRM'?

CPRM is a copy protection system (with scramble system) only allowing the recording of 'copy once' broadcast programs. CPRM stands for Content Protection for Recordable Media.

This recorder is CPRM compatible, which means that you can record copy-once broadcast programs, but you cannot then make a copy of those recordings. CPRM recordings can only be made on DVD-RW discs formatted in VR mode or DVD-RAM discs, and CPRM recordings can only be played on players that are specifically compatible with CPRM.

### Copyright

- Recording equipment should be used only for lawful copying and you are advised to check carefully what is lawful copying in the country in which you are making a copy. Copying of copyright material such as films or music is unlawful unless permitted by a legal exception or consented to by the rights owner.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision corporation. Reverse engineering or disassembly is prohibited.
- CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 625p RECORDER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTRE.

## Overview (Continued)

### Precautions

#### Handling the unit

##### When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packaged at the factory.

##### When setting up the unit

The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

##### To keep the surface clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

#### Cleaning the unit

##### To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.


##### To obtain a clear picture

The Recorder is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.) For details, please contact your nearest dealer.

### Notes on Discs

#### Handling discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface. Do not stick paper or tape on the disc.

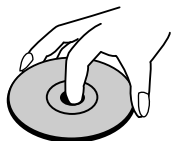


#### Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

#### Cleaning discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the centre outward.

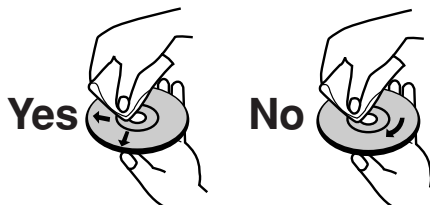


Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

### Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

#### Remote Control Battery Installation

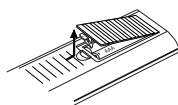

Detach the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with  $\oplus$  and  $\ominus$  aligned correctly.




**Caution**  
Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

### Reset the Recorder

If you observe any of the following symptoms...

- The front panel display is not working.
  - The Recorder is not operating normally.
- ...you can reset the Recorder as follows:
- Press and hold the POWER button for at least five seconds. This will force the unit to power off. Press the POWER button again to turn the unit back on.
  - Unplug the mains lead, wait at least five seconds, and then plug it in again.

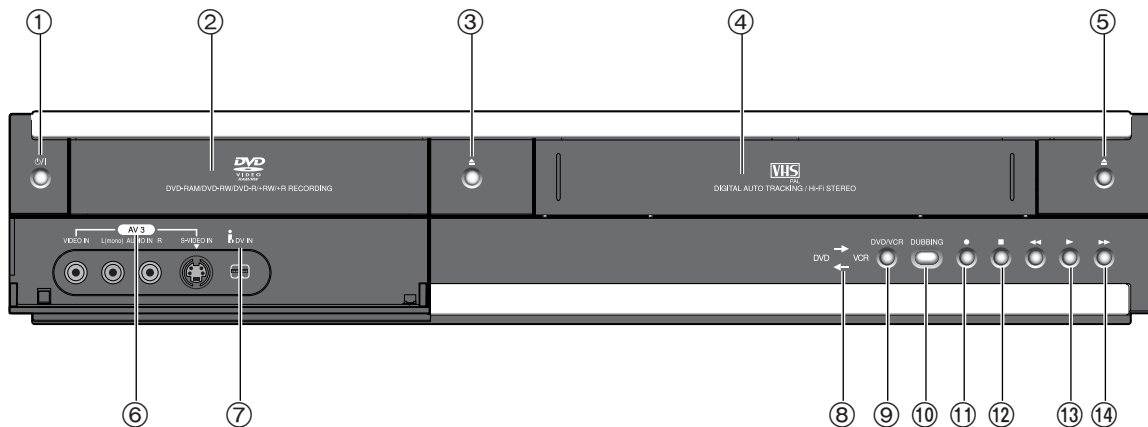

- ① **STANDBY/ON**  
Switches the Recorder ON and OFF. Press to turn the power on and off. (As to the indication of the Operate switch, "I" shows ON and "⏻" shows electrical power stand-by.)
- ② **Disc Tray (DVD deck)**  
Insert a disc here.
- ③ **▲ OPEN/CLOSE**  
Opens or closes the disc tray.
- ④ **Cassette Compartment (VCR deck)**  
Insert a video cassette here.
- ⑤ **▲ EJECT**  
Ejects the tape in the VCR deck.
- ⑥ **AV 3 IN**  
- **VIDEO /AUDIO (Left/Right)**  
Connect the audio/video output of an external source (Audio system, TV/ Monitor, VCR, Camcorder, etc.).  
- **S-VIDEO IN**  
Connect the S-Video output of an external source (TV/ Monitor, VCR, Camcorder, etc.).
- ⑦ **DV IN**  
Connect the DV output of a digital camcorder.
- ⑧ **DVD/VCR indicator**  
Indicates the active DVD or VCR deck.
- ⑨ **DVD/VCR**  
Toggles control between the DVD deck and the VCR deck.
- ⑩ **DUBBING**  
Press to copy DVD to VCR (or VCR to DVD).
- ⑪ **● (REC)**  
Starts recording.  
Press repeatedly to set the recording time.
- ⑫ **■ (STOP)**  
Stops playback.
- ⑬ **▶ (PLAY)**  
To play back a disc or tape.
- ⑭ **SEARCH**  
Press ◀◀ for fast back.  
Press ▶▶ for fast forward.


**Note**

Holding down the POWER button on the front of this recorder in the stop mode will allow you to reset the recorder. Do not perform this during recording: Doing so will result in flawed recording.

# Function Display Window

## Disc type indicators

Indicates the type of disc loaded.

 Indicates when the recorder is in timer recording or a timer recording is programmed.

**REC** The recorder is recording.

**PRG** Programmed playback active.

**TTL** Indicates current title.


A disc is inserted in the DVD deck.

A VHS tape is inserted in the VCR deck.

**VR** Indicates a DVD-RW disc (VR mode only) is inserted in the DVD deck.

**TV** Indicates when the recorder is in TV tuner mode.

**CHP/TRK** Indicates current chapter or track number.

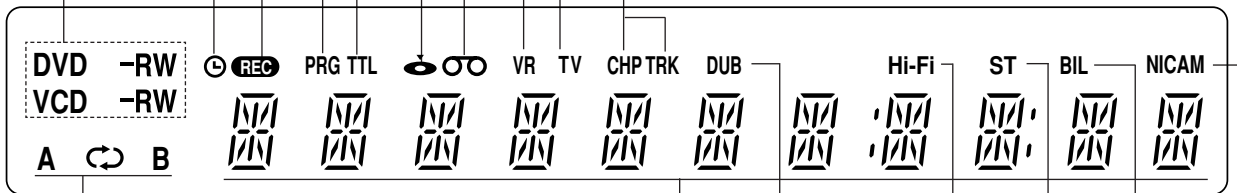

**REPEAT** Indicates repeat mode.

## Character indicators

Indicates clock, total playing time, elapsed time, remaining time, title number, chapter/track number, channel, etc.

**DUB** Indicates that a DVD to VCR (or VCR to DVD) copy is in progress.

**Hi-Fi** Indicates when the Recorder is playing a tape in Hi-Fi.

**ST** Indicates a stereo broadcast is being received.

**BIL** Indicates when a BILINGUAL broadcast is being received.

**NICAM** Indicates when a NICAM broadcast is being received.

# Remote Control Overview

**(p.66) POWER**  
Switches the recorder ON or OFF.

**(p.43) DVD**  
Select the Recorder's function mode to DVD.

**(p.43) VCR**  
Select the Recorder's function mode to VCR.

**(p.66) INPUT**  
Changes the input to use for recording (Tuner, AV1-3, or DV IN).

**(p.35) 0-9 numerical buttons**  
Selects numbered options in a menu.

**(p.35, 48) CLEAR**  
- Removes a track number on the Program List or a mark on the Marker Search menu.  
- Reset tape counter to zero.

**(p.30) DISPLAY**  
Accesses On-Screen Display.

**(p.49) TIME SLIP**  
To play the title being recorded and also currently being recorded appears as PIP.

**(p.47) TIMER REC**  
Displays Timer Record menu.

**(p.44) REC (●)**  
Starts recording. Press repeatedly to set the recording time.

**(p.44) REC MODE**  
Selects the recording mode: XP, SP, LP, or EP.

**(p.29) MANUAL SKIP**  
Pressing this button during playback will skip to a scene 30 seconds forward.

**(p.45) TV/DVD**  
To view channels selected by the recorder's tuner or by the TV tuner.

**(p.57) CHP ADD**  
Inserts a chapter marker when playing/recording a VR mode DVD-RW (and DVD+RW/+R) disc.

**(p.48) VIDEO Plus +**  
Pressing this button and input VIDEO Plus + number to preset the timer for recording.

**(p.45) DUBBING**  
Press to copy DVD to VCR (or VCR to DVD).

**(p.30, 35) AUDIO**  
Selects an audio language (DVD) or an audio channel (CD).


**(p.36) SUBTITLE**  
Selects a subtitle language.

**(p.35) ANGLE**  
Selects a DVD camera angle, if available.

**(p.35) ZOOM**  
Enlarges DVD video image.

**(p.35) MARKER**  
Marks any point during playback.

**(p.35) SEARCH**  
Displays Marker Search menu.

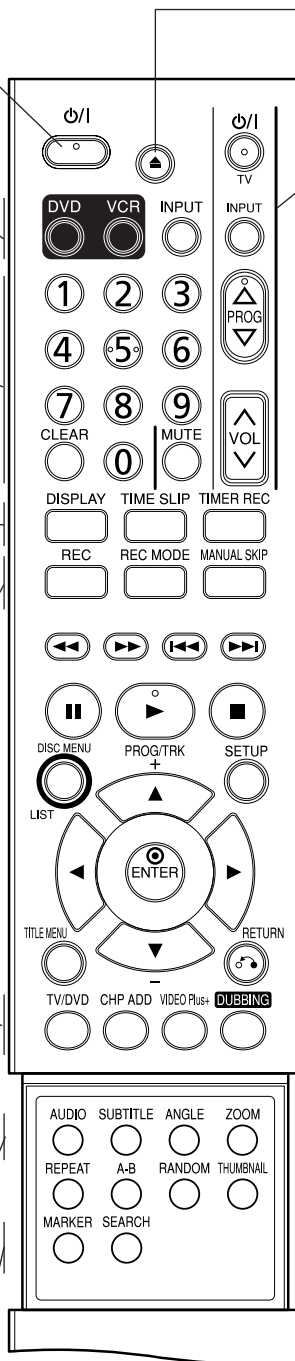

**EJECT, OPEN/CLOSE (p.11)**  
- Opens and closes the disc tray.  
- Ejects the tape in the VCR deck.

**TV Control Buttons (p.66)**  
**POWER:** Turns the TV on or off.  
**INPUT:** Selects the TV's source.  
**PROG:** Selects TV's channel.  
**VOL:** Adjusts TV's volume.  
**MUTE:** Temporarily turns TV sound OFF, press again to restore.

**BACKWARD / FORWARD (◀▶) (p.33, 39)**  
- DVD: Search backward or forward.  
- VCR: Rewinds the tape during the STOP mode, for fast reverse picture search and Advances the tape during the STOP mode, fast forward picture search.

**SKIP (◀◀▶▶) (p.33, 39)**  
Go to next chapter or track. Returns to beginning of current chapter or track or go to previous chapter or track.

**PAUSE/STEP (||) (p.39)**  
Pause playback temporarily / press repeatedly for frame-by-frame playback.

**PLAY (▶) (p.33)**  
Starts playback.

**STOP (■) (p.38, 44)**  
Stops playback or recording.

**DISC MENU / LIST (p.28, 52)**  
Accesses menu on a DVD disc, Title List or Playlist menu.  
◀ / ▶ / ▲ / ▼ (left/right/up/down)  
Selects an option in the menu.

**PROG/TRK(+/-) (p.30, 43)**  
- Select channel program of the recorder.  
- To adjust tracking.  
- To control vertical tremble during picture still.

**ENTER (p.19)**  
- Acknowledges menu selection.  
- Displays information while viewing a TV program.

**SETUP (p.19)**  
Accesses or removes the Setup menu.

**TITLE MENU (p.35, 63)**  
Displays the disc's Title menu, if available.

**RETURN (↶) (p.30)**  
- Removes the menu.


**REPEAT (p.34)**  
Repeat chapter, track, title, all.

**A-B (p.34, 39)**  
Repeat sequence.

**RANDOM (p.34, 39)**  
Plays tracks in random order.

**THUMBNAIL (p.57)**  
Selects a thumbnail picture for the current title and chapter for use in the Original and Playlist menu.

## Rear Panel

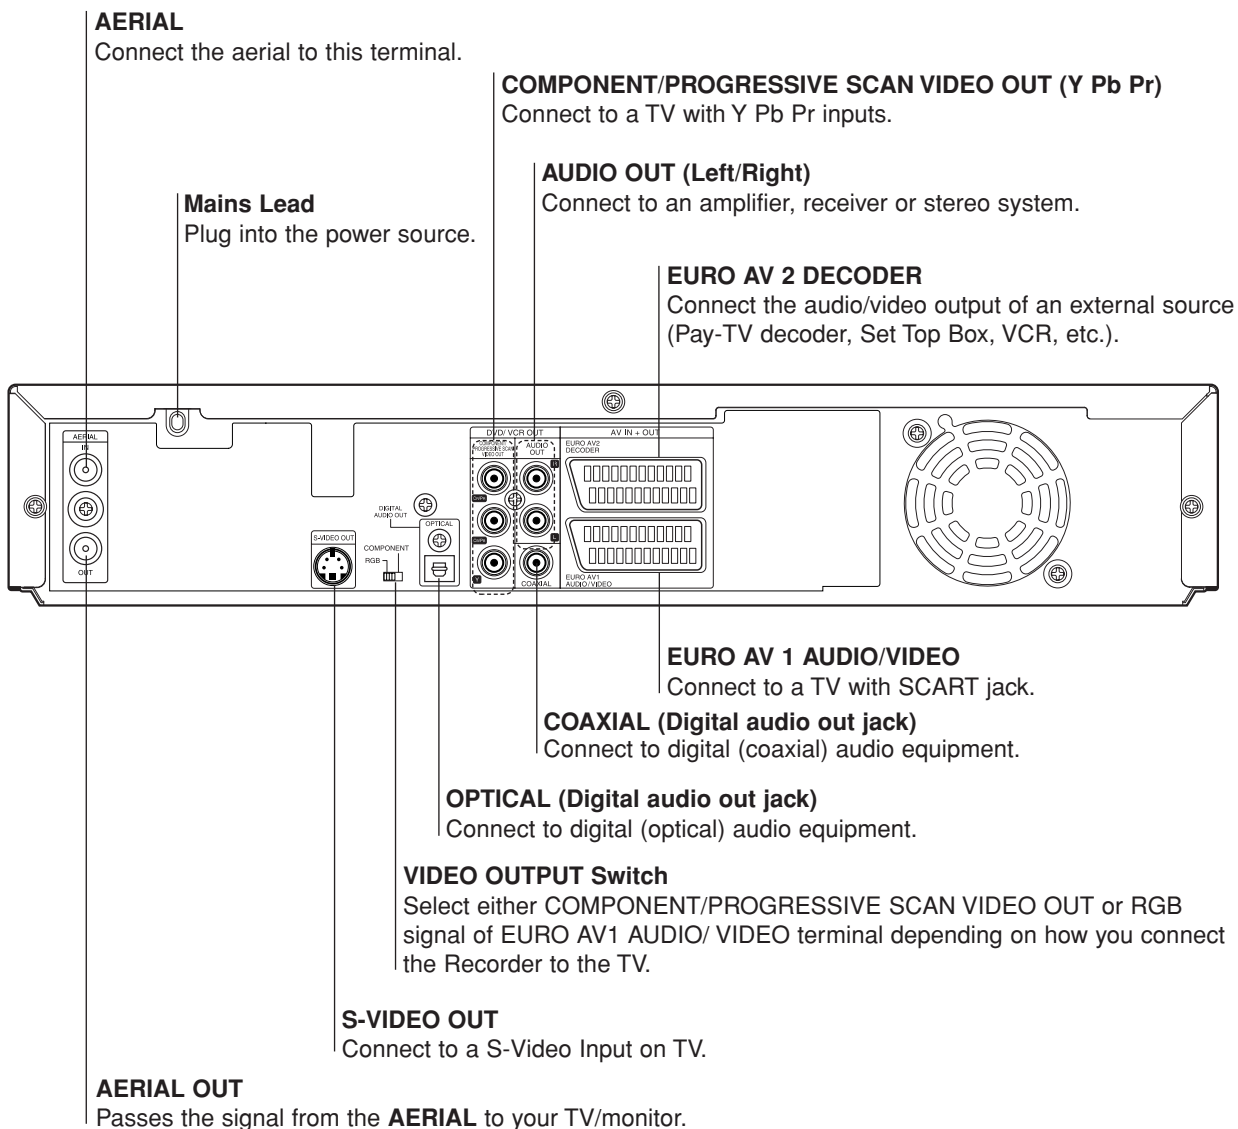

### **N** Important Note About Ferrite Core


Be sure to attach the ferrite core to the mains lead (for connecting to this unit).

This ferrite core can reduce noises.

**1** Push the stopper [a] of the ferrite core to open.

**2** Wind the mains lead twice on ferrite core.

**3** Close the ferrite core until it clicks.

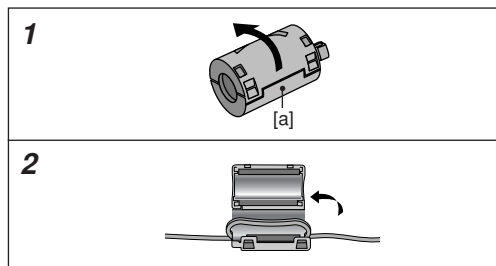

### **⚠** Caution

Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

### **T** ips

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the recorder. Use only one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.



# Connections

## ⚠ Caution


- Make sure the Recorder is connected directly to the TV. Tune the TV to the correct video input channel.
- Do not connect the Recorder's AUDIO OUT jack to the phono in jack (record deck) of your audio system.
- Do not connect your Recorder via your VCR. The DVD image could be distorted by the copy protection system.

## Connecting to the Aerial

Remove the aerial cable plug from your TV set and insert it into the aerial socket at the back of the recorder. Plug one end of the aerial cable into the TV socket on the recorder and the other end into the aerial input socket on your TV set.

### RF coaxial connection

Connect the RF. OUT jack on the Recorder to the aerial input jack on the TV using the 75-ohm Coaxial Cable supplied (R). The RF. OUT jack passes the signal through from the AERIAL jack.

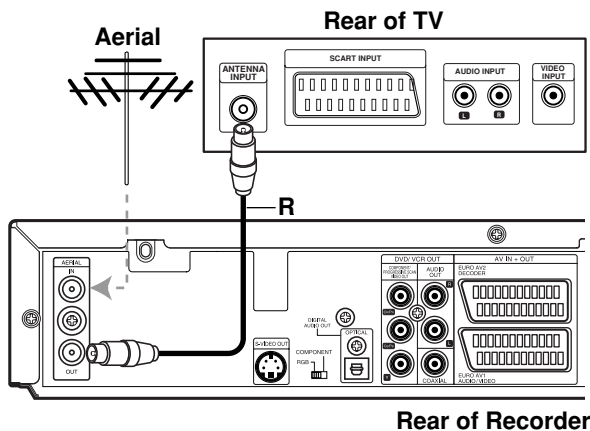

## Connections to Your TV

- Make one of the following connections, depending on the capabilities of your existing equipment.
- When using the COMPONENT/PROGRESSIVE SCAN VIDEO OUT jacks, set the VIDEO OUTPUT switch to COMPONENT. When using the SCART jack, set the VIDEO OUTPUT switch to RGB.

### SCART connection

Connect the EURO AV1 AUDIO/VIDEO scart jack on the Recorder to the corresponding in jacks on the TV using the scart cable (T).

### S-Video connection

Connect the S-VIDEO OUT jack on the Recorder to the S-Video in jack on the TV using the S-Video cable (S).

### Component Video connection

Connect the COMPONENT/PROGRESSIVE SCAN VIDEO OUT jacks on the Recorder to the corresponding input jacks on the TV using an Y Pb Pr cable (C).

### Progressive Scan (ColourStream®Pro) connection

If your television is a high-definition or 'digital ready' television, you may take advantage of the recorder's progressive scan output for the highest video resolution possible. If your TV does not accept the Progressive Scan format, the picture will appear scrambled if you try Progressive Scan on the recorder.

Connect the COMPONENT/PROGRESSIVE SCAN VIDEO OUT jacks on the Recorder to the corresponding input jacks on the TV using an Y Pb Pr cable (C).

## Notes


- Set the Progressive to "ON" on the setup menu for progressive signal, see page 23.
- Set the progressive to "Off" by removing any disc from the unit and close the disc tray. Then press STOP and hold it for five seconds before releasing it.
- Progressive scan does not work with the analogue video connections or S-VIDEO connection.

### Audio (Left/Right) Connection

Connect the left and right AUDIO OUT jacks of the Recorder to the audio left and right IN jacks on the TV using the audio cables (A). Do not connect the Recorder's AUDIO OUT jack to the phono in jack (record deck) of your audio system.

If you are using the COMPONENT/PROGRESSIVE SCAN VIDEO OUT jacks, but are connecting the recorder to a standard (analogue) television, set Progressive Scan to OFF.

### Rear of TV

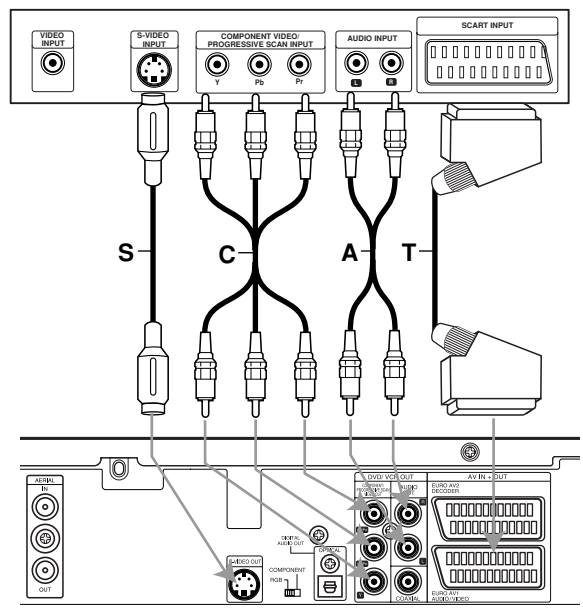

**Rear of Recorder**

## Connections (Continued)

### Connecting to a cable box or satellite receiver

If you have a cable or satellite receiver with a built-in decoder, connect it to this recorder and your TV as shown on this page. If you are using a separate decoder box for your cable/satellite TV, set up following the instructions on the right.

Using the setup on this page you can:

- Record any channel by selecting it on the cable box/satellite tuner.

- 1** Connect RF cables as shown. This enables you to watch and record TV channels.
- 2** Use the SCART cable to connect the EURO AV1 AUDIO/VIDEO connector to a SCART AV connector on your TV.
- 3** Use a SCART cable to connect the EURO AV2 DECODER connector to a SCART AV connector on your satellite/cable box. This enables you to record scrambled TV channels.

#### Tip

This recorder has a 'loop through' function. This feature allows you to record a TV program from the built-in TV tuner in this recorder, while watching a satellite or cable channel. Press TV/DVD to select the TV mode during recording. The TV indicator appears.

#### Caution:

Do not connect this recorder 'through' your VCR, satellite receiver or cable box. Always connect each component directly to your TV or AV receiver.



### Connecting an external decoder box

If you have an external, dedicated decoder box for your satellite or cable TV system, use the setup described on this page.

- 1** Connect the cable from the aerial/cable TV outlet to the aerial input on your cable/satellite tuner.
- 2** Use a SCART cable to connect your decoder to your cable/satellite tuner. See the manual for your decoder box for more detailed instructions.
- 3** Use a SCART cable to connect the EURO AV2 DECODER connector to a SCART AV connector on your satellite/cable box.
- 4** Use the SCART cable to connect the EURO AV1 AUDIO/VIDEO connector to a SCART AV connector on your TV.

#### Caution:

- Do not connect your decoder box directly to this recorder.
- Information from the decoder (for example, relating to pay TV services), is only viewable when this recorder is off (in standby).
- For timer recording to work properly on this recorder, the satellite/cable box must also be switched on during recording.

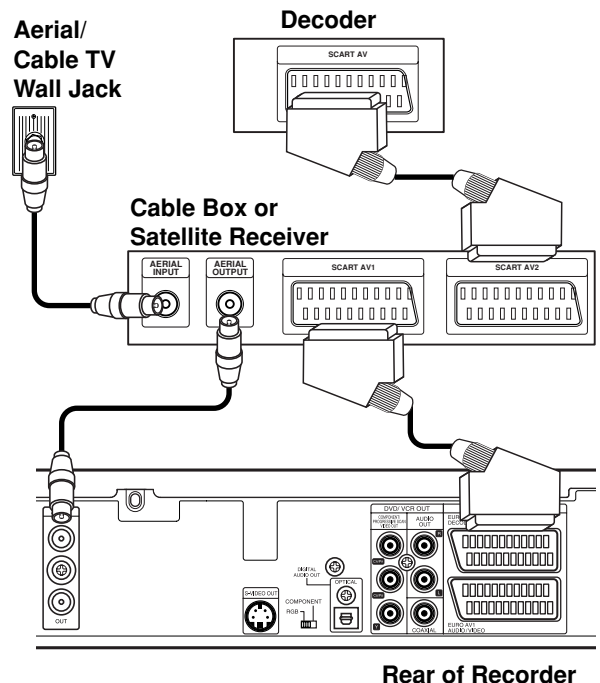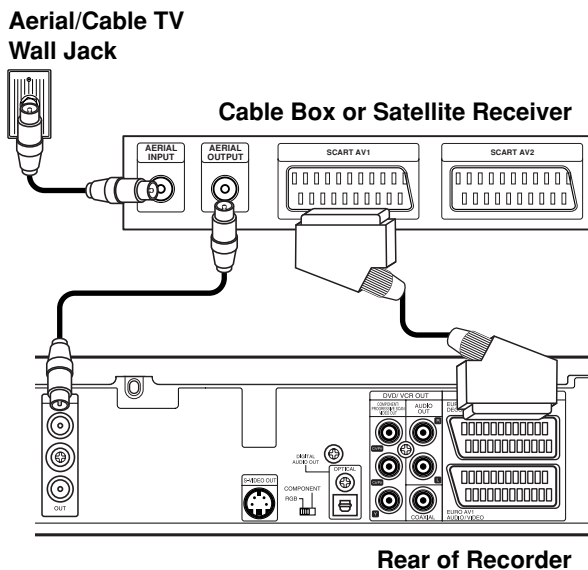

## Connections (Continued)

### Connecting to an Amplifier

#### Connecting to an amplifier equipped with two channel analogue stereo or Dolby Pro Logic II/ Pro Logic

Connect the Left and Right AUDIO OUT jacks on the Recorder to the audio left and right in jacks on your amplifier, receiver, or stereo system, using the audio cables (A).

#### Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/ Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2, or DTS)

**1** Connect one of the Recorder's DIGITAL AUDIO OUT jacks (OPTICAL O or COAXIAL X) to the corresponding in jack on your amplifier. Use an optional digital (optical O or coaxial X) audio cable.

**2** You will need to activate the recorder's digital output. (See "Audio" on page 24).

#### **T** Digital Multi-channel sound


A digital multi-channel connection provides the best sound quality. For this you need a multi-channel Audio/Video receiver that supports one or more of the audio formats supported by your Recorder (MPEG 2, Dolby Digital and DTS). Check the receiver manual and the logos on the front of the receiver.

#### **⚠** Caution:

Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected.

#### **N**otes

- If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.
- Six Channel Digital Surround Sound via digital connection can only be obtained if your receiver is equipped with a Digital Multi-channel decoder.
- To see the audio format of the current DVD in the on-screen display, press AUDIO.
- This recorder does not perform internal (2 channel) decoding of a DTS sound track. To enjoy DTS multi channel surround, you must connect this recorder to a DTS compatible receiver via one of this recorder's digital audio outputs.

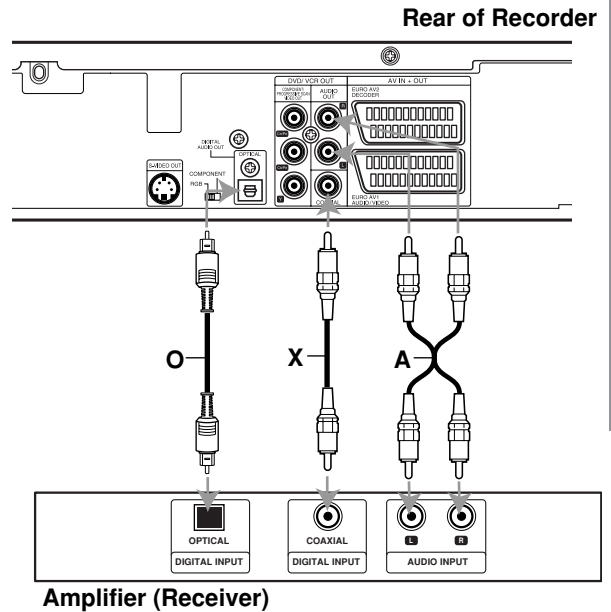

# Connections (Continued)

## Accessory Audio/Video (A/V)


### Connections to Recorder

Connect the input jacks (AV3) on the Recorder to the audio/video out jacks on your accessory component, using audio/video cables.

#### Note

If you use the S-VIDEO IN jack on the front panel, the VIDEO IN jack on the front panel is not available.

#### Jack panel of Accessory Component (VCR, Camcorder, etc.)

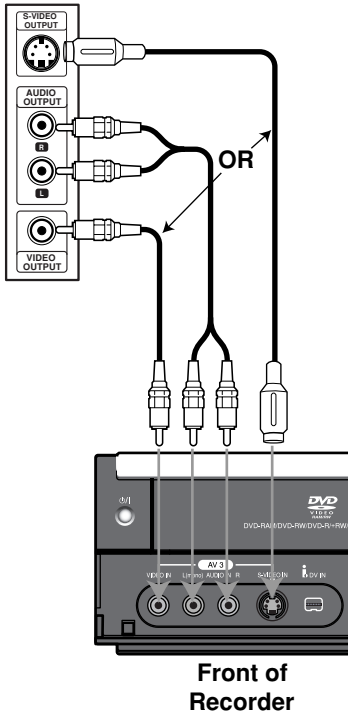

Front of Recorder


## Connecting a Digital Camcorder

Using the front panel DV IN jack, it is possible to connect a DV digital camcorder or video deck or DVD-R/RW recorder and digitally transfer DV tapes or DVD-R/RW discs to DVD-R/RW.

Use a DV cable (not supplied) to connect the DV in/out jack of your DV camcorder/video deck to the front panel DV IN jack of this recorder.

#### Note

This jack is for connection to DV equipment only. It is not compatible with digital satellite tuners or D-VHS video decks.

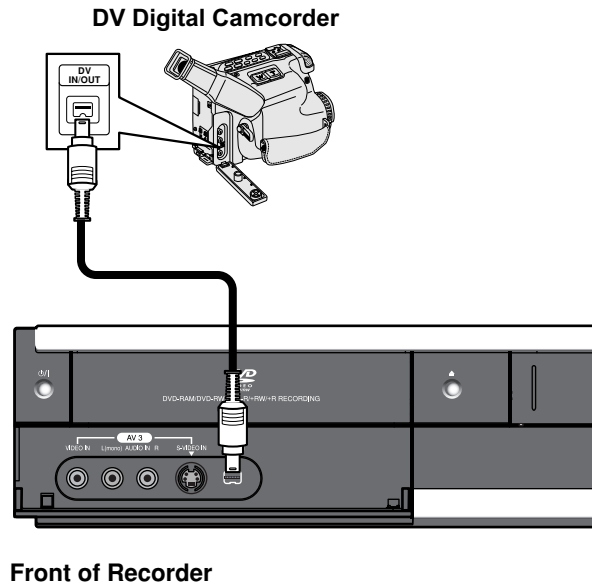

Front of Recorder

# Before Operation

## Initial Settings

In this menu system, there are several ways to customise the settings provided. Most menus consist of three levels to set up the options, but some require greater depth for the variety of settings. If you press SETUP, only the first and second level of the menu system will appear on the TV screen. The third level can be displayed by pressing ►. For navigating the menu levels, you will see “►” on the right side of the menu label to help you go to the next level.

### To bring up and exit the Menu:

Press SETUP to bring up the menu. A second press of SETUP will take you back to initial screen.

### To go to the next level:

Press ► on the remote control.

### To go back to the previous level:

Press ◀ on the remote control.

## General Operation

- 1** Press SETUP.  
The Setup menu appears.
- 2** Use ▲ / ▼ to select the desired option.
- 3** While the desired item is selected, press ► to move to the second level.
- 4** Use ▲ / ▼ to select the second desired option.
- 5** Press ► to move to the third level.
- 6** Use ▲ / ▼ to select the desired setting then press ENTER to confirm your selection.  
Some items require additional steps.
- 7** Press SETUP to exit the Setup menu.

### Notes

- Press ◀ to go back to the previous level.
- The Setup menu screen will not automatically disappear once it is displayed. Therefore, if you do not operate the recorder for a long period of time, press the SETUP button to switch off the menu in order to prevent burning out the screen.


## General

### Auto Programming

This Recorder is equipped with a frequency synthesised tuner capable of receiving up to 99 TV channels.

### Preparation:

- Connect the Recorder to the desired type of aerial, as shown in Connecting to the Aerial on page 15.

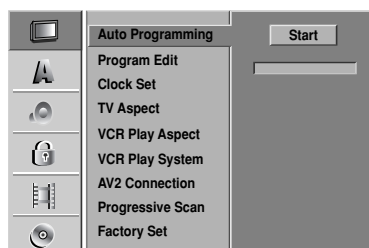


- 1** Press SETUP.  
The Setup menu appears.
- 2** Use ▲ / ▼ to select the General option.
- 3** While the General option is selected, press ► to move to the second level.
- 4** Use ▲ / ▼ to select the Auto Programming option.
- 5** Press ► to move to the third level.  
“Start” icon is highlighted.
- 6** Press ENTER to begin the channel search.  
The tuner will automatically cycle through all available channels in the area and place them in the tuner’s memory.

## Before Operation (Continued)

### Program Edit

You can edit a channel manually (add, delete, name, move, etc.).

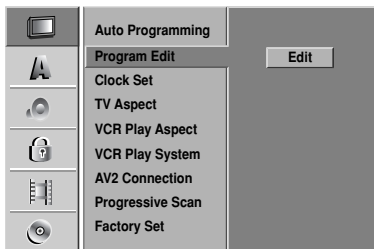


**8** Press RETURN (↵) repeatedly to exit Program List menu.

### Program Edit

You can perform a search to select and store TV channels manually.

- Use ▲ / ▼ to select a program on the Program List menu then press ENTER. Program List options appears on the left side of the Program List menu.
- Use ▲ / ▼ to select "Program Edit" option from the options then press ENTER. Program Edit menu appears.

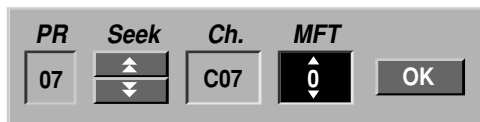

- See the descriptions on below to use Program Edit menu.
    - ◀ / ▶ (left/right): Moves the cursor to the previous or next column.
    - ▲ / ▼ (up/down): Changes the setting at the current cursor position.
- PR: Indicates program number (display only)  
 Seek: Searches a station automatically. Use ◀ / ▶ to select Seek option then press ▲ / ▼. Searching stops when the recorder tunes in a station.  
 Ch.: Changes the channel number to edit. Use ◀ / ▶ to select Ch. option then press ▲ / ▼.  
 MFT: Changes the frequency for fine tuning. Use ◀ / ▶ to select MFT option then press ▲ / ▼.
- Choose OK then press ENTER to confirm the setting and returns to the Program List menu.

**1** Press SETUP.


The Setup menu appears.

**2** Use ▲ / ▼ to select the General option.

**3** While the General option is selected, press ▶ to move to the second level.

**4** Use ▲ / ▼ to select the Program Edit option then press ▶ to move to the third level. "Edit" icon is highlighted.

**5** Press ENTER. Program List menu appears.

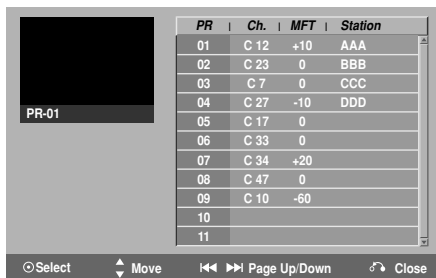

**6** Use ▲ / ▼ to select a PR number then press ENTER.

Program List options appears on the left side of the menu display.

**7** Use ▲ / ▼ to select an option then press ENTER to confirm.

Program Edit
Station Rename
Move
Delete
Decoder On/Off
NICAM Auto/Off

**Program Edit:** Edits the selected program.

**Station Rename:** Edits the station name.

**Move:** Moves the program's location on the program list.

**Delete:** Deletes the program from program list.

**Decoder On/Off:** Set the decoder for the program to On or Off.

**NICAM Auto/Off:** Set the NICAM function to for the program Auto or Off.




## Before Operation (Continued)

### Program Edit (Continued)

#### Station Rename

You can name stations independently. Names can be up to 5 characters long.

1. Use ▲ / ▼ to select a program on the Program List menu then press ENTER.  
Program List options appears on the left side of the Program List menu.
2. Use ▲ / ▼ to select "Station Rename" option from Program List options then press ENTER.  
Keyboard menu appears.

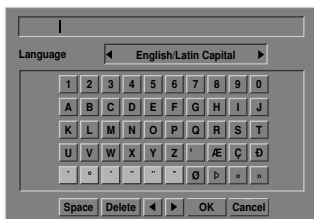

3. Enter a name for the station. Use ▲ ▼ ◀ ▶ to select a character then press ENTER to confirm your selection.
  - **English/Latin Capital:** Switches the keyboard upper case characters.
  - **English/Latin Lowercase:** Switches the keyboard to lower case characters.
  - **Symbol:** Switches the keyboard to symbol characters.
  - **Space:** Inserts a space at the cursor position.
  - **Delete:** Deletes the previous character at the cursor position.
  - **◀ / ▶:** Moves cursor to left or right.
  - **OK:** Select to finish.
  - **Cancel:** Select to exit the menu.
4. Choose "OK" icon then press ENTER to fix the name and returns to the Program List menu.

#### Sort TV channels manually

You can sort the program's position on the Program List menu.

1. Use ▲ / ▼ to select a program on the Program List menu then press ENTER.  
Program List options appears on the left side of the Program List menu.
2. Use ▲ / ▼ to select "Move" option from Program List options then press ENTER.
3. Use ▲ / ▼ to select a desired position then press ENTER to store.

#### Deleting a program

You can delete a program on the Program List menu.

1. Use ▲ / ▼ to select a program on the Program List menu then press ENTER.  
Program List options appears on the left side of the Program List menu.
2. Use ▲ / ▼ to select "Delete" option from Program List options then press ENTER. The Program is deleted.

#### Setting the Decoder On/Off

1. Use ▲ / ▼ to select the program you wish to link with the decoder function on the Program List menu then press ENTER.  
Program List options appears on the left side of the Program List menu.
2. Use ▲ / ▼ to select "Decoder On/Off" option from Program List options then press ENTER. If you select On, 'Decoder' appears on the menu screen.

#### Setting the NICAM Auto/Off


This DVD recorder can receive Hi-Fi sound transmissions in NICAM Stereo. However, if sound distortion occurs, due to poor reception, you can switch Off.

1. Use ▲ / ▼ to select a program on the Program List menu then press ENTER.  
Program List options appears on the left side of the Program List menu.
2. Use ▲ / ▼ to select "NICAM Auto/Off" option from Program List options then press ENTER. If you select Auto, "NICAM" appears on the menu screen.

## Before Operation (Continued)

### Auto Clock Set

When Channel auto search is completed the actual Time and Date are also set automatically. If the time in the recorder display is not correct, the clock must be set manually.

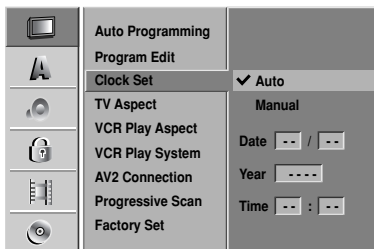


- 1 Press SETUP.**  
The Setup menu appears.
- 2 Use ▲ / ▼ to select the GENERAL menu.**
- 3 While the GENERAL option is selected, press ► to move to the second level.**
- 4 Use ▲ / ▼ to select the Clock Set option.**
- 5 Press ► to move to the third level.**
- 6 Use ▲ / ▼ to select the Auto option then press ENTER.**
- 7 Press SETUP to exit the Setup menu.**

### Note

There are cases where the TV station does not send, or sends wrong date and/or time information and the Recorder sets the incorrect time. If this happens, we recommend that you set the clock manually.

### Manual Clock Set

- 1 Follow steps 1-5 as shown above (Auto Clock Set).**
- 2 Use ▲ / ▼ to select the Manual option then press ENTER.**

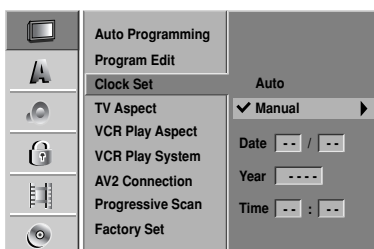

- 3 Enter the necessary information for date and time.**

◀ / ▶ (left/right): Moves the cursor to the previous or next column.

▲ / ▼ (up/down): Changes the setting at the current cursor position.

- 4 Press ENTER to confirm your setting, then press SETUP to exit the Setup menu.**

### TV Aspect

To record a wide screen format program successfully the correct type of wide screen signal must be broadcast by the TV station.

You can choose:

**4:3 Letter Box:** Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture.

**4:3 Pan Scan:** Select when a standard 4:3 TV is connected. The video material formatted in the Pan & Scan style is played back in that style (Both sides of the picture are cut off).

**16:9 Wide:** Select when a 16:9 wide TV is connected.



### VCR Play Aspect

You can choose:

**AUTO:** Automatically plays back Wide-Screen programs as Wide-Screen and Normal programs as normal.

**4:3:** Only for playing back Normal format recordings (4:3).


**16:9:** Only for playing back Wide-Screen format recordings (16:9).



## Before Operation (Continued)


### VCR Play System

Your video recorder uses dual colour standards, PAL and MESECAM. During play your video recorder should select the colour system automatically, however if you experience problems you may need to do it manually.

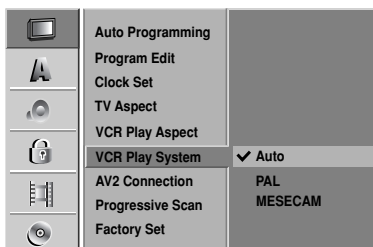

### AV2 Connection

You can connect a decoder, satellite receiver or other device to the EURO AV2 socket on the back.

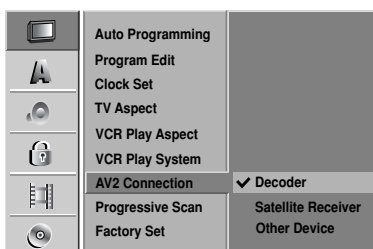


### Progressive Scan

Progressive Scan Video provides the highest quality pictures with less flickering.

If you are using the COMPONENT/PROGRESSIVE SCAN VIDEO OUT jacks, but are connecting the recorder to a standard (analogue) television, set Progressive Scan to OFF.

If you are using the component video jacks for connection to a TV or monitor that is compatible with a progressive scan signal, set Progressive Scan to ON.

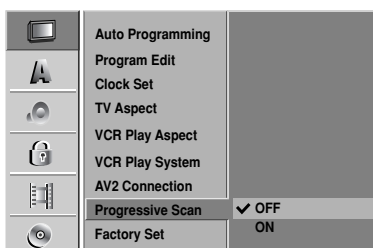

#### Note

Progressive Scan will not be set when the VIDEO OUTPUT switch is set at RGB position.

#### Caution

Once the setting for progressive scan output is entered, an image will only be visible on a progressive scan compatible TV or monitor. If you set Progressive Scan to On in error, you must reset the unit.


- 1) Remove any disc from the unit and close the disc tray.
- 2) Press STOP and hold it for five seconds before releasing it. The video output will be restored to the standard setting and a picture will once again be visible on a conventional analogue TV or monitor.

### Factory Setting

If you need to, you can reset the recorder to all its factory settings. Select 'SET' icon then press ENTER. Select 'Yes' then press ENTER.

#### Note

Some options can not be reset.

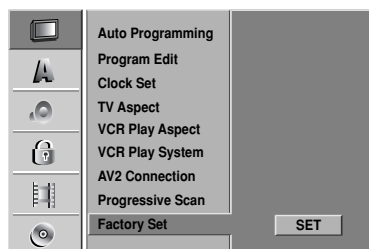

### Language

#### Display Menu

Select a language for the Setup menu and on-screen display.



#### Disc Menu

Select a language for the disc's Menu, Audio, and Subtitle.

- Original: The original language set for the disc is selected.
- Others: To select another language, select Others option then press ENTER. Use the numbered buttons to key-in the corresponding 4-digit number according to the language code list on page 64. If you make a mistake, press ◀ repeatedly to delete one by one and correct it.



## Before Operation (Continued)


### Audio

Each DVD disc has a variety of audio output options. Set the recorder's Audio Output according to the type of audio system you use.

#### Dolby Digital

**PCM:** Select when connected to a 2-channel digital stereo amplifier. The Recorder's digital audio outputs sounds in the PCM 2ch format when you play a DVD video disc recorded on the Dolby Digital recording system.


**Bitstream:** Select "Bitstream" if you connected the Recorder's DIGITAL OUT jack to a Dolby Digital decoder (or an amplifier or other equipment with a Dolby Digital decoder).

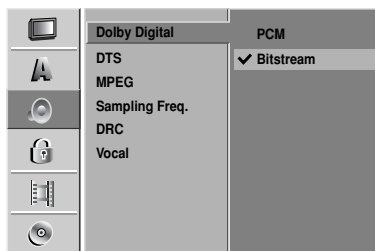

#### DTS

**OFF:** If you select "OFF", the DTS signal is not output through the DIGITAL OUT jack.


**Bitstream:** Select "Bitstream" if you connected the Recorder's DIGITAL OUT jack to a DTS decoder (or an amplifier or other equipment with a DTS decoder).

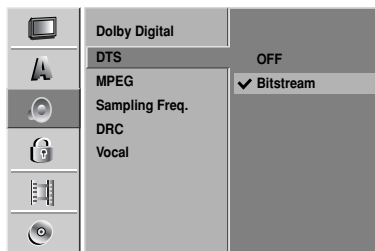

#### MPEG


**PCM:** Select when connected to a 2-channel digital stereo amplifier. The Recorder's digital audio outputs sounds in the PCM 2ch format when you play a DVD video disc recorded on the MPEG2 recording system.

**Bitstream:** Select "Bitstream" if you connected the Recorder's DIGITAL OUT jack to a MPEG decoder (or an amplifier or other equipment with a MPEG decoder).

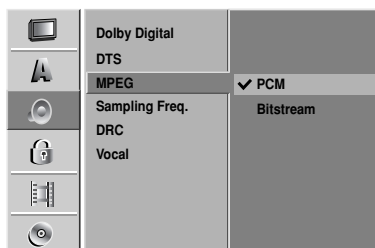


#### Sampling Frequency

If your receiver or amplifier is NOT capable of handling 96 kHz signals, select 48 kHz. When this choice is made, this unit will automatically convert any 96 kHz signals to 48 kHz so your system can decode them. If your receiver or amplifier is capable of handling 96 kHz signals, select 96 kHz. When this choice is made, this unit will pass each type of signal through without any further processing.

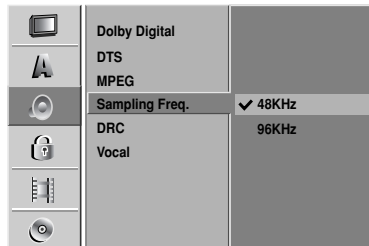


#### DRC (Dynamic Range Control)

With the DVD format, you can hear a program's soundtrack in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing clarity of sound. Set DRC to ON for this effect.

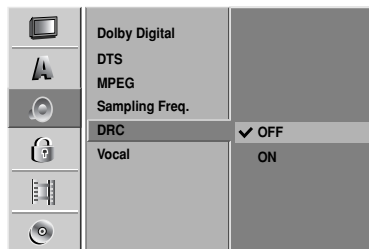

#### Vocal

Set Vocal to ON only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc will mix into normal stereo sound.

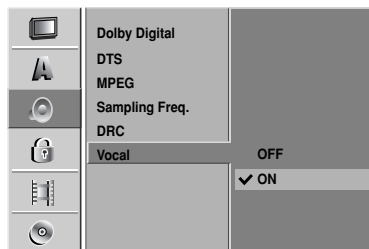


## Before Operation (Continued)

### Lock (Parental Control)

#### Set Password

To access the Rating, Set Password and Area Code features, you must enter a 4-digit security password.

- 1 Press SETUP.**  
The Setup menu appears.
- 2 Use ▲ / ▼ to select the Lock option.**
- 3 While the Lock option is selected, press ► to move to the second level.**
- 4 Use ▲ / ▼ to select the Set Password option.**
- 5 Press ► to move to the third level.**
- 6 When you have not entered a password yet;** Enter a 4-digit password using the numbered buttons to create a personal 4-digit security password. Enter the 4-digit password again to verify.

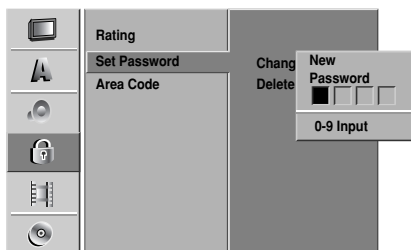

#### When you have already entered a password;

You can change or delete the password. Use ▲ / ▼ to select "Change" or "Delete" then press ENTER.

**Change:** Enter a 4-digit password using the numbered buttons to confirm the personal 4-digit security password, then enter a 4-digit new password twice.

**Delete:** Enter a 4-digit password using the numbered buttons to confirm the personal 4-digit security password.

#### Tip

If you make a mistake, press ◀ repeatedly to delete password numbers one by one then correct it.

#### If you forget your 4-digit code


If you forget your password, to clear the current password, follow the procedure below.

1. Press SETUP to display the Setup menu.
2. Use the Number buttons to enter the 6-digit number "210499".
3. Select "Yes" then press ENTER. The 4-digit password is cleared. Enter a new code as shown above.

### Rating

Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc. These scenes are rated from Level 1 to 8, and alternatively, more suitable scenes are available for selection on some discs. Ratings are country-dependent. The Parental Control feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.

- 1 Follow steps 1-3 as shown above to the left (Set Password).**
- 2 Use ▲ / ▼ to select the Rating option.**
- 3 Press ► to move to the third level.**

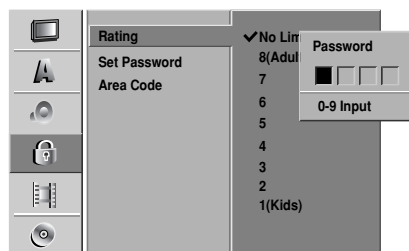

- 4 Enter a 4-digit password using the numbered buttons to confirm the personal 4-digit security password.**

- 5 Select a rating from 1 to 8 using the ▲ / ▼ buttons. One (1) has the most playback restrictions. Eight (8) has the least playback restrictions.**

**No Limit:** If you select No Limit, Parental Control is not active. The disc will play in full.


**Level 1 to 8:** Some discs contain scenes not suitable for children. If you set a rating for the recorder, all disc scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.

- 6 Press ENTER to confirm your rating selection, then press SETUP to exit the menu.**

## Before Operation (Continued)

### Area Code

Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list (See "Area Code List", page 65.).

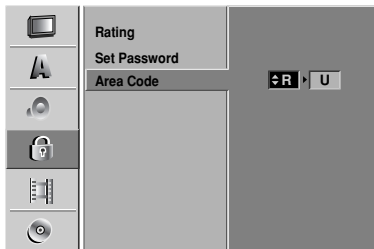

- 1 Press SETUP.**  
The Setup menu appears.
- 2 Use ▲ / ▼ to select the Lock option.**
- 3 While the Lock option is selected, press ► to move to the second level.**
- 4 Use ▲ / ▼ to select the Area Code option.**
- 5 Press ► to move to the third level.**
- 6 When you have not entered a password yet;** Enter a 4-digit password using the numbered buttons to create a personal 4-digit security password. Enter the 4-digit password again to verify.  
**When you have already entered a password;** Enter a 4-digit password using the numbered buttons to confirm the personal 4-digit security password.

### Tip


If you a mistake, press ◀ repeatedly to delete password numbers one by one then correct it.

- 7 Select the first character using the ▲ / ▼ buttons.**
- 8 Shift the cursor using ► buttons and select the second character using ▲ / ▼ buttons.**
- 9 Press ENTER to confirm your Area Code selection, then press SETUP to exit the menu.**

### Record

#### Disc Record Mode


You can set the picture quality for DVD recording; XP (High Quality), SP (Standard Quality), LP (Low Quality), EP (Extend Quality).

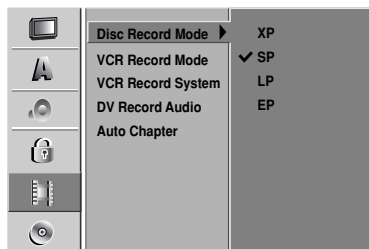

- 1 Press SETUP.**  
The Setup menu appears.
- 2 Use ▲ / ▼ to select the Record option.**
- 3 While the Record option is selected, press ► to move to the second level.**
- 4 Use ▲ / ▼ to select the Disc Record Mode option.**
- 5 Press ► to move to the third level.**
- 6 Use ▲ / ▼ to select a desired Record Mode (XP, SP, LP or EP)**
- 7 Press ENTER to confirm your selection, then press SETUP to exit the menu.**

#### VCR Record Mode

You can set the picture quality for VCR recording; SP (Standard Play), LP (Long Play).

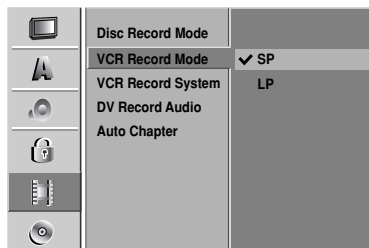




# Before Operation (Continued)

## VCR Record System

Your video recorder uses dual colour standards, PAL and MESECAM. During recording your video recorder should select the colour system automatically, however if you experience problems you may need to do it manually.

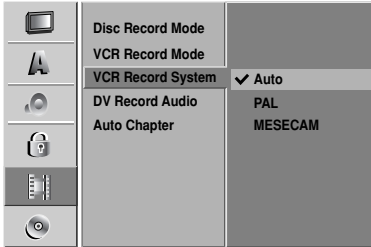


## DV Record Audio

You need to set this if you have a camcorder using 32kHz/12-bit sound connected to the front panel DV IN jack.

Some digital camcorders have two stereo tracks for audio. One is recorded at the time of shooting; the other is for overdubbing after shooting.


On the Audio 1 setting, the sound that was recorded while shooting is used.

On the Audio 2 setting, the overdubbed sound is used.

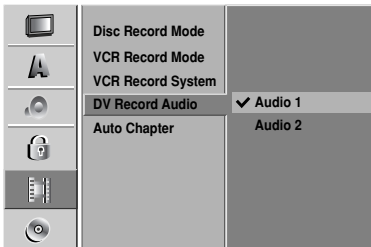

## Auto Chapter

When recording, chapter markers are put in specified setting. You can change this interval to 5 minutes, or 10 minutes. If you select None, switch off automatic chapter marking altogether with the No Separation setting.

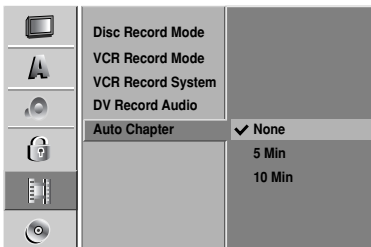

## Disc

### Initialize

If you load a completely blank disc, the recorder will initialize the disc.


**DVD-R:** The recorder initialize the disc to Video mode. The recording mode will always be Video mode.

**DVD-RW:** Go to step 7.

**DVD+R/DVD-RAM:** The Initialize menu will appear. Select "OK" then press ENTER.

**DVD+RW:** The recorder initialize the disc to DVD+RW mode.


Also, you can format the disc from the Setup menu as below.

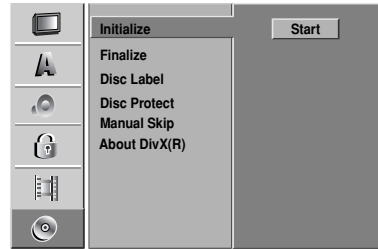

- 1 Press SETUP.**  
The Setup menu appears.
- 2 Use ▲ / ▼ to select the Disc option.**
- 3 While the Disc option is selected, press ► to move to the second level.**
- 4 Use ▲ / ▼ to select the Initialize option.**
- 5 Press ► to move to the third level.**  
Start icon is highlighted.
- 6 Press ENTER.**  
Initialize menu appears.
- 7 In case of DVD-RW, use ◀ / ▶ to select a desired Disc Format Mode (VR Mode or Video Mode) then press ENTER.**  
In case of DVD+RW/DVD-RAM, go to step 8.



- 8 Use ◀ / ▶ to select "OK" then press ENTER.**  
It takes a few minutes to format the disc.

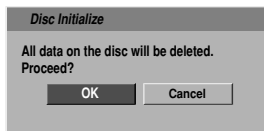

### ⚠ Caution

If you want to change the disc format, everything recorded on the disc will be erased.

## Before Operation (Continued)


### Finalize

Finalizing 'fixes' the recordings in place so that the disc can be played on a regular DVD player or computer equipped with a suitable DVD-ROM drive.

Finalizing a Video mode disc creates a menu screen for navigating the disc. This is accessed by pressing DISC MENU /LIST or TITLE MENU.

### ⚠ Caution

- When DVD-R, DVD-RW, and DVD+R recording, you've finalized a disc recording, you can't edit or record anything else on that disc except DVD+RW.

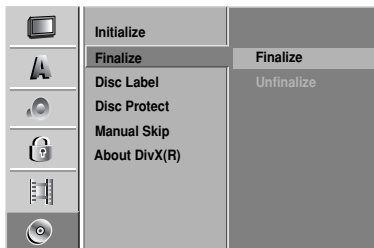


**1** Follow steps 1-3 as shown on page 27 (Initialize).

**2** Use ▲ / ▼ to select the Finalize option.

**3** Press ► to move to the third level. Finalize is highlighted.

**4** Press ENTER. Finalize menu appears.

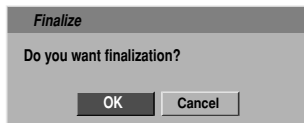

**5** Select OK then press ENTER. The recorder starts finalizing the disc.

### Note

How long finalization takes depends on the type of disc, how much is recorded on the disc, and the number of titles on the disc. A disc recorded can take up to 8 minutes or more to finalize.


### Tip

If you load a DVD-RW that has already been finalized, you can 'unfinalize' it by choosing Unfinalize from the Finalize menu. After doing this, you can edit and re-record onto the disc.

### Disc Label

Use this to enter a name for the disc. This name appears when you display disc information on-screen.

- The disc name can be up to 32 characters long.
- For discs formatted on a different Recorder, you will see only a limited character set.

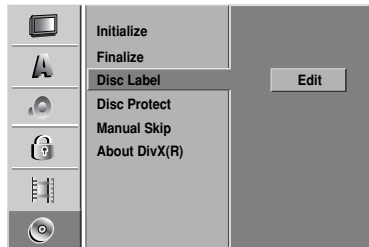


**1** Follow steps 1-3 as shown Initialize on page 27.

**2** Use ▲ / ▼ to select the Disc Label option.

**3** Press ► to move to the third level. Edit icon is highlighted.

**4** Press ENTER. Keyboard menu appears.

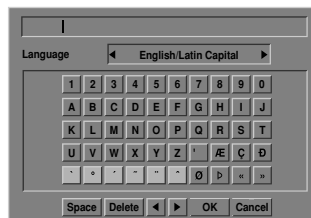

**5** Enter a name for the disc. Use ▲ ▼ ◀ ▶ to select a character then press ENTER to confirm your selection. Refer step 3 as shown on page 21 (Station Rename).

### Remote control buttons for entering a name

► (PLAY): Inserts a space at the cursor position.

⏏ (PAUSE/STEP): Deletes the after character at the cursor position.

■ (STOP), CLEAR: Deletes the previous character at the cursor position.

◀◀ / ▶▶: Moves cursor to left or right.

Numbers (0~9): Enters the character of corresponding location on the selected column.

DISC MENU /LIST, DISPLAY: Switches the keyboard type (English/Latin Capital, English/Latin Lowercase, Symbol)


**6** Choose OK then press ENTER to fix the name and return to the Setup menu.

**7** Press SETUP to exit the menu.

## Before Operation (Continued)

### Disc Protect

When recording in DVD+RW / +R / DVD-RAM disc or VR mode formatted DVD-RW disc, set to ON to prevent accidental recording, editing or deleting of the disc loaded. If you need to unlock the disc to make edits, select OFF.

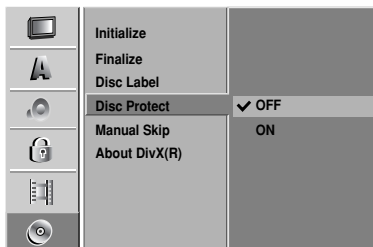

### Manual Skip


**RAM** **Video** **VR** **+RW** **+R** **DVD** **VCD**

Pressing MANUAL SKIP during playback allows you to skip a set time to a scene forward and continue playback: This is useful with, e.g., commercial messages.

The skip time can be set to 15, 30 or 60 seconds (see page 34).

**Video**: The skip time is fixed at 30 seconds.

### About DivX®

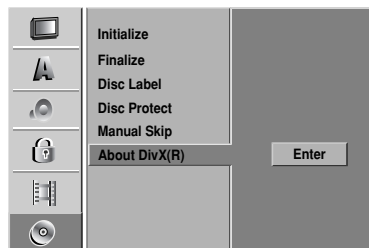

We provide you the DivX® VOD (Video On Demand) registration code that allows you to rent and purchase videos using the DivX® VOD service. For more information, visit [www.divx.com/vod](http://www.divx.com/vod).

- 1** Select "About DivX®" option then press ►.
- 2** Press ENTER while Enter is selected and the registration code will appear.
- 3** Use the registration code to purchase or rent the videos from DivX® VOD service at [www.divx.com/vod](http://www.divx.com/vod). Follow the instructions and download the video onto a disc for playback on this unit.

### Note

All the downloaded videos from DivX® VOD can only be played back on this unit.

# Before Operation (Continued)

## General Explanation of On-Screen Display

### Display

This manual gives basic instructions for operating the Recorder. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol "⊘" appears on the TV screen, indicating that the operation is not permitted by the Recorder or is not available on the disc.

### Displaying Information on-screen

You can display various information about the disc or tape loaded on-screen.

**1** Press **DISPLAY** repeatedly to display/change the information displayed on-screen.

**2** To remove the on-screen display, press **DISPLAY** or **RETURN** (↵) repeatedly until it disappears. See the descriptions on next pages for detailed explanation during playing.

### Notes

- Some discs may not provide all of the features on the on-screen display example shown on next pages.

### Temporary Feedback Field Icons

- Resume play from this point
- ⊘ Action prohibited or not available

### Displaying Information While Watching TV


During viewing the TV, press **DISPLAY** to display/remove the information displayed on-screen.

e.g., when DVD-RW in VR mode is inserted.

Indicates channel number, station name, and audio input signal received by the tuner.

Indicates the record mode, free space, and elapsed time progress bar.

Indicates disc name and format.

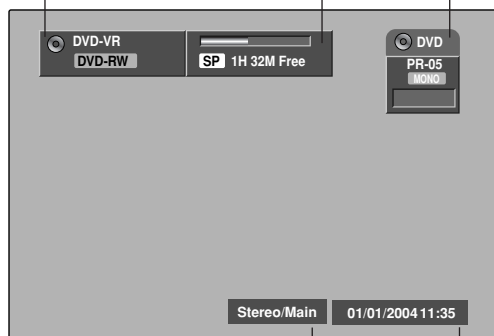

Indicates output audio signal.

Indicates current date and time.


### Changing TV Channels

If no disc or tape is playing, you can change TV channels using the number or PROG/TRK (▲ / ▼) buttons on the remote control.

### Changing TV Audio Channel

Some TV programs are broadcast with a bilingual audio program (BIL). You can change the TV audio using the AUDIO button.

Press **AUDIO** repeatedly to change the TV audio as shown below.

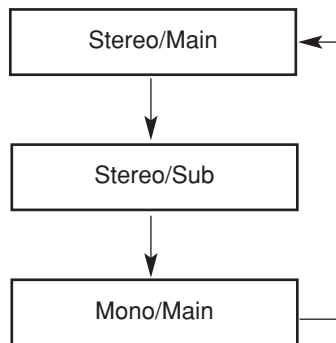

The current audio channel is displayed on-screen.

- For the detailed information, refer to the step 4 on page 44.
- If the sound is poor quality when set to Stereo, you can often improve it by changing to Mono.
- When an external input is selected, the audio channel can be switched only to Stereo.

# Before Operation (Continued)

## Displaying Information on-screen (Continued)

### DVD

Shows the current title/chapter number and total number of titles/chapters.

Shows the elapsed playing time and total time.

Shows the Current mode.

Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Title Number	Shows the current title number and total number of titles, and skips to the desired title number.	◀ / ▶, or Numbers, ENTER
Chapter Number	Shows the current chapter number and total number of chapters, and skips to the desired chapter number.	◀ / ▶, or Numbers, ENTER
Time search	Shows the elapsed playing time. Use numeric buttons to input the time for the scene you want to view: Playback will start from that time.	◀ / ▶, Numbers, ENTER
Audio language and Digital Audio Output mode	Shows the current audio soundtrack language, encoding method, and channel number, and changes the setting.	◀ / ▶
Subtitle language	Shows the current subtitles language, and changes the setting.	◀ / ▶
Angle	Shows the current angle number and total number of angles, and changes the angle number.	◀ / ▶
Sound	Shows the current sound mode, and changes the setting.	◀ / ▶

### VCD

Shows the current track number and total number of tracks.

Shows the elapsed playing time and total time.

Shows the Current mode.

Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Track Number	Shows the current track number and total number of tracks and skip to the desired track number.	◀ / ▶, or Numbers, ENTER
Time	Shows the elapsed playing time (Display only).	-
Audio Channel	Shows the audio channel, and changes the audio channel.	◀ / ▶
Sound	Shows the current sound mode, and changes the setting.	◀ / ▶

### DivX

Shows the elapsed playing time and total time.

Shows the Current mode.

Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Title Number	Shows the current title number and total number of titles, and skips to the desired title number.	◀ / ▶, or Numbers, ENTER
Time search	Shows the elapsed playing time. Use numeric buttons to input the time for the scene you want to view: Playback will start from that time.	◀ / ▶, Numbers, ENTER
Audio Channel	Shows the audio channel, and changes the audio channel.	◀ / ▶
Subtitle	Shows the current subtitles, and changes the setting.	◀ / ▶
Sound	Shows the current sound mode, and changes the setting.	◀ / ▶

# Before Operation (Continued)

## Displaying Information on-screen (Continued)





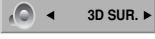
**RAM VR**

Shows the title name, recording date, recording mode, etc.  
ORG: Original  
PList: Playlist

Shows the elapsed playing time and total time.

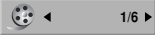

Shows the Current mode.

Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Title Number 	Shows the current title number and total number of titles, and skips to the desired title number.	◀ / ▶, or Numbers, ENTER
Chapter Number 	Shows the current chapter number and total number of chapters, and skips to the desired chapter number.	◀ / ▶, or Numbers, ENTER
Time search 	Shows the elapsed playing time. Use numeric buttons to input the time for the scene you want to view: Playback will start from that time.	◀ / ▶, Numbers, ENTER
Digital Audio Output mode 	Shows the current audio encoding method, and channel number, and changes the setting.	◀ / ▶
Sound 	Shows the current sound mode, and changes the setting.	◀ / ▶






**+RW +R Video**

Shows the title name, recording date, recording mode, etc.

Shows the elapsed playing time and total time.




Shows the Current mode.

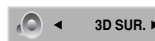

Menu Options	Function (Use 3 / 4 to select desired option)	Selection Method
Title Number 	Shows the current title number and total number of titles, and skips to the desired title number.	◀ / ▶, or Numbers, ENTER
Chapter Number 	Shows the current chapter number and total number of chapters, and skips to the desired chapter number.	◀ / ▶, or Numbers, ENTER
Time search 	Shows the elapsed playing time. Use numeric buttons to input the time for the scene you want to view: Playback will start from that time.	◀ / ▶, Numbers, ENTER
Digital Audio Output mode 	Shows the current audio encoding method, and channel number, and changes the setting.	◀ / ▶
Sound 	Shows the current sound mode, and changes the setting.	◀ / ▶

**VHS**

Shows playing speed, the elapsed playing progress bar and elapsed playing time.

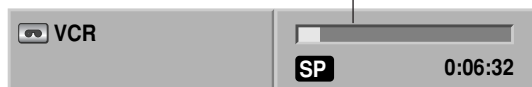

Shows the Current mode

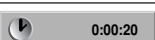Menu Options	Function (Use ▲ / ▼ to select desired option)	Selection Method
Time 	Shows the elapsed playing time (display only). This function allows you to reset the timer counter.	-
Audio Channel 	Shows the audio channel, and changes the audio channel.	◀ / ▶



# Operation with DVD and Video CD

## Playing a DVD or Video CD

### Playback Setup

- Before using the remote control, press the DVD button to select the device to be operated.
- Turn the TV on and select the video input source connected to the Recorder.
- Audio system: Turn the audio system on and select the input source connected to the Recorder.

**1** Press (▲) OPEN/CLOSE to open the disc tray.

**2** Load your chosen disc in the tray, with the playback side down.

**3** Press (▲) OPEN/CLOSE to close the tray. READING appears on the display window, and playback starts automatically. If playback does not start, press ► (PLAY).

In some cases, the disc menu might appear instead.

### Tip

#### If a menu screen is displayed

The menu screen may be displayed first after loading a DVD or Video CD which contains a menu.

### DVD

Use the ◀ ▶ ▲ ▼ buttons to select the title/chapter you want to view, then press ENTER to start playback. Press TITLE MENU or DISC MENU / LIST to return to the menu screen.

### VCD

- Use the number buttons to select the track you want to view.  
Press RETURN (↵) to return to the menu screen.
- Menu setting and the exact operating procedures for using the menu may differ depending on the disc. Follow the instructions on the each menu screen.

### Notes

- If Parental Control is set and the disc is not within the Rating settings (not authorised), the 4-digit code must be entered and/or the disc must be authorised (see “Rating”, on page 25).
- DVDs may have a Region Code.  
Your recorder will not play discs that have a region code different from your recorder. The region code for this recorder is 2 (two) or ALL.
- If a videotape is inserted during DVD playback, the recorder will automatically switch to the VCR mode.
- If the recorder is turned on when a disc is inserted or a disc is already placed in the recorder, it will take about a minute for the recorder to read the disc.

- This recorder can play back an 8-cm DVD-R recorded on a Hitachi DVD video camera/recorder and not finalized. However, additional recording or finalizing on this recorder will not be possible.
- Be sure to finalize any DVD-R recorded on a device other than this recorder, using that device before playing it back on this recorder. If you play back the DVD-R without finalization, you may not be able to record on the original device any more.

## General Features

### Note

Unless stated otherwise, all operations described use the remote control. Some features may also be available on the Setup menu.

### Moving to another TITLE



When a disc has more than one title, you can move to another title as follows:

- Press DISPLAY twice then use ▲ / ▼ to select the title icon. Then, press the appropriate numbered button (0-9) or ◀ / ▶ to select a title number.

### Moving to another CHAPTER/TRACK



When a title on a disc has more than one chapter/track, you can move to another chapter/track as follows:

- Press SKIP (◀◀ or ▶▶) briefly during playback to select the next chapter/track or to return to the beginning of the current chapter/track.
- Press SKIP (◀◀) twice briefly to step back to the previous chapter/track.
- To go directly to any chapter/track during playback, press DISPLAY twice. Then, use ▲ / ▼ to select chapter icon (or for a Video CD, select track icon). Then, enter the chapter/track number using the numbered buttons (0-9) or press ◀ / ▶ .

### Search



1. Press BACKWARD (◀◀) or FORWARD (▶▶) during playback.  
The recorder will now go into SEARCH mode.
2. Press BACKWARD (◀◀) or FORWARD (▶▶) to select the required speed: ◀ (Reverse play), ◀◀, ◀◀◀, ◀◀◀◀, ◀◀◀◀◀, ◀◀◀◀◀◀ (backward) or ▶▶, ▶▶▶, ▶▶▶▶, ▶▶▶▶▶, ▶▶▶▶▶▶ (forward).  
With a Video CD, the Search speed changes: ◀◀, ◀◀◀, ◀◀◀◀ (backward) or ▶▶, ▶▶▶, ▶▶▶▶ (forward).
3. To exit SEARCH mode, press ► (PLAY).

# Operation with DVD and Video CD (Continued)

## General Features (continued)

### Still Picture and Frame-by-Frame Playback

**RAM** **Video** **VR** **+RW** **+R** **DVD** **VCD**

1. Press PAUSE/STEP (||) during playback.  
The recorder will now go into PAUSE mode.
2. You can advance or back up the picture frame-by-frame by pressing ◀ / ▶ repeatedly during PAUSE mode.
3. To exit PAUSE mode, press ▶ (PLAY).

#### Note

The picture frame-by-frame in reverse is not available for Video CD.

#### Tip

You can advance the picture frame-by-frame by pressing PAUSE/STEP (||) repeatedly on the remote control.

### Slow Motion

**RAM** **Video** **VR** **+RW** **+R** **DVD** **VCD**

1. Press PAUSE/STEP (||) during playback.  
The recorder will now go into PAUSE mode.
2. Press BACKWARD (◀◀) or FORWARD (▶▶) during PAUSE mode.  
The Recorder will enter SLOW mode.
3. Use the BACKWARD (◀◀) or FORWARD (▶▶) to select the required speed: ◀◀ 1/16, ◀◀ 1/8, ◀◀ 1/4, or ◀◀ 1/2 (backward), or ▶▶ 1/16, ▶▶ 1/8, ▶▶ 1/4, or ▶▶ 1/2 (forward).  
With a Video CD, the Slow speed changes: ▶▶ 1/8, ▶▶ 1/4 or ▶▶ 1/2 (forward).
4. To exit Slow Motion mode, press ▶ (PLAY).

#### Note

Slow motion playback in reverse is not possible with Video CDs.

### Random **Karaoke DVD** **VCD**

1. Press RANDOM during playback.  
The unit automatically begins Random Playback and "RANDOM" appears on the TV screen.
2. To return to normal playback, press RANDOM until "NORMAL" appears on the TV screen.

#### Tip

By pressing SKIP > during Random playback, the unit selects another title (track) and resumes Random playback.

#### Note

- This function only works with DVD Karaoke discs or video CDs.

### Repeat

**RAM** **Video** **VR** **+RW** **+R** **DVD** **VCD**

#### DVD Discs - Repeat Chapter/Title/All/Off

Press REPEAT to select a desired repeat mode.

- Chapter: repeats the current chapter.
- Title: repeats the current title .
- All: repeats the all titles on the disc.  
(VR mode DVD-RW and RAM disc only)
- OFF: does not play repeatedly.

### Repeat A-B

**RAM** **Video** **VR** **+RW** **+R** **DVD** **VCD**

To repeat a sequence in a title:

1. Press A-B at your chosen starting point.  
Repeat icon and REPEAT A- appears on the TV screen.
2. Press A-B again at your chosen end point.  
Repeat icon and REPEAT A-B appears on the TV screen, and the repeat sequence begins.
3. To cancel the sequence, press A-B repeatedly to select REPEAT OFF.

### Time Search 0:10:30

**RAM** **Video** **VR** **+RW** **+R** **DVD**

The Time Search function allows you to start playing at any chosen time on the disc.

1. Press DISPLAY twice during playback. The on-screen display appears on the TV screen.  
The Time Search box shows the elapsed playing time of the current disc.
2. Within 7 seconds, use ▲ / ▼ to select the Time Search icon in the on-screen display.  
The ":-:--:" appears in the Time Search box.
3. Within 7 seconds, use the number buttons to enter the required start time. Enter hours, minutes, and seconds from left to right in the box.  
You can not enter an invalid time.  
If you enter the wrong numbers, press ◀ / ▶ to move the under bar ( ) to the wrong number. Then enter the correct numbers.
4. Within 7 seconds, press ENTER to confirm the start time.  
Playback starts from the selected time on the disc.

### Manual Skip

**RAM** **Video** **VR** **+RW** **+R** **DVD** **VCD**

Press MANUAL SKIP during playback.

Use the following procedure to set the manual skip time:

1. Press SETUP.
2. Use ▲ / ▼ to choose "Disc", and then press ▶.
3. Use ▲ / ▼ to choose "Manual Skip", and then press ENTER.
4. Use ▲ / ▼ to select the time (15/30/60 seconds) to be skipped, and then press ENTER.

# Operation with DVD and Video CD (Continued)

## General Features (continued)

### Zoom

RAM Video VR +RW +R DVD


The Zoom function allows you to enlarge the video image and to move through the enlarged image.

1. Press ZOOM during playback or still playback to activate the Zoom function.  
Each press of the ZOOM button changes the TV screen in the sequence shown below.  
x1 size → x2 size → x4 size → x1 size (normal size)
2. Use the ◀▶ ▲ ▼ buttons to move through the zoomed picture.
3. To resume normal playback, press CLEAR or press ZOOM repeatedly until the normal picture appears.

### Note

The zoom function may not work for some DVDs.

### Marker Search

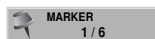

RAM Video VR +RW +R DVD VCD


You can start playback from a memorised point. Up to six points can be memorised.

To enter a mark, follow these steps.

1. During disc playback, press MARKER when playback reaches the spot that you want to memorise.  
The Marker icon will appear on the TV screen briefly.
2. Repeat step 1 to enter up to six Marker points on a disc.

### To Recall a Marked Scene

1. Press SEARCH.  
The Marker Search menu will appear on the TV screen.
2. Use the ◀▶ ▲ ▼ buttons to select a Marked scene that you want to recall.
3. Press ENTER.  
Playback will start from the Marked scene.
4. To remove the Marker Search menu, press RETURN (↵).

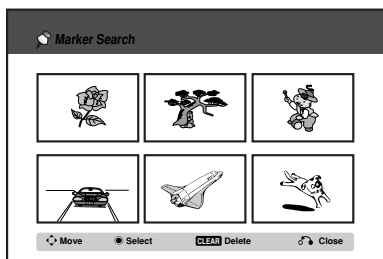

### To clear a Marked Scene

1. Press SEARCH during playback or in stop mode.  
The Marker Search menu will appear on the TV screen.
2. Use ◀▶ ▲ ▼ to select the Marked scene that you want to erase.

3. Press CLEAR.

"Delete selected marker? Continue?" message appears.

4. Use ◀ / ▶ to select "Yes" then press ENTER.
5. Repeat steps 2-4 to erase additional Marked scene.
6. To remove the Marker Search menu, press RETURN (↵).

### Note

Removing the disc will erase the marker.

### Checking the Contents of DVD Video Discs: Menus

DVDs may contain menus that allow you to access special features. To open the disc menu, press DISC MENU / LIST. Then, press the appropriate number button to select an option. Or, use the ◀▶ ▲ ▼ buttons to highlight your selection, then press ENTER.

### Title Menu DVD

Press TITLE MENU.

If the current title has a menu, the menu will appear on the TV screen. Otherwise, the disc menu may appear.

- The menu may contain camera angles, spoken language and subtitle options, and chapters for the title.

### Disc Menu DVD

Press DISC MENU / LIST.

The disc menu is displayed.

- To remove the disc menu, press DISC MENU / LIST again.

### Camera Angle DVD



If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback.


- Press ANGLE then press ◀ / ▶ repeatedly during playback to select a desired angle.

The number of the current angle appears on the TV screen.

### Tip

The ANGLE indicator will blink on the TV screen at scenes recorded at different angles to indicate that angle switching is possible.

### Changing the Audio Soundtrack

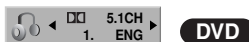

Press AUDIO then press ◀ / ▶ repeatedly during playback to hear a different audio language or audio soundtrack if available.

### Note

Some discs feature both Dolby Digital and DTS soundtracks. There is no analogue audio output when DTS is selected. To listen to the DTS soundtrack, connect this recorder to a DTS decoder via one of the digital outputs. See page 17 for connection details.

## Operation with DVD and Video CD (Continued)

### Changing the Audio Channel

RAM Video VR +RW +R VCD DivX

With a Video CD, press AUDIO then press ◀ / ▶ repeatedly during playback to hear a different audio channel (STEREO, LEFT or RIGHT).

With DVD-RW discs recorded in VR mode that have both a main and a Bilingual audio channel, you can switch between Main (L), Bilingual (R), or a mix of both (Main + Bilingual) by pressing AUDIO.

### 3D Surround

RAM Video VR +RW +R DVD VCD DivX

This unit can produce a 3D Surround effect, which simulates multi-channel audio playback from two conventional stereo speakers, instead of the five or more speakers normally required to listen to multi-channel audio from a home theatre system.

1. Press DISPLAY twice then use ▲ / ▼ to select the sound icon. Then, use ◀ / ▶ to select "3D SUR."
2. To turn off the 3D Surround effect, select "NORMAL".

### Subtitles

Press SUBTITLE then press ◀ / ▶ repeatedly during playback to see the different subtitle languages.

### Finding Locations on a Disc

You can directly access any point on a video CD using this function. Use this function only while a video CD is playing. Playback jumps to the point specified.

1. Press SEARCH during playback.  
The progress bar appears on the TV screen.



2. Use ◀ / ▶ to find a start position for playback.
3. Press ENTER to confirm the selected position.  
Playback starts from the selected position.

### Note

This function works only when no marker is memorised.

### Last Condition Memory

This recorder memorises the user settings for the last disc that you have viewed. Settings remain in memory even if you remove the disc from the recorder or switch off the recorder. If you load a disc that had its settings memorised, the latest stop position is automatically recalled.

### Notes


- Settings are stored in memory for use any time.
- This recorder does not memorise settings of a disc if you switch off the recorder before commencing to play it.

# Playing a DivX® Movie Disc

## Playing a DivX® Movie Disc

Using this unit you can play DivX® disc. Before playing DivX® files, read “About DivX® movie files” on this page.

- 1 Insert a disc and close the tray. The Movie menu appears on the TV screen.

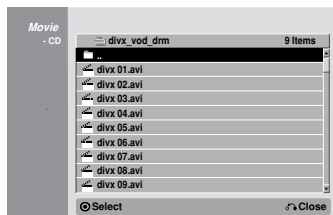

- 2 Press ▲ / ▼ to select a folder, and press ENTER. A list of files in the folder appears. If you are in a file list and want to return to the Folder list, use the ▲ / ▼ buttons on the remote to highlight [Folder] and press ENTER.

- 3 If you want to view a particular file, press ▲ / ▼ to highlight a file and press PLAY. You can use variable playback functions. Refer to pages 33-36.

- 4 Press STOP to stop the playback. The Movie menu appears.



- On a CD with MP3/WMA, JPEG and MOVIE file, you can switch Music, Photo and Movie menu. Press TITLE MENU.

### Notice for displaying the DivX® subtitle

Please refer to following notice when the DivX® subtitle does not display properly.

1. Find a suitable language for the DivX® subtitle on the figure below.

Disc Subtitle Language	Available DivX® Subtitle
Original, English	English
French, German, Italian, Spanish, Portuguese	French, German, Italian, Spanish, Portuguese, Dutch, Swedish
Russian	Russian
Other 6976	Greek
Other 8076	Polish
Other 7285	Hungarian
Other 6783	Czech

2. Press SETUP. The Setup menu appears. Press SETUP [LANGUAGE] [Disc Subtitle] then select the language you have found. Refer to “Disc Menu/Audio/Subtitle” on page 23.



If the subtitle still does not display properly after the steps 1-2 proceeded, press and hold SUBTITLE about 3 seconds then another language code of the subtitle is displayed properly.

### Movie menu options

1. Press ▲ / ▼ to select a folder/file on the Movie menu then press ENTER. Movie menu options appear.
2. Press ▲ / ▼ to select an option, and press ENTER.
  - [Play] Start playback the selected title.
  - [Open] Opens the folder and a list of files in the folder appears
  - [DUBBING] Copies the file(s) to a VHS tape. (page 45)

### About DivX® movie files

DivX® disc compatibility with this recorder is limited as follows:

- Available resolution size of the DivX® file is under 720x576 (W x H) pixel.
- The file name of the DivX® subtitle is limited to characters.
- The total number of files and folders on the disc should be less than 1999.
- **If the number of the screen frame is over 29.97 frames per second, this unit may not operate normally.**
- **If the video and audio structure of recorded file is not interleaved, returns to the menu screen.**
- **If the file is recorded with GMC, the unit supports only 1-point of the record level.**

\* GMC?

GMC is the acronym for Global Motion Compensation. It is an encoding tool specified in MPEG4 standard. Some MPEG4 encoders, like DivX® or Xvid, have this option.

There are different levels of GMC encoding, usually called 1-point, 2-point, or 3-point GMC.

### Playable DivX® file

“.avi”, “.divx”

### Playable DivX® subtitle

“.smi”, “.srt”, “.sub (Micro DVD format only)”, “.txt (Micro DVD format only)”

- DivX® subtitle except those listed above is not displayed on the TV screen.

### Playable Codec format

“DIV3”, “MP43”, “DIVX”, “XVID”, “DX50”

### Playable Audio format

“AC3”, “PCM”, “MP2”, “MP3”, “WMA”

- Sampling frequency: within 8 - 48 kHz (MP3), within 32 - 48kHz (WMA)
- Bit rate: within 8 - 320kbps (MP3), 32 - 192kbps (WMA)

# Audio CD and MP3/WMA Operation

## Playing an Audio CD or MP3/WMA


Disc **CD** **MP3** **WMA**

The Recorder can play audio CDs. Also, the Recorder can play MP3/WMA formatted recordings on CD-ROM, CD-R, CD-RW, DVD±R, DVD±RW or DVD-RAM disc.


Before playing MP3/WMA recordings, read the notes on MP3/WMA Recordings on page 39.

- 1 Insert a disc and close the tray.  
To display the Music menu for MP3/WMA file recorded on the disc.

AUDIO CD or MP3/WMA CD menu appears on the TV screen.

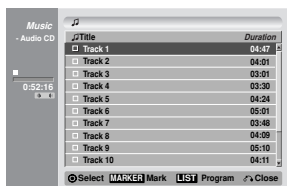

AUDIO CD Menu

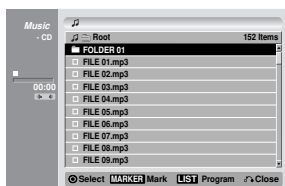

MP3/WMA CD Menu


- 2 Use ▲ / ▼ to select a track then press ► (PLAY).

Playback starts.

During playback, the current track's elapsed playing time will appear on the display window and menu.

Playback will stop at the end of the disc.

### Tips

 - You can view TV channel or video input source by pressing RETURN. If you want to return to the Music menu, press DISC MENU / LIST.
- You can switch between the Track List and Program List menus by pressing DISC MENU / LIST.
- On CDs with mixed content (audio tracks, MP3/WMA files and JPEG files), you can select among the Music-Audio CD menu, Music-MP3/WMA CD menu, and Photo CD menu by pressing TITLE MENU repeatedly in Stop mode.
- If you select a MP3 and press DISPLAY, the file information is displayed. Press DISPLAY again to remove the file information.  
If you select a folder and press DISPLAY, the number of subfolders and number of MP3/WMA files in the folder are displayed.
- If you are in a file list and want to return to the Folder list, use the ▲/▼ to highlight  and press ENTER to return to the previous menu screen.
- Use the MARKER button to select multiple files (folders). Press MARKER again to cancel the marked file or folder.

- 3 To stop playback at any other time, press STOP (■).

### Music menu options

1. To display menu options, select a track (or folder) on the menu then press ENTER.
2. Use ▲ / ▼ to select an option then press ENTER to confirm your selection.

### Music-Audio CD menu options **CD**

**Play**

**Play:** Starts playback the selected track.

**Program add**

**Program add:** Adds the track(s) to Program List. (page 40)

### Music-CD menu options **MP3** **WMA**

- When you select a track.

**Play**

**Play:** Starts playback the selected track.

**Program add**

**Program add:** Adds the track(s) to Program List. (page 40)

- When you select a folder.

**Open**

**Open:** Displays sub-folders and MP3/WMA files only in the folder.

**Program add**

**Program add:** Adds all track(s) in the folder to Program List. (page 40)



## Audio CD and MP3/WMA Operation (Continued)

### Pause **CD** **MP3** **WMA**

1. Press PAUSE/STEP (||) during playback.
2. To return to playback, press ► (PLAY) or press PAUSE/STEP (||) again.

### Moving to Another Track **CD** **MP3** **WMA**

- Press SKIP ◀◀ or ▶▶ briefly during playback to go to the next track or to return to the beginning of the current track.
- Press SKIP ◀◀ twice briefly to step back to the previous track.
- On an Audio CD, to go directly to any track, enter the track number using the numbered buttons (0-9) during playback on the Track List.

### Repeat Track/All(Folder)/Off **CD** **MP3** **WMA**

Press REPEAT to select a desired repeat mode.

- TRACK: repeats the current track.
- ALL (CD): repeats the all tracks on the disc.
- FOLDER (MP3/WMA): repeats the all tracks in the current folder.
- OFF (No display): does not play repeatedly.

### Random **CD** **MP3** **WMA**

1. Press RANDOM during playback or in stop mode. The unit automatically begins Random Playback and "RANDOM" appears on the menu screen.
2. To return to normal playback, press RANDOM repeatedly until "RANDOM" disappears from the menu screen.



By pressing SKIP ▶▶ during Random playback, the unit selects another track and resumes Random playback.

### Changing the Audio Channel **CD** **MP3** **WMA**

Press AUDIO repeatedly to hear a different audio channel (stereo, left or right).

### Search **CD**

1. Press BACKWARD (◀◀) or FORWARD (▶▶) during playback. The recorder will now go into SEARCH mode.
2. Press BACKWARD (◀◀) or FORWARD (▶▶) to select the required speed: ◀◀, ◀◀◀, ◀◀◀◀ (backward) or ▶▶, ▶▶▶, ▶▶▶▶ (forward). Search speed and direction are indicated on the menu screen.
3. To exit SEARCH mode, press ► (PLAY).

### Repeat A-B **CD**

To repeat a sequence in a track:

1. Press A-B at your chosen start point. Repeat icon and "A-" appears on the menu screen.
2. Press A-B again at your chosen end point. The Repeat icon and "A - B" appears on the menu screen, and the repeat sequence begins.
3. To exit the sequence and return to normal play, press A-B again. The Repeat icon disappears from the menu screen.

### Notes on MP3/WMA Recordings

#### About MP3

- An MP3 file is audio data compressed by using the MPEG1 audio layer-3 file-coding scheme. We call files that have the '.mp3' file extension 'MP3 files'.
- The recorder can not read an MP3 file that has a file extension other than '.mp3'.

#### About WMA(Window Media Audio)

- An WMA file is a Microsoft audio compression technology.
- WMA(Windows Media Audio) offers double the audio.compression of the MP3 format.

### MP3/WMA Disc compatibility with this recorder is limited as follows:

1. CD-R physical format should be 'ISO 9660' and 'JOLIET'.
2. If you record MP3/WMA files using the software which cannot create a FILE SYSTEM, for example 'Direct-CD' etc., it is impossible to playback MP3/WMA files. We recommend that you use 'Easy-CD Creator', which creates an ISO9660 or JOLIET file system.
3. Total number of files and folders on the disc should be less than 999.

This Recorder requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) that require certain pre-existing conditions (see above) to insure compatible playback.

**Customers should also note that permission is required in order to download MP3/WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.**



# Program Playback with Audio CD and MP3/WMA

The Program function enables you to store your favorite tracks from any disc in the recorder memory. Program can contain 99 tracks (Audio CD) or 256 tracks (MP3/WMA).

- 1 Insert an Audio CD or MP3/WMA disc.**  
Audio CD or MP3/WMA CD menu will appear.
- 2 Use ▲ / ▼ to select a track or folder on the List then press ENTER.**  
The options appears on the left side of the menu.
- 3 Use ▲ / ▼ to highlight the “Program add” icon then press ENTER.**  
The selected track is added to the Program List.
- 4 Repeat steps 2-3 to place additional tracks on the Program list.**

## Tip

You can add multi tracks on the List to the Program List.

1. Select a track then press MARKER.
2. Repeat step 1 to mark additional tracks.
3. Select any track then press ENTER.  
The options appears on the left side of the menu.
4. Use ▲ / ▼ to highlight the “Program add” icon then press ENTER.  
The all marked tracks are added to the Program List.

## Notes

- Use the CLEAR button to select all tracks, or cancel all marked tracks.
- If you select folder for Program Playback, all tracks in the folder are added to the program list.

## **5 AUDIO CD : Use ► to move to the Program list.**

## **6 Use ▲ / ▼ to select the track you want to start playing.**

## **7 Press PLAY (►) to start.**

Playback begins in the order in which you programmed the tracks and “PRG” indicator appears on the display window. Playback stops after playing the last programmed track on the program list.

- 8 To resume normal playback from programmed playback, select a track on the List then press PLAY (►).**  
“PRG” indicator disappears from the display window.

## Program List menu options

**CD** **MP3** **WMA**

1. To display menu options, select a track on the Program List menu then press ENTER.  
The menu options appear on the left side of the menu.
2. Use ▲ / ▼ to select an option then press ENTER to confirm your selection.

**Play**

**Move**

**Delete**

**Play:** Playback begins in the order in which you programmed the tracks from the selected track.

**Move:** Moves the track(s) to change the program order.

**Delete:** Deletes the track(s) from the Program List menu.

## **Repeat Programmed Tracks**

Press PLAY MODE repeatedly during playback to select a desired repeat mode.

- TRACK: repeats the current track.
- ALL: repeats the all tracks on the Program list.
- Random: Plays tracks in random order.
- OFF (No display): does not play repeatedly.

## **Erasing a Track from the Program List**

1. Select the track you wish to erase from the Program List.

## Tip

Use the MARKER button to select multiple tracks.

2. Press ENTER.  
The menu options appear on the left side of the menu.
3. Select “Delete” option then press ENTER.  
The selected track is deleted from the Program List.

## **Changing Track Order in the Program List**

1. Select the track you wish to move.

## Tip

Use the MARKER button to select multiple tracks.


2. Press ENTER.  
The menu options appear on the left side of the menu.
3. Select “Move” option then press ENTER.  
A yellow bar appears in the Program List.
4. Use ▲ / ◀ to move the yellow bar to the desired location, then press ENTER.  
The selected track is moved.

# JPEG File Operation

## Viewing a JPEG File **JPEG**

The recorder can play discs with JPEG files. Before playing JPEG recordings, read "Notes on JPEG Recordings" on page 42.

- 1 Insert a disc and close the tray.**  
The Photo menu appears on the TV screen.

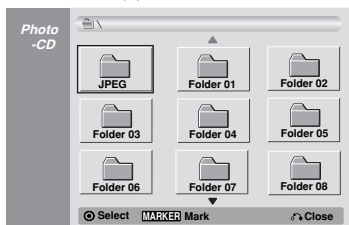


- 2 Use ▲ ▼ ◀ ▶ to select a folder, then press ENTER.**

Open icon is highlighted on the left side of the menu.

- 3 Press ENTER.**  
A list of files in the folder appears.




### Note

If the  icon displays in the Photo menu, it means you cannot see those JPEG files.


- 4 Use ▲ ▼ ◀ ▶ to select a file, then press ENTER.**

The options appear on the left side of the menu.

### Tip

- If you are in a file list and want to return to the Folder list, use the ▲ / ▼ buttons on the remote to highlight the  icon and press ENTER.
- You can view TV channel or video input source by pressing RETURN. If you want to return to the Photo menu, press DISC MENU / LIST.
- On CDs with mixed content (audio tracks, MP3/WMA files and JPEG files), you can select among the AUDIO CD menu, MP3/WMA CD menu, and Photo CD menu by pressing TITLE MENU repeatedly in Stop mode.

- 5 Use ▲ / ▼ to select "Full Screen" option then press ENTER.**

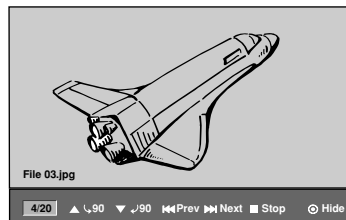

- 6 To stop viewing at any time, press STOP.**  
The Photo menu reappears.

## Photo menu options

1. To display menu options, select a file (or folder) on the menu then press ENTER.
2. Use ▲ / ▼ to select an option then press ENTER to confirm your selection.

## Photo-CD menu options **JPEG**

- When you select a photo file.

### Full Screen

Full Screen: Shows the selected file as full screen.

### Slide Show

Slide Show: Displays Slide Show menu. (page 42)

- When you select a folder.

### Open

Open: Displays sub-folders and JPEG files in the folder.

## JPEG File Operation (Continued)

### Skip Images

While viewing a picture, press SKIP (◀◀ or ▶▶) once to advance to the next file or return to the previous file.


### Rotate Images

Use ▲ / ▼ while viewing a picture to flip the picture clockwise or counterclockwise.

### View Slide Shows

1. Select "Slide Show" option on the Photo menu.
2. Press ENTER.

The Slide Show menu appears.

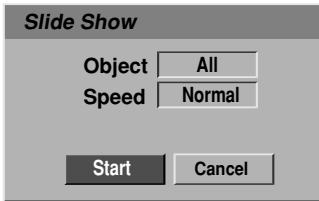

3. Use ▲ ▼ ◀ ▶ to set the options.  
Object: Selected file or All files.  
Speed: Sets the speed for Slide Show (Slow, Normal, or Fast)
4. Select the Start option then press ENTER to start the Slide Show.
5. Press STOP to stop the Slide Show and returns to the Photo menu.

### Note

Use the MARKER button to select multiple files.

### Notes on JPEG Recordings

- Depending on the size and number of JPEG files, it may take several minutes for the recorder to read the disc's content. If you don't see an on-screen display after several minutes, some of the files are too big — reduce the resolution of the JPEG files to less than 4 mega pixels and burn another disc.
- The total number of files and folders are free but the total number of files on the folder should be less than 999.
- Some discs may be incompatible due to different recording formats or the condition of the discs.
- When you are using software such as "Easy CD Creator" to burn JPEG files on a CD-R, ensure that all selected files have the '.jpg' extension before copying them into the CD layout.
- If the files have '.jpe' extensions, please rename them as '.jpg' files.
- File names without the '.jpg' extension cannot be read by this recorder, even though the files are shown as JPEG image files in Windows Explorer®.


# VCR Mode Tape Playback

## Preparation

- Before using the remote control, press the VCR button to select the device to be operated.
- Turn the TV on and select the video input source connected to the Recorder.
- Audio system: Turn the audio system on and select the input source connected to the Recorder.

## Normal Playback **VHS**

### 1 Insert a prerecorded video cassette.

The  indicator will light and the Recorder will power-up automatically.

- Make sure that the TIMER indicator in the display window is not lighted. If it is, press **POWER** once.
- If a tape without a safety tab is inserted, the Recorder will start playback automatically.

### 2 Press **PLAY** (▶) once.

PLAY icon appears on the TV screen.

- It is not necessary to select the tape speed for playback. It will be automatically selected by the Recorder.

### 3 Press **STOP** (■) to stop playback.

STOP icon appears on the TV screen. If the tape reaches the end before STOP (■) is pressed, the Recorder will automatically stop, rewind and eject the tape, and turn itself off.

## **N**otes

- If you wish to watch the DVD playback during the VCR playback, press DVD (or DVD/VCR) to change to DVD mode and perform the DVD playback. If you press VCR (or DVD/VCR) to watch the VCR playback again, playback resumes from the point where playback was interrupted (PAL tape).
- You cannot playback for the both DVD and VCR at the same time.

## Tracking Control **VHS**

### Auto Tracking

The automatic tracking function adjusts the picture to remove snow or streaks.

The AUTO TRACKING function works in the following cases:

- A tape is played back for the first time.
- Tape speed (SP, LP) changes.
- Streaks or snow appear because of scratches on the tape.

### Manual Tracking

If noise appears on the screen during playback, press PROG/TRK (▲/▼) on the remote control until the noise on the screen is reduced.

- In case of vertical jitter, adjust these controls very carefully.
- Tracking is automatically reset to normal when the tape is ejected or the mains lead is unplugged for more than 3 seconds.

## Special Effect Playback **VHS**

### **N** Special effects playback notes

- Horizontal lines (noise bars) will appear on the TV screen. This is normal.
- The audio is automatically muted during special effect modes, so there is no sound during search.
- During the high-speed picture search modes, a short time is needed to stabilise tape speed when re-entering the PLAY mode. Slight interference may be observed during this time.

### Search

This function lets you visually search forward and backward for a desired scene on your tape.

1. Press BACKWARD (◀◀) or FORWARD (▶▶) during playback.

The Recorder will be activated in the SEARCH mode.

- If the Recorder is left in the SEARCH mode for more than 3 minutes, the Recorder will automatically enter the PLAY mode, to protect the tape and video heads.

2. To return to playback, press PLAY (▶).

### Still Picture and Frame-by-Frame Playback

1. Press PAUSE/STEP (||) during playback.

A still picture appears on the TV screen.

- If a still picture vibrates vertically, stabilise it by using PROG/TRK (▲/▼) on the remote control.
- If the Recorder is left in the STILL mode for more than 5 minutes, the Recorder will automatically enter the STOP mode to protect the tape and video heads.

2. Press PAUSE/STEP (||) repeatedly to advance the video picture one frame at a time while viewing a still picture.

3. To return to playback, press PLAY (▶).

### Slow Motion

1. While in still mode, press FORWARD (▶▶).

The tape will be played back at a speed 1/19 times slower than the normal speed.

- During slow playback, use PROG/TRK (▲/▼) on the Remote Control to minimise noise bands.
- If slow motion mode continues for more than 3 minutes, the Recorder will automatically change to normal play mode.

2. To return to playback, press PLAY (▶).

### Counter Memory Function

This is useful if there is a section of tape you want to view immediately after recording or if you want to return to the same point several times.

1. Begin recording or playing a tape.
2. Press DISPLAY repeatedly to display the real-time counter on the TV screen.
3. At the point you want to locate later, reset the real-time counter to 0:00:00 by pressing CLEAR.
- Continue to play or record.
4. Press STOP when recording or playback finishes.
5. Press RETURN (↶).

The tape automatically stops when the tape counter returns to about "0:00:00".

# Basic Recording

## Basic Recording from a TV

Follow the instructions below to record a TV program. Recording starts immediately and continues until the disc or tape is full or you stop the recording.

### 1 Switch on the Recorder, select the device (VCR or DVD) for Recording and load a recordable disc or tape.

Also make sure that the TV input is set to this recorder.

If you load a completely blank DVD-RW disc, Disc Initialize menu will appear, to select a desired Recording Mode to initialize the disc (See page 27).

### 2 Set a recording mode as necessary by pressing REC MODE repeatedly.

DVD: XP(High quality), SP (Standard quality), LP (Low quality), EP (Extended quality)

VCR: SP (Standard Play), LP (Long Play)

### 3 Use PROG/TRK (▲/▼) on the remote control to select the TV channel to record.

### 4 Use AUDIO to select the audio channel to record.

The table below shows what will be recorded on the different settings for different types of broadcast.

The last column (Monitor Audio) shows what you'll hear as it is recording.

TV Broadcast Audio	Selected Audio	Broadcast Audio				Monitor Audio
		VR mode or Tape		Video, +R or +RW mode		
		L Ch	R Ch	L Ch	R Ch	
STEREO	STEREO/MAIN	STEREO		STEREO		STEREO
	STEREO/SUB	STEREO		STEREO		STEREO
	MONO/MAIN	MONO		MONO		MONO
MAIN+SUB	STEREO/MAIN	MAIN	SUB	MAIN	MAIN	MAIN
	STEREO/SUB	MAIN	SUB	SUB	SUB	SUB
	MONO/MAIN	MAIN	SUB	MAIN	MAIN	MAIN
MONO	STEREO/MAIN	MONO		MONO		MONO
	STEREO/SUB	MONO		MONO		MONO
	MONO/MAIN	MONO		MONO		MONO

### 5 Press REC (●) once.

Recording will start. (The REC indicator lights in the display window.)

- Recording continues until you press STOP (■) or the disc (or tape) is full.
- To record for a fixed length of time, see Instant Timer Recording on right.

### 6 Press STOP (■) to stop recording.

## Notes

- Neither the record mode nor channel can be changed during recording or recording pause.
- No VCR playback can be viewed during DVD recording.

- If the recorder is turned on when a disc is inserted or a disc is already placed in the recorder, it will take about a minute for the recorder to read the disc.
- DVD playback can be viewed during VCR recording.
- If you wish to view DVD playback while recording on VCR, insert a DVD into this recorder: The recorder output will automatically switch to DVD, and playback will start.
- When programs are recorded, title names will automatically be entered (Title 1, Title 2, Title 3 ... in the order that recordings took place).
- If any program is deleted from a disc on which multiple programs were recorded, a program recorded later could have the same title.
- Title names can be changed anytime (see page 60).

## Instant Timer Recording

Instant Timer Recording allows you to make a recording easily of a preset length without using the program timer.


### 1 Follow steps 1-5 as shown left (Basic Recording from a TV).

### 2 Press REC (●) repeatedly to select the recording time length.

Recording starts after the first press.

DVD: Each subsequent press increases the recording time by 10 minutes within free space.

VCR: Each subsequent press increases the recording time by 30 minutes. Please confirm the VHS tape has enough remaining time to be recorded before recording.

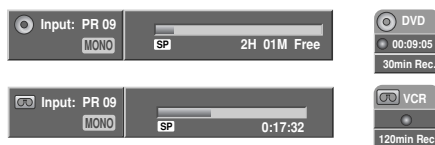

Instant Timer Record Menu

### Checking the Recording Time

Press REC (●) or DISPLAY once to check the recording time. The recalled setting will automatically return to the TV screen for a moment. Also, remaining time of recording is shown in the display window.

### To Extend the Recording Time

The recording time can be extended anytime by pressing REC (●).

Each subsequent press increases the recording time by 10 minutes (DVD) within free space or 30 minutes (VCR).

## Basic Recording (Continued)

### To Pause the Recording

1. Press PAUSE/STEP (II) to pause the disc or tape during recording.
2. When you want to continue recording, press PAUSE/STEP (II) or REC (●).

### Notes

- If you press PAUSE/STEP (II) during the Instant Timer Recording, it will be cancelled.
- The Recorder will automatically power off when the Instant Timer Recording ends.
- If the unit is in VCR recording when the DVD Instant Timer Recording ends, the unit will not automatically power off.

### To record one TV program while watching another

1. Press TV/DVD to select the TV mode during recording. The TV indicator appears.
2. Using the TV remote controller, select the channel to be viewed.

### Tips

When recording onto a video tape, you can change a recording channel in the recording pause mode. (You cannot change a recording channel in the DVD recording pause mode.)

### Notes

- If you wish to watch the DVD playback during the VCR recording, press DVD (or DVD/VCR) to change to DVD mode and perform the DVD playback. You cannot playback the VCR during the DVD recording.
- You cannot use the VCR recording during the DVD recording nor the DVD recording during the VCR recording.

## Copying from DVD to VCR

You can copy the contents of a DVD to a VHS tape using the DUBBING button.

### Note

If the DVD (or Discs) you are attempting to copy is copy protected, you will not be able to copy the disc. It is not permitted to copy Macrovision encoded DVDs (or Discs).

### 1 Insert a VHS Tape

Insert a blank VHS video tape into the VCR deck.

### 2 Insert a Disc

Insert the disc you wish to copy in the DVD deck and close the disc tray.


**3** Select DVD mode by pressing DVD on the remote control or pressing DVD/VCR on the front panel.

**4** Find the place on the DVD (or Disc) from which you want to start recording using the PLAY and PAUSE functions.

For best results, pause playback at the point from which you want to record.

**5** Press the DUBBING button on the remote control or on the front panel.

The Dubbing menu appears.

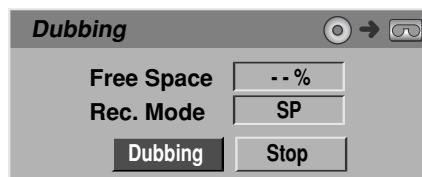

**6** Use ▲ / ▼ / ◀ / ▶ to select the desired Record Mode:

- SP (Standard Play)
- LP (Long Play, 2 times SP).

**7** Select Dubbing then press ENTER or DUBBING to start copying.

### Notes

- If the record mode is changed during dubbing, that same record mode will apply to the next ordinary recording.
- During dubbing, a channel cannot be selected on this recorder to be viewed on TV.

### Tip

If you press PAUSE/STEP during Copy mode, both the DVD and VCR decks go into Pause mode and the "DUB" indicator blinks on the front panel display. While in Pause mode, you can adjust the DVD playback position using PLAY, BACKWARD, FORWARD, PAUSE/STEP, etc. The VCR deck will remain in Pause mode. To resume copying, press the DUBBING button twice.

**8** Stop the Copy Process

To stop copying at any other time, press STOP (■). You must stop the Copy process manually when the DVD movie ends, or the unit may replay and record over and over again.



## Basic Recording (Continued)

### Copying from VCR to DVD

You can copy the contents of a VHS tape to a recordable DVD disc using the DUBBING button. This allows you to archive your old VHS tapes to DVD.

#### Note

If the VHS video tape you are attempting to copy is copy protected, you will not be able to copy the tape. It is not permitted to copy Macrovision encoded tapes.

#### 1 Insert a recordable DVD disc.

Insert a blank recordable DVD disc in the DVD deck and close the disc tray.

#### 2 Insert a VHS Tape

Insert the VHS video tape you wish to copy into the VCR deck.

#### Note

When using a DVD±RW disc, you must initialize before copying; see page 27.


#### 3 Select VCR mode by pressing VCR on the remote control or pressing DVD/VCR on the front panel.

#### 4 Find the place on the VHS tape from which you want to start recording using the PLAY, BACKWARD, FORWARD and PAUSE functions.

For best results, pause playback at the point from which you want to record.

#### 5 Press the DUBBING button on the remote control or on the front panel.

The Dubbing menu appears.

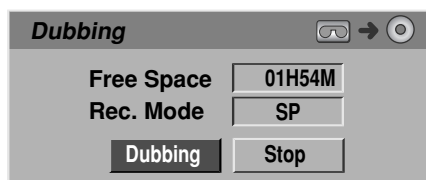

#### 6 Use ▲ / ▼ / ◀ / ▶ to select the desired Record Mode:

- EP (Extended Quality)
- LP (Low Quality)
- SP (Standard Quality)
- XP (High Quality)

#### 7 Select Dubbing then press ENTER or DUBBING to start copying.

#### Tip

If you press PAUSE/STEP during Copy mode, both the DVD and VCR decks go into Pause mode and the "DUB" indicator blinks on the front panel display. While in Pause mode, you can adjust the VCR playback position using PLAY, BACKWARD, FORWARD, PAUSE/STEP, etc. The DVD deck will remain in Pause mode. To resume copying, press the DUBBING button twice.

#### 8 Stop the Copy Process

To stop copying at any other time, press STOP (■). Copying will stop automatically when the VHS tape ends.

#### Note


- If the record mode is changed during dubbing, that same record mode will apply to the next ordinary recording.
- Even if multiple programs are dubbed, they will be recorded on DVD as one program, and no chapter will be attached to the program interval points.



# Timer Recording

This Recorder can be programmed to record up to 8 programs within a period of 1 month.

- 1 Press TIMER REC.**  
The Timer Record menu will appear.

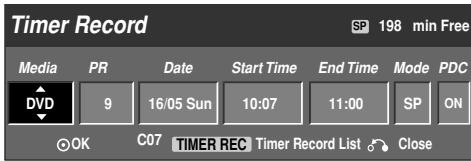

- **Media** – Choose a media (DVD or VCR).
- **PR** – Choose a memorised program number, or one of the external inputs from which to record.
- **Date** – Choose a date up to 1 month in advance, or select a daily or weekly program.
- **Start Time** – Set the recording start time.
- **End Time** – Set the recording end time.
- **Mode** – Choose a record mode.  
DVD: SP, LP, EP, XP or AT (Auto)\*  
VCR: SP, LP, AT (Auto)\*  
\* AT (AUTO): The record mode can be set when PDC is off.
- **PDC** – The PDC system automatically adjusts the recording time so that even if a program is not running to schedule, you won't miss it. For PDC to work properly, you must input the correct announced time and date of the program you want to record.  
Note that PDC may not work with every station.

## Notes

- Stations that use PDC typically include PDC information in the teletext TV guide pages. Please refer to these pages when setting a timer recording.
- This recorder takes approximately 20 seconds to switch on and start recording. This means that when using PDC, there may be instances where the beginning of the program is not recorded.

- 2 Enter the necessary information for your timer recording(s).**

- ◀ / ▶ (left/right) – move the cursor left/right
- ▲ / ▼ (up/down) – change the setting at the current cursor position
- Press RETURN (↵) to exit the Timer Record menu.
- Press TIMER REC to display Timer Record List.

- 3 Press ENTER to save the program.**  
The Timer Record List will appear.

- 4 Press RETURN (↵) to exit the Timer Record List.**

- 5 Make sure that you load a recordable disc or tape and press POWER to switch your unit to Standby.**

## Notes

- The Timer indicator lights on the front panel display.
- If the Disc and Tape indicator are blinking, either no disc or tape is loaded, or the loaded disc is not recordable.
- The Recorder will record the audio according to the current TV tuner setting (Stereo, Mono or Bilingual). Use the AUDIO button to set the audio before switching the Recorder to Standby mode.
- You must press POWER to stop the Timer Recording.
- The Recorder will automatically power off when the Timer Recording ends.  
If the unit is DVD mode when the VCR timer recording ends, the unit will not automatically power off.
- If you wish to watch the DVD playback during the VCR timer recording, press DVD (or DVD/VCR) to change to DVD mode and perform the DVD playback. You cannot playback the VCR during the DVD timer recording:
- Although up to 24 hours can be programmed using the timer, recording will of course end when there is no remaining space on disc or tape.
- If the timer recording start time is reached during playback, timer recording will start after playback stops and power off (but recording will start if the clock time is before the timer recording end time).
- If the timer recording start time is reached during non-timer recording, non-timer recording will take priority. When non-timer recording stops and power off, the timer recording will start.
- No recording for less than 2 minutes can be programmed using the timer.

### [DVD mode only]

- When recording of programs continues in sequence, the beginning of the subsequent program will not be recorded for approx. 30 seconds.
- If timer recording is performed using a disc with little free space, the recorder may not turn off after timer recording ends.
- If timer recording is performed on a disc with insufficient free space, the recorder may not turn off after timer recording finishes.

### [VCR mode only]

- When the tape reaches its end during timer recording, recording will stop.
- When recording of programs continues in sequence, the beginning of the subsequent program will not be recorded for approx. 30 seconds.

### The recommendable recordable DVD discs


We recommend using Hitachi Maxell discs as they have been confirmed to be compatible with this unit. Other discs may not perform correctly.

# Timer Recording with VIDEO Plus+ System

This system makes programming timer recordings very simple. Most TV guides publish VIDEO Plus+ programming numbers with their program details. If you want to make a timer recording of a program, you just input the corresponding VIDEO Plus+ programming number. The date, start, stop and channel settings are made automatically. All you have to do is tell the recorder the recording mode and quality, and whether it's a once-only recording, or a regular recording. Up to 8 timer programs can be stored in the recorder.

## 1 Press VIDEO Plus+.


The VIDEO Plus+ menu will appear.  
Press VIDEO Plus+ again to exit the menu.

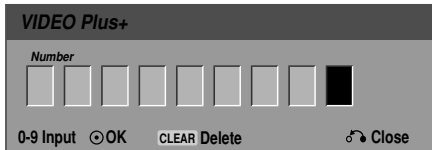

## 2 Use the number buttons then press ENTER to enter the VIDEO Plus+ programming number.

- If you make a mistake before pressing ENTER, press CLEAR repeatedly to delete password numbers one by one then correct it.

To check the programming, the Timer Record menu will appear.

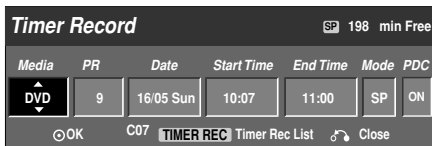

You can change the settings as required (Mode, PDC, etc.)

## 3 Follow steps 2-5 as shown on previous page (Timer Recording).

## Checking Timer Recording Details

Programming can be checked whenever the Recorder is turned on. Press TIMER REC twice.

- Use ▲ / ▼ to select a timer recording.
- Press ENTER to edit the selected program. Timer Record menu appears.
- Press CLEAR to delete the selected program from the Timer Record List.

### Notes

- A new program cannot be added to the timer using this screen. Use [Close] to close the screen once, and then program the timer.
- When the recording start times of two or more programs are the same, the program placed higher on the list will take priority.

- If two or more programs overlap, recording of the program that starts earlier will finish, after which recording of the following program will start.
- If recording of time consecutive programs continues, "Time Overlap" will appear in the Check column of Timer Recording List, but recording of programs will be executed.
- Turn the recorder off for timer recording.

## Canceling a Timer Recording

You can clear a timer setting anytime before the recording actually starts.

- Use ▲ / ▼ to select a program you want to erase on the Timer Recorder List. If you want to erase the program, press CLEAR.

## Stopping a Timer Recording in Progress

After a timer recording has started, you can still cancel the program.

- Press POWER.

## Timer Recording Troubleshooting

Even though the timer is set, the recorder will not record when:

- There is no disc (or tape) loaded.
- A non-recordable disc (or tape) is loaded.
- Disc Protect is set to ON in the Setup menu (see page 29).
- Power is turned on.
- There are already 99 titles (DVD-RW, DVD-R, DVD-RAM) or 49 titles (DVD+RW, DVD+R) recorded on the disc.

You cannot enter a timer program when:

- A recording is already underway.
- The time you're trying to set has already passed.
- There are already 8 timer programs set.

If two or more timer programs overlap:

- The earlier program takes priority.
- When the earlier program finishes, the later program starts.
- If two programs are set to start at exactly the same time, the program entered first takes priority.

If the disc is damaged, the recording may not complete successfully. In this case even though the Check field shows "Rec. OK", it may not be.

### Playing while you are recording **RAM**

You can start play from the beginning of the title while continuing to record it.

*While recording (in DVD mode)*

**1** Press **▶** (PLAY).  
Start play of the title you are recording.

**2** Press **STOP** (■) to return to the current recording screen.

1. Press TIME SLIP.  
The PIP(Picture-In-Picture) window appears on the screen as shown below. What is currently being recorded appears as a PIP and you will hear the playback audio.



Pressing TIME SLIP again will swap the pictures between the small and normal screens.

2. Press **STOP** (■) to return to the current recording screen.

#### **N**otes

- Play cannot be started until at least 30 seconds after recording starts.
- This function does not work in VCR Recording mode.

# Recording from an External Input

## Recording from External Components

You can record from an external component, such as a camcorder or VCR, connected to any of the recorder's external inputs.

- 1 Make sure that the component you want to record from is connected properly to the Recorder. See page 18.**
- 2 Press INPUT repeatedly to select the external input to record from.**
  - Tuner: Built-in tuner
  - AV1: EURO AV1 AUDIO/VIDEO mounted on back panel
  - AV2: EURO AV2 DECODER mounted on back panel
  - AV3: AV3 IN (VIDEO, AUDIO (L/R), S-VIDEO IN) mounted on front panel
  - DV: DV IN mounted on front panel

### Note

Check that the Audio In settings DV Record Audio are as you want them. See page 27.

- 3 Load a recordable disc or tape.**
- 4 Select the recording mode as necessary by pressing REC MODE repeatedly.**

DVD: SP (Standard Quality), LP (Low Quality), XP(High Quality), EP (Extended Quality)  
VCR: SP (Standard Play), LP (Long Play)

- 5 Press REC (●) once.**

Recording will start. (The REC indicator lights in the display window.)

  - Recording continues until you press STOP (■) or the disc or tape is full.
  - To record for a fixed length of time, see Instant Timer Recording on page 47.

- 6 Press STOP (■) to stop recording.**

### Note

If your source is copy-protected using CopyGuard, you will not be able to record it using this recorder. See Copyright on page 9 for more details.

## Recording from a Digital Camcorder

You can record from a digital camcorder connected to the DV IN jack on the front panel of this recorder. Using the recorder's remote, you can control both the camcorder and this recorder.

Before recording, make sure that the audio input for the DV IN jack is set up (see page 27).

### Tips

- The source signal must be DVC-SD format.
- Some camcorders cannot be controlled using this recorder's remote.
- If you connect a second DVD Recorder using a DV cable, you cannot control the second DVD Recorder from this one.
- You can't control this unit remotely from a component connected to the DV IN jack.
- You can't record date and time information from a DV cassette.

- 1 Make sure your digital camcorder is connected to the front panel DV IN jack. See page 18.**

- 2 Check that the DV audio input is as you require.**

You can choose between Audio 1 (original audio) and Audio 2 (overdubbed audio).

  - DV Input is set from the DV Record Audio in sub-menu of the Setup menu. See DV Record Audio on page 27 for more information.

- 3 Press INPUT repeatedly to select the DV input. DV appears in the display window.**

- 4 Find the place on the camcorder tape that you want to the recording to start from. For best results, pause playback at the point from which you want to record.**
  - Depending on your camcorder, you can use this recorder's remote to control the camcorder using the STOP, PLAY and PAUSE functions.

- 5 Press REC (●) once to start recording.**

- Recording is automatically stopped if the recorder detects no signal.
- You can pause or stop the recording by pressing PAUSE/STEP (||) or STOP (■). You cannot control the camcorder from this remote control during recording.
- In Video mode, the final frame of the recording may remain displayed on screen for a while after recording stops.
- For timer recording to work properly on this recorder, the digital camcorder must also be switched on and in operating.

## Recording from an External Input (Continued)

### What is DV?

Using DV, also known as i.LINK, you can connect a DV-equipped camcorder to this recorder using a single DV cable for input and output of audio, video, data and control signals.

The i.LINK interface is also known as IEEE 1394-1995. "i.LINK" and the "i.LINK" logo are trademarks.

- This recorder is only compatible with DV-format (DVC-SD) camcorders. Digital satellite tuners and Digital VHS video recorders are not compatible.
- You cannot connect more than one DV camcorder at a time to this recorder.
- You cannot control this recorder from external equipment connected via the DV IN jack (including two DVD recorders).
- It may not always be possible to control the connected camcorder via the DV IN jack.
- Digital camcorders can usually record audio as stereo 16-bit/48kHz, or twin stereo tracks of 12-bit/32kHz. This recorder can only record one stereo audio track. Set DV Record Audio to Audio 1 or Audio 2 as required (see page 27).
- Audio input to the DV IN jack should be 32 or 48kHz (not 44.1kHz).
- Picture disturbance on the recording may occur if the source component pauses playback or plays an unrecorded section of tape, or if the power fails in the source component, or the DV cable becomes disconnected.
- Although DV Record Audio is set to Audio 2 and Audio 2 signal is not present, DV Record Audio will be reset to Audio 1 automatically.

### DV-Related Messages

You may see the following messages appear on your TV screen when using the DV IN jack.

#### **Not connected to Camcorder.**

The camcorder is not connected properly, or the camcorder is switched off.

#### **Too many devices connected.**

The DV jack on this recorder supports connection to just one camcorder.

#### **Check the tape.**

There is no cassette loaded into the connected equipment.

#### **Uncontrollable device.**

This recorder cannot control the camcorder.

#### **Updating the information.**

Camcorder is updating the information for DV.

#### **Camera mode.**

Camcorder is set to camera mode.

### Troubleshooting

If you can't get a picture and/or audio through the DV IN jack, check the bullet points:

- Make sure the DV cable is properly connected.
- Try switching off the connected equipment then switch back on.
- Try switching the audio input.

### Notes

- Depending on the connected camcorder, you may not be able to control it using the remote control supplied with this recorder.
- Before you set the mode of your Camcorder to camera mode, turn down the volume of connected Sound device. There can be a howling sound.

# Title List and Chapter List Menu


## Using the Title List-Original menu **RAM** **VR**

The Title List-Original is where you build and edit your Playlist, and where you can delete titles and make other changes to the Original content of the disc. You can also play individual titles directly from the Title List-Original menu.

The recorder must be stopped in order to edit using the Title List-Original.

### 1 Press DISC MENU / LIST repeatedly to display the Title List-Original menu.

- Use the ▲ / ▼ buttons to display the previous/next page if there are more than 6 titles.
- To exit the Title List-Original menu, press RETURN (↵).

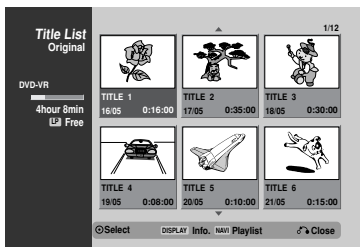

### 2 To view Title List-Original options, select the title you want then press ENTER.

Title List-Original options appears on the left side of the menu.

### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Navigation >
Delete
Protect
Edit >
Playlist Add >
Dubbing

**Play:** Starts playback the selected title.

#### Navigation:

- Scene Navigation
- Lists the chapters of the selected title.
  - Plays back from the scene selected on the Scene Navigation screen.

#### Time Navi

- Plays back any desired scenes you select in the time range from the program recording start time to the end time.

**Delete:** Deletes the title. (page 59)

**Protect:** Protects accidental recording, editing or deleting of the title. (page 61)

**Edit:** Selects Edit options.

- Title Name: Edits the title name. (page 60)
- Delete Part: Deletes a part of the Title. (page 59)

**Playlist Add:** Adds the title to the Playlist. (page 58)

**Dubbing:** Copies the title to a VHS tape.

### 4 Press RETURN (↵) repeatedly to exit Title List-Original menu.

#### Tip

Press DISPLAY to display more detailed title information for selected title.

## Using the Chapter List-Original menu **RAM** **VR**


### 1 Press DISC MENU / LIST repeatedly to display Title List-Original menu.

### 2 Use ▲ ▼ ◀ ▶ to choose the title you want to view Chapter List-Original menu then press ENTER.

Title List-Original options appears on the left side of the menu.

### 3 Use ▲ / ▼ to select 'Navigation' from Title List-Original options then press ENTER.

Select Scene Navigation then press ENTER Chapter List-Original menu appears on the TV screen.

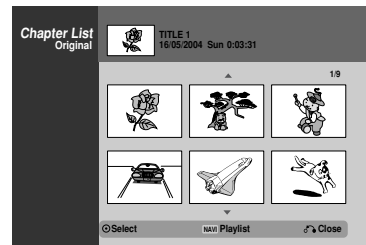

### 4 To view Chapter List-Original options, select the chapter you want then press ENTER.

Chapter List-Original options appears on the left side of the menu.

### 5 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Title
Delete
Combine
Playlist Add >

**Play:** Starts playback of the selected chapter.

**Title:** Moves to Title List-Original menu of the chapter. (refer to left on this page)

**Delete:** Deletes the chapter. (page 59)

**Combine:** Merges two chapters into one. (page 60)

**Playlist Add:** Adds the chapter to the Playlist. (page 58)


### 6 Press RETURN (↵) repeatedly to exit Chapter List-Original menu.



# Title List and Chapter List Menu (Continued)

## Using the Title List-Playlist menu RAM VR

- 1 Press **DISC MENU / LIST** repeatedly to display the Title List-Playlist menu.
  - Use the **▲ / ▼** buttons to display the previous/next page if there are more than 6 titles.
  - To exit the Title List-Playlist, press **RETURN** (↵).

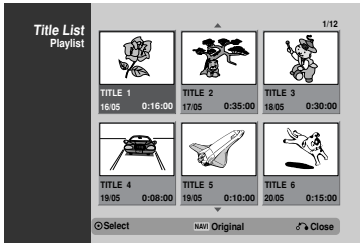

- 2 To view Title List-Playlist options, select the title you want then press **ENTER**.

Title List-Playlist options appears on the left side of the menu.

- 3 Use **▲ / ▼** to select an option then press **ENTER** to confirm.

Play
Navigation >
Title Name
Delete
Delete Part
Dubbing

**Play:** Starts playback the selected title.

**Navigation:**

- Scene Navigation
- Lists the chapters of the selected title.
- Plays back from the scene selected on the Scene Navigation screen.

**Time Navi**

- Plays back any desired scenes you select in the time range from the program recording start time to the end time.

**Title Name:** Edits the title name. (page 60)

**Delete:** Deletes the title from the Title List-Playlist menu. (page 59)

**Delete Part:** Deletes a part of the Title. (page 59)

**Dubbing:** Copys the title to a VHS tape.

- 4 Press **RETURN** (↵) repeatedly to exit Title List-Playlist menu.



Press **DISPLAY** to display more detailed title information for selected title.

## Using the Chapter List-Playlist menu RAM VR


- 1 Press **DISC MENU / LIST** repeatedly to display the Title List-Playlist menu.

- 2 Use **▲ ▼ ◀ ▶** to choose the title you want to view Chapter List-Playlist menu then press **ENTER**.

Title List-Playlist options appears on the left side of the menu.

- 3 Use **▲ / ▼** to select 'Navigation' from Title List-Playlist options then press **ENTER**.

Select Scene Navigation then press **ENTER** Chapter List-Playlist menu appears on the TV screen.

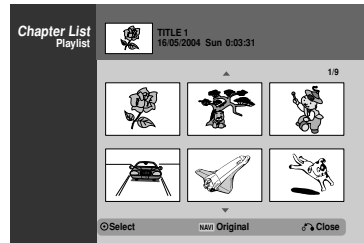

- 4 To view Chapter List-Playlist options, select the chapter you want then press **ENTER**.

Chapter List-Playlist options appears on the left side of the menu.

- 5 Use **▲ / ▼** to select an option then press **ENTER** to confirm.

Play
Title
Delete
Move
Combine

**Play:** Starts playback of the selected chapter.

**Title:** Moves to Title List-Playlist menu of the chapter. (refer to left on this page)

**Delete:** Deletes the chapter from the Chapter List-Playlist menu. (page 59)

**Move:** Moves a chapter of Chapter List-Playlist menu to a position on the menu. (page 61)

**Combine:** Merges two chapters into one. (page 60)

- 6 Press **RETURN** (↵) repeatedly to exit Chapter List-Playlist menu.



# Title List and Chapter List Menu (Continued)

## Using the Title List menu Video

From the Title List display you can play, name and delete titles.

Once a Video mode disc is finalized, the Title List screen changes its appearance and all you can do is select titles to play.

### 1 Press DISC MENU / LIST to display the Title List.



### 2 Use ▲ / ▼ to choose a title then press ENTER. Title List options appears on the left side of the Title List display.

### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.



**Play:** Starts playback the selected title.

#### Navigation:

Scene Navigation

- Lists the chapters of the selected title.
- Plays back from the scene selected on the Scene Navigation screen.

Time Navi

- Plays back any desired scenes you select in the time range from the program recording start time to the end time.

**Title Name:** Edits the title name. (page 60)

**Delete:** Deletes the title from the Title List.

**Dubbing:** Copies the title to a VHS tape.

### 4 Press RETURN (↵) repeatedly to exit Title List.



Press DISPLAY to display more detailed title information for selected title.

## Deleting a Title Video

Before a disc is finalized, you can delete titles recorded on the disc.


### ⚠ Caution

- If you delete a title from a DVD-R disc, the title will disappear from the Title List, but the available recording time will not increase.
- When deleting a title from a DVD-RW disc, the remaining time available for recording will only increase if it is the last title on the disc.

### 1 Press DISC MENU / LIST to display Title List.

### 2 Use ▲ ▼ ◀ ▶ to choose a title you want to delete then press ENTER.

Title List options appears on the left side of the Title List menu.

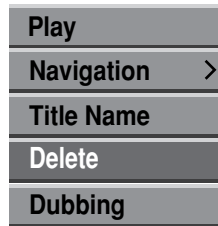

### 3 Use ▲ / ▼ to select "Delete" then press ENTER to confirm.

The confirm message for deleting will appear.

### 4 Use ◀ / ▶ to select "Yes" then press ENTER.

The selected chapter or title is deleted.


After pressing ENTER, the new, updated menu is displayed.

### 5 Repeat steps 2-4 to delete additional titles from the Title List.

### 6 Press RETURN (↵) repeatedly to remove the Title List display.

## If the disc has already been finalized

You should see a screen like the one below.

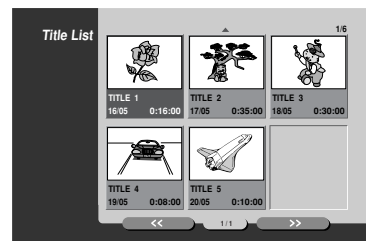


# Title List and Chapter List Menu (Continued)

## Using the Title List menu **+RW**

The Title List is where you can see the all recorded titles, and where you can delete titles and make other changes to the Original content of the disc. You can also play titles directly from the Title List menu. The recorder must be stopped in order to edit using the Title List menu.

### 1 Press DISC MENU / LIST to display the Title List menu.

- Use the ▲ / ▼ buttons to display the previous/ next page if there are more than 6 titles.
- To exit the Title List menu, press RETURN (↵).

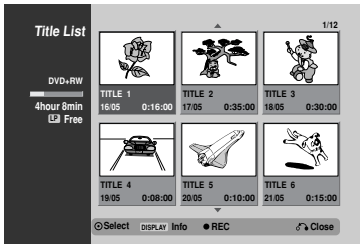

### 2 To view Title List options, select the title you want then press ENTER.

Title List options appears on the left side of the menu.

### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Full Play
Navigation >
Delete
Protect
Edit >
Dubbing

**Play:** Starts playback the selected title except the hidden chapters.

**Full Play:** Starts playback the selected title including the hidden chapters.

**Navigation:**

- Scene Navigation
- Lists the chapters of the selected title.
- Plays back from the scene selected on the Scene Navigation screen.

**Time Navi**

- Plays back any desired scenes you select in the time range from the program recording start time to the end time.

**Delete:** Deletes the title. (page 59)

**Protect:** Protects accidental recording, editing or deleting of the title. (page 61)

**Edit:** Selects Edit options.

- Title Name: Edits the title name. (page 60)
- Divide: Divides one title into two titles. (page 62)
- Hide (Show): Hides (or Shows) the all chapters within the title. (page 62)

**Dubbing:** Copys the title to a VHS tape.

Title Name
Divide
Hide

### 4 Press RETURN (↵) repeatedly to exit Title List menu.

#### Tip

Press DISPLAY to display more detailed title information for selected title.

#### Caution

If you press REC (●) when the Title List menu appears, the selected title is erased then overwrite recording starts. (See page 61 for more details.)


## Using the Chapter List menu **+RW**

### 1 Press DISC MENU / LIST to display Title List menu.

### 2 Use ▲ ▼ ◀ ▶ to choose the title you want to view Chapter List menu then press ENTER. Title List options appears on the left side of the menu.

### 3 Use ▲ / ▼ to select "Navigation" from Title List options then press ENTER.

Select Scene Navigation then press ENTER. Chapter List menu appears on the TV screen.

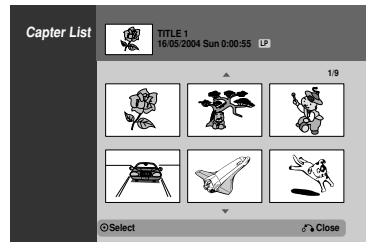

### 4 To view Chapter List options, select the chapter you want then press ENTER.

Chapter List options appears on the left side of the menu.

### 5 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Title
Combine
Hide

**Play:** Starts playback of the selected chapter.

**Title:** Moves to Title List menu of the chapter. (refer to left on this page)

**Combine:** Combines two chapters into one. (page 60)

**Hide (Show):** Hides (or Shows) the selected chapter. (page 62)

### 6 Press RETURN (↵) repeatedly to exit Chapter List menu.


# Title List and Chapter List Menu (Continued)

## Using the Title List menu **+R**

The Title List is where you can see the all recorded titles, and where you can delete titles and make other changes to the Original content of the disc. You can also play titles directly from the Title List menu. The recorder must be stopped in order to edit using the Title List menu.

### 1 Press DISC MENU / LIST to display the Title List menu.

- Use the ▲ / ▼ buttons to display the previous/ next page if there are more than 6 titles.
- To exit the Title List menu, press RETURN (↵).

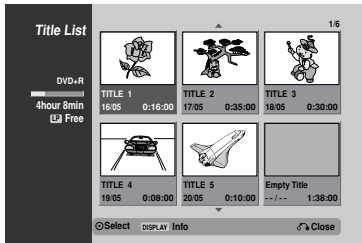

### 2 To view Title List options, select the title you want then press ENTER. Title List options appears on the left side of the Title List menu.

### 3 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Full Play
Navigation >
Delete
Protect
Edit >
Dubbing

**Play:** Starts playback the selected title except the hidden chapters.

**Full Play:** Starts playback the selected title including the hidden chapters.

**Navigation:**

- Scene Navigation
- Lists the chapters of the selected title.
- Plays back from the scene selected on the Scene Navigation screen.

**Time Navi**

- Plays back any desired scenes you select in the time range from the program recording start time to the end time.

**Delete:** Deletes the title. (page 59)

**Protect:** Protects accidental recording, editing or deleting of the title. (page 61)

**Edit:** Selects Edit options.

- Title Name: Edits the title name. (page 60)
- Hide (Show): Hides (or Shows) the all chapters within the title. (page 62)

**Dubbing:** Copys the title to a VHS tape.

### 4 Press RETURN (↵) repeatedly to exit Title List menu.

#### Tip

Press DISPLAY to display more detailed title information for selected title.


## Using the Chapter List menu **+R**

### 1 Press DISC MENU / LIST to display Title List menu.

### 2 Use ▲ ▼ ◀ ▶ to choose the title you want to view Chapter List menu then press ENTER. Title List options appears on the left side of the menu.

### 3 Use ▲ / ▼ to select "Navigation" from Title List options then press ENTER.

Select Scene Navigation then press ENTER. Chapter List menu appears on the TV screen.

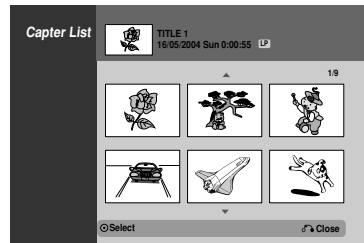

### 4 To view Chapter List options, select the chapter you want then press ENTER.

Chapter List options appears on the left side of the menu.

### 5 Use ▲ / ▼ to select an option then press ENTER to confirm.

Play
Title
Combine
Hide

**Play:** Starts playback of the selected chapter.

**Title:** Moves to Title List menu of the chapter. (refer to left on this page)

**Combine:** Combines two chapters into one. (page 60)

**Hide (Show):** Hides (or Shows) the selected chapter. (page 62)

### 6 Press RETURN (↵) repeatedly to exit Chapter List menu.

# Title and Chapter Editing

Edits you make to the Original content changes the actual content of the disc. For example, if you delete a title or chapter from the Original content (Title or Chapter), that title or chapter is deleted from the disc, freeing up extra recording time.

When you edit the Playlist, on the other hand, you are not changing the content of the disc. For example, when you delete a title from the Playlist, you are just telling the recorder not to play that title; nothing is actually deleted from the disc.

## Titles, Chapters and Parts

Titles in the disc's original content contain one or more chapters. When you insert a title into the Playlist, all the chapters within that title also appear. In other words, chapters in the Playlist behave exactly as chapters on a DVD-Video disc do. Parts are sections of Original or Playlist titles. From the Original and Playlist menu you can add or delete parts. Adding a chapter or title to the Playlist creates a new title made up of a section (ie., chapter) of an Original title. Deleting a part removes part of a title from the Original or Playlist menu.

### Caution

- When editing using the Delete, Add and Move functions, the start and end frames may not be exactly as set in the start and end point display.
- During Playlist playback, you may notice a momentary pause between edits. This is not a malfunction.

## Adding Chapter Markers



You can put a chapter marker anywhere in a Playlist or Original title during recording or playback.

Once the chapter is marked, you can use the Chapter Search feature, as well as delete, combine and move chapters in the Chapter List-Original or Chapter List-Playlist menu.

You can insert up to 999 chapter markers in both the Original and Playlist contents.

### Note

Chapter markers are inserted at regular intervals automatically. You can change this interval from the Initial Setup menu (see Auto Chapter on page 27).

**1** Play the title (Original or Playlist).

**2** At the point you want to start a new chapter, press **CHP ADD**.

A chapter marker icon appears on the TV screen.

- You can also put chapter markers in during recording.

## Changing Title Thumbnails



Each title displayed in the Title List menu is represented by a thumbnail picture taken from the start of that title or chapter.

If you prefer, select a different still picture from within a title.

**1** Play the title (Original or Playlist).

**2** Press **THUMBNAIL** to make the currently displayed picture the one that appears in the Original or Playlist menu.

The still picture that you choose appears in both the Original or Playlist menu.

### Tip

You can also change the thumbnail picture of the title on the Chapter List-Original or Chapter List-Playlist menu. Select a chapter on the Chapter List-Original or Chapter List-Playlist menu then press **THUMBNAIL**. The thumbnail picture of the title that includes the chapter is changed.

# Title and Chapter Editing (Continued)

## Making a New Playlist **RAM** **VR**

Use this function to add an Original title or chapter to the Playlist. When you do this, the whole title is put into the Playlist (you can delete bits you don't need later — see Deleting an Original or Playlist title/chapter on page 59).

The title appears in the Playlist complete with the chapter markers that appear in the Original. However, if you add more chapter markers to the Original later, these are not automatically copied over into the Playlist title.


You can add up to 999 chapters to one disc. If you only want to add a chapter of a title, use the Adding a title/chapter to the Playlist on this page.

### 1 Press DISC MENU / LIST repeatedly to display Title List-Original menu.


If you want to display the Chapter List-Original menu, refer to “Using the Chapter List-Original menu” on page 52.

### 2 Choose a title or chapter on the Original menu to put into the Playlist, then press ENTER.

Original (Title or Chapter) options appears on the left side of the Original menu.

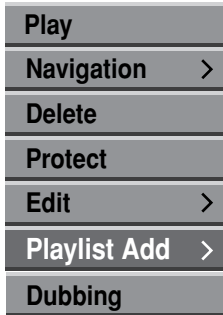


Title List-Original

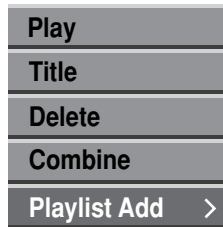

Chapter List-Original

### 3 Use ▲ / ▼ to select “Playlist Add” from Original options then press ENTER.

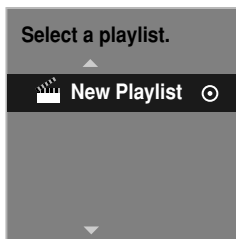

### 4 Select “New Playlist” then press ENTER.

The new title appears in the updated Playlist. All chapters of the title are added to the Playlist.

## Adding Additional Title/Chapters to the Playlist

**RAM** **VR**


You can add an Original title or chapter to add to a Playlist title even if it is already registered.

### 1 Press DISC MENU / LIST repeatedly to display Title List-Original menu.


If you want to show the Chapter List-Original menu, refer to “Using the Chapter List-Original menu” on page 52.

### 2 Choose an Original title or chapter to put into the Playlist, then press ENTER.

Original menu options appears on the left side of the screen.

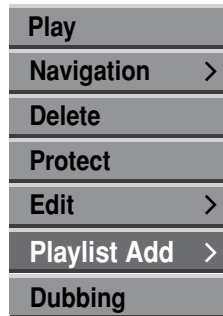


Title List-Original

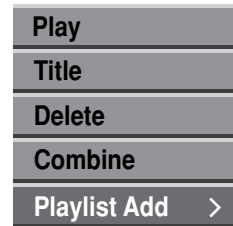

Chapter List-Original

### 3 Use ▲ / ▼ to select “Playlist Add” from Original menu options then press ENTER.

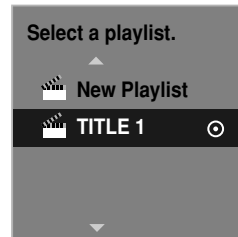

### 4 Choose a Title List-Playlist that is already registered to insert a title or chapter, then press ENTER.

The title or chapter appears in the updated Playlist menu.

### 5 Repeat steps 1-4 to add additional title or chapter on the Playlist.

### 6 Press RETURN (↵) to exit, or DISC MENU / LIST to go back to the Title List-Original menu.

## Title and Chapter Editing (Continued)

### Deleting a Title/Chapter

RAM Video VR +RW +R

When you erase a title or chapter from the Playlist menu on DVD-RW discs formatted in VR mode, you only remove it from the Playlist; the title/chapter remains in the Original menu.

If you choose to delete a title or chapter from Title List or Chapter List menu, the title or chapter is actually deleted from the disc and the remaining time available for recording increases. Titles/chapters deleted from the Original are also removed from the Playlist.

#### Note


It may not be possible to delete chapters that are less than 3 seconds long.

**1** On the Title List or Chapter List menu, use ▲ ▼ ◀ ▶ to choose a chapter or title you want to delete then press ENTER.

Options appears on the left side of the screen.

**2** Select "Delete" option on the options on the menu.

e.g., If you select "Delete" on Title List-Original menu.

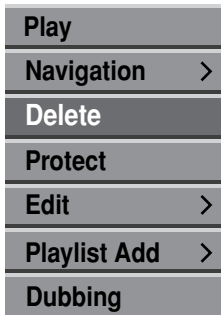

**3** Press ENTER to confirm.

The confirm message for deleting will appear.

**4** Use ◀ / ▶ to select "Yes" then press ENTER. The selected chapter or title is deleted.

After pressing ENTER, the new, updated menu is displayed.

**5** Repeat steps 1 - 4 to continue to delete from the menu.

**6** Press RETURN (↵) repeatedly to exit the menu.

#### Note

- When DVD+RW recording, the deleted title's name is changed to 'Deleted Title'.
- If the deleted titles more than two are continued, the titles are combined into one.
- If any program is deleted from a disc on which multiple programs were recorded, a program recorded later could have the same title.
- Title names can be changed anytime (see page 60).

### Deleting a Part RAM VR

You can delete a part which you do not want in the title.

**1** Press DISC MENU / LIST repeatedly to display Title List-Original or Title List-Playlist menu.

**2** Use ▲ ▼ ◀ ▶ to choose a title you want to delete then press ENTER.

The options appears on the left side of the menu.

**3** Select "Delete Part" from the options on the menu.


e.g., If you select "Delete Part" on Title List-Original menu.



**4** Press ENTER.

Title Edit (Delete Part) menu appears on the TV screen.

"Start Point" icon is highlighted.

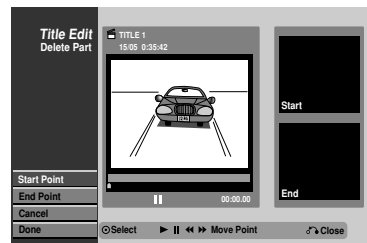

**5** Starts playback and use pause step, search and slow-motion to find the starting point.

**6** Press ENTER at the starting point of the section you want to delete.

"End Point" icon is highlighted.

The part is indicated on the Progress Bar.

**7** Use pause step, search, skip and slow-motion to find the ending point.

**8** Press ENTER at the ending point of the section you want to delete.

You can cancel the selected point, use ▲ / ▼ to select "Cancel" icon then press ENTER.

**9** If you finish to edit, select "Done" icon then press ENTER.

The confirm message for deleting will appear.

**10** Use ◀ / ▶ to select "Yes" then press ENTER. The selected part is deleted from the title.

# Title and Chapter Editing (Continued)

**11** When finished editing, press RETURN (↵).

## Tip

If, after setting a starting point, you use fast reverse, etc. to move the cursor to a point preceding the start point, the starting point will then automatically become an ending point.

## Naming a Title

**RAM** **Video** **VR** **+RW** **+R**


You can name titles independently. Names can be up to 32 characters long.

**1** On the Title List menu, use ▲ ▼ ◀ ▶ to choose the title you want to name then press ENTER. Options appears on the left side of the menu.


**2** Use ▲ / ▼ to select "Title Name" option then press ENTER.

Keyboard menu appears.

e.g., If you select "Title Name" on Title List-Original menu.

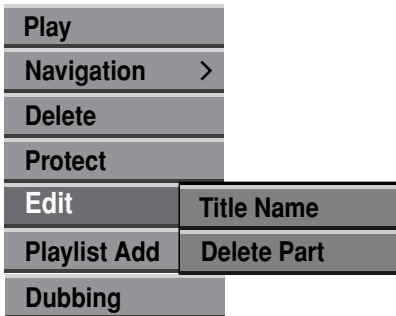

**3** Enter a name for the title. Use ▲ ▼ ◀ ▶ to select a character then press ENTER to confirm your selection. Refer step 3 as shown on page 21 (Station Rename).

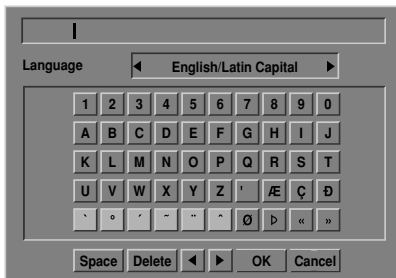

**4** Choose OK then press ENTER to fix the name and return to the previous menu screen.

**5** Press RETURN (↵) repeatedly to exit the menu.

## Note

- Names can be up to 32 characters long.
- For discs formatted on a different DVD Recorder, you will see only a limited character set.
- When recording in DVD-R, DVD+R or DVD+RW, the entered name is displayed on the DVD player only after finalizing.

## Combining Two Chapters Into One

**VR** **+RW** **+R** **RAM**

Use this function to combine two adjacent Playlist or Original chapters into one.

## Note

This function is not available if there is only one chapter within the title.

**1** On the Chapter List menu, select the second chapter of the two chapters you want to combine then press ENTER.

Chapter List options appears on the left side of the menu.

**2** Use ▲ / ▼ to select "Combine".

The combine indicator appears between the two chapters you want to combine.

e.g., If you select "Combine" on Chapter List-Original menu.



**3** Press ENTER to confirm.

After pressing ENTER, the new, updated menu is displayed.

**4** Repeat steps 1 - 3 to continue to combine from the menu.

**5** Press RETURN (↵) repeatedly to exit the menu.

## Note

This function cannot operate listed below;

- If there is only one chapter within the title.
- If two chapters created by erasing a part from an original title.
- If two chapters created from different titles.
- If two chapters created by moving an order from an original title.



# Title and Chapter Editing (Continued)


## Moving a Playlist Chapter **RAM** **VR**

Use this function to re-arrange the playing order of Playlist chapters on the Title List-Playlist menu.


- 1 Press DISC MENU / LIST repeatedly to display Title List-Playlist menu.**  
To display the Chapter List-Playlist menu, refer to "Using the Chapter List-Playlist Menu" on page 53.

### Note

This function is not available if there is only one chapter.

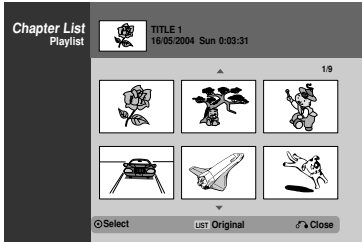

- 2 Select a chapter from the Chapter List-Playlist menu.**
- 3 Press ENTER.**  
Chapter List-Playlist options appears on the left side of the menu.
- 4 Use ▲ / ▼ to select "Move" from Playlist options then press ENTER.**

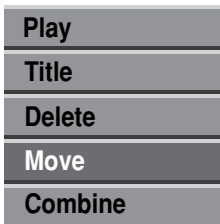

- 5 Use ▲ ▼ ◀ ▶ to choose the place you want to move the chapter to then press ENTER.**  
After pressing ENTER, the new, updated menu is displayed.
- 6 Repeat steps 2 - 5 to continue to move from the menu.**
- 7 Press RETURN (↵) repeatedly to exit the menu.**


## Protect a Title

**RAM** **VR** **+RW** **+R**

Use this function to protect accidental recording, editing or deleting of the title.

- 1 Press DISC MENU / LIST to display Title List menu.**
- 2 Use ▲ ▼ ◀ ▶ to choose a title you want to protect then press ENTER.**  
Options appears on the left side of the screen.
- 3 Select "Protect" option on the options.**

e.g., If you select "Protect" on Title List menu.(DVD+RW/+R)

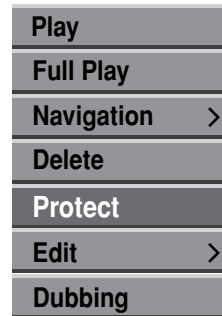

- 4 Press ENTER to confirm.**  
The lock mark will appears on the title's thumbnail.

### Tip

If you select a title that has already been protected on the Title List menu, you can unprotect it by choosing "Unprotect" from the Title List menu options. After doing this, you can edit and delete the title.

# Title and Chapter Editing (Continued)

## Hide a Title/Chapter +RW +R

Use this function to hide a title/chapter on the Title List or Chapter List menu.

- 1 On the Title List or Chapter List menu, use **▲ ▼ ◀ ▶** to choose a title or chapter you want to hide then press **ENTER**. Options appears on the left side of the screen.

- 2 Select "Hide" option on the options.

e.g., If you select "Hide" on Title List menu.

Play	
Full Play	
Navigation	>
Delete	
Protect	Title Name
Edit	Divide
Dubbing	Hide

- 3 Press **ENTER** to confirm. The title's thumbnail will be dim.

### Tip

If you select a title that has already been dim on the Title List menu, you can show it by choosing "Show" from the Title List menu options. After doing this, you can see the title.

## Divide One Title Into Two +RW

Use this command to split a title up into two new titles.


- 1 On the Title List menu, select a title you want to divide then press **ENTER**.

The menu options appears on the left side of the screen.

- 2 Select "Divide" from the Title List menu options.

Play	
Full Play	
Navigation	>
Delete	
Protect	Title Name
Edit	Divide
Dubbing	Hide

- 3 Press **ENTER** when "Divide" option is highlighted. Title Edit-Divide menu appears and goes into STOP mode.

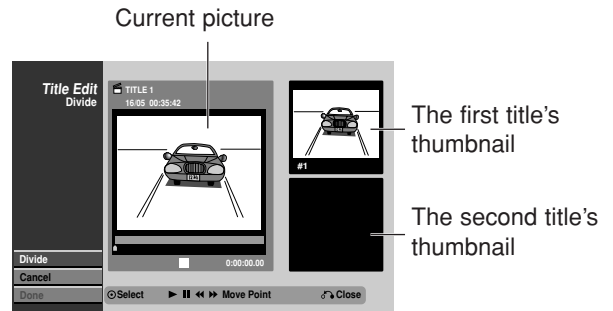

- 4 Use pause step, search, skip and slow-motion to find the point you want to divide the title.

- 5 When "Divide" option is highlighted, press **ENTER** at the point.

You can clear the dividing point and exit the Title Edit-Divide menu, use **▲ / ▼** to select "Cancel" option then press **ENTER**. The dividing point is clear.

- 6 Choose "Done" option then press **ENTER** to fix the dividing point.


The title is divided into two new titles. It take up to 4 minutes to divide.

## Additional Information

### Overwrite Recording **+RW**

To overwrite a new video recording to a previously recorded title, follow these steps. This feature is not available on DVD+R, which always record at the end of the Disc.

- 1** Select input source you want to record (channel, AV1-3, DV).
- 2** Press **DISC MENU / LIST** to display the Title List menu.

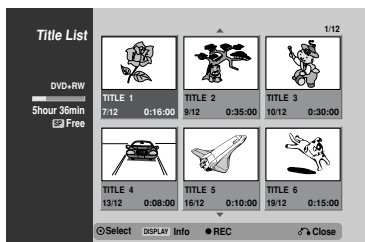

- 3** Use **▲ ▼ ◀ ▶** to choose a title you want to overwrite.
- 4** Press **REC (●)** to start overwrite recording. Overwrite recording is started from the start point of the title.
- 5** Press **STOP (■)** to stop the overwrite recording. The new title is created and updated menu is displayed.

### Notes

- This function is not available with a protected title.
- If the overwriting is elapsed more than the recording length of the current title, the next title is overwritten. But if next title is protected, the overwriting is stopped at the starting point of the title.
- If the selected title's recording length is less than 10 seconds, the next title is overwritten. But if next title is protected, the overwriting is stopped.


### Viewing Title List menu displayed on other DVD recorders or players **+RW +R**

You can view the Title List menu displayed on the another DVD player that is capable of playing DVD+RW or DVD+R discs.

- 1** Insert DVD+R or DVD+RW disc recorded already.
- 2** Press **TITLE MENU** button. Title List menu will appear as below.

### Tip

You can remove the Title List menu by pressing **STOP (■)**.

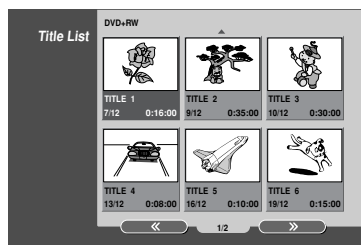

- 3** To play back a title, select the title you want then press **ENTER** or **▶ (PLAY)**.

### Playing Your Recordings on other DVD Players (Finalizing a Disc)

Most regular DVD players can play finalized discs recorded in Video mode, finalized DVD+R or DVD+RW. A small number of players can also play DVD-RW discs recorded in VR mode, finalized or not. Check the manual that came with the other player to check what kinds of discs it will play.

Finalizing 'fixes' the recordings and editings in place so that the disc can be played on a regular DVD player or computer equipped with a suitable DVD-ROM drive. Finalizing a Video mode disc creates a menu screen for navigating the disc. This is accessed by pressing **DISC MENU / LIST** or **TITLE MENU**.

To finalize a disc, refer to "Finalize" on page 28.

### Notes

- Unfinalized DVD+RW is playable on regular DVD players.
- The edited contents of DVD+RW disc is compatible on regular DVD players only after finalizing.
- Any edited contents of the DVD+R disc are not be compatible on regular DVD players. (Hide, chapter combine, added chapter mark, etc.)

## Language Code List

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 23).

Code	Language	Code	Language	Code	Language	Code	Language
6566	Abkhazian	7074	Fiji	7678	Lingala	8373	Singhalese
6565	Afar	7073	Finnish	7684	Lithuanian	8375	Slovak
6570	Afrikaans	7082	French	7775	Macedonian	8376	Slovenian
8381	Albanian	7089	Frisian	7771	Malagasy	8379	Somali
6577	Amharic	7176	Galician	7783	Malay	6983	Spanish
6582	Arabic	7565	Georgian	7776	Malayalam	8385	Sudanese
7289	Armenian	6869	German	7784	Maltese	8387	Swahili
6583	Assamese	6976	Greek	7773	Maori	8386	Swedish
6588	Aymara	7576	Greenlandic	7782	Marathi	8476	Tagalog
6590	Azerbaijani	7178	Guarani	7779	Moldavian	8471	Tajik
6665	Bashkir	7185	Gujarati	7778	Mongolian	8465	Tamil
6985	Basque	7265	Hausa	7865	Nauru	8484	Tatar
6678	Bengali; Bangla	7387	Hebrew	7869	Nepali	8469	Telugu
6890	Bhutani	7273	Hindi	7879	Norwegian	8472	Thai
6672	Bihari	7285	Hungarian	7982	Oriya	6679	Tibetan
6682	Breton	7383	Icelandic	8065	Panjabi	8473	Tigrinya
6671	Bulgarian	7378	Indonesian	8083	Pashto, Pushto	8479	Tonga
7789	Burmese	7365	Interlingua	7065	Persian	8482	Turkish
6669	Byelorussian	7165	Irish	8076	Polish	8475	Turkmen
7577	Cambodian	7384	Italian	8084	Portuguese	8487	Twi
6765	Catalan	7465	Japanese	8185	Quechua	8575	Ukrainian
9072	Chinese	7487	Javanese	8277	Rhaeto-Romance	8582	Urdu
6779	Corsican	7578	Kannada	8279	Romanian	8590	Uzbek
7282	Croatian	7583	Kashmiri	8285	Russian	8673	Vietnamese
6783	Czech	7575	Kazakh	8377	Samoan	8679	Volapük
6865	Danish	7589	Kirghiz	8365	Sanskrit	6789	Welsh
7876	Dutch	7579	Korean	7168	Scots Gaelic	8779	Wolof
6978	English	7585	Kurdish	8382	Serbian	8872	Xhosa
6979	Esperanto	7679	Laothian	8372	Serbo-Croatian	7473	Yiddish
6984	Estonian	7665	Latin	8378	Shona	8979	Yoruba
7079	Faeroese	7686	Latvian, Lettish	8368	Sindhi	9085	Zulu

# Area Code List


Enter the appropriate code number for the initial setting "Area Code" (See page 26).

Code	Country	Code	Country	Code	Country	Code	Country
AD	Andorra	ER	Eritrea	LC	Saint Lucia	SC	Seychelles
AE	United Arab Emirates	ES	Spain	LI	Liechtenstein	SD	Sudan
AF	Afghanistan	ET	Ethiopia	LK	Sri Lanka	SE	Sweden
AG	Antigua and Barbuda	FI	Finland	LR	Liberia	SG	Singapore
AI	Anguilla	FJ	Fiji	LS	Lesotho	SH	Saint Helena
AL	Albania	FK	Falkland Islands	LT	Lithuania	SI	Slovenia
AM	Armenia	FM	Micronesia	LU	Luxembourg	SJ	Svalbard and Jan Mayen Islands
AN	Netherlands Antilles	FO	Faroe Islands	LV	Latvia	SK	Slovak Republic
AO	Angola	FR	France	LY	Libya	SL	Sierra Leone
AQ	Antarctica	FX	France (European Territory)	MA	Morocco	SM	San Marino
AR	Argentina	GA	Gabon	MC	Monaco	SN	Senegal
AS	American Samoa	GB	Great Britain	MD	Moldavia	SO	Somalia
AT	Austria	GD	Grenada	MG	Madagascar	SR	Suriname
AU	Australia	GE	Georgia	MH	Marshall Islands	ST	Saint Tome and Principe
AW	Aruba	GF	French Guyana	MK	Macedonia	SU	Former USSR
AZ	Azerbaijan	GH	Ghana	ML	Mali	SV	El Salvador
BA	Bosnia-Herzegovina	GI	Gibraltar	MM	Myanmar	SY	Syria
BB	Barbados	GL	Greenland	MN	Mongolia	SZ	Swaziland
BD	Bangladesh	GM	Gambia	MO	Macau	TC	Turks and Caicos Islands
BE	Belgium	GN	Guinea	MP	Northern Mariana Islands	TD	Chad
BF	Burkina Faso	GP	Guadeloupe (French)	MQ	Martinique (French)	TF	French Southern Territories
BG	Bulgaria	GQ	Equatorial Guinea	MR	Mauritania	TG	Togo
BH	Bahrain	GR	Greece	MS	Montserrat	TH	Thailand
BI	Burundi	GS	S. Georgia & S. Sandwich Isls.	MT	Malta	TJ	Tadjikistan
BJ	Benin	GT	Guatemala	MU	Mauritius	TK	Tokelau
BM	Bermuda	GU	Guam (USA)	MV	Maldives	TM	Turkmenistan
BN	Brunei Darussalam	GW	Guinea Bissau	MW	Malawi	TN	Tunisia
BO	Bolivia	GY	Guyana	MX	Mexico	TO	Tonga
BR	Brazil	HK	Hong Kong	MY	Malaysia	TP	East Timor
BS	Bahamas	HM	Heard and McDonald Islands	MZ	Mozambique	TR	Turkey
BT	Bhutan	HN	Honduras	AN	Namibia	TT	Trinidad and Tobago
BV	Bouvet Island	HR	Croatia	NC	New Caledonia (French)	TV	Tuvalu
BW	Botswana	HT	Haiti	NE	Niger	TW	Taiwan
BY	Belarus	HU	Hungary	NF	Norfolk Island	TZ	Tanzania
BZ	Belize	ID	Indonesia	NG	Nigeria	UA	Ukraine
CA	Canada	IE	Ireland	NI	Nicaragua	UG	Uganda
CC	Cocos (Keeling) Islands	IL	Israel	NL	Netherlands	UK	United Kingdom
CF	Central African Republic	IN	India	NO	Norway	UM	USA Minor Outlying Islands
CG	Congo	IO	British Indian Ocean Territory	NP	Nepal	US	United States
CH	Switzerland	IQ	Iraq	NR	Nauru	UY	Uruguay
CI	Ivory Coast	IR	Iran	NU	Niue	UZ	Uzbekistan
CK	Cook Islands	IS	Iceland	NZ	New Zealand	VA	Vatican City State
CL	Chile	IT	Italy	OM	Oman	VC	Saint Vincent & Grenadines
CM	Cameroon	JM	Jamaica	PA	Panama	VE	Venezuela
CN	China	JO	Jordan	PE	Peru	VG	Virgin Islands (British)
CO	Colombia	JP	Japan	PF	Polynesia (French)	VI	Virgin Islands (USA)
CR	Costa Rica	KE	Kenya	PG	Papua New Guinea	VN	Vietnam
CS	Former Czechoslovakia	KG	Kyrgyzstan	PH	Philippines	VU	Vanuatu
CU	Cuba	KH	Cambodia	PK	Pakistan	WF	Wallis and Futuna Islands
CV	Cape Verde	KI	Kiribati	PL	Poland	WS	Samoa
CX	Christmas Island	KM	Comoros	PM	Saint Pierre and Miquelon	YE	Yemen
CY	Cyprus	KN	Saint Kitts & Nevis Anguilla	PN	Pitcairn Island	YT	Mayotte
CZ	Czech Republic	KP	North Korea	PR	Puerto Rico	YU	Yugoslavia
DE	Germany	KR	South Korea	PT	Portugal	ZA	South Africa
DJ	Djibouti	KW	Kuwait	PW	Palau	ZM	Zambia
DK	Denmark	KY	Cayman Islands	PY	Paraguay	ZR	Zaire
DM	Dominica	KZ	Kazakhstan	QA	Qatar	ZW	Zimbabwe
DO	Dominican Republic	LA	Laos	RE	Reunion (French)		
DZ	Algeria	LB	Lebanon	RO	Romania		
EC	Ecuador			RU	Russian Federation		
EE	Estonia			RW	Rwanda		
EG	Egypt			SA	Saudi Arabia		
EH	Western Sahara			SB	Solomon Islands		

# Controlling Your TV with the Supplied Remote

You can control the sound level, input source, and power switch of your TV with the supplied remote.

You can control your TV using the buttons below.

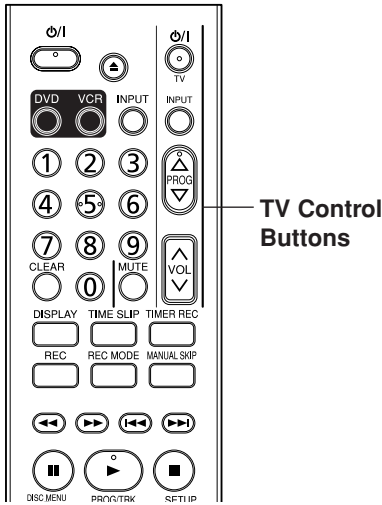

By pressing	You can
POWER	Turn the TV on or off.
INPUT	Switch the TV's input source between the TV and other inputsources.
PROG ▲/▼	Scans up or down through memorised channels.
VOL ▲/▼	Adjust the volume of the TV.
MUTE	Temporarily turns TV sound OFF, press again to restore.

## Controlling other TVs with the remote

You can control the sound level, input source, and power switch of non-Hitachi TVs as well. If your TV is listed in the table below, set the appropriate manufacturer code.

1. While holding down TV POWER button, press the number buttons to select the manufacturer code for your TV (see the table below).
2. Release TV POWER button.

## Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code Number
HITACHI	011(DEFAULT) 013 015 017 021 022 023 024 028 029 030 035 039 040 041 048 053 054 055 056 057 120 127 128 129 134 135 140 143 145 147 151 156 159 173 193 219
ADMIRAL	137 204
ADYSON	159 219
AKAI	009 010 108 132 133 135 139 140 156 174 175
AKURA	064 086 108 110 155 171
ALBA	009 060 064
ALLSTAR	108
AMSTRAD	006 025 157
AMWAY	108
ANITECH	010 049 108 185 219
ANTECNO	064
ARC EN CIEL	173 179 239
ASA	087 102 108 235 236
ASBERG	185
ASORA	171
ATLANTIC	089 197
AUDIOSONIC	085
AUTOVOX	159 163 197
BANK	232
BEKO	045 085 086 108 250
BESTAR	086
BLAUPUNKT	031 091 092 096 097 098 099 210 253
BONDSTEC	163
BOSCH	210
BRANDT ELECTRONIQUE	173 179 225 239
BRIONVEGA	204
BSR	144
BUSH	009 136 139 144 232
CENTURY	165 204
CGE	139 165 210
CIE	025 108 170
CLATRONIC	009 010 064 108 144 149 159 164 165 171 185
CLARIVOX	033
CONDOR	108 149 191
CONIC	219
CONTEC	171 222
CONTINENTAL EDISON	173 179 225 239
COSMOS	108
CROSLEY	165 204
CROWN	084 085 086 108 144 171 185
CS-ELECTRONICS	064
DAEWOO	051 108 120 127 170
DANSAI	010 219
DE GRAAF	108 134

## Controlling Your TV with the Supplied Remote (Continued)

Manufacturer	Code Number
DECCA	070 108 159 161 162 184 189 190 206
DECCAVIDEO	108
DUAL	233
DUMONT	204
ELBE	058 144 157 160 192 246
ELBIT	108 248
ELECTROVENDA	108
ELEKTRONIKA	108
ELIN	108
ELITE	064 149
ELMAN	144
ELTA	010 171
EMERSON	108 204
ESC	108
ETRON	133
EUROPHON	144 159
EXPERT	089
FENNER	171
FERGUSON	078 079 080 160 182 195 198 199 200 201 202
FINLANDIA	194 195
FINLUX	008 087 102 104 105 107 108 140 144 159 161 174 189 235 236
FIRST-LINE	144
FISHER	086 208 222 233
FORMENTI	108 149
FRABA	108
FRONTECH	136 171 220
FUBA	073 109
FUJITSU GENERAL	088 159 197
FUNAI	010
GALAXIS	108 185
GALERIA	171
GBC	137 144 171
GEC	011 108 129 147 159 189
GELOSO	064 137 144 164 171
GENERAL	171
GENERAL TECHNIC	171
GOLDHAND	159 171
GOLDSTAR	038 050 108 110 136 144 159 163 166 171 191 219 237
GOODMANS	009 064 108 109 110 120 159 170 171
GORENJE	086
GPM	010 064
GRANADA	027 105 108 111 121 134 140 159 162 167 187 194 195 238
GRUNDIG	091 092 093 094 095 097 098 100 101 172 232 238
HCM	010 108 159 171
HIFIVOX	173 179 239
HINARI	010 064 108 133 171
HIT	204
HYPER	009 159 163 171
ICE	009 010 064 108 171
IMPERIAL	043 049 108 139 144 154 165 255
INGERSOLL	171
INNO HIT	159 189 237
INTERBUY	010
INTERCORD	233
INTERFUNK	108 109 113 130 133 134 135 137 141 146 147 148 165 179 210
INTERVISION	010 086 108 132 144 166
IRRADIO	163 235 237
ITC	144 159
ITS	009 010 064 171
ITT	141 151 186
JVC	009 169

Manufacturer	Code Number
KAIDO	136
KAPSCH	089 147 148 197
KARCHER	084 108
KATHREIN	109
KAWA	009
KENDO	060 108 137 157
KENNEDY	197
KNEISSEL	108
KONKA	009
KORTING	086 204 209
KUBA	233
KUBA ELECTRONIC	233
KURA	134
LENCO	108 170
LG	001 038 050 108 110 136 144 159 163 166 171 191 219 237
LIESENKOTTER	108 210
LIFETEC	010 064 108 170
LOEWE	109 113 204 205
LOGIK	070 227
LUMA	137 197
LUXOR	102 104 132 133 134 135 138 140 143 145 153 156 174 186 237
M ELECTRONIC	103 104
MAGNADYNE	163 164 204
MAGNAFON	199
MAGNASONIC	108
MARANTZ	108
MARSHAL	064
MATSUI	009 016 025 060 061 062 063 070 108 131 136 152 154 159 171 172
MERRIT	132
METZ	047 092 097 098 100 101 108 204 207 254
MITSUBISHI	075 076 077 097 113 204 222 224 240
MIVAR	044 042 159 235
MNARTT	007
MTC	086 109 134
MULTITECH	136 159 171 185
MURPHY	232
NAONIS	137
NECKERMANN	037 059 060 092 098 100 101 108 109 113 115 118 119 134 135 137 143 157 159
NEI	064 108
NIKKAI	219
NIKKO	108
NOBLIKO	232 235
NOGAMATIC	173 179 239
NOKIA	014 019 032 102 103 104 108 132 133 134 135 138 140 141 145 146 147 148 156 174
NORDMENDE	129 173 179 180 181 193 195 225 226 228 239
NORMN	108
NOVA	087
OCEANIC	032 103 104 135 140 156
OKANO	108
ONWA	009 010 064
ORAVA	108
ORBITER	086
ORION	025 059 060 061 062 064 070 108 110 118 219
OSAKE	106
OTTO-VERSAND	002 005 009 014 059 060 081 082 083 085 092 097 098 100 101 108 109 111 113
PAEL	235
PANASONIC	002 003 005 167 168 229
PATHE CINEMA	144
PATHE MARCONI	173 179 225 239
PHILCO	090 108 139 144 148 165 204



## Controlling Your TV with the Supplied Remote (Continued)

Manufacturer	Code Number
PHILIPS	065 066 067 068 069 092 108 109 111 112 114 115 116 119 122 123 124 125 193 212 251 252
PIONEER	193
PRANDONI- PRINCE	137 235
PRIMA	219
PRO VISION	108
PROFEX	108 136 171
QUELLE	002 010 014 019 025 059 060 072 084 086 087 088 092 097 098 100 101 102 175
RADIOLA	108
RADIOTONE	010 085 108 171
REDIFUSSION	187
REVOX	109
REX	088 089 137 157 158 164 197 246 247
RFT	064 085 135 204
RITAR	138
ROADSTAR	108
ROSITA	171
SABA	079 146 147 173 179 181 193 195 225 226 239
SAISHO	025 060 070 136 159
SAKIO	171
SALORA	019 032 103 104 132 133 134 135 137 138 140 142 143 145 150 156 174 237 241
SAMBERS	235
SAMSUNG	004 010 050 086 108 117 126 171 220 237
SANY	193
SANYO	014 018 019 020 032 034 071 086 087 189 218 221 222 223
SCHNEIDER	009 064 088 108 133 141 159 163 233
SEG	010 064 108 144 159 165 171 185 219
SEI-SINUDYNE	025 108 204 212
SELECO	088 089 137 157 197 222
SENTRA	064 133
SHARP	081 082 083 222
SHINTOM	108
SHINTOSHI	108
SHIVAKI	108
SIAREM	204
SIEMENS	092 096 097 098 100 101 108 210 218 219 221
SIESTA	085
SILVER	010 064
SINGER	108 164 204
SINUDYNE	118 131
SMARAGO	172
SOLAVOX	133
SONOLOR	140 156
SONTEC	108
SONY	072 074 211 212 213 214 215 216 217 222
SPECTRA	170
STARLITE	108 171
STARLUX	171
STERN	088 089 137 157 197
SUNSTAR	108 171
SUPERTECH	108 139 152 171
TADISTAR	108
TASHIKO	108
TASHIKO	159 218
TEC	108 139 144 159 170 171
TECHLINE	185
TECHNISAT	108 165
TECNISON	108 171
TEKON	171
TELEAVIA	173 178 179 225 239
TELEFUNKEN	079 177 179 181 193 195 200 210

Manufacturer	Code Number
TELEOPTA	171
TELERNT	109
TELETECH	165 171
TELETEXT	115
TELETON	088
TELETON	089 134 159 197
TENSAI	064 108 144 149 171 191
TENSON	171
TESLA	204
THOMSON	052 078 079 134 173 178 179 181 193 195 225 239
THORN	011 014 016 018 026 028 066 072 075 087 097 102 108 116 135 141 145 146 160
THORN- FERGUSON	160 188 200 227
TOSHIBA	012 016 026 036 037 222 232
TOWADA	144 185
TRISTAR	010 064
TRIUMPH	025 219 236
UHER	089 108 109 149 185 197 233
ULTRAVOX	108 164 185 204
UNIVERSUM	174
UNIVOX	204
VESTEL	108
VIDEOSAT	165
VIDEOTON	178 193
VIDEOWAY	230
VISION	108 149
VOXSON	137 204
WALTHAM	178
WATSON	064 108 149 171
WEGA	208 222
WHITE WESTINGHOUSE	108 110 149
YOKO	010 064 108 136 144 159 164 170 171
ZANUSSI	137 197
ZENITH	231

### Notes

- Depending on your TV, some or all buttons may not function on the TV, even after entering the correct manufacturer code.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote, the code number you have set may be reset to the default setting. Set the appropriate code number again.

# Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Solution
No power.	<ul style="list-style-type: none"> <li>The mains lead is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Plug the mains lead into the wall outlet securely.</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>The TV is not set to receive Recorder signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the Recorder appears on the TV screen.</li> </ul>
	<ul style="list-style-type: none"> <li>The video cable is not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the video cable securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The connected TV power is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the TV.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>The equipment connected with the audio cable is not set to receive Recorder signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the correct input mode on the audio receiver so you can listen to the sound from the Recorder.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio cables are not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the audio cable securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The power of the equipment connected with the audio cable is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the equipment connected with the audio cable.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio connecting cable is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Replace it with new one.</li> </ul>
The playback picture is poor.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
The Recorder does not start playback.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc.</li> </ul>
	<ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type, colour system, and regional code.)</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc with the playback side down.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc on the disc tray correctly inside the guide.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>The Rating level is set.</li> </ul>	<ul style="list-style-type: none"> <li>Cancel the Rating function or change the rating level.</li> </ul>
The picture from the external input is distorted	<ul style="list-style-type: none"> <li>The video signal from the external component is copy-protected.</li> </ul>	<ul style="list-style-type: none"> <li>You cannot connect via this recorder. Connect the component directly to your TV.</li> </ul>
Some channels are skipped over when using PROG (▲ / ▼).	<ul style="list-style-type: none"> <li>Those channels are not stored in the recorder.</li> </ul>	<ul style="list-style-type: none"> <li>Restore channels. See "Program Edit" on pages 20-21.</li> </ul>
The picture or sound of broadcasting channel is weak or missing.	<ul style="list-style-type: none"> <li>Aerial or cables are loose.</li> </ul>	<ul style="list-style-type: none"> <li>Tighten connections or replace cable.</li> </ul>
Camcorder image is not shown.	<ul style="list-style-type: none"> <li>Camcorder is off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn camcorder on and operate properly.</li> </ul>
Camcorder image via AV3 input or DV IN to Recorder is not shown on TV screen.	<ul style="list-style-type: none"> <li>Recorder INPUT SELECT is incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>Use INPUT to select input channel (AV1, AV2, AV3, DV, etc.)</li> </ul>

## Moisture Condensation

Moisture condensation can occur:	In locations where moisture condensation may occur:
<ul style="list-style-type: none"> <li>When the Recorder is moved from a cold place to a warm place.</li> <li>Under extremely humid conditions.</li> </ul>	<ul style="list-style-type: none"> <li>Keep the Recorder plugged into an AC power outlet with POWER On. This will help prevent condensation.</li> <li>When condensation has occurred, wait a few hours for the Recorder to dry before using it.</li> </ul>

## Troubleshooting (Continued)

Symptom	Cause	Solution
Can't play a disc recorded using this recorder on another player.	• The disc was recorded in Video mode.	• Finalize the disc. (page 28)
	• Some players will not play even a finalized disc recorded in Video mode.	• No solution.
	• The disc was recorded in VR mode,	• The other player must be RW compatible in order to play it.
	• Discs recorded with copy-once material cannot be played on other players.	• No solution.
Cannot record or did not record successfully.	• The remaining blank space on the disc is insufficient.	• Use another disc.
	• The source you are trying to record is copy protected.	• You cannot record the source.
	• When setting the recording channel, the channel is tuned on the TV's own tuner.	• Select the channel on the recorder's built-in TV tuner.
	• When recording to a Video mode disc, programs that are copy-once protected cannot be recorded.	• Use a VR mode formatted disc for copy-once material.
Timer recording is not possible.	• Clock in Recorder is not set to correct time.	• Set clock to correct time. See "Clock Set" on page 22.
	• Timer has been programmed incorrectly.	• Reprogram Timer. See "Timer Recording" on page 47.
	• Timer record indicator light does not appear after programming timer.	• Reprogram Timer.
	• Timer recording is not possible unless channels are previously set.	• Set channels.
Stereo Audio Record and/or Playback is not present.	• TV is not Stereo-compatible.	• No solution.
	• Broadcast program is not in stereo format.	• No solution.
	• Recorder A/V Out jacks are not connected to TV A/V In jacks.	• Make A/V connections. Stereo is available only via A/V output from Recorder.
	• Recorder Audio/Video Out is not selected for viewing at the TV.	• Select AUX or A/V source as TV input.
	• Recorder's TV audio channel is set to mono.	• Set TV audio channel mode to Stereo. See "Changing TV audio channel" on page 30.
The remote control does not work properly.	• The remote control is not pointed at the remote sensor of the Recorder.	• Point the remote control at the remote sensor of the Recorder.
	• The remote control is too far from the Recorder.	• Operate the remote control within 7 m.
	• There is an obstacle in the path of the remote control and the Recorder.	• Remove the obstacle.
	• The batteries in the remote control are exhausted.	• Replace the batteries with new ones.
Recorder power remains on after timer recording ends.	• The disc has no free space.	• Use a disc with sufficient free space to perform timer recording.

# Specifications

## General

Power requirements	AC 220-240V, 50/60 Hz
Power consumption	35W
Dimensions (approx.)	432 X 81.5 X 367 mm (w x h x d)
Mass (approx.)	6.6 kg
Operating temperature	5°C to 35°C
Operating humidity	5 % to 90 %
Television system	PAL I/I colour system
Recording format	PAL

## System

Laser	Semiconductor laser, wavelength 650 nm
Video head system	Double azimuth 4 heads, helical scanning
Signal system	PAL

## Recording

Recording format	DVD VideoRecording, DVD-VIDEO
Recordable discs	DVD-ReWritable, DVD-Recordable, DVD+ReWritable, DVD+Recordable, DVD-Random Access Memory
Recordable time	DVD (4.7GB) : Approx. 1 hour (XP mode), 2 hours (SP mode), 4 hours (LP mode), 6 hours (EP mode)
Video recording format	
Sampling frequency	27MHz
Compression format	MPEG 2
Audio recording format	
Sampling frequency	48kHz
Compression format	Dolby Digital

## Playback

Frequency response	DVD (PCM 48 kHz): 8 Hz to 22 kHz, CD: 8 Hz to 20 kHz DVD (PCM 96 kHz): 8 Hz to 44 kHz
Signal-to-noise ratio	More than 100 dB (AUDIO OUT connector)
Harmonic distortion	Less than 0.008% (AUDIO OUT connector)
Dynamic range	More than 95 dB (AUDIO OUT connector)

## Inputs

AERIAL IN	Aerial input, 75 ohms
VIDEO IN	1.0 Vp-p 75 ohms, sync negative, RCA jack x 1 / SCART x 2
AUDIO IN	0 dBm more than 47 kohms, RCA jack (L, R) x 1 / SCART x 2
DV IN	4 pin (i.LINK/IEEE 1394 standard)
S-VIDEO IN	(Y) 1.0 V (p-p), 75 Ω, negative sync, Mini DIN 4-pin x 1 (C) 0.3 V (p-p) 75 Ω

## Outputs

VIDEO OUT	1.0 Vp-p 75 ohms, sync negative, SCART x 2
S-VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, negative sync, Mini DIN 4-pin x 1 (C) 0.3 V (p-p) 75 Ω
COMPONENT VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, negative sync, RCA jack x 1 (Cb/Pb)/(Cr/Pr) 0.7 V (p-p), 75 Ω, RCA jack x 2
Audio output (digital audio)	0.5 V (p-p), 75 Ω, RCA jack x 1
Audio output (optical audio)	3 V (p-p), 75 Ω, Optical connector x 1
Audio output (analogue audio)	2.0 Vrms (1 KHz, 0 dB), 600 Ω, RCA jack (L, R) x 1 / SCART

- Design and specifications are subject to change without notice.
- Manufactured under licence from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- DTS and DTS Digital Out are registered trademarks of Digital Theater Systems, Inc.



# BATTERY SAFETY GUIDELINES

**PLEASE PHOTOCOPY AND DISPLAY**


Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused — resulting in leakage or, in extreme cases, fire or explosion. Here are some simple guidelines to safe battery use designed to eliminate any such problems.

**ALWAYS**




Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or in extreme cases, fire or even an explosion.

**ALWAYS**

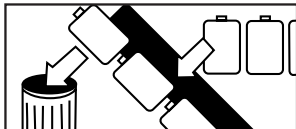

Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or in extreme cases, fire or even an explosion.

**ALWAYS**

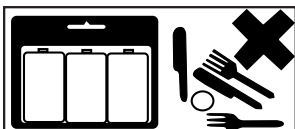

Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.

**ALWAYS**




Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.

**NEVER**



Never dispose of batteries in fire as this can cause them to explode. Please put dead batteries in with the normal household waste.

**NEVER**



Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.

**ALWAYS**




Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.

**NEVER**




Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.

**ALWAYS**

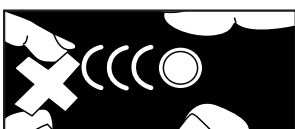


Keep loose button cells away from young children.

**ALWAYS**



Make sure battery compartments are secure.

**ALWAYS**



Seek medical advice if you believe a cell has been swallowed.

## SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

★★★★★★★★★★

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and interconnection between pieces of equipment) are properly made and in accordance with the manufacturer's instructions.

Switch off and withdraw the mains plug when making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

★★★★★★★★★★

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure that your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fix the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

---NEVER let anyone especially children push anything into holes, slots or any other opening in the case — this could result fatal electrical shock.

---NEVER guess or take chances with electrical equipment of any kind.

---it is better to be safe than sorry!

★★★★★★★★★★

**HITACHI-YOUR GUARANTEE OF  
EXCELLENCE (for UK only)**

For the period of 12 MONTHS from the date of purchase your product has the benefit of our FULL PARTS AND LABOUR GUARANTEE as detailed below.

We undertake to replace or repair any part of the product which fails due to manufacturing defect within 12 months of the date of purchase provided that:

- 1) The product has been installed and used only in accordance with the instructions supplied with the product.
- 2) The product has not been repaired, maintained, or modified by any person other than our authorised Engineer.
- 3) The product serial number is not removed or altered.

This guarantee does not apply to products acquired second hand or for commercial or communal use.

This guarantee does not extend to user control adjustments, battery replacement and aerial adjustment.

Any parts replaced under guarantee shall become the property of Hitachi Europe Ltd.

Please note that evidence of the date of purchase will be required before service under guarantee is carried out.

This guarantee does not affect your statutory rights. In all cases of difficulty consult your Hitachi dealer.

**HITACHI EUROPE LTD.**

Consumer Affairs Department

PO Box 3007

Maidenhead

Berkshire SL6 8ZE

UNITED KINGDOM

Tel: 0870 405 4405

Email: [consumer.mail@hitachi-eu.com](mailto:consumer.mail@hitachi-eu.com)

[www.hitachidigitalmedia.com](http://www.hitachidigitalmedia.com)



# HITACHI

Hitachi, Ltd. Tokyo, Japan  
International Sales Division  
**THE HITACHI ATAGO BUILDING,**  
No. 15-12 Nishi Shinbashi, 2 - Chome,  
Minato - Ku, Tokyo 105-8430, Japan.  
Tel: 03 35022111

## HITACHI EUROPE LTD,

Whitebrook Park  
Lower Cookham Road  
Maidenhead  
Berkshire  
SL6 8YA

## UNITED KINGDOM

Tel: 01628 643000  
Fax: 01628 643400  
Email: [consumer-service@hitachi-eu.com](mailto:consumer-service@hitachi-eu.com)

## HITACHI EUROPE S.A.

364 Kifissias Ave. & 1, Delfon Str.  
152 33 Chalandri  
Athens

## GREECE

Tel: 1-6837200  
Fax: 1-6835964  
Email: [service.hellas@hitachi-eu.com](mailto:service.hellas@hitachi-eu.com)

## HITACHI EUROPE GmbH

Munich Office  
Dornacher Strasse 3  
D-85622 Feldkirchen bei München

## GERMANY

Tel: +49-89-991 80-0  
Fax: +49-89-991 80-224  
Hotline: +49-180-551 25 51 (12ct/min)  
Email: [HSE-DUS.service@hitachi-eu.com](mailto:HSE-DUS.service@hitachi-eu.com)

## HITACHI EUROPE S.A.

Gran Via Carlos III, 86, planta 5  
Edificios Trade - Torre Este  
08028 Barcelona

## SPAIN

Tel: +34 93 409 2550  
Fax: +34 93 491 3513  
Email: [atencion.cliente@hitachi-eu.com](mailto:atencion.cliente@hitachi-eu.com)

## HITACHI EUROPE srl

Via Tommaso Gulli N.39, 20147  
Milano, Italia

## ITALY

Tel: +39 02 487861  
Tel: +39 02 38073415 Servizio Clienti  
Fax: +39 02 48786381/2  
Email: [customerservice.italy@hitachi-eu.com](mailto:customerservice.italy@hitachi-eu.com)

## HITACHI Europe AB

Box 77 S-164 94 Kista

## SWEDEN

Tel: +46 (0) 8 562 711 00  
Fax: +46 (0) 8 562 711 13  
Email: [csgswe@hitachi-eu.com](mailto:csgswe@hitachi-eu.com)

## HITACHI EUROPE S.A.S

Lyon Office  
B.P. 45, 69671 BRON CEDEX

## FRANCE

Tel: +33 04 72 14 29 70  
Fax: +33 04 72 14 29 99  
Email: [france.consommateur@hitachi-eu.com](mailto:france.consommateur@hitachi-eu.com)

## HITACHI EUROPE LTD (Norway) AB

STRANDVEIEN 18  
1366 Lysaker

## NORWAY

Tel: 67 5190 30  
Fax: 67 5190 32  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## HITACH EUROPE AB

Egebækgård  
Egebækvej 98  
DK-2850 Nærum

## DENMARK

Tel: +45 43 43 6050  
Fax: +45 43 60 51  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## HITACHI EUROPE AB

Neopoli / Niemenkatu 73  
FIN-15140 Lahti

## FINLAND

Tel : +358 3 8858 271  
Fax: +358 3 8858 272  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

## Hitachi Europe Ltd

Bergensesteenweg 421  
1600 Sint-Pieters-Leeuw

## BELGIUM

Tel: +32 2 363 99 01  
Fax: +32 2 363 99 00  
Email: [sofie.van.bom@hitachi-eu.com](mailto:sofie.van.bom@hitachi-eu.com)

## HITACHI EUROPE LTD

Na Sychrove 975/8  
101 27 Praha 10 - Bohdalec

## CZECH REPUBLIC

Tel: +420 267 212 383  
Fax: +420 267 212 385  
Email: [csgnor@hitachi-eu.com](mailto:csgnor@hitachi-eu.com)

[www.hitachidigitalmedia.com](http://www.hitachidigitalmedia.com)