

LCD Colour Television

Télévision Couleur LCD

LCD-Farb-TV-Gerät

Televisione a Colori LCD

L26A01

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

HD
ready

HITACHI
Inspire the Next

Instructions for use **GB**

Notice d'utilisation **F**

Bedienungsanleitung **D**

Istruzioni per l'uso **I**



HITACHI

Contents

| | | | |
|--|----|---|----|
| Safety Precautions | 3 | <i>PIP Position</i> | 13 |
| Features | 6 | <i>PIP Source</i> | 13 |
| Accessories | 6 | <i>PIP SWAP</i> | 13 |
| LCD TV Front View | 7 | <i>PAP</i> | 13 |
| Rear View and Peripheral Connections | 7 | <i>PAP ON-OFF</i> | 13 |
| Remote Control Buttons | 8 | <i>PAP Picture</i> | 13 |
| Preparation | 9 | <i>PAP Source</i> | 14 |
| Before Switching On Your TV | 9 | <i>PAP SWAP</i> | 14 |
| Power Connection | 9 | Sleep Timer | 14 |
| Connections To The Aerial Input Socket | 9 | Child Lock | 14 |
| Inserting Batteries In The Remote Control | 9 | Language | 14 |
| Handset | 9 | AV-2 Out | 14 |
| Handling the Remote Control | 9 | PC Audio In | 14 |
| Operating Range for the Remote Control | 9 | Blue Background | 14 |
| Switching The TV ON/OFF | 10 | Menu Background | 14 |
| Navigating the Menu System | 10 | Menu Timeout | 14 |
| Initial Settings | 10 | Teletext Language | 14 |
| Basic Operations | 10 | Default Zoom | 14 |
| Operation with the buttons on the TV | 10 | Install Menu | 14 |
| Volume Setting | 10 | Program Table | 15 |
| Programme Selection | 10 | <i>Name</i> | 15 |
| Entering Main Menu | 10 | <i>Insert</i> | 15 |
| AV Mode | 11 | <i>Delete</i> | 15 |
| Operation with Remote Control | 11 | <i>APS (Auto Programming System)</i> | 15 |
| Volume Setting | 11 | A.P.S.(Auto Programming System) Country | 15 |
| Programme Selection (Previous or next programme) | 11 | Program | 15 |
| Programme Selection (direct access): | 11 | Band | 16 |
| Menu System | 11 | Channel | 16 |
| Picture Menu | 11 | Colour System | 16 |
| Mode | 11 | Sound System | 16 |
| Contrast/Brightness/Sharpness/Colour/Hue | 11 | Fine Tune | 16 |
| Colour Temp | 11 | Search | 16 |
| Noise Reduction | 11 | Store | 16 |
| Film Mode | 11 | Install menu in AV modes | 16 |
| 3D Comb | 12 | <i>Colour System</i> | 16 |
| Picture Zoom | 12 | <i>VCR</i> | 16 |
| Reset | 12 | Store | 16 |
| Sound Menu | 12 | Source menu | 16 |
| Volume | 12 | PC Mode | 17 |
| Equalizer | 12 | Installation | 17 |
| Balance | 12 | Menu System in PC mode | 17 |
| Headphone | 12 | Sound Menu/Feature Menu | 17 |
| <i>volume</i> | 12 | PC Picture Menu | 17 |
| <i>sound mode</i> | 12 | PC POSITION Menu | 17 |
| <i>balance</i> | 12 | Autoposition | 17 |
| Sound Mode | 12 | H (Horizontal) Position | 17 |
| AVL | 12 | V (Vertical) Position | 17 |
| Effect | 12 | Phase | 17 |
| Dynamic Bass | 12 | Dot Clock | 17 |
| Subwoofer | 12 | Sound in PC mode | 17 |
| 3DS | 13 | Other Features | 18 |
| Feature Menu | 13 | TV Status | 18 |
| PP | 13 | Mute Indicator | 18 |
| <i>PIP ON-OFF</i> | 13 | PIP and PAP Modes | 18 |
| <i>PIP Picture</i> | 13 | AV Modes | 18 |
| | | Zoom Modes | 18 |
| | | Auto | 18 |

| | |
|--|-----------|
| Zoom | 18 |
| Cinema | 18 |
| 16:9 Zoom | 18 |
| Subtitle | 18 |
| 4:3 | 19 |
| 14:9 Zoom | 19 |
| Panoramic | 19 |
| Freeze Picture | 19 |
| Teletext | 19 |
| Connect Peripheral Equipment | 20 |
| High Definition | 20 |
| Via The Scart | 20 |
| Via Aerial Input | 20 |
| Decoder | 20 |
| Connect a decoder with an aerial socket to the TV | 20 |
| Connect a decoder without an aerial socket to the TV | 20 |
| TV And Video Recorder | 20 |
| Playback NTSC | 20 |
| Camera And Camcorder | 20 |
| To Connect To AV Input | 20 |
| To Connect To S-VHS Input | 20 |
| Connect The Decoder To The Video Recorder | 20 |
| Connecting Headphones (optional) | 20 |
| Audio Lineout | 20 |
| Connecting Subwoofer | 20 |
| Tips | 21 |
| Care Of The Screen | 21 |
| Poor Picture | 21 |
| No Picture | 21 |
| Sound | 21 |
| Remote Control | 21 |
| Peripheral Equipment Connections | 22 |
| Aerial Connection | 22 |
| Specifications | 23 |
| Signal Input | 25 |
| Appendix A: PC Input Typical Display Modes | 26 |
| Appendix B: AV and HDMI Signal Compatibility | 27 |
| Appendix C: Main and PIP-PAP Picture Combinations | 28 |
| Appendix D: AV Source Selection | 28 |
| UK Guarantee | 29 |

Safety Precautions

Please read the following recommended safety precautions carefully for your safety.

IMPORTANT SAFETY INFORMATION ON OPERATING YOUR TV

Do's and Don'ts



DO's

This Television has been designed and manufactured to meet international safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.

DO consult your dealer if you are in any doubt about installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

This TV is supplied with a fitted mains plug. This plug must not be cut off as it may contain a special radio interference filter, the removal of which could lead to impaired performance. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer. Observe the manufacturers instructions when connecting extension leads to the TV. Check the fuse rating on the new plug, this should be fitted with a 5 Amp fuse which conforms to either ASTA or BSI (BS1 362) approvals, these are easily identifiable by either the  or  symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician.

DON'Ts

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way switch off, withdraw the mains plug and consult your dealer.

DON'T place water filled vessels on top of T.V. cabinets.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs or stands to the TV with any screws other than those provided - to ensure complete safety always use the manufacturers approved stand with the fixings provided.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

- **NEVER let anyone, especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electric shock.**
- **NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry!**

Be sure to ground the connection properly.

Connect the ground terminal of TV with the ground terminal provided at the power outlet using the enclosed power cord. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.



Surely connect the ground wire.

1. Power Source

The TV set should be operated only from a 220-240 V AC, 50 Hz outlet. Ensure that you select the correct voltage setting for your convenience.

2. Power Cord

Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock. When it is damaged and needs to be changed, it should be done by qualified personnel.

3. Moisture and Water

Do not use this equipment in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this equipment to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases, on top. Avoid from dripping or splashing.

If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

4. Cleaning

Before cleaning, unplug the TV set from the wall outlet. Do not use liquid or aerosol cleaners. Use soft and dry cloth.

5. Ventilation

The slots and openings on the TV set are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

6. Heat and Flames

The set should not be placed near to naked flames and sources of intense heat, such as an electric heater. Ensure that no naked flame sources, such as lighted candles, are placed on top of the TV. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

7. Lightning

In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.

8. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts which are specified by the manufacturer or have the same

specifications as the original one. Unauthorized substitutions may result in fire, electrical shock, or other hazards.

9. Servicing

Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock.

10. Waste Disposal

Instructions for waste disposal:

- Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.
- Battery, including those which are heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environmentally sound manner. Find out about the legal regulations which apply in your area.
- Cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow local ordinances or regulations for disposal.

Information for users applicable in European Union countries




This symbol on the product or on its packaging means that your electrical and electronic equipment should be disposed at the end of life separately from your household wastes. There are separate collection systems for recycling in EU.

For more information, please contact the local authority or the dealer where you purchased the product.

11. Disconnect Device

The mains plug is used to disconnect TV set from the mains and therefore it shall remain readily operable.


12. Excessive sound pressure from earphones and headphones can cause hearing loss.
13. To prevent injury, this device must be securely attached to the wall in accordance with the installation instructions when mounted to the wall (if the option is available).

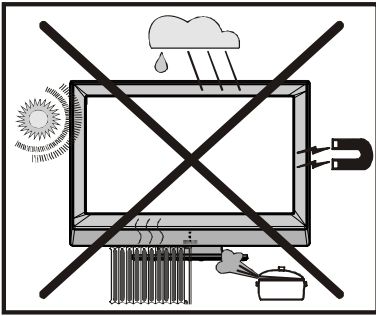

14. Connection to a television distribution system (Cable TV etc.) from tuner:

Apparatus connected to the protective earthing of the building installation through the mains connection or through other apparatus with a connection to protective earthing - and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard.

To ground the antenna system properly, be sure that the cable grounding is connected with the building's grounding system. Note that the connection should follow IEC 60364-7-707 and IEC 603646-5-548 standards which require that the grounding should be as close as possible to the cable connection.

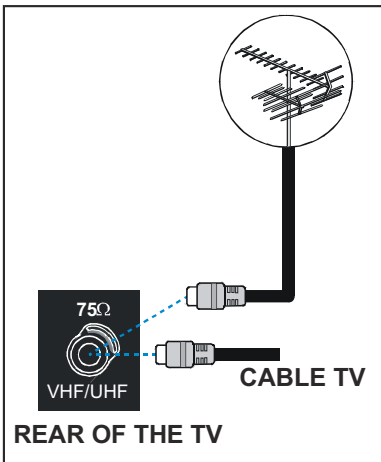

Features

- Remote controlled 26" colour LCD TV.
- 100 programmes from VHF, UHF bands or cable channels can be preset.
- It can tune cable channels.
- Controlling the TV is very easy by its menu driven system.
- It has 3 Scart sockets for external devices (such as video, video games, audio set, etc.)
- Stereo sound system (German+Nicam).
- Full function Teletext (1000 pages).
- Fastext, TOP text.
- Headphone connection.
- A.P.S. (Automatic Programming System).
- All programmes can be named.
- Forward or backward automatic tuning.
- Sleep timer.
- Child Lock.
- Automatic sound mute when no transmission.
- NTSC Playback.
- AV in and S-VIDEO in are available.
- It has two HDMI connectors for Digital Video and Audio. This connection is also designed to accept High Definition signals.
- AVL (Automatic Volume Limiting)
- When no valid signal is detected, after 5 minutes the TV switches itself automatically to stand-by mode.
- PLL (Frequency Search)
- PC Input
- Plug&Play for Windows 9X, ME, Vista, 2000, XP.
- Audio Line Out

Accessories



 
UK Plug



EU Plug



Remote Controller
CLE-984



Batteries
2 X AA




Instruction Book




Quick Guide

LCD TV Front View

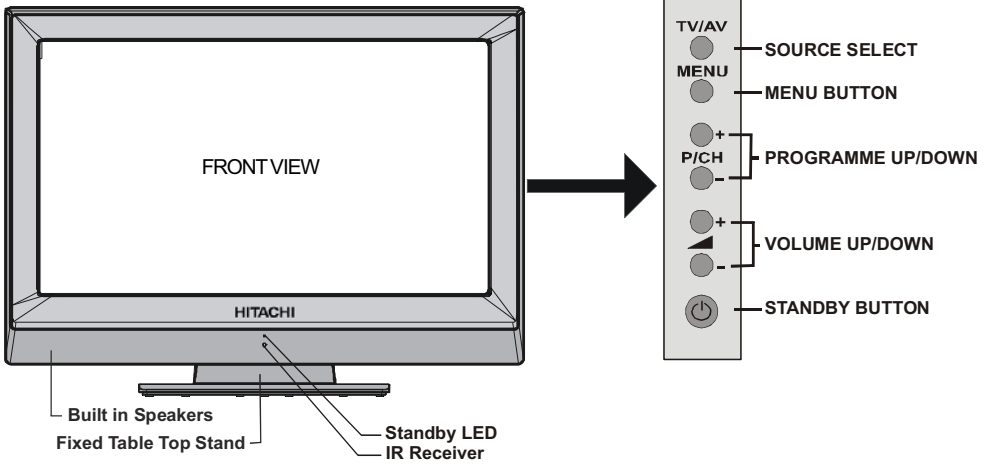

Rear View and Peripheral Connections

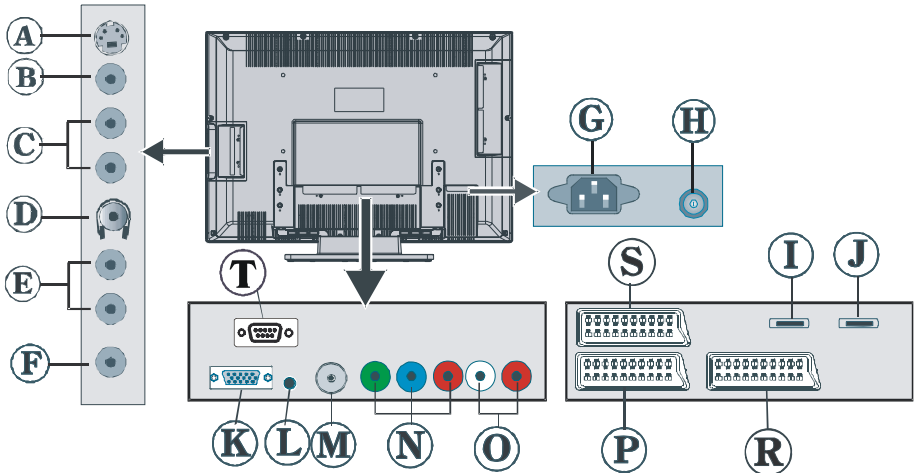


- | | | |
|-------------------------|----------------------------------|--------------------------|
| Ⓐ S-VHS Input (S-Video) | Ⓕ Power On/Off Switch | Ⓞ Component Audio Inputs |
| Ⓑ Video Input (FAV) | Ⓡ HDMI Input 2 (HDMI 2) | Ⓟ SCART 1 (AV-1) |
| Ⓒ Audio Inputs | Ⓢ HDMI Input 1 (HDMI 1) | Ⓡ SCART 2 (AV-2) |
| Ⓓ Headphone | Ⓣ PC VGA Input (PC RGB) | Ⓢ SCART 3 (AV-3) |
| Ⓔ Audio Line Outs | Ⓤ PC Audio Input | Ⓣ For Service Use Only |
| Ⓛ Subwoofer Output | Ⓡ RF (TV/DTT) | |
| Ⓜ Power Cord Input | Ⓝ Component Video Inputs (YPbPr) | |

Note: Because FAV CVBS and SVHS Y are connected parallelly, the picture may blend if the two peripherals are used at the same time. Likewise, because SVHS C and SCART II R are connected parallelly, the picture may blend if the two peripherals are used at the same time. Thus these two are not to be used at the same time.

Remote Control Buttons

- ① = Stand by On/Off
- ② = Info
- ③ **DVD** = Select DVD
- ④ **TV/DTT** = TV / Quit Menu
- ⑤ = Hold in teletext mode, Freeze picture
- ⑥ = Volume Up/ Down
- ⑦ = Mute On/Off
- ⑧ **RED** (Only use in Teletext mode)
- ⑨ **GREEN** (Only use in Teletext mode)
- ⑩ = Teletext On-Off
- ⑪ = Time / Teletext & TV
- ⑫ = Menu On/Off
- ⑬ = Cursor buttons
- ⑭ **FUNCTION** = No function
- ⑮ = Equalizer Sound Mode
- ⑯ = Aspect ratio
- ⑰ = No Function
- ⑱ Control buttons for DVD players/recorders (**)
- ⑲ = Go back to previous menu
- ⑳ **OK** = Enter
- ㉑ / **GUIDE** = Index Page
- ㉒ = TXT Subtitle in TV mode; Subpage in teletext mode.
- ㉓ = Reveal
- ㉔ **BLUE** (Only use in Teletext mode)
- ㉕ **YELLOW** (Only use in Teletext mode)
- ㉖ = Programme Up/ Down
- ㉗ = Mono/Stereo - Dual A-B
- ㉘ = PIP, PAP On-Off / PAT
- ㉙ **0 - 9** = Digit buttons

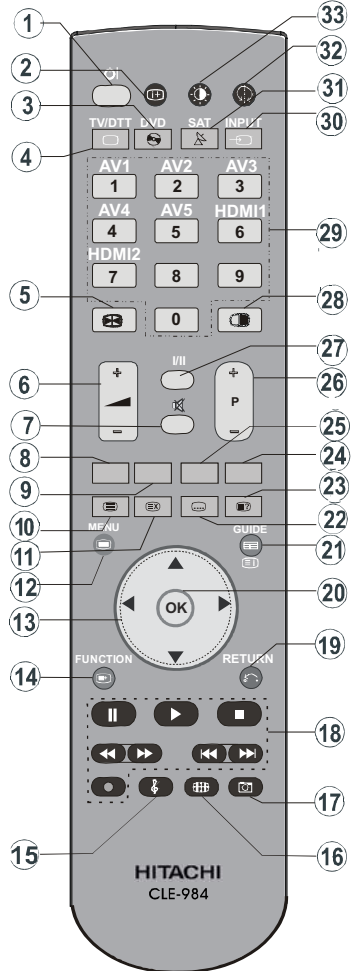


- ⑳ **INPUT** = INPUT
- ㉑ **SAT** = Select SAT
- ㉒ = No function
- ㉓ = Picture mode

** These buttons can control most Hitachi DVD Players and Recorders.

Preparation

For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

Use this apparatus in moderate climates.

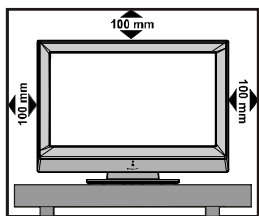

Before Switching On Your TV

Power Connection

IMPORTANT: The TV set is designed to operate on **220-240V AC, 50 Hz.**

- After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.


Connections To The Aerial Input Socket

- Connect the aerial or cable TV plug to the Aerial input socket located at the rear of the TV and connect the cable plug coming out from the TV out socket located on the devices (VCR, DVB etc.) to this socket as well.

Inserting Batteries In The Remote Control Handset

WARNING : Remote control is battery included. A plastic protector is used to disconnect the batteries in order to prevent the battery life from reducing. Please remove the plastic protector before the first use.

- Remove the battery cover located on the back of the handset by gently pulling backwards from the indicated part.
- Insert two **AA/R6** or equivalent type batteries inside. Place the batteries in the right directions and replace the battery cover.

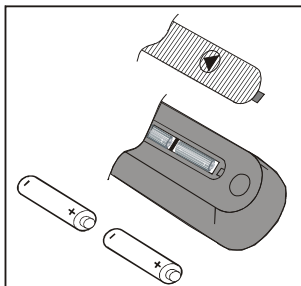


Note: Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of battery.

Handling the Remote Control

- It could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.
- Never mix used and new batteries in the device.
- Replace all the batteries in a device at the same time.
- Remove the batteries if the remote control is not going to be used for an extended period of time.
- To avoid possible failure, read the following instructions and handle the remote control properly.
- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under the direct sunlight or near sources of excessive heat.

Operating Range for the Remote Control

- Point the top of the remote control toward the LCD TV's remote sensor LED while pressing a button.

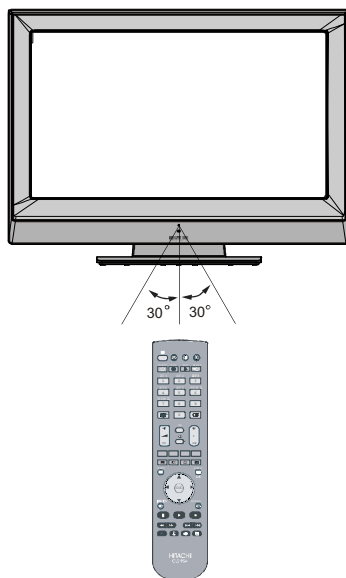

Remote range is approximately 7m/23ft.

Switching The TV ON/OFF

To switch the TV on:

Your TV will switch on in two steps:

- 1- Connect the power cord to the system. Press Power On/Off switch. Then the TV switches itself to stand-by mode (optional).
- 2- To switch on the TV from stand-by mode either: Press a digit button on the remote control so that a programme number is selected, or Press the "**P/CH**" or "**P/CH+**" button on the TV or press the **P+** or **P-** button on the remote control, so that last mode switched off is selected.

By either method the TV will switch on.

To switch the TV off:


- Press the "⏻ (stand-by)" button on the remote control or On/Off switch on the TV, so the TV will switch to stand-by mode.

To power down the TV completely, press On/Off switch

or,

Unplug the power cord from the mains socket.

Navigating the Menu System

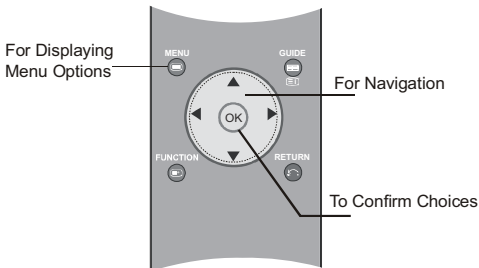


- 1- Press to display the menu.
- 2- Press to select an icon.
- 3- Use to highlight. Press for more options in analogue TV mode. Use **OK** in DTV mode for viewing a submenu.
- 4- Press to change the settings. Press **OK** to set as default.
- 5- To exit the menu or return from sub-menu screen, press .

These explanations are available for the navigation of the whole menu system. To select options that are explained in the following parts, refer to "Navigating The Menu System".

Initial Settings

When the TV is turned on for the first time, Auto Programme menu will be displayed on the screen

Because this is the first time the TV is used, there are no channels stored in the memory and the following message appears on the screen.

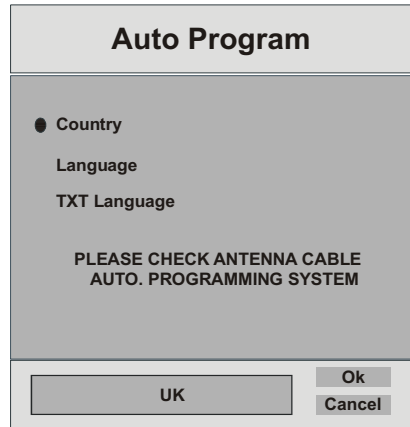

By pressing or button, adjust the **Country** item and press to highlight "**Language**" item. Use or button to set "**Language**". Use or buttons to select "**TXT Language**" and set it by using or buttons. Press "**OK**" button to continue:

For more information on this process, see "**Install Menu**" section.

Basic Operations

You can operate your TV using both the remote control and onset buttons.

Operation with the buttons on the TV

Volume Setting

- Press - button to decrease volume or + button to increase volume, so a volume level scale (slider) will be displayed at the middle of the bottom on the screen.

Programme Selection

- Press **P/CH +** button to select the next programme or **P/CH -** button to select the previous programme.

Entering Main Menu

- Press the **MENU** button to enter Main menu. In the Main menu select sub-menu using **P/CH -** or **P/CH +** buttons and enter the sub-menu using - or + buttons. To learn the usage of the menus, refer to the Menu System sections.

AV Mode

Press the **AV** button at the control panel on the the TV to switch your TV to AV modes.

Operation with Remote Control

The remote control of your TV is designed to control all the functions of the model you selected. The functions will be described in accordance with the menu system of your TV.

Functions of the menu system are described in the following sections.

Volume Setting

Press **▲** + button to increase volume. Press **▼** - button to decrease volume. A volume level scale (slider) will be displayed in the middle at the bottom of the screen.

Programme Selection (Previous or next programme)

- Press **P** - button to select the previous programme.
- Press **P** + button to select the next programme.


Programme Selection (direct access):

Press digit buttons on the remote control to select programmes between 0 and 9. TV will switch to the selected programme. To select programmes between 10-99 (for analogue), press the digit buttons consecutively which programme you want to select (eg. for programme 27, first press 2 and then 7). When it is late to press second digit button only the first digit programme will be displayed. The limit of the delay time is 3 seconds.

Press directly the programme number to reselect single digit programmes.

Menu System

Picture Menu

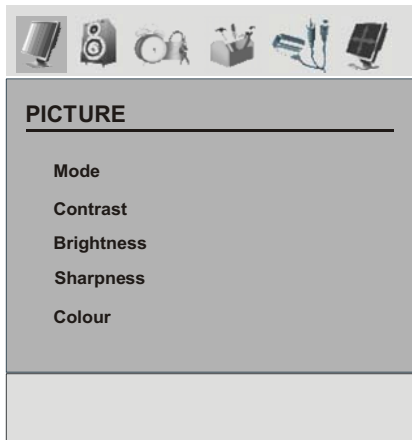

In the picture menu; if PC, YPbPr or HDMI modes is selected, resolution information is displayed at the bottom of the menu OSD.

Mode

By pressing **▲** / **▼** button, select **Mode**. Press **◀** / **▶** button to choose from one of these options: **Cinema**, **Dynamic** and **Natural**.

Contrast/Brightness/Sharpness/Colour/Hue

By pressing **▲** / **▼** button, select the desired Option.

Press **◀** / **▶** button to set the level.

Hint: Hue is displayed in picture menu when the TV receives an NTSC signal.

Colour Temp

- By pressing **▲** / **▼** button select **Colour Temp**.
- Press **◀** / **▶** to choose from one of these options: **Cool**, **Normal** and **Warm**.

Noise Reduction

By pressing **▲** / **▼** button select **Noise Reduction**. Press **◀** / **▶** to choose from one of these options: **Low**, **Medium**, **High** or **Off**.

Film Mode

Films are recorded at a different number of frames per second to normal television programmes.

By pressing **▲** / **▼** button, select Film Mode.

Press **◀** / **▶** button to set this feature On or Off. Turn this feature on when you are watching films to see the fast motion scenes clearly.

3D Comb

3D Comb is used to improve colour transitions and colour quality of pictures.

By pressing ▲ / ▼ button, select **3D Comb**. Press ◀ / ▶ button to set this feature On or Off.

Note: 3D Comb feature is not functional in NATURAL picture mode.


Picture Zoom

By pressing ▲ / ▼ button select **Picture Zoom**. Use ◀ / ▶ buttons, to change picture zoom to **Auto, 16:9, 4:3, Panaromic, 14:9 Zoom, Cinema, Sub-title** or **Zoom**.

Reset

By pressing ▲ / ▼ button, select **Reset**. Press ▶ or **OK** button to reset the picture modes to factory default settings.

Sound Menu

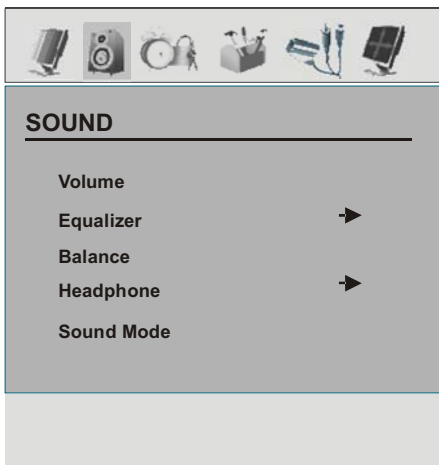

Volume

By pressing ▲ / ▼ select **Volume** . Press ◀ / ▶ button to change the level of the Volume.

Equalizer

By pressing ▲ / ▼ select **Equalizer**. Press ◀ / ▶ button to change the Equalizer setting. In equalizer menu, the mode can be changed to **Pop, Rock, Jazz, Flat, Classic** or **User**. Select the desired frequency by ▲ / ▼ button and increase or decrease the frequency gain by pressing ◀ / ▶ button.

Note: Equalizer menu settings can be altered only when the Equalizer Mode is in User.

Balance

By pressing ▲ / ▼ select **Balance**. Press ◀ / ▶ button

to change the level of the balance. Balance level can be adjusted between -32 and +32.

Headphone

By pressing ▲ / ▼ button, select **Headphone**. Press ▶ button to enter headphone menu.

Volume

By pressing ▲ / ▼ button, select **Volume**. Press ▶ button to increase hp volume level. Press ◀ button to decrease hp volume level. Headphone volume level can be adjusted between 0 and 63.

Sound mode

By pressing ▲ / ▼ button, select **Sound Mode**. Press ◀ / ▶ button to change sound mode.

Sound mode is used to identify sound mode of the headphone and can be set to mono, stereo, dual I or dual II according to the transmission.

balance

By pressing ▲ / ▼ button, select **Balance**. Press ▶ button to increase balance to the right. Press ◀ button to decrease balance to the left. Balance level can be adjusted between -32 and +32.

Press the **MENU** button to return to the previous menu.

Sound Mode

By pressing ▲ / ▼ select **Sound Mode**. Press ◀ / ▶ button, you can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode.

AVL

By pressing ▲ / ▼ select **AVL**. Press ◀ / ▶ button to set the AVL as on or off.

Effect

By pressing ▲ / ▼ select **Effect**. Press ◀ / ▶ button to set Effect as on or off.

Dynamic Bass

Dynamic Bass is used to increase bass effect of the TV set.

By pressing ▲ / ▼ button, select **Dynamic Bass**. By pressing ◀ / ▶ button set Dynamic bass to Low, High or Off. It is not recommended to select High if listening at high volume levels. There is a subwoofer output that can accept an active subwoofer if you wish to create very high levels of Bass.

Subwoofer is active only if Dynamic Bass is set to Off.

Subwoofer

It is possible to connect an external, active subwoofer to the set to give a much deeper bass effect.

By pressing ▲ / ▼ button, select **Subwoofer**. Subwoofer can be set to On or Off.

Dynamic Bass is not available if Subwoofer is set to On.

Set Subwoofer to On when you connect an external subwoofer to the set.


3DS

By pressing ▲ / ▼ button, select **3DS**. 3DS can be set to On or Off.

Set 3DS to On when you connect an external subwoofer to the set.


If you select "3DS" On, AVL, Effect and Equalizer items will be invisible.

Feature Menu

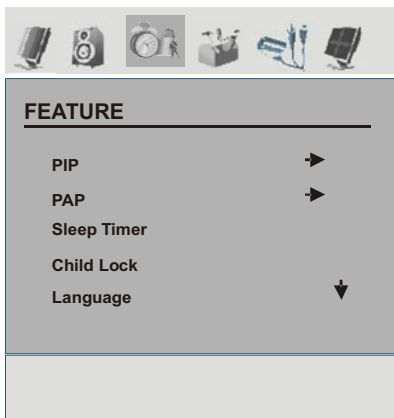

PIP

In the **Feature** menu, highlight **PIP** item by pressing ▲ / ▼ buttons. Press ► button to enter **PIP** submenu:

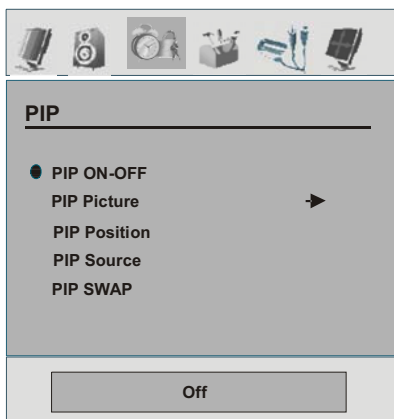

PIP ON-OFF

You can activate or deactivate PIP mode by pressing ◀ / ▶ button.

PIP Picture

Press ► button to enter **PIP Picture** submenu. Adjustments of Contrast, Brightness, Sharpness, Colour, Reset and Store items in this part are identical with **Picture menu** in the analogue TV menu System. Refer to Picture menu explanations in the previous parts.

PIP Position

Select **PIP Position** item by using ▲ / ▼ button. Use ◀ / ▶ button to adjust **PIP position**. **PIP Position** info will be displayed at the bottom of the menu OSD. You can directly change PIP position by pressing ▲ / ▼ buttons.

Positions available are: Bottom Right, Bottom Centre, Bottom Left, Top Left, Top Center and Top Right.

PIP Source

Select PIP Source item by using ▲ / ▼ button. Use ◀ / ▶ button to set **PIP source**.


Note: When main picture source is TV, AV-1, AV-2 or AV-3, PIP Window can only be set to HDMI-1, HDMI-2, AV-5, PC source or vice versa.

PIP SWAP

Select **PIP SWAP** item by using ▲ / ▼ button. Use ◀ / ▶ button to set. This function enables to swap between the main and the PIP picture.

PAP

In the **Feature** menu, highlight **PAP** item by pressing ▲ / ▼ buttons. Press ► button to enter **PAP** submenu:

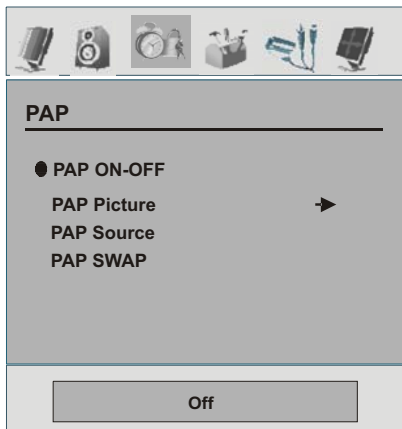

PAP ON-OFF

You can activate or deactivate **PAP** mode by pressing ◀ / ▶ button.

PAP Picture

Press ► button to enter **PAP Picture** submenu. Ad-

adjustments of Contrast, Brightness, Sharpness, Colour, Reset and Store items in this part are identical with **Picture** menu in the Menu System. Refer to **Picture** menu explanations in the previous parts.

PAP Source

Select **PAP Source** item by using \blacktriangle / \blacktriangledown button. Use \blacktriangleleft / \blacktriangleright button to set **PAP source**.

Note: When main picture source is TV, AV-1, AV-2 or AV-3, PIP window can only be set to HDMI-1, HDMI-2, YPbPr (AV-5), PC source or vice versa.

PAP SWAP

Select **PAP SWAP** item by using \blacktriangle / \blacktriangledown button. Use \blacktriangleleft / \blacktriangleright button. This function enables to swap between the main and the PAP picture.

Note: See Appendix C for all PIP/PAT modes.

Sleep Timer

By pressing \blacktriangle / \blacktriangledown select **Sleep Timer**. Press \blacktriangleleft / \blacktriangleright button to set the Sleep Timer.

The timer can be programmed between Off and 120 minutes in steps of 10 minutes.

Child Lock

By pressing \blacktriangle / \blacktriangledown select **Child Lock**.

Press \blacktriangleleft / \blacktriangleright button to set the **Child Lock** on or off. When on is selected, the TV can only be controlled by the remote control handset. In this case the control panel buttons will not work (except for the **STANDBY** button). Hence, if one of these buttons is pressed, "Child Lock On" will be displayed on the screen when the menu screen is not visible.

Language

By pressing \blacktriangle / \blacktriangledown button, select **Language**. Use \blacktriangleleft / \blacktriangleright button to select the language. Available language options are; English, French, German, Italian, Spanish, Portuguese, Dutch, Greek, Swedish, Norwegian, Danish, Finnish, Turkish, Croatian, Slovenian, Polish, Czech, Hungarian, Russian, Bulgarian, Greek, Slovak.

AV-2 Out

By pressing \blacktriangle / \blacktriangledown select **AV-2 Out**. Use \blacktriangleleft / \blacktriangleright button, to set AV-2 Out to **TV, AV-1, AV-3, FAV, YPbPr Audio or PC Audio**.

Note: When TV Source is set to HDMI, HDMI Audio setting will be available among AV-2 Out options.

PC Audio In

By pressing \blacktriangle / \blacktriangledown select **Pc Audio In**. By pressing \blacktriangleleft / \blacktriangleright button, you can change the PC Audio In to **TV, AV-1, AV-2, AV-3, FAV, YPbPr Audio, PC Audio**.

Blue Background

You can set the TV to automatically change to a blue screen if the signal is weak or absent, or when there is no input from an external device.

The Blue Background feature can be turned on or off by pressing \blacktriangleleft / \blacktriangleright button.

Menu Background

By pressing \blacktriangle / \blacktriangledown button, select Menu Background. Transparency level is adjusted by pressing \blacktriangleleft / \blacktriangleright button.

Menu Timeout

By pressing \blacktriangle / \blacktriangledown button, select Menu Timeout. Press \blacktriangleleft / \blacktriangleright button to change menu timeout to 15 sec, 30 sec or 60 sec.

Teletext Language


By pressing \blacktriangle / \blacktriangledown button, select Teletext Language. Press \blacktriangleleft / \blacktriangleright button to change Teletext Language to West, East, Turk/Greek, Cyrillic, or Arabic.

Default Zoom

Default zoom is a feature that provides the zoom mode of the TV set to be switched to the selected default zoom mode (Panoramic, 4:3, 14:9 zoom) in case no WSS or 4:3 signal by end-user.

By pressing \blacktriangle / \blacktriangledown button, select Default Zoom. You can set Default Zoom to Panoramic, 4:3 or 14:9 Zoom by pressing \blacktriangleleft / \blacktriangleright button.

Install Menu

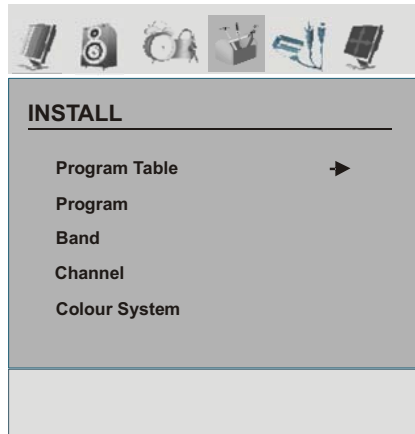

Program Table

By pressing **▲ / ▼** button, select **Program Table**. Press **▶** to display **Program Table**.

| Program Table | | | |
|---------------|-------|-----|------|
| P01 | BBC 1 | P11 | S 18 |
| P02 | C 04 | P12 | S 29 |
| P03 | C 05 | P13 | S 31 |
| P04 | BBC 1 | P14 | S 33 |
| P05 | CH 4 | P15 | S 34 |
| P06 | BBC 2 | P16 | S 35 |
| P07 | C 04 | P17 | S 36 |
| P08 | C 07 | P18 | S 37 |
| P09 | C 12 | P19 | S 40 |
| P10 | C 15 | P20 | C 21 |

| Name | Insert |
|--------|--------|
| Delete | APS |

By moving the cursor in four directions you can reach 20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except the AV mode). By cursor action, programme selection is done automatically.

Name

To change the name of a decided programme, select the programme and press the **RED** button.

The first letter of the selected name will be highlighted. Press **▲ / ▼** button to change that letter and **◀ / ▶** button to select the other letters. By pressing the **RED** button, you can store the name.

Insert


Select the programme which you want to insert by navigation buttons. Press the **GREEN** button. By navigation buttons move the selected programme to the decided programme space and press the **GREEN** button again.

Delete

To delete a programme, press the **YELLOW** button. Pressing the **YELLOW** button again erases the selected programme from the programme list, and the programmes below shift one up.

APS (Auto Programming System)


When you press the **BLUE** button for APS, Auto Programming System Menu will appear on the screen.

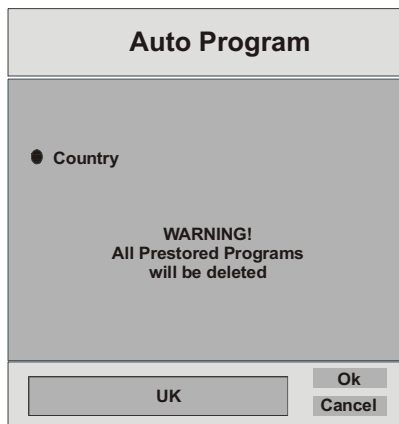

A.P.S. (Auto Programming System) Country

Press **◀ / ▶** button to select your country. If you want to exit from A.P.S. function, press the **BLUE** button.

When you press **OK** or **RED** button for starting APS, all stored programs will be erased and the following screen will be displayed:

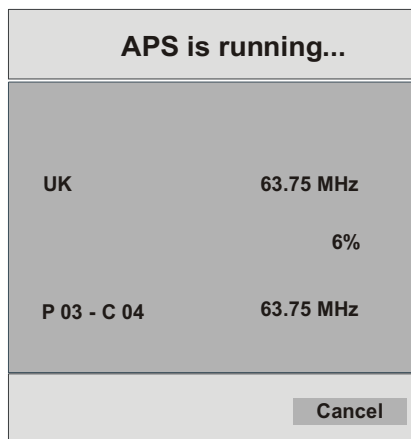

Whenever you press the **BLUE** button, A.P.S. function stops and Program Table appears on the screen.

If you wait until the end of A.P.S., Program Table is displayed with the programmes found and located.

Program

By pressing **▲ / ▼** button, select Program. Press **◀ / ▶** button to select the program number. You can also enter a number via digit buttons on the remote control. There are 100 program storage between 0 and 99.

Band

Band can be selected either **C** or **S** by press ◀ / ▶ button.

Channel

Channel can be changed by ◀ / ▶ button or Digit Buttons.

Colour System

By pressing ▲ / ▼ button, select **Colour System**. Press ◀ / ▶ button to change the colour system to **PAL**, **SECAM**, **PAL60** or **AUTO**.

If Sound System is set to I, SECAM is not available for the Colour System.

Note: In AV mode, you can choose NTSC 3.58 and NTSC 4.43 as well.

Sound System

By pressing ▲ / ▼ button, select **Sound System**. Press ◀ / ▶ button to change the sound system to BG, I, L, L', DK.

Fine Tune

By pressing ▲ / ▼ button, select Fine Tune. Press ◀ / ▶ button to adjust the tuning.

Search


By pressing ▲ / ▼ button, select **Search**. Press ◀ / ▶ button to start program searching. You can also enter the desired frequency via digit buttons when search item is highlighted.

Store

By pressing ▲ / ▼ button, select **Store**. Press ▶ or **OK** button to store the adjustments. "**Stored...**" will be displayed on the screen.

Install menu in AV modes

The following screen appears in the install menu:

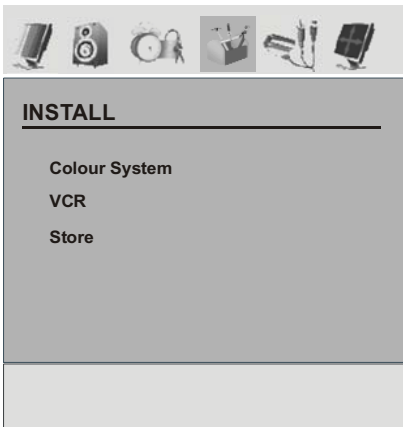

Colour System

By pressing ▲ / ▼ select **Colour System**. By pressing ◀ / ▶ button, you can change the colour system to **PAL**, **SECAM**, **PAL 60**, **NTSC 4,43**, **NTSC 3,58** or **AUTO**.

VCR


By pressing ▲ / ▼ select **VCR**. By pressing ◀ / ▶ button, you can set the VCR to ON or OFF.

Store

By pressing ▲ / ▼ button, select Store. Press ▶ or **OK** button to store the adjustments. "**Stored...**" will be displayed on the screen.

Source menu

By pressing ◀ / ▶ button, select the fifth icon. Source menu appears on the screen.

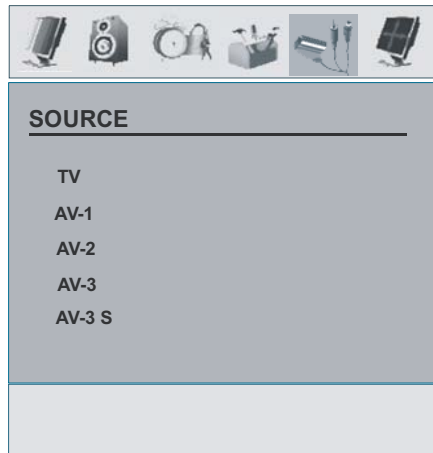

In source menu, highlight a source by pressing ▲ / ▼ button and switch to that mode by pressing ▶ or **OK** button. Source options are; **TV**, **AV-1**, **AV-2**, **AV-3**, **AV-3 S**, **FAV**, **S-Video**, **YPbPr**, **HDMI-1**, **HDMI-2** and **PC**.

PC Mode

Installation

- Power off both Computer and Display before making any connections.
- Set your PC's resolution correctly before connecting to the TV. See the table on Appendix A on **page 26**.
- Use 15-pin display cable to connect a PC to the LCD TV.

Menu System in PC mode

Sound Menu/Feature Menu

The items in these menus are described at **Sound & Feature Menu** explained in "Menu System".


PC Picture Menu

By pressing **▲ / ▼** button, select the second icon. PC Picture menu appears on the screen.

Brightness, Contrast and Colour Temperature adjustments in this menu are identical to adjustments defined in TV picture menu in "MENU SYSTEM".

PC POSITION Menu

By pressing **▲ / ▼** button, select the sixth icon. PC POSITION menu appears on the screen.

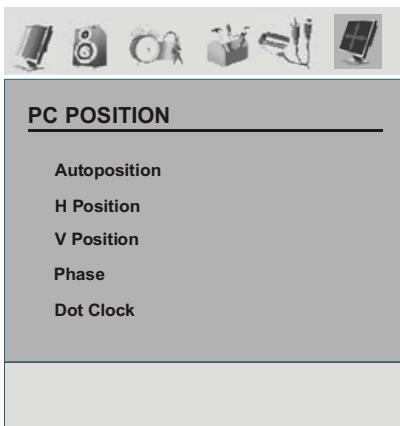

Autoposition

If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically.

- Select Autoposition item by using **▲ / ▼** buttons. Press or **OK** button.

Warning: Auto position adjustment recommended to be done with the full screen image for the proper adjustment.

H (Horizontal) Position

This item shifts the image horizontally to right hand side or left hand side of the screen.

- Select H Position item by using **▲ / ▼** button.
- Use **◀ / ▶** button to adjust the value.

V (Vertical) Position

This item shifts the image vertically towards the top or bottom of the screen.

- Select V Position item by using **▲ / ▼** button.
- Use **◀ / ▶** button to adjust the value.

Phase

Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

- Use **◀ / ▶** button to adjust the value.

Dot Clock

Dot Clock adjustments correct interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

- Use **◀ / ▶** button to adjust the value.

Sound in PC mode

- Connect the PC's Audio output to the TV's **PC Audio In** socket with an audio cable.

Other Features


TV Status

Programme Number, **Programme Name**, **Sound Indicator** and **Zoom Mode** are displayed on the screen when a new programme is entered.


Mute Indicator



It is placed in the upper side of the screen when enabled.



Mute


To cancel mute, there are two alternatives; the first one is pressing the  button and the second one is increasing the volume level.



PIP and PAP Modes

PIP picture is displayed on the screen by pressing  button. At PIP Mode, a small picture (PIP picture) is displayed in the main picture.

When PIP Mode is entered, the default active window is PIP window and the active window is indicated by a red frame around it. The active window can be changed by pressing  /  buttons.

PIP position can be changed by pressing  /  buttons.

When  button is pressed again, the TV switches to PAP mode. In PAP Mode, two pictures with equal sizes are displayed on the screen. Aspect Ratios of the windows are fixed.


When you switch to PAP Mode, main window in PAP Mode is displayed on the right side of the screen. The active window can be changed by pressing  /  button.


Press the  button again to exit the PAP mode.

Note: When main picture source is TV, AV-1, AV-2, AV-3 or AV-4; PAP or PIP window can only be set to HDMI-1, HDMI-2, YPBPR, PC source or vice versa.


AV Modes

You can switch your TV to AV modes by using related buttons on the remote control.

First, press  button till **INPUT** OSD is displayed on the screen. You can then use; AV1, AV2, AV3, AV4, AV5, HDMI1 or HDMI2 buttons on your remote control to select the desired source (except being in teletext).

Note that in PIP/PAP modes, pressing  button will directly change sources.

Zoom Modes

Zoom mode can be changed by pressing the  button. You can change the screen size according to the picture aspect ratio. Select the optimum one from the following **ZOOM** modes.

Note:

- In YPBPR and HDMI modes, while in 720p-1080i resolutions, only FULL mode is available.
- In PC mode, only 4:3 and 16:9 modes are available.

 
Auto

When a **WSS (Wide Screen Signalling)** signal, which shows the aspect ratio of the picture, is included in the broadcast signal or the signal from an external device, the TV automatically changes the **ZOOM** mode according to the **WSS** signal.

- When the **AUTO** mode does not function correctly due to poor **WSS** signal quality or when you want to change the **ZOOM** mode, change to another **ZOOM** mode manually.

Zoom

This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



- For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the **Full** mode to restore the picture to its original shape.

Cinema

This zooms up the wide picture (16:9 aspect ratio) to the full screen.



16:9 Zoom

This zooms up the wide picture (16:9 aspect ratio) to the full screen.



Subtitle

This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen.



4:3

Use to view a normal picture (4:3 aspect ratio) as this is its original shape.



14:9 Zoom

This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.




Panoramic

This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural.



The top and bottom of the picture are slightly cut off.

Freeze Picture

You can freeze the picture on the screen by pressing the  button.

Note: This feature will be unavailable to be used while watching PC, YPBPr and HDMI sources.

Teletext

Teletext system transmits information such as news, sports and weather on your TV. Note that if the signal becomes insufficient, some text errors may occur or the teletext mode may be quitted. **Teletext function buttons** are listed below:

Teletext On/Off

Activates teletext mode when pressed once.

Teletext PAT mode

Pressing this button will split the screen into two windows, one displaying the teletext and the other displaying the current channel. Pressing again will switch to teletext mode in a single screen.

Index

Selects the teletext index page.

Reveal

Shows hidden information (solutions of games, for example).

Hold

Holds a text page when convenient. Press again to resume.

Subcode Pages

Selects subcode pages if available when the teletext is activated.

P+ / P- and numbers (0-9)

Press to select a page.

Note: Most TV stations use code **100** for their index pages.

Coloured buttons (RED/GREEN/YELLOW/BLUE)

Your TV supports both **FASTTEXT** and **TOP text** systems. When these systems are available, the pages are divided into groups or topics.

When **FASTTEXT** system is available, sections in a teletext page will become colour-coded and can be selected by pressing the coloured buttons. Press a coloured button that corresponds with your needs.

The coloured writings will appear, showing you which coloured buttons to use when **TOP text** transmission is present. Pressing **P -** or **P +** commands will request the next or previous page respectively.

Connect Peripheral Equipment

High Definition

Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be connected via the HDMI socket or Component Socket. These sockets can accept either 720p or 1080i signals.

Note: When it is desired to watch HDMI source with a DVI to HDMI cable; in order to enable audio, Audio Input (which is located at the left side of the antenna input) is to be used to get DVI device's audio signals.

Via The Scart

The TV has 3 Scart sockets. If you want to connect peripherals (e.g. video, decoder, etc.) which have Scart sockets to the TV, you can use SCART socket of the TV.

Note: If an external device is connected via the Scart sockets, the TV will automatically switch to AV mode. If both sockets are employed at the same time, SCART 1 becomes the preferential.

Via Aerial Input

If the device you want to connect does not have a Scart socket, you should connect it to the Aerial input of the TV.

If the VCR is connected via Aerial input, it is suggested to use Programme 0.

Decoder

If you are subscribed to cable TV offers, the organisation will supply you a corresponding decoder unit to allow the programmes to be unscrambled.

For further information consult your dealer.

Connect a decoder with an aerial socket to the TV

- Connect the aerial cable.

Connect a decoder without an aerial socket to the TV

- Connect the decoder to the **EXTERNAL** socket of TV with a RCA cable. Through the **SCART/RCA** socket of the decoder, you may attain a better display resolution.

TV And Video Recorder

- Connect the aerial cables.

Better picture quality can be obtained if you also connect a Scart cable to **SCART** sockets.

Playback NTSC

- Connect NTSC VCR player to a SCART socket of the TV.
- Then, select the related source from the **SOURCE** menu. Source selection for **VCR** recording.
- Select **Feature** menu.
- Select **AV-2 Out** by pressing ▼ / ▲ button.
- For copying the picture that comes from the tuner, select SCART 1.

Camera And Camcorder

To Connect To AV Input

Connect your camera or camcorder to AV input of the TV.

- Connect your equipment to the TV via **VIDEO** (yellow), **AUDIO R** (red) and **AUDIO L** (white) inputs. You must connect the jacks into the input with the same colour.

To Connect To S-VHS Input

Connect your camera or camcorder S-VHS input of the TV.

- Connect your equipment to the TV via S-VHS input and audio inputs of AV inputs by using S-VHS cables.

Connect The Decoder To The Video Recorder

Some video recorders have a special Scart socket for decoder.

- Connect a **SCART** cable to the **SCART** socket of your decoder and to the special Scart socket of your video recorder. Refer to the booklet of your video recorder.

Connecting Headphones (optional)

Use the stereo headphone socket of the TV, to connect headphones.

Note: If you want to connect more equipment to your TV, consult your dealer.

Audio Lineout

To connect the external speakers to your TV, use the Line Outs of the TV.

Note: While watching PC or YPbPr sources, Lineout selection could only be the current source.

Connecting Subwoofer

Use **Subwoofer Out** socket to connect an external, active subwoofer to the set to give a much deeper bass effect.

Tips

Care Of The Screen

Clean the screen with a slightly damp, soft cloth. Do not use abrasive solvents as they may damage the TV screen coating layer.

Poor Picture

Have you selected the correct TV system? Is your TV set or house aerial located too close to non-earthed audio equipment or neon lights, etc.?

Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.

Is the picture or Teletext unrecognisable? Check if you have entered the correct frequency.


The picture quality may degrade when two peripherals are connected to the TV at the same time. In such a case, disconnect one of the peripherals.

No Picture

Is the aerial connected properly? Are the plugs connected tightly to the aerial socket? Is the aerial cable damaged? Are suitable plugs used to connect the aerial? If you are in doubt, consult your dealer.

No Picture means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more.

Sound


You can not hear any sound. Did you perhaps interrupt the sound, pressing the  button?

Sound is coming from only one of the speakers. Is the balance set to one extreme? See **Sound** menu.


Remote Control

Your TV no longer responds to the remote control. Perhaps the batteries are exhausted. If so you can still use the local buttons at the bottom of the TV.

Peripheral Equipment Connections

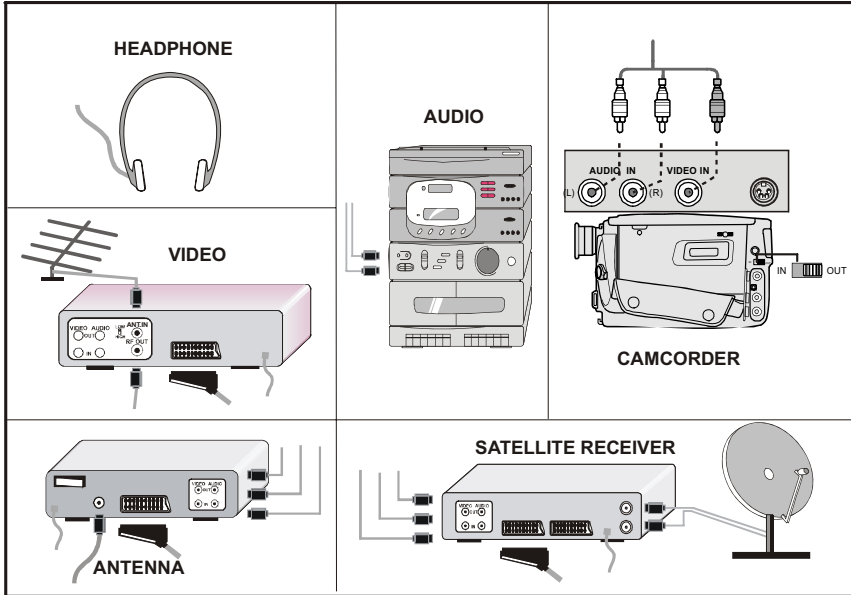

Aerial Connection

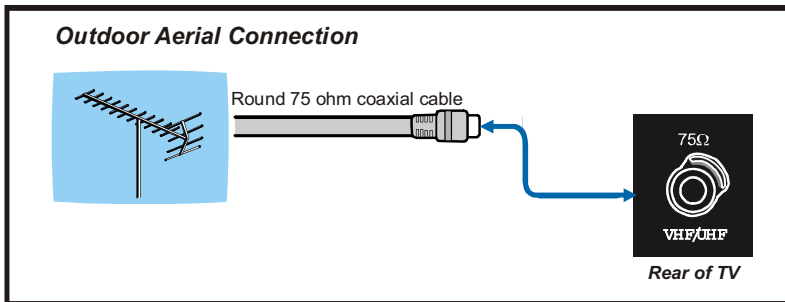

Specifications

DISPLAY

| | |
|-------------------------------|-------------------------------|
| Size/Diagonal | 26" (16:9 Display) |
| Viewable screen size/Diagonal | 57.7 x 32.5 (cm) / 66.22 (cm) |

VIDEO STANDARDS

| | |
|----------|--|
| Video | PAL/NTSC/SECAM |
| TV Tuner | PAL/SECAMB/G D/K K' I' L/L' VHF (BAND I/III) UHF (BAND U) HYPERBAND CABLE TV (S1-S20 / S21-S41) 100 PRESET CHANNELS |
| Formats | 4:3, 16:9, 14:9, Panoramic, Default Zoom, Auto Wide |

AUDIO

German + Nicam Stereo

FREQUENCY RANGE PC

| | |
|-----------------------|------------------|
| Horizontal Frequency: | 64 KHz (max) |
| Vertical Frequency: | 75 Hz (max) |
| Clock Frequency: | 108 Mhz (max) |
| Resolutions: | 1360 x 768 (max) |
| Formats: | 4:3, 16:9 |

INPUT CONNECTIONS

| | |
|-------|---|
| PC | D-SUB 15 (VGA) |
| VIDEO | TV TUNER: IEC 75 Ohms input resistance SCART1: CVBS, RGB SCART2: CVBS, RGB SCART3: CVBS, S CVBS: 1 x RCA Y/C (S-Video) MiniDIN YPbPr: 3 x RCA HDMI x 2: Multimedia Interface |
| AUDIO | SCART1: Audio L/R SCART2: Audio L/R SCART3: Audio L/R Y/C or CVBS: Audio Phono L/R YPbPr: Audio Phono L/R PC: 3.5mm Jack Stereo Headphones: 3.5mm Jack Stereo |

Specifications

OUTPUT CONNECTIONS

| | |
|----------------------|--|
| Line Out | Audio Phono L/R |
| Subwoofer | 1 x Phono (Mono) |
| Audio Speaker Output | 2x8 W RMS |
| Synchronization | Sync on green, composite sync with automatic detection separate H and V sync. |

Operator Control Keys On/Off, Standby, Vol+, Vol-, Prog +, Prog -, Menu, TV/AV.

OPERATING CONDITIONS

| | |
|----------------------|---------------------------|
| Temperature | 0°C ~40°C (in operation) |
| Air Humidity | 20%~80% (no condensation) |
| Atmospheric Pressure | 800~1114 HPa |

POWER SUPPLY

| | |
|-------------------|---------------------|
| Voltage Supply | 220-240V AC |
| Mains Frequency | 50Hz |
| Power Consumption | 115W, 1 W (Standby) |

DIMENSIONS AND WEIGHT


| | |
|-----------------------------------|----------------------|
| Display with stand D x L x H: | 245 x 675 x 538 (mm) |
| Display without stand: D x L x H: | 122 x 675 x 480 (mm) |
| Weight Display: | 11 kg |
| Weight Stand: | 3 kg |
| Weight (net): | 14 kg |

Specifications

Signal Input

PC RGB Terminal (D-sub 15-pin connector)

| Pin | Input signal |
|-----|------------------------------|
| 1 | R |
| 2 | G or sync on green |
| 3 | B |
| 4 | No connection |
| 5 | No connection |
| 6 | R.GND |
| 7 | G.GND |
| 8 | B.GND |
| 9 | No connection |
| 10 | GND |
| 11 | No connection |
| 12 | [SDA] |
| 13 | H.sync or H/V composite sync |
| 14 | V.sync. [V.CLK] |
| 15 | [SCL] |

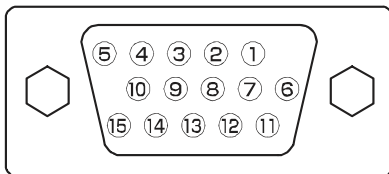


- When different kinds of input signals are simultaneously input to the monitor via a graphics board or the like, the monitor will automatically select the signals in the following priority order:

| Sync signal type | Priority |
|---------------------|----------|
| H/V separate sync. | 1 |
| H/V composite sync. | 2 |
| sync.on Green * | 3 |

- Even in the case of the recommended signals shown on the following page, there may be instances when correct display is not possible. In this case, use H/V separate sync, H/V composite sync.


S-input connector pin specifications

| Pin | Input signal |
|-------|--------------|
| 1 | Y |
| 2 | Y-GND |
| 3 | C |
| 4 | C-GND |
| Frame | GND |

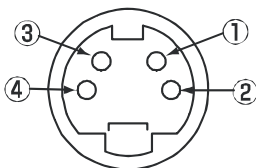


HDMI connector pin specifications

| Pin | Input signal | Pin | Input signal |
|-----|-------------------|-----|---------------------------|
| 1 | TMDS Data2+ | 11 | TMDS Clock Shield |
| 2 | TMDS Data2 Shield | 12 | TMDS Clock- |
| 3 | TMDS Data 2- | 13 | CEC |
| 4 | TMDS Data 1+ | 14 | Reserved (N.C. on device) |
| 5 | TMDS Data1 Shield | 15 | SCL |
| 6 | TMDS Data1- | 16 | SDA |
| 7 | TMDS Data0+ | 17 | DDC/CEC Ground |
| 8 | TMDS Data0 Shield | 18 | +5V Power |
| 9 | TMDS Data0- | 19 | Hot Plug Detect |
| 10 | TMDS Clock+ | | |

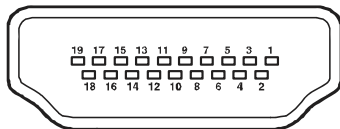

SCART connector pin specifications

| Pin | Input signal | Pin | Input signal |
|-----|---------------------------|-----|--------------------------------------|
| 1 | AUDIO OUT (RIGHT) | 12 | Not used |
| 2 | AUDIO IN (RIGHT) | 13 | RGB-R GND |
| 3 | AUDIO OUT (LEFT/MONO) | 14 | GND |
| 4 | AUDIO GND | 15 | RGB-R / S.VHS CHROMINANCE IN |
| 5 | RGB-B GND | 16 | BLANKING SIGNAL |
| 6 | AUDIO IN (LEFT/MONO) | 17 | COMPOSITE VIDEO GND |
| 7 | RGB-B IN | 18 | BLANKING SIGNAL GND |
| 8 | AUDIO / RGB SWITCH / 16;9 | 19 | COMPOSITE VIDEO OUT |
| 9 | RGB-G GND | 20 | COMPOSITE VIDEO / S.VHS LUMINANCE IN |
| 10 | Not used | 21 | GND / SHIELD (CHASSIS) |
| 11 | RGB-G IN | | |

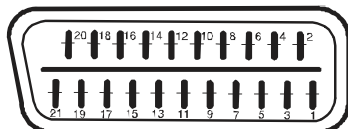

Appendix A: PC Input Typical Display Modes

The display has a maximum resolution of 1360 x 768, frequency range of 56-75 Hz.

The following table is an illustration of some of the typical video display modes.

| Mode | Resolution | | Frequency | |
|------|------------|----------|-----------|----------|
| | Horizontal | Vertical | Hor.(kHz) | Ver.(Hz) |
| 1 | 640 | 480 | 31,5 | 60 |
| 2 | 640 | 480 | 37,9 | 72 |
| 3 | 640 | 480 | 37,5 | 75 |
| 4 | 800 | 600 | 35,2 | 56 |
| 5 | 800 | 600 | 37,9 | 60 |
| 6 | 800 | 600 | 48,1 | 72 |
| 7 | 800 | 600 | 46,9 | 75 |
| 8 | 1024 | 768 | 48,4 | 60 |
| 9 | 1024 | 768 | 56,5 | 70 |
| 10 | 1024 | 768 | 60 | 75 |
| 11 | 1280 | 1024 | 64 | 60 |
| 12 | 1280 | 768 | 47,8 | 60 |
| 13 | 1360 | 768 | 47,7 | 60 |

Appendix B: AV and HDMI Signal Compatibility

| Source | Supported Signals | | Available |
|----------------------------|-------------------|----------|-----------|
| AV-1 (SCART 1) | PAL 50/60 | | O |
| | NTSC 60 | | O |
| | RGB 50 | | O |
| | RGB 60 | | O |
| AV-2 (SCART-2) | PAL 50/60 | | O |
| | NTSC 60 | | O |
| | RGB 50 | | O |
| | RGB 60 | | O |
| AV-3 (SCART-3) | PAL 50/60 | | O |
| | NTSC 60 | | O |
| | S-VHS 50 | | O |
| | S-VHS 60 | | O |
| AV-4 FAV | PAL 50/60 | | O |
| | NTSC 60 | | O |
| AV-4S (S-Video) | PAL 50/60 | | O |
| | NTSC 60 | | O |
| AV-5 YPbPr | 480I | 60Hz | O |
| | 480P | 60Hz | O |
| | 576I | 50Hz | O |
| | 576P | 50Hz | O |
| | 720P | 50Hz | O |
| | 720P | 60Hz | O |
| | 1080I | 50Hz | O |
| | 1080I | 60Hz | O |
| HDMI1 HDMI2 | 480I | 60Hz | O |
| | 480P | 60Hz | O |
| | 576I | 60Hz | O |
| | 576P | 60Hz | O |
| | 720P | 60Hz | O |
| | 720P | 50Hz | O |
| | 1080I | 50Hz | O |
| | 1080I | 50Hz | O |
| | 1080P | 50Hz | X |
| | 1080P | 60Hz | X |
| 1080P | 24 HZ | X | |

(X: Not Available, O: Available)

Note: In some cases a signal on the LCD TV may not be displayed properly. The problem may be a inconsistency with standards from the source equipment (DVD, Set-top box, etc...). If you do experinece such a problem please contact your dealer and also the manufacturer of the source equipment.

Appendix C: Main and PIP-PAP Picture Combinations

Main and PIP, PAP picture combinations

| MAIN → PIP,PAP ↓ | TUNER | AV-1 CVBS | AV-1 RGB | AV-2 CVBS | AV-2 RGB | AV-3 CVBS | AV-3 SVHS | FAV CVBS AV-4 | S-VHS AV4-S | YPbPr AV-5 | HDMI 1 | HDMI 2 | PC |
|------------------------|-------|--------------|-------------|--------------|-------------|--------------|--------------|---------------------|----------------|---------------|--------|--------|----|
| TUNER | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV-1 CVBS | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV-1 RGB | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV-2 CVBS | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV-2 RGB | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV-3 CVBS | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV-3 SVHS | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV-4 FAV CVBS | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV4-S SVHS | X | X | X | X | X | X | X | X | X | X | O | O | O |
| AV-5 YPbPr | O | O | O | O | O | O | O | O | O | X | X | X | X |
| HDMI 1 | O | O | O | O | O | O | O | O | O | X | X | X | X |
| HDMI 2 | O | O | O | O | O | O | O | O | O | X | X | X | X |
| PC | O | O | O | O | O | O | O | O | O | X | X | X | X |

(X: Not available, O : Available)

Appendix D: AV Source Selection

For source selection, first press **INPUT** button on the remote controller then source button which you want to switch.

The following is a key to the AV inputs:

| Remote Control | Source Menu | Input Sockets on the set |
|--------------------------|-------------------|-----------------------------|
| TV/DTT | TV | Not applicable |
| TV/DTT | DTT | Not applicable |
| AV1 | AV-1 | AV1 (scart 1) |
| AV2 | AV-2 | AV2 (scart 2) |
| AV3 | AV-3 | AV3 (scart 3) |
| * | AV-3S | (not marked see note below) |
| AV4 | FAV | AV4 |
| * | S-VIDEO | S-VHS |
| AV5 | YPbPr (Component) | Y PB PR L R |
| HDMI1 | HDMI-1 | HDMI-1 |
| HDMI2 | HDMI-2 | HDMI-2 |
| (there is no PC button) | PC | PC INPUT |

Inputs can be selected by either using the appropriate buttons on the remote control or by selecting an input on the source menu.

*For AV-3S, select from the menu.

NB. AV-3S can be used by the use of an S-VHS to scart converter plug (not supplied) or a device which has scart output with S-video can be connected

*For S-VIDEO press INPUT and AV-4 twice or select from the menu.

PC can only be selected using the source menu.

UK Guarantee

Your Guarantee of Excellence

Thank you for purchasing this Hitachi Television.

In the unlikely event that this product should develop a fault, we undertake to replace or repair any part of the product which fails due to a manufacturing defect within 12 months of the date of purchase provided that:

- i) The product has been installed and used only in accordance with the instructions supplied with the product
- ii) The product has not been repaired, maintained, or modified by any person other than an Hitachi authorised engineer
- iii) The product serial number has not been removed or altered

This guarantee does not apply to product acquired second hand or for commercial or communal use

This guarantee does not cover the replacement of exhausted batteries, the adjustment of user controls, or aerial alignment.

Any parts replaced under this guarantee shall become the property of Hitachi Europe Ltd.


Please note that evidence of the date of purchase will be required before any service under this guarantee is carried out.

THIS GUARANTEE DOES NOT AFFECT YOUR STATUTORY RIGHTS.

IN ALL CASES OF DIFFICULTY PLEASE CONSULT YOUR HITACHI DEALER


! IMPORTANT - If placing TV into cabinet or alcove, ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the TV. This is to allow for adequate ventilation during operation. Please read the main Users Guide for more safety information before installation.

1 insert the batteries into your handset

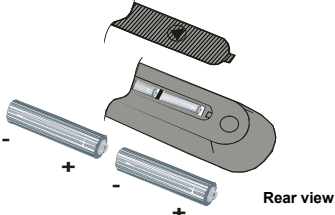

Rear view

2a either connect the aerial straight to your TV...

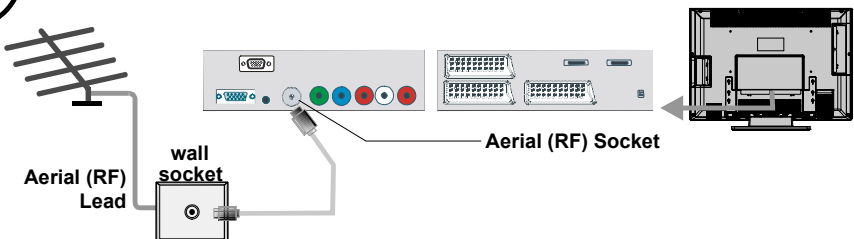


Aerial (RF) Lead

wall socket

Aerial (RF) Socket

2b ...or connect the aerial through a VCR...

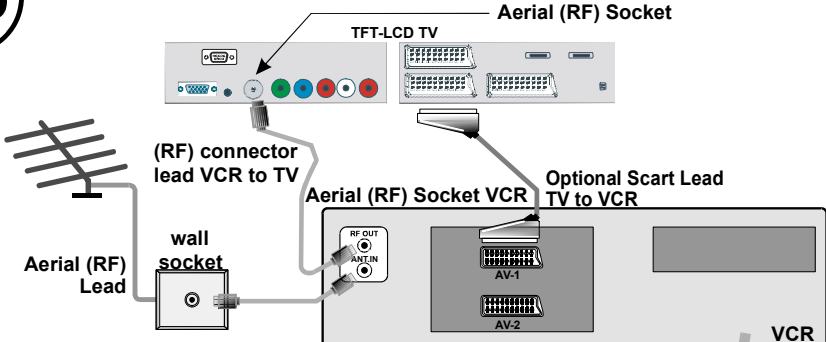

Aerial (RF) Lead

wall socket

(RF) connector lead VCR to TV

Aerial (RF) Socket

TFT-LCD TV

Aerial (RF) Socket VCR


Optional Scart Lead TV to VCR

VCR

• It is recommended that a scart lead should be fitted between your TV and VCR to enhance your picture and sound quality. Scart leads are essential if you have a stereo TV and VCR and wish to obtain stereo sound from your equipment. These leads can be purchased from your Hitachi dealer or any good High Street electrical retailer.


2c

...or through a satellite decoder...

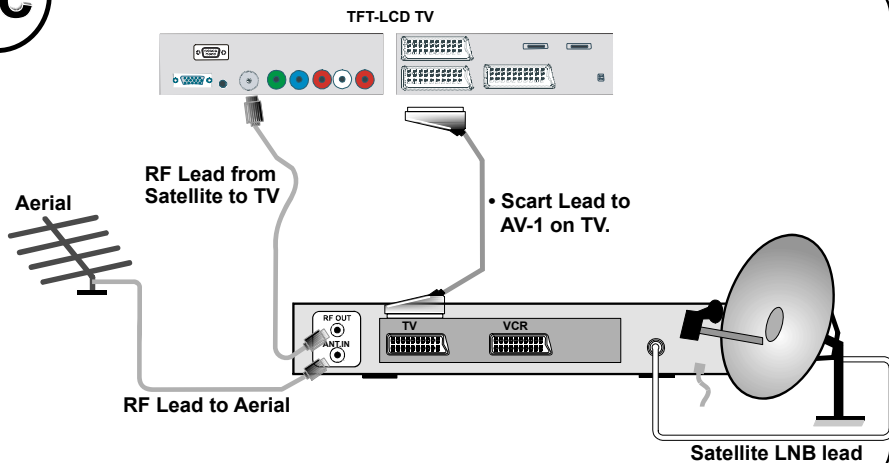




2d

...or through a VCR and satellite decoder.

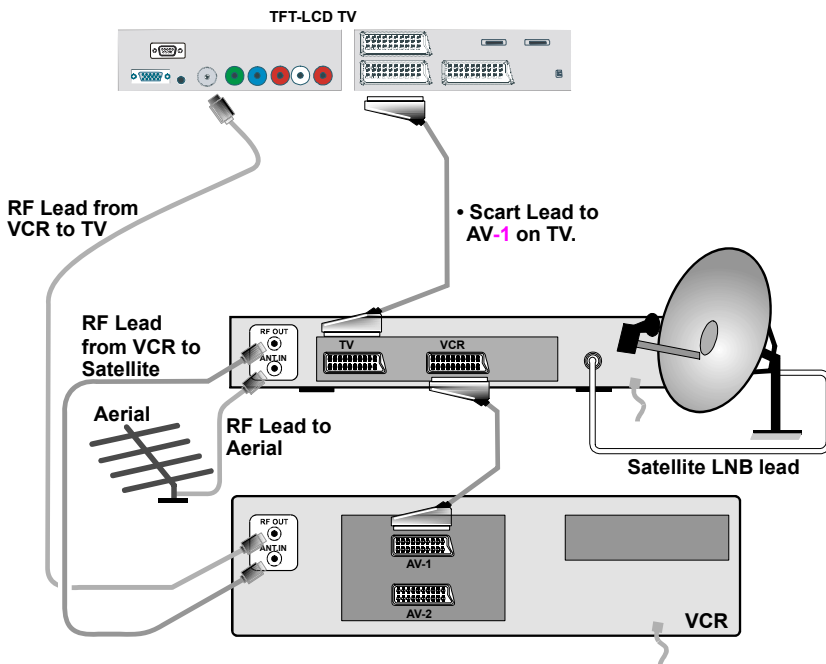


3

connect the TV plug to the mains socket

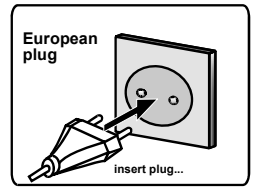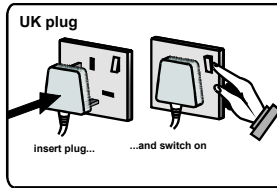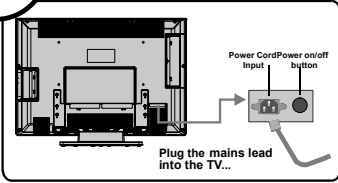


4

switch your TV on by pressing the On/Off button

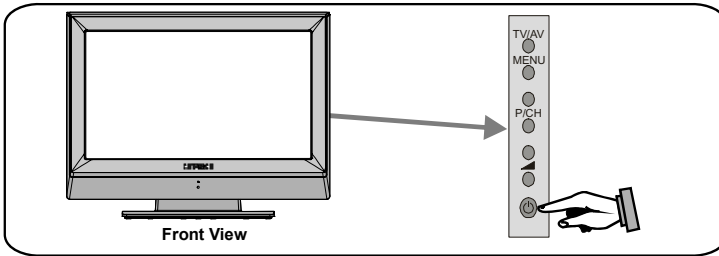

NB: When the set is first switched on, the set will be in standby and the indicator on the front of the set will illuminate red. Press the channel up down (P-, P+) or numeric buttons (1, 2, 3, ...) to operate.

basic functions of remote control

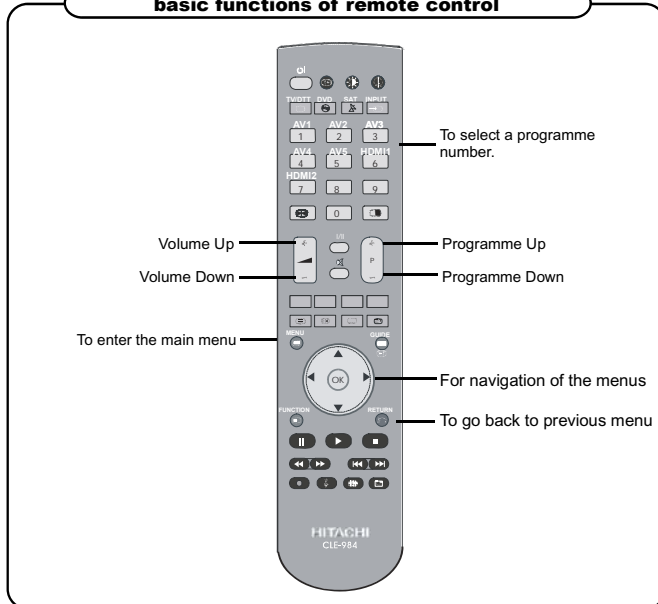

important note before starting Auto Setup

If you have a Video Cassette Recorder or a Satellite receiver connected to your TV please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a pre-recorded tape and begin playback of your equipment. These measures ensure that all your external equipment is tuned in during the Auto Setup procedure.

5



start A.P.S. (Auto Programming System)

1

First of all choose **Language**, **Country** and **TXT Language** by using **▲ / ▼** and **◀ / ▶** buttons. This will affect the sort process in APS. To start APS, press the **RED** or **"OK"** button.

2

Press the **■** button when search is completed.

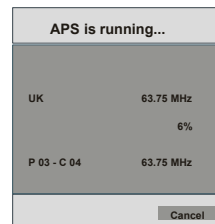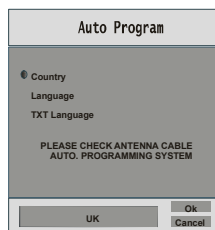

important note.

Once the TV has found all your local stations, they are then automatically assigned a programme number and name, if available from the broadcast.

HITACHI

Inspire the Next

Hitachi, Ltd.

Consumer Business Group
Shin-Otemachi Bldg 5f, 2-1, Otemachi 2-Chome,
Chiyoda-Ku, Tokyo 100-0004 Japan

HITACHI EUROPE LTD.

Consumer Affairs Department
PO Box 3007
Maidenhead
Berkshire SL6 8ZE
UNITED KINGDOM
Tel: 0870 405 4405
Email: consumer.mail@hitachi-eu.com

HITACHI EUROPE GmbH

Munich Office
Dornacher Strasse 3
D-85622 Feldkirchen bei München
GERMANY
Tel: 089-991 80-0
Fax: 089 - 991 80 -224
Hotline: 0180 - 551 25 51 (12ct/min.)
Email: dmg-mun.service@hitachi-eu.com

HITACHI EUROPE S.r.l.

Via T. Gulli n.39
20147 MILAN
ITALY
Servizio Clienti
Tel. 02 38073415
Email: customerservice.italy@hitachi-eu.com

HITACHI EUROPE S.A.S

Digital Media Group
Cité Internationale
94 Quai Charles de Gaulle,
69463 LYON cedex 06
FRANCE
Tel: 04 72 14 29 70
Fax: 04 72 14 29 99
Email: france.consommateur@hitachi-eu.com

HITACHI EUROPE LTD.

Benelux Branche Office
Bergensesteenweg 421
1600 Sint-Pieters-Leeuw
BELGIUM
Tel : 0032/2 363 99 01
Fax: 0032/2 363 99 00
Email : info@hitachi.be

HITACHI EUROPE LTD.

Kodanska 46
101 00 Praha 10
CZECH REPUBLIC
Tel : 234 064 514
Fax: 234 064 513
Email : dmg.eeu@hitachi-eu.com

HITACHI EUROPE S.A.

364, Kifissias Ave. & 1, Delfon Str.
152 33 Chalandri
Athens
GREECE
Tel: 210 6837200
Fax: 210 6835694
Email: dmgservice.gr@hitachi-eu.com

HITACHI EUROPE S.A.

Gran Via Carles III, 86 Planta 5ª
Edificios Trade - Torre Este
08028 Barcelona
SPAIN
Tel: 93 409 2550
Fax: 93 491 3513
Email: atencion.cliente@hitachi-eu.com

HITACHI EUROPE AB

Box 77
S-164 94 KISTA
SWEDEN
Tel: 08 562 711 00
Fax: 08 562 711 11
Email: csgswe@hitachi-eu.com

HITACHI EUROPE AB

(Norway Branch Nuf)
Strandveien 18
1366 Lysaker
NORWAY
Tel: 67519030
Fax: 67519032
Email: csgnor@hitachi-eu.com

HITACHI EUROPE AB

Egebækvej 98
2850 Nærum
DENMARK
Tel: 43 43 60 50
Fax: 43 43 60 51
Email: csgden@hitachi-eu.com

HITACHI EUROPE AB

Lars Sonckin kaari 16
FIN-02600 ESPOO
FINLAND
Tel: 010-8503085
Fax: 010-8503086
Email: info.finland@hitachi-eu.com