

# INSTRUCTION MANUAL

**HITACHI**  
Inspire the Next

## 42" Colour TV

**L42VK04U**

**L42VK04UA**



**FULL HD 1080**

**DVB**  
Digital Video  
Broadcasting

**HDMI**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

**digital**   
Approved product

**Freeview**

**Important - Please read these instructions fully before installing or operating and keep for future reference.**

These instructions contain important information which will help you get the best from your television and ensure safe and correct installation and operation.

**For any help concerning set up and use of your TV please call the Customer Helpline: 0845 604 0105**

Lines open: 9am - 8pm Monday to Saturday and 10am - 4pm Sunday

## QUICK GUIDE

L42VK04U A

529/8439

Please read this quick guide fully before installing or operating because it contains important setup information and keep for future reference.


For any help concerning set up and use of your TV please call the Customer Helpline:  
0845 604 0105

Lines open: 9am - 8pm Monday to Saturday and 10am - 4pm Sunday

**IMPORTANT** - If placing TV into cabinet or alcove, ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the TV. This is to allow for adequate ventilation during operation. Please read the main Users Guide for more safety information before installation.

1


### insert the batteries into your handset

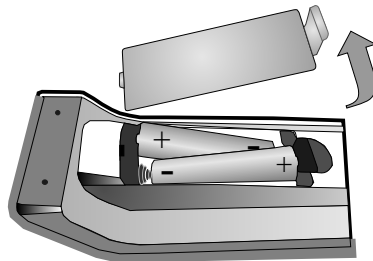

Rear view

2a


### either connect the aerial straight to your TV...

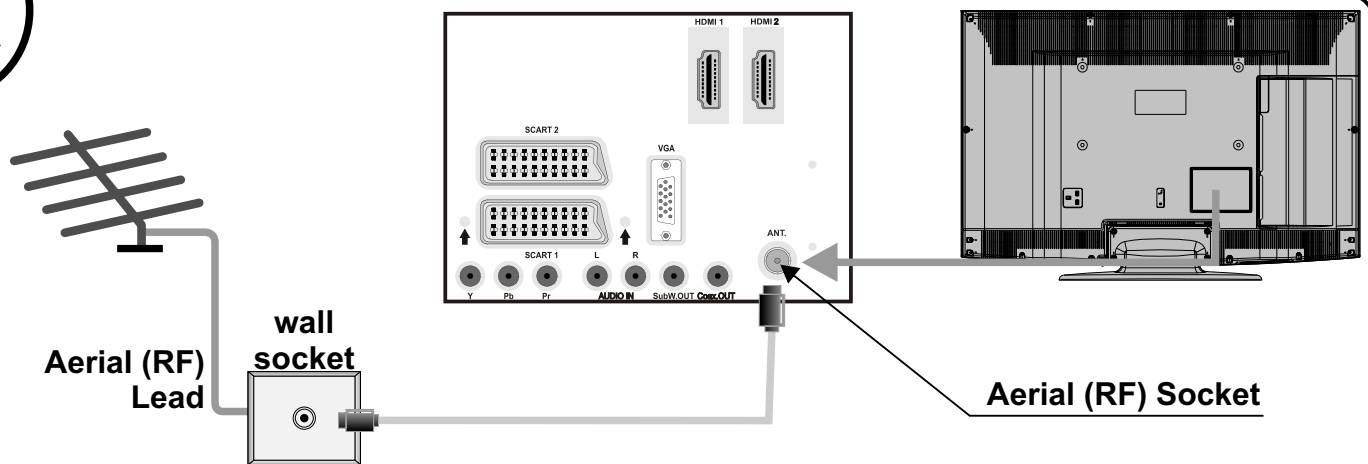

Aerial (RF) Socket

# 2b


## ...or connect the aerial through a VCR...

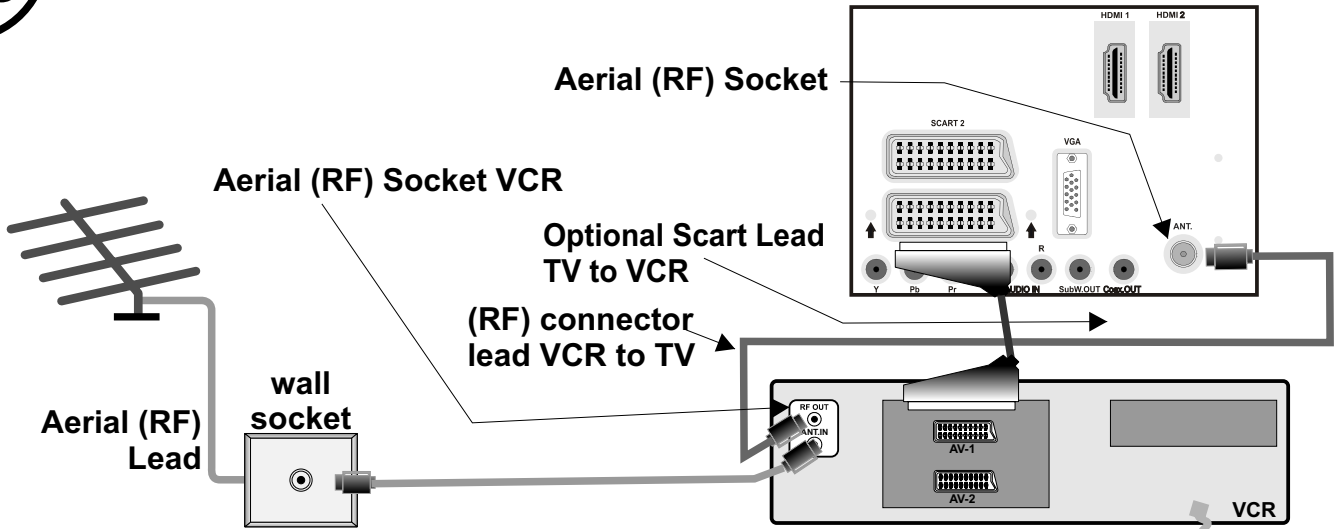

• It is recommended that a scart lead should be fitted between your TV and VCR to enhance your picture and sound quality. Scart leads are essential if you have a stereo TV and VCR and wish to obtain stereo sound from your equipment. These leads can be purchased from your Hitachi dealer or any good High Street electrical retailer.

# 2c

## ...or through a HDMI and YPbPr products (DVD-RW)

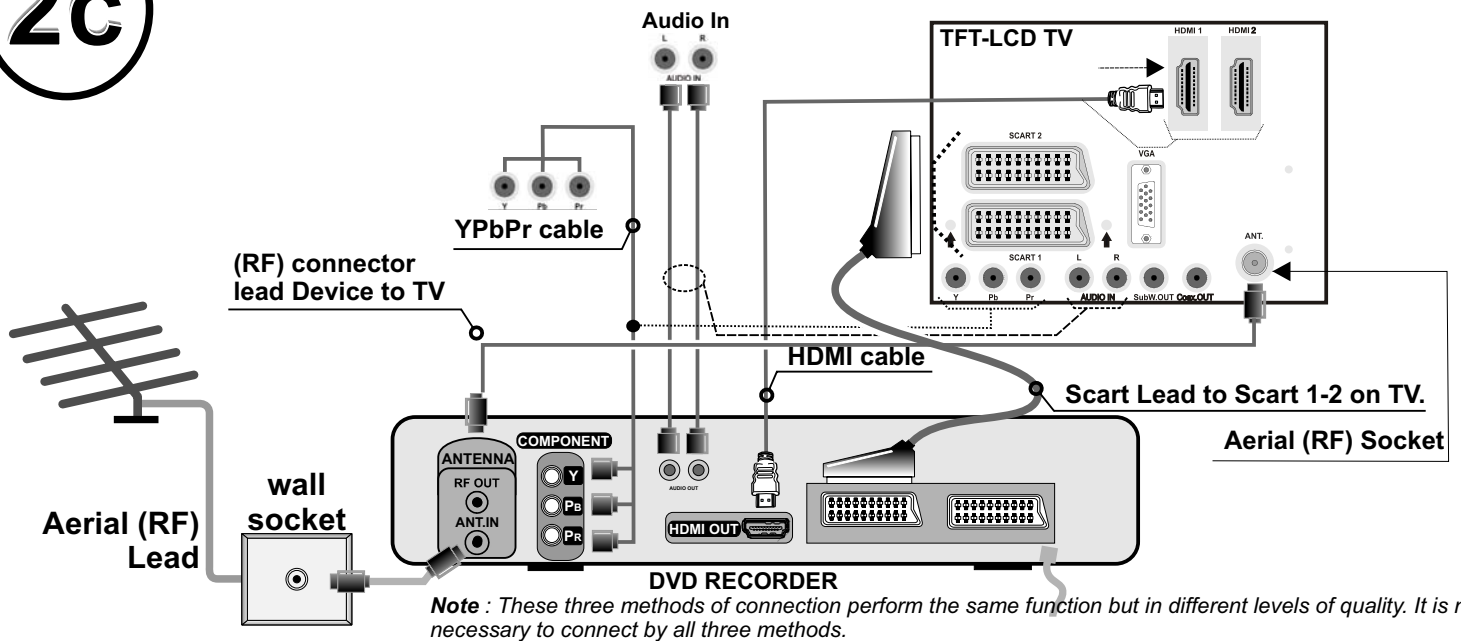


### • High Definition

Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Device. These devices must be connected via the HDMI socket or Component Socket.


2d

...or through a VCR and satellite decoder.

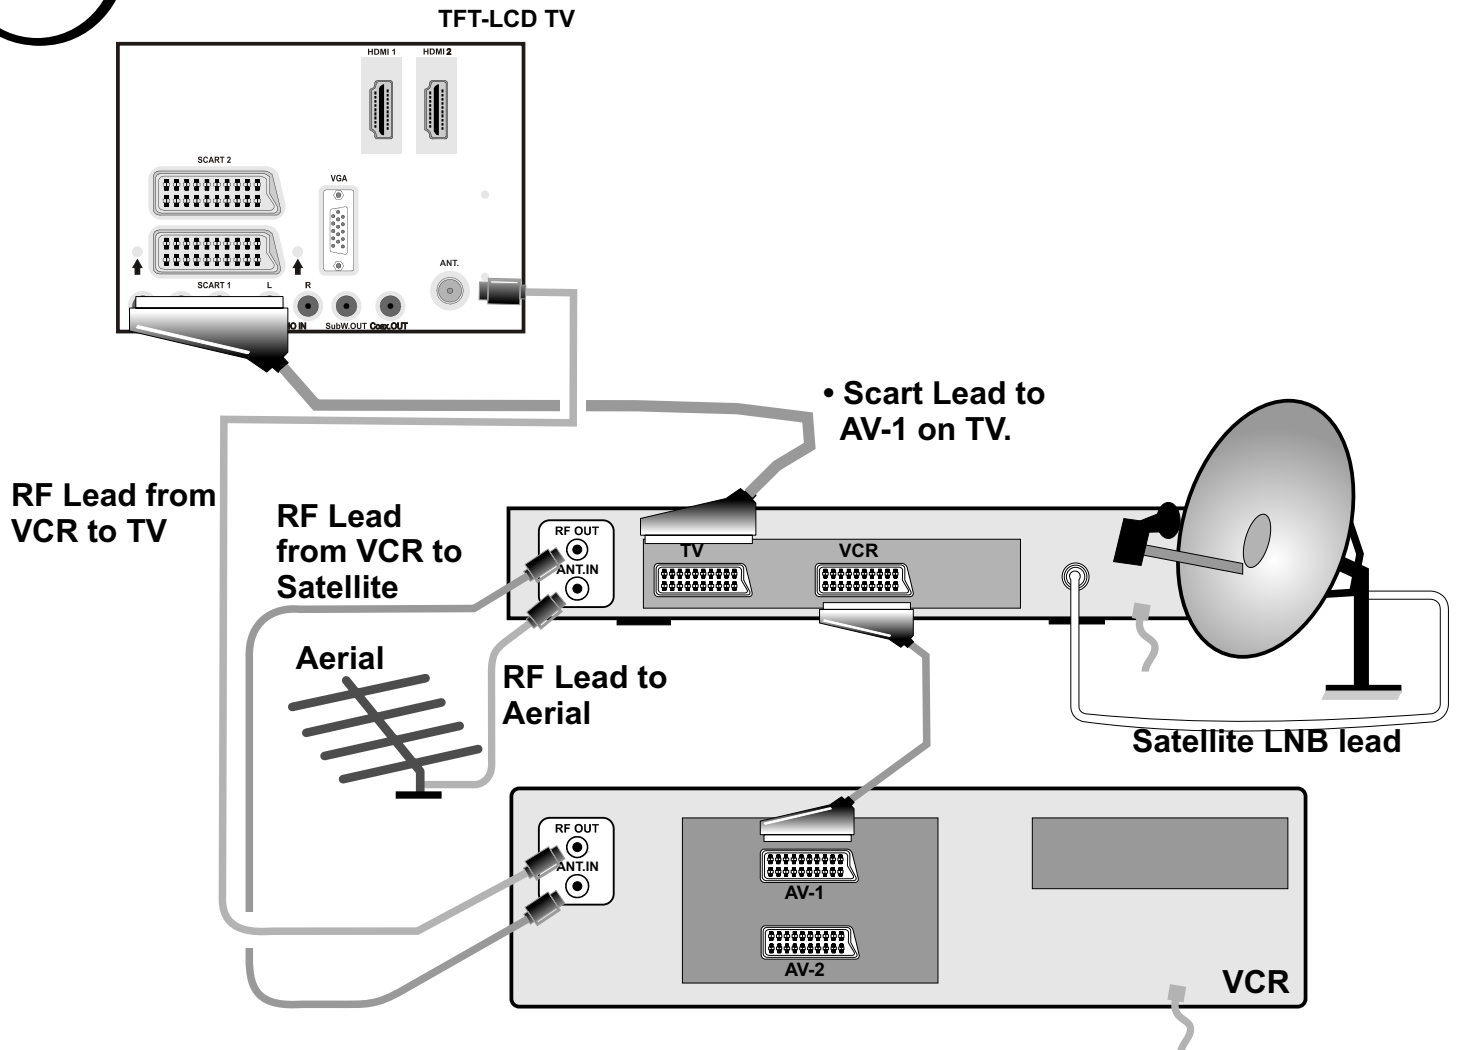


3

connect the TV plug to the mains socket

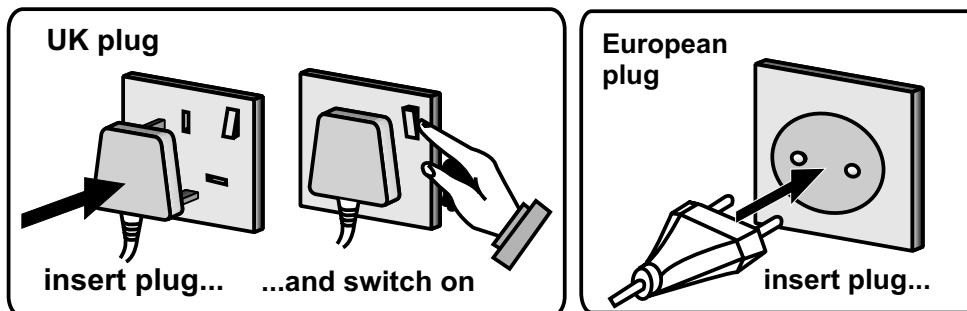


4

**Switch your TV on by setting the on/off button to position "I" located at the rear of the set.**

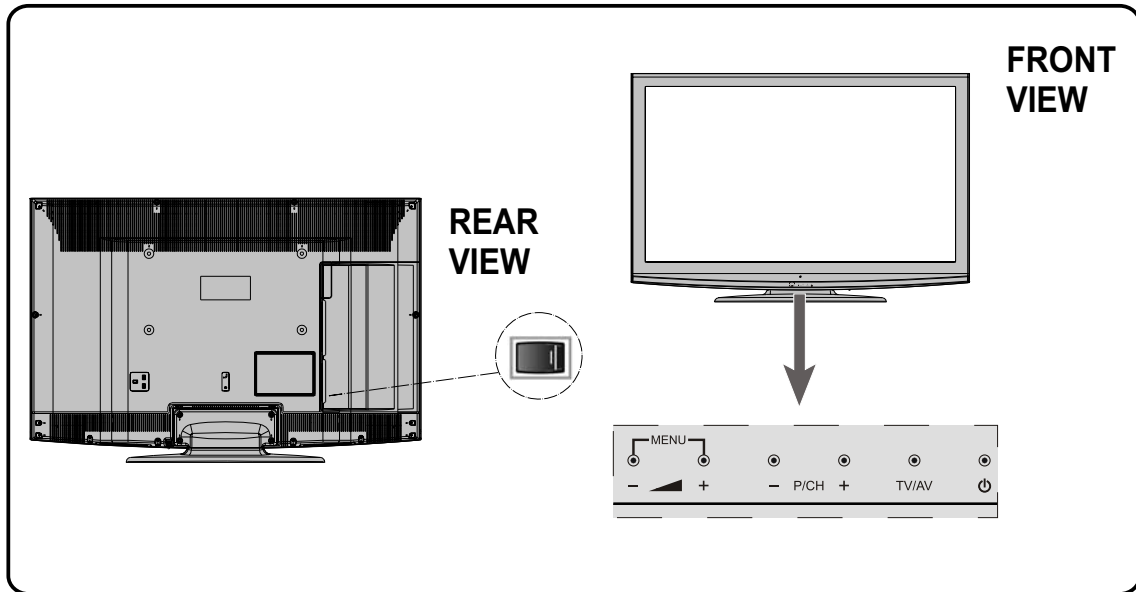

**NB:** When the set is first switched on, the set will be in standby and the indicator on the front of the set will illuminate. Press Standby or channel up down (P- , P+) or numeric buttons (1, 2, 3, ...) to operate.

### basic functions of remote control

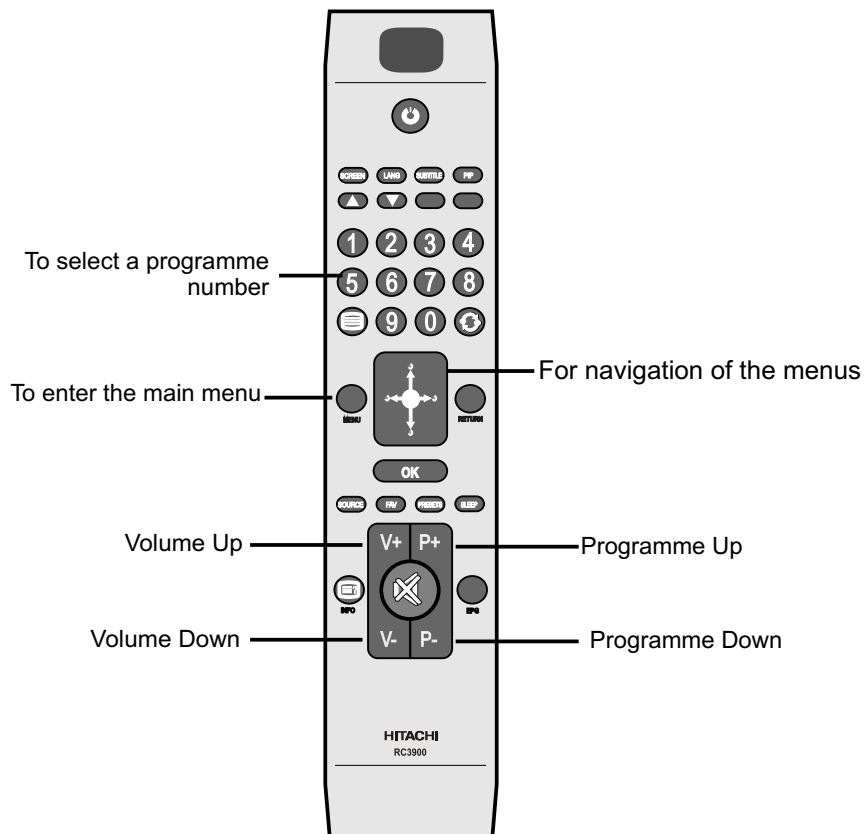

# 5

## start A.P.S. (Auto Programming System)

1

When the TV is operated for the first time, installation wizard will guide you through the process. First, language selection screen will be displayed.



2

- Use "up" or "down" buttons to select your language and press OK button to set selected language and continue.
- After selecting the language, "First Time Installation" screen will be displayed, requiring you to set Country, Teletext Language, Scan Encrypted and Active antenna options.



3

- By pressing "left" or "right" button, select the country you want to set and press "down" button to highlight Search Type. Available search types are Digital and analog, digital only and analog only. Set the desired type using "left" or "right" button and press "down" button to select Teletext Language option. Use "left" or "right" button to select desired Teletext Language.
- Press "down" button after setting Teletext Language option. Scan Encrypted will be then highlighted. You can set Scan Encrypted as Yes if you want to scan coded stations.
- Press OK button on the remote control to continue and the 'Do you want to start an automatic channel scan?' message will be displayed on the screen.



4

- To select the "Yes" or "No" option, highlight the item by using "left" or "right" buttons and press button.
- Afterwards, "automatic search" OSD will be displayed on the screen and the television will search for digital terrestrial and analogue TV broadcasts.



5

- Note:** You can press MENU button to cancel.
- After all the available stations are stored, Channel List will be displayed on the screen. If you like the sort channels, according to the LCN, please select "Yes" and then press "OK".
  - Press OK button to quit channel list and watch TV.



### important note.

Once the TV has found all your local stations, they are then automatically assigned a programme number and name, if available from the broadcast.



# Contents

<b>Contents</b>	<b>1</b>	<b>Connections</b>	<b>15</b>
<b>Contents</b>	<b>2</b>	<b>Back connections explained</b>	<b>15</b>
Preparation	3	<b>Left side connections explained</b>	<b>16</b>
Intended Use	3	<b>HDMI Connections</b>	<b>17</b>
Power source	4	<b>SCART Connections</b>	<b>17</b>
Positioning the TV	4	<b>VGA Connections</b>	<b>17</b>
Power cord and plug	4	<b>Side AV Connections</b>	<b>18</b>
Moisture and Water	5	<b>Using a Conditional Access Module</b>	<b>18</b>
Ventilation	5	<b>USB Connections</b>	<b>19</b>
Heat sources and Flames	5	<b>Basic Features</b>	<b>20</b>
Headphone Volume	5	<b>How to navigate menus - Selecting source</b>	<b>20</b>
Wall Mounting (optional)	5	<b>Electronic programme guide (EPG)</b>	<b>20</b>
LCD Screen	5	<b>General Operation</b>	<b>21</b>
Cleaning	5	Displaying Subtitles	21
Batteries	5	Zoom Modes	21
Replacement Parts	6	Using Main Menu Screen	21
Servicing	6	Con guring Date/Time Settings	21
Taking out of service and storing	6	Source Settings	21
Connection to a Television Distribution System (Cable TV etc.) from Tuner	6	Audio Language	21
Symbols in this Instruction Book	6	<b>Basic Features</b>	<b>22</b>
<b>Getting Started</b>	<b>7</b>	<b>Navigating Channel List</b>	<b>22</b>
<b>Support</b>	<b>7</b>	Moving a Channel	22
<b>Getting Started</b>	<b>8</b>	Deleting a Channel	22
<b>TV - Features</b>	<b>8</b>	Renaming a Channel	22
<b>Accessories included</b>	<b>8</b>	Locking a Channel	22
<b>Viewing remote control</b>	<b>9</b>	Sorting Channel List	22
<b>Getting Started</b>	<b>10</b>	<b>Language Settings</b>	<b>23</b>
<b>TV - Control buttons (left side)</b>	<b>10</b>	Language Settings	23
<b>Aerial connection</b>	<b>11</b>	<b>Parental Control</b>	<b>24</b>
<b>Power connection</b>	<b>11</b>	Parental Settings Menu Operation (*)	24
<b>Remote control - Inserting batteries</b>	<b>11</b>	<b>Environmental Information</b>	<b>25</b>
<b>Wall Mounting</b>	<b>11</b>	<b>Other Functions and Features</b>	<b>26</b>
<b>Switching the TV On and Off</b>	<b>11</b>	Favourite Mode	26
Switching the TV On	11	Conditional Access	26
Switching the TV Off	11	Setting Sleep Timer	26
<b>Operation using TV control buttons</b>	<b>12</b>	Setting Programme Timers	26
<b>Operation using Remote control buttons</b>	<b>12</b>	<b>Editing a Timer</b>	<b>26</b>
<b>Initial set up</b>	<b>13</b>	<b>Deleting a Timer</b>	<b>26</b>
<b>Initial set up</b>	<b>14</b>	<b>Picture Controls</b>	<b>27</b>
<b>General operation</b>	<b>14</b>	Con guring Picture Settings	27
Information Banner	14	Operating Picture Settings Menu Items	27
		Picture Settings Menu Items	27
		PC Picture Settings Operation	27
		<b>Sound and Source Settings</b>	<b>28</b>
		Con guring Sound Settings	28
		Sound Settings Menu Items	28
		Con guring Source Settings	28
		<b>Other Controls</b>	<b>29</b>
		Operation	29
		Other Settings Menu Items	29

# Contents

<b>Advanced Features</b>	<b>30</b>
<b>Media Browser</b>	<b>30</b>
Starting Media Browser	30
Media Browser Configuration	30
<b>Operation</b>	<b>30</b>
<b>View Style</b>	<b>30</b>
<b>Slide Show Interval</b>	<b>30</b>
<b>Show Subtitle</b>	<b>30</b>
<b>Subtitle Language</b>	<b>30</b>
<b>Subtitle Position</b>	<b>30</b>
<b>Subtitle Font Size</b>	<b>30</b>
Loop / Shuffle during Playback	30
<b>Media Browser - continued</b>	<b>31</b>
Viewing Videos via USB	31
Video Playback Screen	31
Subtitle Time Correction	31
Viewing Photos via USB	31
Displaying Photos in Slideshow Mode	31
Playing Music via USB	31
<b>Setting the channels</b>	<b>32</b>
Accessing Installation Menu	32
Automatic Channel Scan (Retune)	32
Manual Channel Scan	32
Analogue Fine Tune	32
First Time Installation	32
Clear Service List	32
<b>Other Information</b>	<b>33</b>
<b>Teletext</b>	<b>33</b>
Analogue Teletext	33
<b>Digital Teletext (for the UK only)</b>	<b>33</b>
<b>Specifications</b>	<b>34</b>
<b>Product Support</b>	<b>35</b>
<b>Trouble shooting</b>	<b>35</b>
<b>Disposal information</b>	<b>36</b>
<b>Supported DVI Resolutions</b>	<b>37</b>
<b>PC Input Typical Display Modes</b>	<b>38</b>
<b>Supported File Formats for USB Mode</b>	<b>39</b>
<b>AV and HDMI Signal Compatibility (Input Signal Types)</b>	<b>39</b>
<b>Definition of important terms</b>	<b>40</b>
<b>Software Upgrade</b>	<b>41</b>
<b>DVB-T functionality information</b>	<b>42</b>
<b>Guarantee</b>	<b>43</b>

Model number

HITACHI L42VK04U A





# Safety Information



**IMPORTANT - Please read these instructions fully before installing or operating**



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock of persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## Preparation

Place the device on a solid even surface. For ventilation, leave a free space of at least 10 cm all around the set. To prevent any fault and unsafe situations, do not place any objects on top of the set. Use this device in moderate climates.

Operation temperature and operation humidity: 5°C up to 45°C, 85% rel. humidity max. (not blocking ventilation openings).

## Intended Use

This device is used to receive and display TV programmes. The different connection options make an additional expansion of the reception and display sources possible (various external devices). This device is only suitable for dry interior use. This appliance is intended solely for private domestic use and may not be used for industrial and commercial purposes. We exclude liability in principle, if the device is not used as intended, or unauthorized modifications have been made. To operate your LCD TV in extreme ambient conditions may cause the damage of the device.

**⚠ WARNING:** Never let people (including children) with physical, sensory or mental abilities or lack of experience and / or knowledge unsupervised use electrical device!

Children may not recognize dangers. The swallowing of batteries can be fatal. Keep batteries always out of reach of small children. If a battery is swallowed, seek immediate medical attention. Keep the packaging fms out of reach of children, there is a risk of suffocation.

\*\*\*\*\*

**Please read the following recommended safety precautions carefully for your safety.**

### SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

\*\*\*\*\*

**DO** read the operating instructions before you attempt to use the equipment.

**DO** ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.

**DO** consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

**DO** be careful with glass panels or doors on equipment.

**DO** route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

\*\*\*\*\*

**DON'T** remove any fixed cover as this may expose dangerous voltages.

**DON'T** obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

**DON'T** allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment.

**DON'T** place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

**DON'T** use makeshift stands and **NEVER** fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

**DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

**DON'T** listen to headphones at high volume, as such use can permanently damage your hearing.



# Safety Information

**IMPORTANT - Please read these instructions fully before installing or operating**

**DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure that your family know how to do this. Special arrangements may need to be made for in- rm or handicapped people.

**DON'T** continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

## ABOVE ALL

--- NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock;

--- NEVER guess or take chances with electrical equipment of any kind

--- it is better to be safe than sorry!


## Power source

- The TV should be operated only from a 220-240V AC, 50 Hz outlet.

**⚠ Warning:** When the set is not in use for a long time, disconnect from the power.

## Positioning the TV

- For ventilation, please leave a clear space of at least 10cm all around the TV.

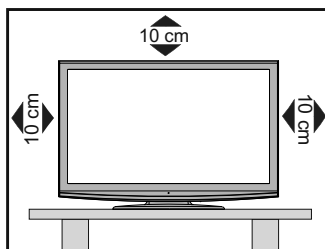

- **Do not** block the ventilation openings.
- **Do not** place the TV on sloping or unstable surfaces, the TV may tip over.
- To prevent damage to the TV, **do not** place any objects on top of the TV.
- Only use the TV in moderate climates.

## Power cord and plug

- Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not unplug the appliance by pulling from the power cord and never touch the power cord with wet hands as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause re or give you an electric shock. When it is damaged and needs to be replaced, it should be done by qualified personnel.
- This TV receiver is supplied with a moulded mains plug. The mains plug must not be cut off, as it may contain a special radio interference filter, the removal of which could lead to impaired performance. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer.
- Observe the manufacturers instructions when connecting extension leads to the set. Check the fuse rating on the new plug; this should be tted with a 5 Amp fuse which conforms to either ASTA or BSI (BS1362) approvals, these are easily identifiable by either the ⚡ or ⚡ symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician.



# Safety Information

**IMPORTANT - Please read these instructions fully before installing or operating**

## Moisture and Water

- **Do not** use this TV in a humid or damp place (avoid bathrooms, the sink in the kitchen, etc).
- **Do not** expose this TV to rain or water, as this may be dangerous.
- **Do not** place objects filled with liquids, such as flower vases, on top of the TV. Avoid from dripping or splashing.
- If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

## Ventilation

- The slots and openings on the TV set are intended for ventilation and to ensure reliable operation.
- To prevent overheating, these openings must not be blocked or covered in anyway.

## Heat sources and Flames

- **Do not** expose the TV to direct sunlight or other heat sources.
- The TV should not be placed near to open flames and sources of intense heat such as an electric heater.
- Ensure that no open flame sources, such as lighted candles, are placed on top of the TV.



## Headphone Volume

- Excessive sound pressure from earphones and headphones can cause hearing loss, please take care.



## Wall Mounting (optional)

- To prevent injury, this TV must be securely attached to the wall in accordance with the installation instructions (if the option is available).

## LCD Screen

- Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product.
- Take care not to scratch the screen with fingernails or other hard objects.

## Cleaning

- Before cleaning, unplug the TV from the wall socket.
- **Do not** use liquid or aerosol cleaners. Only use a soft, dry cloth.

## Batteries

- **Warning:** Incorrect installation of batteries may cause battery leakage and corrosion, resulting in damage to the remote control.



- **Do not** mix old and new batteries, or batteries of different types.
- **Do not** dispose of batteries in a fire.
- **Do not** dispose of batteries with normal household waste, take to a local recycling centre.

**CAUTION:** Insert the batteries / rechargeable batteries in the correct polarity. Don't try to recharge non rechargeable batteries and under no circumstances throw them into a fire. Danger of explosion. Do not use unequal batteries (old and new, Alkaline and carbon, etc.) simultaneously. If you will not use the device for a long time, remove the batteries and store the device in a dry and dust free place. Improper use of batteries may cause an explosion or leakage. If the batteries have leaked, use gloves and clean the appliance thoroughly with a dry cloth! Batteries should not be exposed to heat, such as sunshine, fire or the like.

**Warning:** Do not leave your TV in standby or operating mode when you leave your house.




# Safety Information

 **IMPORTANT - Please read these instructions fully before installing or operating**

## Replacement Parts


When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock or other hazards.

## Servicing

-  **Warning:** Risk of electric shock, **do not** attempt to repair, service or modify this TV yourself. Contact the manufacturer, their approved service agent or the **Customer Helpline: 0845 604 0105**.

## Taking out of service and storing

Unplug the TV from the mains and pack the TV in an appropriate cardboard box. Remove the batteries from the remote control and pack the remote control with the TV set.

 **NOTE:** *The TV set should be stored in a dry and dust-free room.*

## Connection to a Television Distribution System (Cable TV etc.) from Tuner

Device connected to the protective earthing of the building installation through the mains connection or through other apparatus with a connection to protective earthing-and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard.

Connection to a cable distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see EN 60728-11).

## Symbols in this Instruction Book

The following symbols are used in the Instruction Book as a marker for restrictions and precautions and safety instructions. Note such information for security reasons.

### **WARNING**

If you do not pay attention to such a marked warning, it can cause serious injury or death. Note these warnings strictly, in order to ensure a safe operation.

### **IMPORTANT**

Warnings on the appliance and restrictions are displayed like this. Read this information strictly in order to operate the system correctly and avoid damage.

### **NOTE**

Information about the operation and additional explanations are marked like this. To be aware of such information is recommended to ensure that the functions can be used optimally.

Technical experts are available 7 days a week

- **Simple help and advice on setting up your digital equipment (image).**
- **Guidance on connecting other devices to your television such as a DVD player, Sky, home cinema system or a games console.**
- **Order spare parts, including that lost remote control.**
- **Any other technical issues you may need assistance with.**

**Call us today: 0845 604 0105**

Local call rates applies\*

**Lines open 9am-8pm Monday to Saturday and 10am-4pm Sunday.**

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

# Getting Started

## TV - Features


- Remote controlled colour LCD TV.
- Fully integrated Terrestrial digital TV (DVB-T - MPEG2)
- HDMI connectors for digital video and audio. This connection is also designed to accept high definition signals.
- USB input.
- 1000 programmes (analogue+digital).
- On Screen Display (OSD) menu system.
- Integrated tuner DVB-T MPEG 2 compatible.
- Scart socket for external devices (such as video, video games, audio set, etc.).
- Stereo sound system. (German+Nicam)
- Teletext, fasttext, TOP text.
- Headphone connection.
- Automatic programming system.
- Forward or backward manual tuning.
- Sleep timer / Child lock.
- Automatic sound mute when no transmission.
- NTSC playback.
- AVL (Automatic Volume Limiting).
- Auto power down.
- PLL (Frequency Search).
- PC input.
- Plug&Play for Windows 98, ME, 2000, XP, Vista, Windows 7.
- Game Mode

## Accessories included

Remote Control  
Batteries: 2 x AAA  
Instruction Book  
Quick Start Guide  
Digital Tuning Guide  
Cable Holder

### Optional Accessories


Wall mount bracket

 **NOTE:** You should check the accessories after purchasing. Make sure that each accessory is included.

# Getting Started

## Viewing remote control

1. Standby
2. Mono/Stereo - Dual I-II / Current language
3. Image size / Expand (in TXT mode)
4. Green button
5. Red button
6. Numeric buttons
7. Teletext - Mix
8. Cursor left
9. Menu on/off
10. AV / Source
11. Favourite mode selection
12. Volume up
13. Info / Reveal (in TXT mode)
14. Mute
15. Volume down
16. Programme down / Page up
17. Electronic Programme Guide (EPG)
18. Programme up / Page down
19. Sleep timer
20. Picture mode selection
21. OK / Select / Hold (in TXT mode) / Channel list
22. Cursor down
23. Return / Index page (in TXT mode)
24. Cursor right / Subpage (in TXT mode)
25. Cursor up
26. Previous programme
27. Yellow button
28. Blue button
29. No function
30. Subtitle on-off / TXT subtitle (analogue TV mode) / Subtitle (in Media Browser mode)

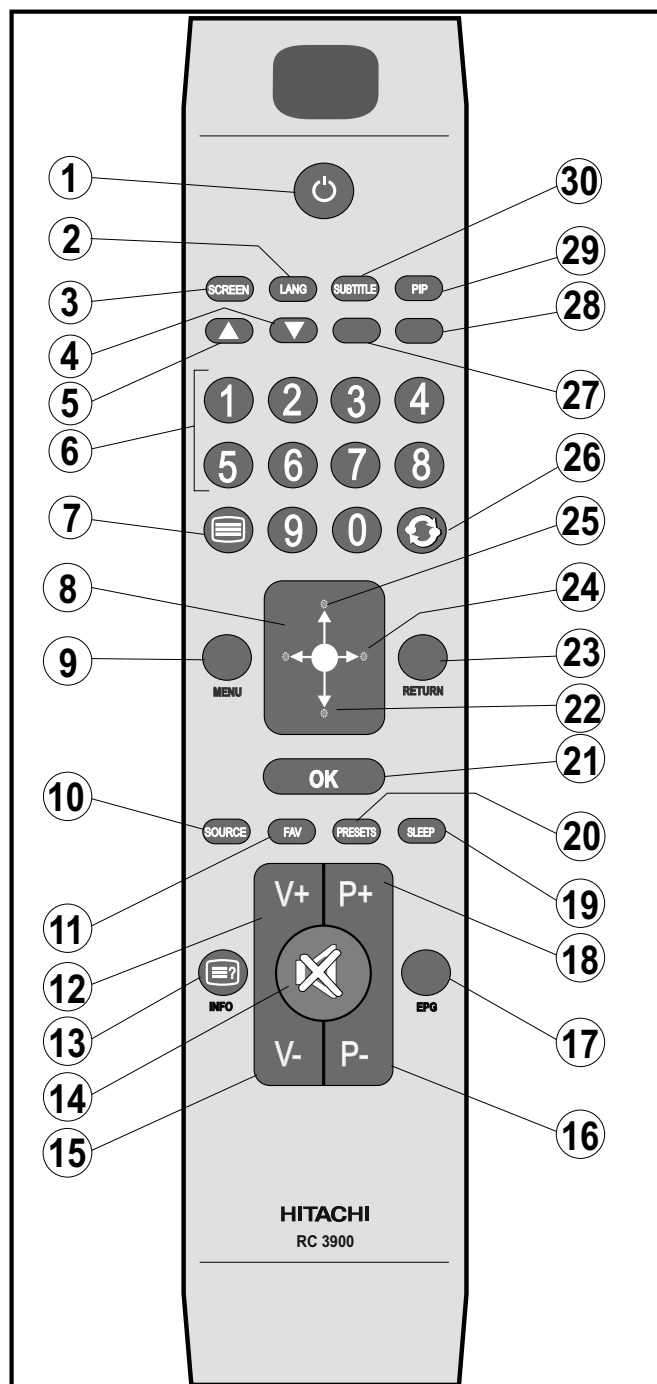

# Getting Started

## TV - Control buttons (left side)

### 1. Standby (⏻) button

Turns the TV on when in standby mode or turns the TV off into standby mode.

### 2. TV/AV button


Changes the operation of “Up” and “Down” buttons.


### 3. Programme Up/Down buttons


Moves up/down a channel.

### 4. Volume Up/Down buttons

Increases/decreases the volume.

 **NOTE:** If you switch on your TV via PROGRAMME UP/DOWN buttons on the remote control or on the TV set, the programme that you were watching last will be reselected.

 **NOTE:** Press “-▲” / “-▲+” buttons at the same time to view main menu.

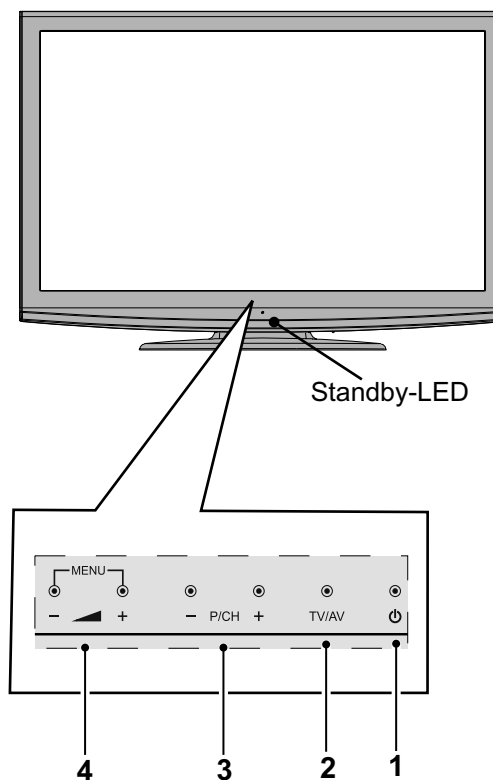



# Getting Started

## Aerial connection

Connect the “aerial” or “cable TV” plug to AERIAL INPUT (ANT.) socket located on the back of the TV ( g.1).


## Power connection

**IMPORTANT** :The TV set is designed to operate on 220-240V AC, 50 Hz.

**Please note:** After unpacking, allow the TV to reach ambient room temperature before connecting the TV to the mains power socket.

Connect the power cord plug to the mains power socket.

The LED on the front of the TV then lights up, this indicates that the TV is in ‘Standby’ mode.

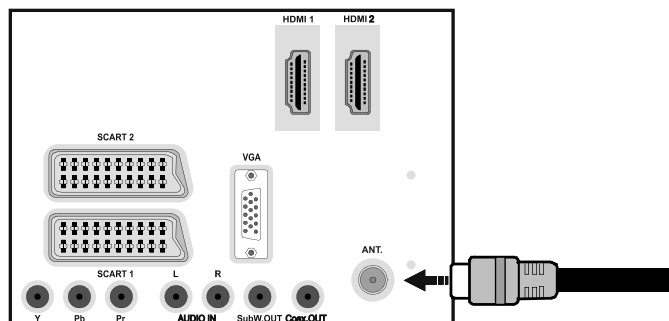


g.1

## Remote control - Inserting batteries

Remove the battery cover on the back of the remote control, gently push down and pull backwards at the same time as shown.

Insert two **AAA/R3** or equivalent type batteries. Ensure the batteries are inserted the correct way and replace the battery cover ( g.2).

**NOTE:** When the remote control is not going to be used for long periods of time, the batteries should be removed. Otherwise the remote control may be damaged, caused by battery leakage and corrosion.

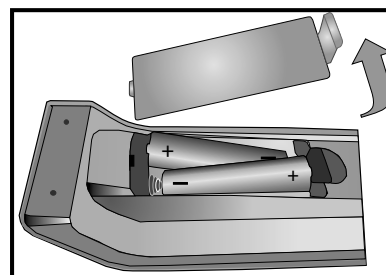

**AAA/R3** x 2  
Batteries

g.2

## Wall Mounting


 
 
When wall mounting please ensure you use a compatible wall mount (not supplied). This TV conforms to the VESA mounting specifications and is 400 x 200mm.

Screw size is given on the specification page.

## Switching the TV On and Off

### Switching the TV On



Connect the power cord to the 220-240V AC 50 Hz.

- Switch the “” button to position “1” so the TV will switch to standby mode. Then the standby LED lights up.
- To switch on the TV from standby mode either:
- Press the “” button, P+ / P- or a numeric button on the remote control.
- Press the “” or PCH+ / PCH- button on the TV.
- The TV will then switch on.

**Note:** If you switch on your TV via standby button on the remote control, the programme/source that you were watching last will be reselected.

By either method the TV will switch on.

### Switching the TV Off

- Switch the “” button to position 2 as illustrated,  so the TV will switch **OFF**.
- To power down the TV completely, unplug the power cord from the mains socket.  
**To turn off the TV completely, remove the power cord plug from the mains power socket.**

**NOTE:** When the TV is in standby mode, the standby LED can blink to indicate that features such as Standby Search, Over Air Download or Timer are active.

**NOTE:** If you switch on your TV via P+/- buttons on the remote control or P/CH+/- on the TV set, the programme that you were watching last will be reselected.

# Getting Started

## Operation using TV control buttons

The main menu OSD (On Screen Display) cannot be displayed using the TV control buttons.

The “- ▲”/“▲ +” buttons will function as volume up/down as default. Even if you set other functions for these buttons, the “- ▲”/“▲ +” buttons will return to volume control after a short while.

### Volume Setting


Press “- ▲” button to decrease volume or “▲ +” button to increase volume, so a volume level scale (slider) will be displayed on the screen.

### Programme Selection

Press “P/CH +” button to select the next programme or “P/CH -” button to select the previous programme.

### AV Mode

Hold the **TV/AV** button for a few seconds, the “Source” OSD will be displayed.

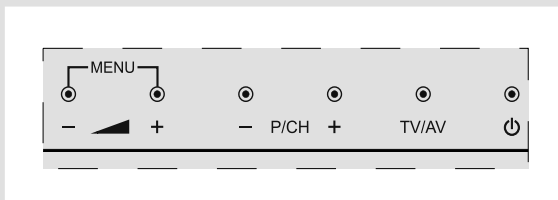

## Operation using Remote control buttons

The remote control is designed to control all the functions of the model you selected.

### Volume Setting

Press “V +” button to increase the volume. Press “V -” button to decrease the volume. A volume level scale (slider) will be displayed on the screen.


### Programme Selection (Previous or Next Programme)

Press **P-** button to select the previous programme. Press **P+** button to select the next programme.

### Programme Selection (Direct Access)

Press numeric buttons on the remote control to select programmes between 0 and 9. The TV will switch to the selected programme.


To select programmes between 10-500 (IDTV) or 10-199 (analogue), press the numeric buttons consecutively.

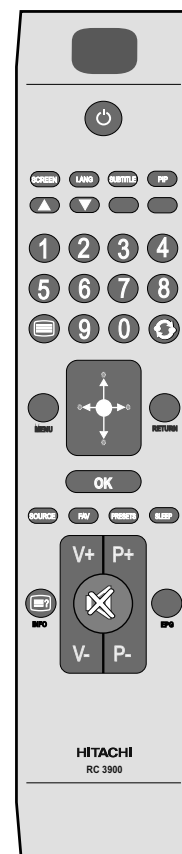

# Getting Started

## Initial set up


When turned on for the first time, the “language selection” menu appears. The message “**Welcome please select your language!**” is displayed in all language options listed alphabetically as shown below.

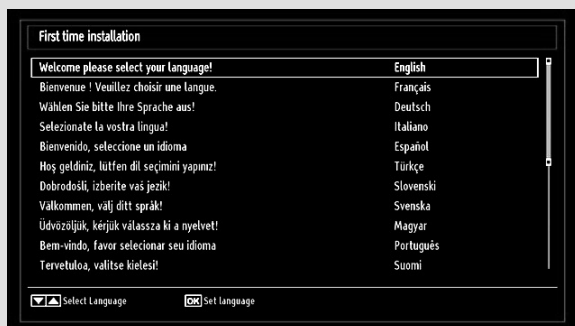

Press the “ $\wedge$ ” or “ $\vee$ ” button to highlight the required language, press **OK** button to select. “First Time Installation” appears. Use “ $\langle$ ” or “ $\rangle$ ” button to set the required country, and press “ $\vee$ ” button to select Search Type. Available search types are Digital and analog, digital only and analog only. Set the desired type by using “ $\langle$ ” or “ $\rangle$ ” button. When set, press “ $\vee$ ” to select **Teletext Language**. Use “ $\langle$ ” or “ $\rangle$ ” to select the desired **Teletext Language**. Afterwards, select “Scan Encrypted” using “ $\wedge$ ” or “ $\vee$ ” button. Set “Scan Encrypted” using “ $\langle$ ” or “ $\rangle$ ” button ( g.4).



Press **OK** button on the remote control to continue and the following message will be displayed on the screen as shown below.

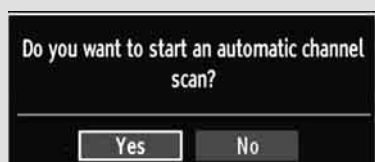


To start “Automatic channel scan” select **Yes** (to cancel select **No**), highlight the item required using the “ $\langle$ ” or “ $\rangle$ ” button and press **OK** button to select.

The IDTV will automatically tune to the UHF or VHF transmission channels, searching for digital terrestrial and analogue (if available) TV broadcasts.

**IMPORTANT:** Do not turn off the TV while “First Time Installation” is in operation.

End of the search process, “Choose Region” osd will be displayed on the screen (if any multiple region variants are detected). Please select country and region choice then press **OK** to continue.

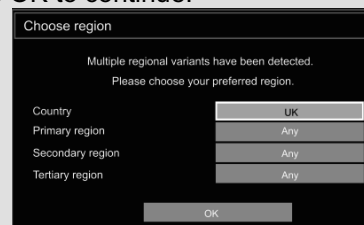

After all the available stations are stored, Channel List will be displayed on the screen. If **LCN (\*)** is available in your country, a message appears on the screen which asks you if you want to sort the channels according to LCN.

In some countries, the order of the channels is arranged automatically by the broadcaster. This is called logical channel number (LCN). If the selected country has LCN support, the channels will be enumerated one by one, beginning from number 1. You cannot move any programme to a position after the last saved one. If you try to do this, both programmes will change their places. If LCN support is not available, you can move the channels as you wish.



Press **OK** button to quit channel list and watch TV.

(\*) LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel sequence.

# Getting Started

## Initial set up

### General operation

Press the **SOURCE** button on the remote control for switching between the sources.

#### Information Banner

Whenever you change channel using the **P-/P+** buttons or the numeric buttons, the TV displays the broadcast picture along with an information banner at the bottom of the screen.

The information banner can be displayed at any time while watching TV by pressing the **INFO** button on the remote control ( g.8).



*Hint: Not all channels broadcast the programme data. If the name and time of the programme are not available, then information banner will be displayed with blanks.*


If the selected channel is locked, you must enter the correct four-digit numeric code to view the channel (default code is **0000**). “Enter PIN” will be displayed on the screen in such a case.

# Connections

## Back connections explained

### 1. SCART socket

Inputs or outputs for external devices. Connect the SCART cable between the SCART socket on the TV and the SCART socket on the external device (decoder, VCR or DVD player).

 **NOTE:** If an external device is connected via the SCART socket, the TV will automatically switch to AV mode.

### 2. HDMI Input

Connects a device that has an HDMI socket. The TV can display High Definition pictures from devices such as a High Definition Satellite Receiver or Blu-ray Player. These devices must be connected via the HDMI sockets or Component Socket. No sound connection is needed for an HDMI to HDMI connection.

### 3. PC Input (VGA)

Connects a personal computer to the TV. Connect the PC cable between the PC INPUT on the TV and the PC output on the PC.

### 4. RF Input (ANT.)

Connects to aerial (antenna) or cable TV. If you use a decoder or a media recorder, you should connect the aerial cable through the device to the TV with an appropriate aerial cable (see page 10).

### 5. S/PDIF Coaxial Out

Outputs digital audio signals of the currently watched source.



Use an SPDIF coaxial cable to transfer audio signals to a device that has S/PDIF input.

### 6. Subwoofer Out

Connects an external, active subwoofer to the set to give a much deeper bass effect. Use an appropriate RCA cable to connect the TV set to a subwoofer unit.


### 7. PC/YPbPr Audio Inputs

PC/YPbPr Audio Inputs are used for connecting audio signals of a PC or a device that connects to the TV via YPbPr. Connect the PC audio cable between the AUDIO INPUTS on the TV and audio output of your PC to enable PC audio. Connect the audio cable between AUDIO INPUTS on the TV and audio outputs of your device to enable component audio.

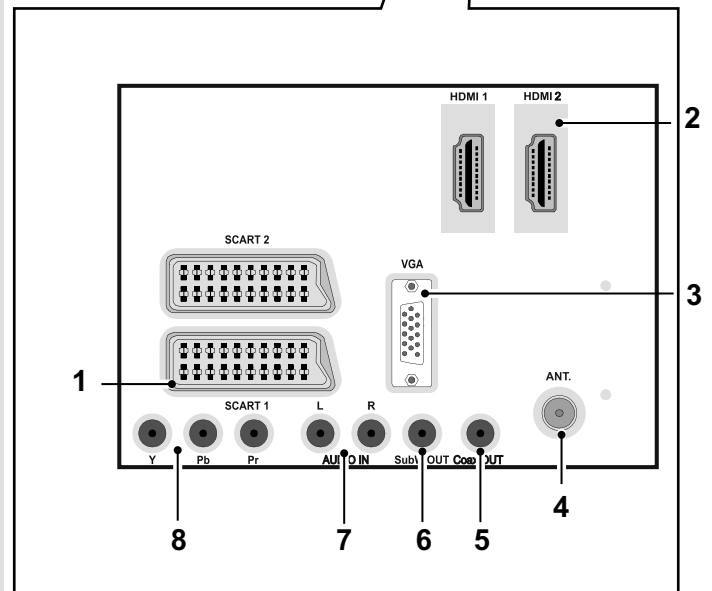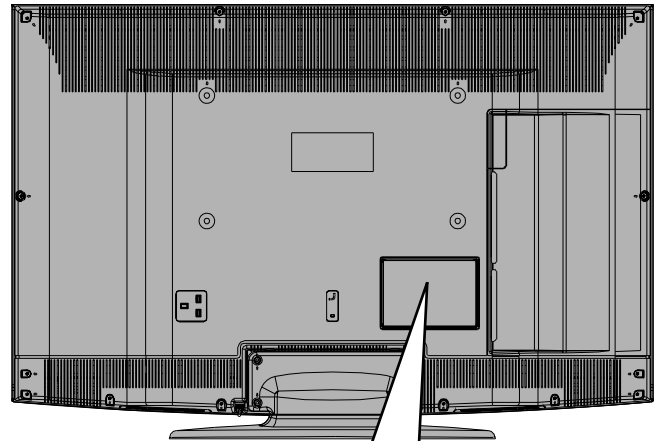

### 8. Component Video Inputs (YPbPr)

Component Video Inputs (YPbPr) are used for connecting component video. You can connect the component video and audio sockets with a device that has component output. Connect the component video cables between the COMPONENT VIDEO INPUTS on the TV and the component video outputs of your device. While connecting, be sure that the letters on your TV, "Y", "Pb", "Pr" correspond with your device's connectors.

 **NOTE:** When using the wall mounting kit (optional), we recommend that you plug all your cables into the back of the TV before mounting on the wall.

# Connections

## Left side connections explained

### 9. CI Slot

Used to insert a CI card. A CI card allows you to view all the channels that you subscribe to. For more information, see “Conditional Access” section.

### 10. USB Inputs

To connect devices to the TV, providing fast data exchange. USB will only function in DTV mode.

Use an SPDIF coaxial cable to transfer audio signals to a device that has S/PDIF input.

### 11. Headphone


Headphone jack is used for connecting an external headphone to the system. Connect to the HEADPHONE jack to listen to the TV from headphones (optional).

### 12. Video Input


Video Input is used for connecting video signals of external devices. Connect the video cable between the VIDEO IN socket on the TV and the VIDEO OUT jack on your device.


### 13. Audio Inputs

Audio Inputs are used for connecting audio signals of external devices. Connect the audio cable between the AUDIO INPUTS on the TV and the AUDIO OUTPUT jacks on your device.

 **NOTE:** If you connect a device to the TV via the VIDEO INPUT, you should also connect your device with an audio cable to the AUDIO INPUTS of the TV to enable audio.

### 14. Rocker Switch

 switch is used for turning the TV on or off.

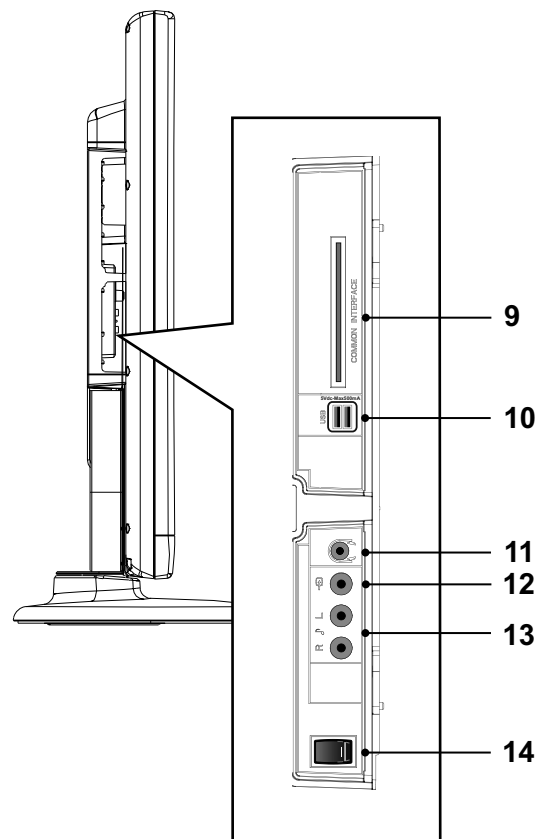

# Connections


## HDMI Connections


HDMI lets you enjoy high definition digital images and high quality sound by connecting the TV to external devices such as DVD players, set top boxes or gaming equipment ( g.1).

Power off both the TV and the device before making any connections.

For more information, refer to your device's own instruction book.

After making the connection, switch to HDMI 1 or HDMI2. See, **Input Selection** section for more information on changing sources.

 **NOTE:** HDMI cable is not supplied.

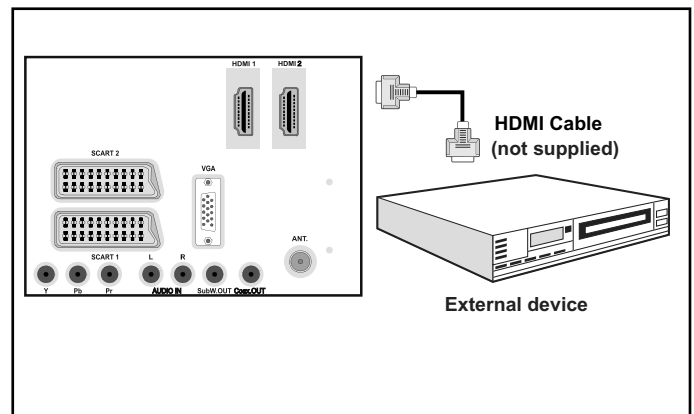


g.1


## SCART Connections

Most devices support SCART connection. You can connect a DVD recorder, VCR or decoder to the TV using the SCART socket ( g.2).

Power off both the TV and the device before making any connections.

For more information, refer to your device's own instruction book.

 **NOTE:** The Scart cable is not supplied.

 **NOTE:** If your external device has a **S-Video output**, it is possible to connect your external device with a **SCART-S-video adapter** (not included) to the scart input of the TV. First plug the SCART S-Video adapter to the SCART connector on your TV set. Then, connect a S-video cable to the SCART socket (via the Scart S-Video adapter) to the S-video output of your external device.

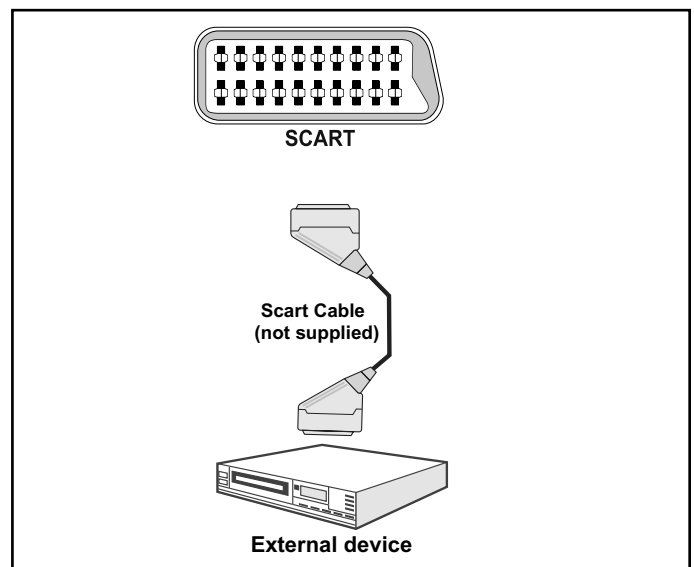


fig. 2

## VGA Connections


You can connect a computer (PC) to the TV to display your computer's screen image on the TV.

Power up both computer and TV before making any connections.

Use a 15-pin D-sub display cable to connect a PC to the TV. Use an audio cable between audio inputs on the left side of the TV and audio output on your PC to enable sound connection ( g.3).

When the connection is made, switch "Source" to "PC-VGA". See "Input selection" section.

Set the resolution that suits your viewing requirements. Resolution information can be found in the "Appendix parts" .

 **NOTE:** The cable is not supplied.

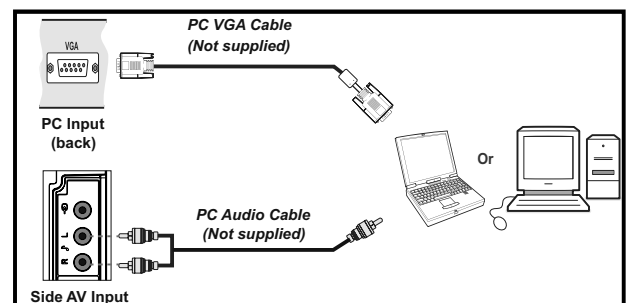


fig. 3

# Connections

## Side AV Connections

1. For connecting a camcorder, connect to the VIDEO IN socket and the AUDIO SOCKETS. For selecting the related source, see the section “Input selection” in the following parts.
2. To listen the TV sound from headphones, connect to the HEADPHONE jack of the TV.

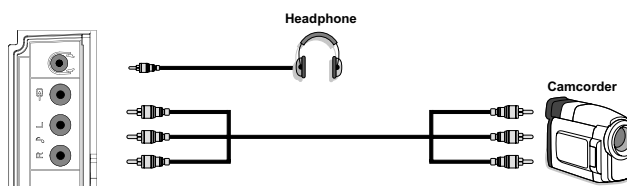


fig. 1

## Using a Conditional Access Module

**IMPORTANT:** Insert or remove the CI module only when the TV is SWITCHED OFF.

In order to watch certain digital channels, a conditional access module (CAM) can be necessary. This module must be inserted in the CI slot of your TV.

1. Obtain the Conditional Access Module (CAM) and the viewing card by subscribing to a pay channel company, then insert those to the TV using the following procedure.
2. Insert the CAM and then the viewing card to the slot that is located in the terminal cover at the rear side of the TV.
3. The CAM should be correctly inserted, it is impossible to insert fully if reversed. The CAM or the TV terminal may be damaged if the CAM is forcefully inserted.
4. Connect the TV to the mains supply, switch on and then wait for few moments until the card is activated.
5. When no module is inserted, “**No Common Interface module detected**” message appears on the screen.

You can refer to the module instruction manual for details of the settings.

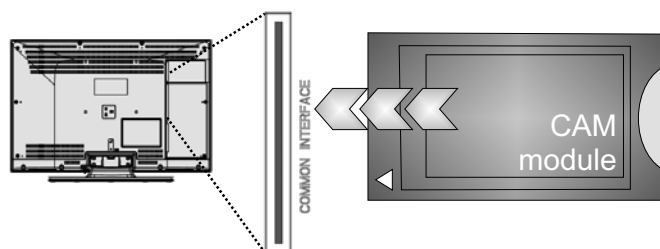


fig. 2



# Connections

## USB Connections


2.5" and 3.5" inch (hdd with external power supply) external hard disk drives are supported.

### **IMPORTANT**

You should back up your files before making any connections to the TV set in order to avoid any possible data loss. Note that manufacturer will not be responsible for any le damage or data loss.

It is possible that certain types of USB devices (e.g. MP3 Players) or USB hard disk drives/memory sticks may not be compatible with this TV.

The TV supports FAT32 and NTFS disk formatting.

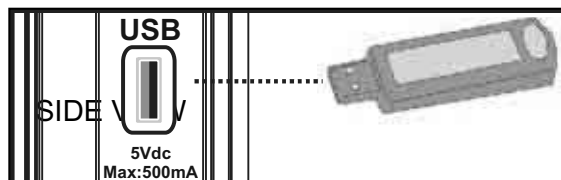

### **USB Disk Connection**

Plug your USB device to the USB input of the TV.

#### **NOTE:**

*Plug or unplug your USB disk while the TV is switched off.*

*If you are going to connect a USB hard disk drive to the TV set, USB connection cable used between the disk drive and the TV should have a USB logo and should be as short as possible.*

*While formatting a USB hard disk that has 1TB (Tera Byte) or more file capacity, you can experience problems with the formatting process. In such a case, you should format the disk with your personal computer and the formatted disk type should be FAT32.*

#### **CAUTION:**

Quickly plugging and unplugging USB devices, is a very hazardous operation. Especially, do not repeatedly quickly plug and unplug the drive. This may cause physical damage to the USB player and especially the USB device itself. Do not pull out USB module while playing or recording a le.

# Basic Features

## How to navigate menus - Selecting source

Once you have connected external devices to the TV, you can select and change the input source required.

To change Input Selection, use one of the following options:

**Option a:** Press the “**SOURCE**” button on the remote control to directly select required source.

**Option b:** Select “**SOURCES**” from the “**Settings**” menu using the “**^**” or “**v**” button.

Use the “**^**” or “**v**” button to highlight the required input and press the “**>**” button to select.



## Electronic programme guide (EPG)

Some, but not all channels send information about the current and next programmes. Press the EPG button to view the EPG menu.

It is able to get Information on all programmes for the next 7 days by means of the 7-DAY-EPG. All programmes on each channel will be displayed.

*Info bar commands:*

**Up/Down/Left/Right:** Navigate.

**RED button - Shrink:** reduces info boxes.

**GREEN button - Expand:** enlarges info boxes.

**YELLOW button - Prev. day:** displays programmes from previous day.

**BLUE button - Next day:** displays programmes for next day (will move forward a day each time button is pressed).

**INFO button - Details:** displays, in detail information on programme selected.

**OK button - Reminder:** to view current selected broadcasts or set reminders for future programmes.

**Number buttons - Jump:** go to preferred channel directly using number buttons.

**0 button - Search:** to view “Guide Search” menu. Using this feature, you can search the programme guide database in line with the genre selected or with name match and on the day/s selected.


**“Now” button - Now:** jumps to the current broadcast (when viewing previous “Prev. day” or future “Next day” programmes).



EPG screen in regular mode



EPG screen in programme schedule

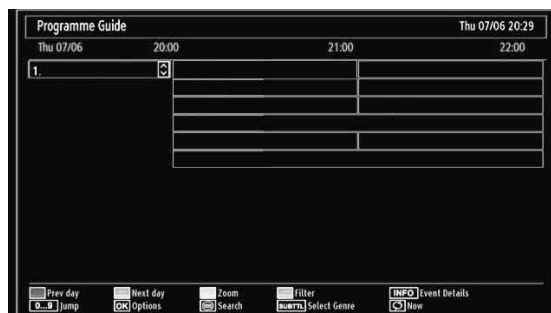

EPG screen in timeline schedule

# Basic Features


## General Operation

### Displaying Subtitles

With digital terrestrial broadcasting (DVB-T), some programmes are broadcast with subtitles.

1. Press "**MENU**" button to display main menu, highlight "**Settings**" then "**Language Settings**" menu using "**<**" or "**>**" or "**^**" or "**v**" button, press **OK** button to display "Language settings" menu.

2. Highlight "**Subtitle**" in "**Language settings**" menu using "**^**" or "**v**" button. Use "**<**" or "**>**" button to set Subtitles to the desired language.


 **NOTE:** You can directly press **SUBTITLE** button to enable or disable subtitles.

### Zoom Modes

Programmes can be watched in different picture formats, depending on the transmission received.

You can change the aspect ratio (image size) of the TV for viewing the picture in different zoom modes.

Press "**SCREEN**" button repeatedly to change the image size. Available zoom modes are; Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3, Panoramic and Cinema.

 **NOTE:** You can shift the screen up or down by pressing "**v**" / "**^**" buttons while picture zoom is selected as panoramic, 14:9 Zoom, Cinema or Subtitle. This is only possible as long as the display of the screen format is displayed.

### Using Main Menu Screen


1. Press "**MENU**" button to display main menu, highlight the desired control icon using "**<**" or "**>**" or "**^**" or "**v**" button, press **OK** button to display menu contents.

2. Highlight an option inside a menu screen by using "**^**" or "**v**" button.

3. Use "**<**" or "**>**" button to set an option.

4. If "**OK**" box is displayed next to a menu setting, press "**OK**" to display sub-menu screen.


Changes are automatically stored. Press "**MENU**" to exit.

 **NOTE:** See **Picture, Sound, Settings** and **Installation Control** sections on pages **16-18** for learning the functions of menu items.

### Configuring Date/Time Settings

1. Select **Date/Time** in the Settings menu to configure Date/Time settings.

2. Press **OK** button.

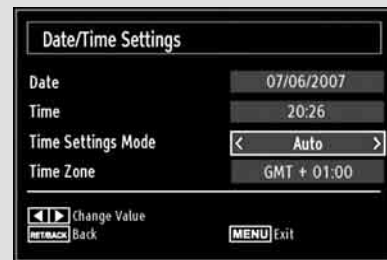

3. Use "**^**", "**v**" and "**<**", "**>**" buttons to set the options. Some items might be available to be set due to the selected modes.

### Source Settings

You can enable or disable selected source options. When set, the TV will not switch to the disabled source options when "**SOURCE**" button is pressed.

1. Select "Sources" in the "Settings" menu and press "**OK**" button.

2. Press "**^**", "**v**" buttons to select a source.

3. Use "**<**", "**>**" button to enable or disable the selected source.

### Audio Language

If there is a programme that is broadcasted with multi-channel sound and offers different languages, you can choose the audio language. Press **LANG.** button to select between available options.

# Basic Features

## Channel management

The TV sorts all stored stations in the Channel List. You can edit this channel list, set favourites or set active stations to be listed by using the Channel List options. Press “**MENU**” button to view main menu. Select Channel List item by using “**<**” or “**>**” button. Press **OK** to view menu contents.




Select **Edit Channel List** to manage all stored channels. Use “**^**” or “**v**” and **OK** buttons to select “**Edit Channel List**”.



### Navigating Channel List

1. Press “**^**” or “**v**” button to select previous or next channel. Press **P+** or **P-** button to move up or down the page.
2. To watch a specific channel, highlight the “**OK**” box on Channel List menu using “**<**” or “**>**” button.

 **NOTE:** The channels listed are mixed at the channel list. Channel types can be differentiated by the icons next to them: DTV (digital tv), HD (HD TV), ATV (Analogue TV), TV (TV), RD (Radio), encrypted, lock, and at the favourite list.

### Filtering Options

Press **BLUE** button to view filtering options. You can filter channels by **Digital Aerial/Analogue**, **TV/Radio**, **Free/CAS\***, **A-Z** or **Sort** from channel list filter menu (\*CAS=encrypted channels).

### Moving a Channel

1. Select the desired channel.
2. Select **Move** box in the channel list and press **OK** button.
3. **Edit Number** screen will be displayed. Enter the desired channel number by using the numeric buttons on the remote control.

*Note: If there is a previously stored channel on that number, a warning screen will be displayed.*

4. Select **Yes** if you want to move the channel and press **OK**.

### Deleting a Channel

1. Select the channel that you want to delete and select **Delete** box.
2. Press **OK** button to continue. A warning screen will appear. Select **YES** to delete, select **No** to cancel. Press **OK** button to continue.

### Renaming a Channel

1. Select the channel that you want to rename and select **Edit Name** box. Press **OK** button to continue.
2. Use navigation buttons to toggle between the current character, i.e., ‘b’ character becomes ‘a’ by “**v**” and ‘c’ by “**^**”.
3. When finished, press **OK** button to save. Press “**MENU**” to cancel.

### Locking a Channel

1. Select the channel that you want to lock and select **Lock** option. Press **OK** button to continue.
2. You will be asked to enter parental control PIN. Default PIN is set as **0000**. Enter the PIN number.
3. The desired channel is locked (Lock symbol is displayed next to the selected channel) or unlocked.

### Sorting Channel List

You can select broadcasts to be listed in the channel list. To display specific types of broadcast, you should use Active channel list setting.

Select Active channel list from the Channel list menu by using “**^**” or “**v**” button. Press **OK** button to continue.



You can select a broadcast type option from the list by using “**^**” or “**v**” and **OK** buttons.

# Basic Features

## Language Settings

You can operate the TV's language settings using this menu.

Press "**MENU**" button and select the Settings icon by using "**<**" or "**>**" button. Press **OK** button to view Settings menu. Use "**^**" or "**v**" button to highlight **Language** and press **OK** to continue:



Use "**v**" or "**^**" button to set an item. Settings are stored automatically.

**Menu:** displays the system language.

**Preferred**

These settings will be used if available. Otherwise the current settings will be used.

**Audio:** Sets the preferred audio language.

**Subtitle:** Sets the subtitle language. Selected language will be seen in subtitles.

**Teletext:** Sets teletext language.


**Guide:** Sets the preferred Guide language.

**Current (\*)**


*(\*) These settings can be changed if only the broadcaster supports. Otherwise, settings will not be available to be changed.*

**Audio:** Changes the audio language for the current channel.

**Subtitle:** Sets the subtitle language for the current channel.

 **NOTE:** If the Country option is set to Denmark, Sweden, Norway or Finland, the Language Settings menu will function as described below:

### Language Settings

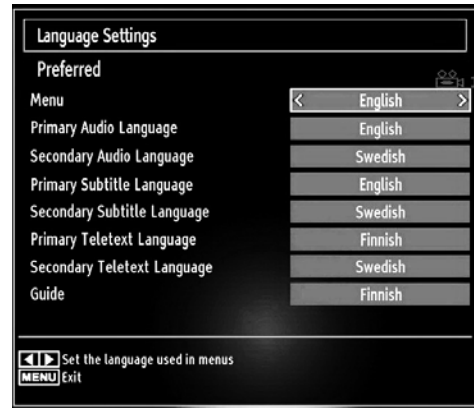

In the con guration menu, highlight the Language Settings item by pressing "**^**" or "**v**" buttons. Press **OK** and Language Settings submenu will be displayed on the screen:

Use "**^**" or "**v**" buttons to highlight the menu item that will be adjusted and then press "**<**" or "**>**" button to set.

 **NOTE:**

System Language determines the on-screen menu language.

Audio Language is used for selecting the soundtrack of a channels.

Primary settings are the first priority when multiple choices are available on a broadcast. Secondary settings are the alternatives when the first options are not available.

# Basic Features

## Parental Control

To prohibit viewing of certain programmes, channels and menus can be locked by using the parental control system.

This function enables or disables the menu protection system and allows the PIN code to be changed.

Press “**MENU**” button and select the Settings by using “**<**” or “**>**” button. Press **OK** button to view Settings menu. Use “**^**” or “**v**” button to highlight **Parental** and press **OK** to continue:



To display parental lock menu options, PIN number should be entered. Factory default PIN number is **0000**. After coding the correct PIN number, parental settings menu will be displayed:



### Parental Settings Menu Operation (\*)

Select an item by using “**v**” or “**^**” button.

Use “**<**” or “**>**” button to set an item.

Press **OK** button to view more options.


(\*) If you set Country option as UK in the first time installation, Maturity Lock option will not be visible. This setting is available only for EU countries.

**Menu Lock:** Menu lock setting enables or disables the menu access. You can disable access to the installation menu or the whole menu system.

**Maturity Lock(optional):** When set, this option gets the maturity information from the broadcast and if this maturity level is disabled, disables access to the broadcast.

**Child Lock (optional):** When Child Lock is set, the TV can only be controlled by the remote control. In this case the control panel buttons will not work, except for the Standby/On button. When Child Lock is activated you are able to switch the TV into Standby mode with the Standby/On button. To switch the TV on again, you need the remote control. Hence, if one of those buttons is pressed, **Child Lock Is On** will be displayed on the screen when the menu screen is not visible.

**Set PIN:** Defines a new PIN number. Use numeric buttons to enter a new pin number. You will need to code your new pin a second time for verification purposes.

 **IMPORTANT:** The factory default pin number is **0000**, if you change the PIN number make sure you write it down and keep it safe.

# Basic Features

## Environmental Information

This television is designed to consume less energy to save environment.

You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps:

You can use Power Save Mode setting, located in the Picture Settings menu. If you set Power Save Mode as On, the TV will switch to energy-saving mode and luminance level of TV set will be decreased to optimum level. Note that some picture settings will be unavailable to be changed when the TV is in Power Save Mode.

Power Save Mode  Off

When the TV is not in use, please switch off or disconnect the TV from the mains wall socket. This will also reduce energy consumption.

Disconnect power when going away for longer time.

It is highly recommended to activate Power Save Mode setting to reduce your annual power consumption. And also it is recommended to disconnect the TV from the mains wall socket to save energy more when you do not use.

Please help us to save environment by following these steps.

### Repair Information


Please refer all servicing to qualified personnel. Only qualified personnel must repair the TV. Please contact your local dealer, where you have purchased this TV for further information.



If the TV switches off while in No Signal mode, the following on-screen message will be displayed on the next switch-on:



If the TV switches off owing to the auto power down feature, the following on-screen message will be displayed on the next switch-on:

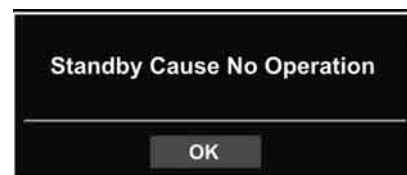



# Basic Features

## Other Functions and Features

### Favourite Mode

You can create a list of favourite programmes using the favourites feature. In such a case, only the favourite channels are navigated.

1. Press “**MENU**” button to view main menu.
2. Select Channel List item by using “**<**” or “**>**” button.
3. Press “**OK**” to view menu contents.
4. Use “**^**” or “**v**” and “**OK**” buttons to select “Favourites”.



5. Select a channel by using “**^**” or “**v**” button.
6. Press “**OK**” button to add selected channel to favourites list. Press “**OK**” button again to remove.

### Button Functions

**OK:** Add/remove a station.

**YELLOW:** Tag/untag a channel.

**GREEN:** Tag/untag all channels.

**BLUE:** Displays filtering options.

### Conditional Access

If you have inserted a conditional access module and viewing card to your TV, you can use Conditional Access menu. Note that these menu settings may change depending on the service provider.

1. Press “**MENU**” button and select the “Settings” icon by using “**<**” or “**>**” button.
2. Press “**OK**” button to view Settings menu.
3. Use “**^**” or “**v**” button to highlight **Conditional Access** and press “**OK**” to view menu items.

### Setting Sleep Timer

*This setting is used for setting the TV to turn off after a certain time.*

1. Press “**MENU**” button and select the “Settings” icon by using “**<**” or “**>**” button.
2. Press “**OK**” button to view Timers menu.
3. Highlight Sleep Timer by using “**^**” or “**v**” button.

4. Use “**<**” or “**>**” button to set. The timer can be programmed between **Off** and **2.00** hours (120 minutes) in steps of 30 minutes.

### Setting Programme Timers

*You can set programme timers for a particular programme using this feature.*

1. While in Timers menu, press “**v**” button to activate timers functions.
2. Programme timer function buttons will be displayed on the screen.
3. Press **YELLOW** button on the remote control to add a timer. Timer options and definitions are as the following:

**Network Type:** This feature is unavailable to be set.

**Timer Type:** This feature is unavailable to be set.

**Channel:** Changes channel by using “**<**” or “**>**”.

**Record Type:** This item is unavailable to be set.

**Date:** Enter a date using the numeric buttons.

**Start:** Enter a starting time using the numeric buttons.

**End:** Enter an ending time using the numeric buttons.

**Duration:** Displays duration between the starting and ending time.

**Repeat:** Sets a timer to be repeated as Once, Daily or Weekly. Use “**<**” or “**>**” buttons to select an option.

**Change/Delete:** Sets the change/delete permission.

**Playback:** Sets the playback permission and parental settings.

4. Press **GREEN** button to save the timer. Press **RED** button to cancel.

### Editing a Timer

1. Select the timer you want to edit by pressing “**^**” or “**v**” button.
2. Press “**GREEN**” button. Edit Timer menu screen will be displayed.
3. When finished with editing, press “**GREEN**” button to save. You can press “**MENU**” button to cancel.

### Deleting a Timer

1. Select the timer you want to delete by pressing “**^**” or “**v**” button.
2. Press **RED** button.
3. Select **YES** by using “**<**” or “**>**” buttons to delete the timer. Select **NO** to cancel.




# Basic Features

## Picture Controls

### Configuring Picture Settings

You can use different picture settings in detail.

Press “MENU” button and select the Picture icon by using “<” or “>” button. Press OK button to view Picture Settings menu.

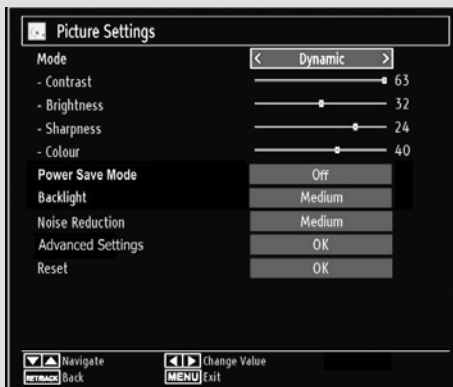

### Operating Picture Settings Menu Items

Press “^” or “v” button to highlight a menu item.

Use “<” or “>” button to set an item.

Press “MENU” button to exit.

### Picture Settings Menu Items

**Mode:** For your viewing requirements, you can set the related mode option. Picture mode can be set to one of these options: **Cinema, Game, Dynamic** and **Natural**.

**Contrast:** Sets the lightness and darkness values of the screen.

**Brightness:** Sets the brightness value for the screen.

**Sharpness:** Sets the sharpness value for the objects displayed on the screen.

**Colour:** Sets the colour value, adjusting the colors.

**Power Save Mode:** Press “<” or “>” button to set Power Save Mode as On or Off. See the section, “Environmental Information” in this manual for further information on Power Save Mode.

**NOTE:** Backlight function will be invisible if Power Save Mode is set to on.

**Backlight:** This setting controls the backlight level by changing the screen luminance and it can be set to Auto, Maximum, Minimum, Medium and Eco Mode (optional).

**NOTE:** Backlight can not be activate in VGA or Media Browser mode or while picture mode is set as Game.

**Noise Reduction:** If the broadcast signal is weak and the picture is noisy, use **Noise Reduction** setting to reduce the noise amount. Noise Reduction can be set to one of these options: **Low, Medium, High** or **Off**.

### Advanced Settings

**Colour Temp:** Sets the desired colour tone.

Setting **Cool** option gives white colours a slight blue stress.

For normal colours, select **Normal** option.

Setting **Warm** option gives white colours a slight red stress.

**Picture Zoom:** Sets the picture size to **Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3, Panoramic** or **Cinema**.

**HDMI True Black:** While watching from HDMI source, this feature will be visible in the Picture Settings menu. You can use this feature to enhance blackness in the picture. You can set this feature as “On” for activating HDMI True Black mode.

**Film Mode (optional):** Films are recorded at a different number of frames per second to normal television programmes. Press “<” or “>” buttons to set this feature Auto or Off. Turn this feature to Auto when you are watching films to see the fast motion scenes clearly.

**Colour Shift:** Adjust the desired colour tone.

**Reset:** Resets the picture settings to factory default settings.

While in VGA (PC) mode, some items in Picture menu will be unavailable. Instead, VGA mode settings will be added to the Picture Settings while in PC mode.


### PC Picture Settings Operation

For adjusting PC picture items, do the following:

Press “<” or “>” button to select Picture icon. Picture menu appears on the screen.

**Contrast, Brightness, Colour, Colour Temp and Picture Zoom, Reset** settings in this menu are identical to settings defined in TV picture settings menu. **Sound, Settings and Source settings are identical to the settings explained in the main menu system.**

**PC Position:** Select this to display PC position menu items.

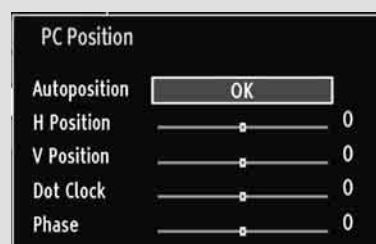

**Autoposition:** Automatically optimizes the display. Press OK to optimize.

**H Position:** This item shifts the image horizontally to right hand side or left hand side of the screen.

**V Position:** This item shifts the image vertically towards the top or bottom of the screen.

**Dot Clock:** Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

**Phase:** Depending on the resolution and scan frequency that you input to the TV set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.


# Basic Features

## Sound and Source Settings

### Configuring Sound Settings

Sound settings can be configured according to your personal preferences.

Press “**MENU**” button and select the first icon by using “**<**” or “**>**” button. Press **OK** button to view Sound Settings menu.

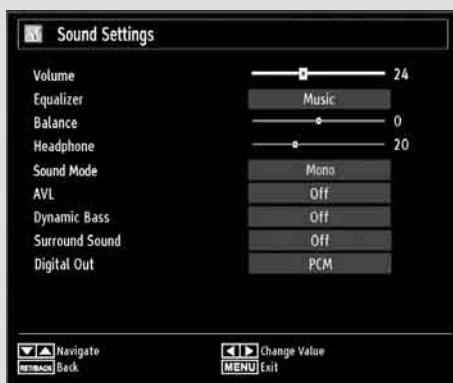

### Operating Sound Settings Menu Items

Press “**^**” or “**v**” button to highlight a menu item.


Use “**<**” or “**>**” button to set an item.

Press “**MENU**” button to exit.

### Sound Settings Menu Items

**Volume:** Adjusts volume level.

**Equalizer:** Press **OK** button to view equalizer sub-menu.

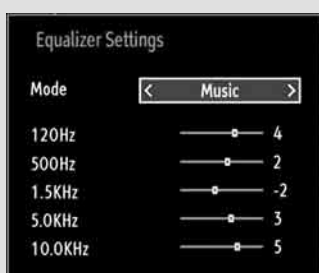

In the equalizer menu, the preset can be changed to **Music, Movie, Speech, Flat, Classic** and **User**. Press the “**MENU**” button to return to the previous menu.

*Note:* Equalizer menu settings can be changed manually only when the **Equalizer Mode** is in **User**.

**Balance:** This setting is used for emphasizing left or right speaker balance.

**Headphone:** Sets headphone volume.

**Sound Mode:** You can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode.

**AVL:** Automatic Volume Limiting (AVL) function sets the sound to obtain fixed output level between programmes (For instance, volume level of advertisements tend to be louder than programmes).

**Dynamic Bass:** Dynamic Bass is used to increase bass effect of the TV set.

**Surround Mode:** Surround mode can be changed as On or Off.

**Digital Out:** Sets digital out audio type.

### Configuring Source Settings

You can enable or disable selected source options. The TV will not switch to the disabled source options when “**SOURCE**” button is pressed.

Press “**MENU**” button and select Settings icon by using “**<**” or “**>**” button. Press **OK** button to view **Settings** menu. Select Source and press **OK** button.



Select **Sources** in the Settings menu and press **OK** button.


Press “**<**” or “**>**” buttons to select a source.

Use “**<**” or “**>**” button to enable or disable the selected source. Changes are automatically stored.

# Basic Features

## Other Controls

To view general configuration preferences, select **Other Settings** in the Settings menu and press **OK** button.

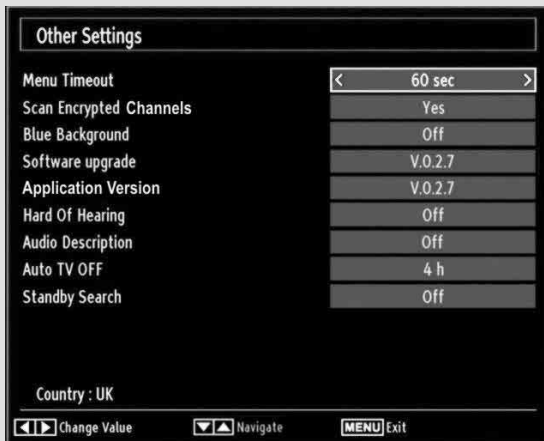

### Operation

Press “ $\wedge$ ” or “ $\vee$ ” buttons to select an item.

Use “ $\langle$ ” or “ $\rangle$ ” button to set an option.

Press **OK** button to view a sub-menu.


### Other Settings Menu Items

**Menu Timeout:** Changes timeout duration for menu screens.

**Scan Encrypted Channels:** When this setting is set as **YES**, search process will locate the encrypted channels as well. If it is set as **NO**, encrypted channels will not be located in automatic search or manual search.

**Blue Background:** Activates or deactivates blue background system when the signal is weak or absent.

**Software Upgrade:** To ensure that your TV always has the most update information, you can use this setting. In order for the proper operation, please ensure that the TV is set to standby mode.

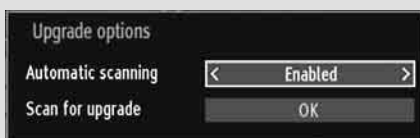

You can enable or disable automatic upgrade by setting **Automatic Scanning** option.


You can manually search for new software by selecting **Scan for upgrade**.

**Application version (optional):** Displays the current application version.

**Hard of Hearing:** If the broadcaster enables any special signal concerning the audio, you can set this setting as On to receive such signals.

**Audio Description:** Audio description refers to an additional narration track for blind and visually impaired viewers of visual media, including television and movies.

The description narrator talks through the presentation, describing what is happening on the screen during the natural pauses in the audio (and sometimes during dialogue, if deemed necessary). You can use this feature, only if the broadcaster supports that additional narration track.

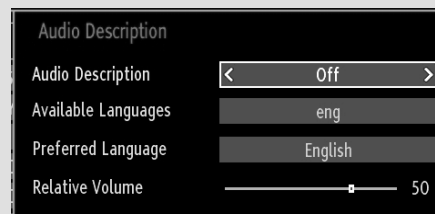

**Auto TV Off:** You can set the timeout value of auto off feature. After the timeout value is reached and the TV is not operated for selected time, the TV will go off.

**Standby Search (optional):** Use “ $\wedge$ ” or “ $\vee$ ” button to select Standby Search and then press “ $\langle$ ” or “ $\rangle$ ” button to set this setting as On or Off. If you change Standby Search to Off, this function will be unavailable. To use Standby search please make sure that you select Standby Search as On.

# Advanced Features

## Media Browser

Only available when a USB device is plugged into the TV.

### Starting Media Browser



### Media Browser Configuration

Select Settings icon from the main media browser page to view the current preferences.



You can set your Media Browser preferences by using the Settings dialogue.

### Operation

Press “ $\wedge$ ” or “ $\vee$ ” button to highlight an item.  
Use “ $\langle$ ” or “ $\rangle$ ” button to configure an item.

### View Style

Sets default browsing mode. Sets default browsing mode as folder or flat. Select “Directory” to display files in a folder or “Normal” to view files directly. If you select the view style “Directory” the menu point “All” will appear in the media browser (See the section: Media playback using media browser). The option “All” gives you an overview of the directories images, music, videos.

### Slide Show Interval

Sets slide show interval time.

### Show Subtitle

Sets subtitle enabling preference.

### Subtitle Language

Sets supported subtitle language.

### Subtitle Position

Sets subtitle position as up or down.

### Subtitle Font Size

Sets subtitle font size (max. 54pt).

### Loop / Shuffle during Playback

Press **BLUE** button once to disable Loop.

Press again to disable both Loop and Shuffle.

Press once more to enable only Loop.

Press again to enable all and again to deactivate all.

By the change of the symbols you can see which feature is enabled.

# Advanced Features

## Media Browser - continued

### Viewing Videos via USB




1. Select **Videos** from the **Media Browser** screen and press **OK** button.
2. All video files will be filtered and listed.
3. Use “▼” or “▲” button to select a video file and press **OK** button to play a video.

Follow the information on the operations bar for using other commands.

### Video Playback Screen

The following screen will be displayed while playing a video file.

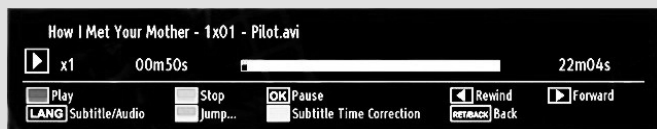


### Subtitle Time Correction

Press **YELLOW** button during the video playback for activating **Subtitle Time Correction** screen.



1. Enter an offset value using “◀” or “▶” button.
2. Press **YELLOW** button to confirm or press “⏪” button to switch back to previous menu.

### Viewing Photos via USB

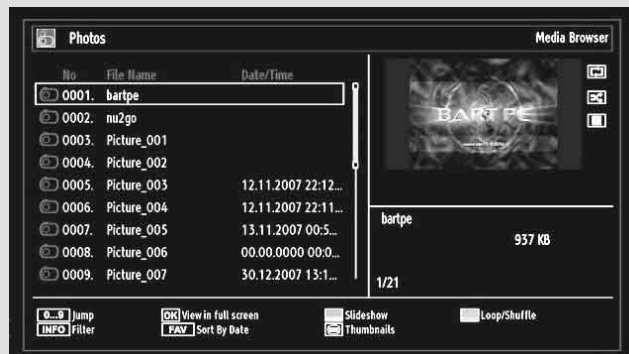


1. Select **Photos** from the **Media Browser** screen and press **OK** button.
2. All photo files will be filtered and listed.
3. Use “▼” or “▲” button to select a photo file and press **OK** button to play a video.

Follow the information on the operations bar for using other commands.

### Displaying Photos in Slideshow Mode

 1. Press **GREEN** button when viewing photo files to activate slideshow mode.



2. Press **RETURN** to go back to Photos screen.
- Follow the information on the operations bar for using other commands.

### Playing Music via USB



1. Select **Music** from the **Media Browser** screen and press **OK** button.
2. All music files will be filtered and listed.
3. Use “▼” or “▲” button to select a music file and press **OK** button to play.

Follow the information on the operations bar for using other commands.

# Advanced Features

## Setting the channels

### Accessing Installation Menu

1. Press “MENU” button on the remote control and select **Installation** by using “<” or “>” button.
2. Press “OK” button and the **Installation** screen will be displayed.



### Automatic Channel Scan (Retune)

1. In the Installation menu, select “Automatic Channel Scan (Retune)” by using “^” or “v” button and press **OK** button.
2. Options will be displayed. You can select options by using “^” or “v” and **OK** buttons.

### Menu Operations

**Digital Aerial:** Searches and stores aerial DVB stations.

**Analogue:** Searches and stores analogue stations.

**Digital & Analogue:** Searches and stores both analogue and aerial DVB stations.

3. Whenever you select an automatic search type and press **OK** button, a confirmation screen will appear on the screen. To start installation process, select **Yes**, to cancel select **No** by using “<” or “>” and “**OK**” button.

4. After auto channel scan type is set and selected and confirmed, installation process will start and progress bar will move along.

If desired, press “MENU” button to cancel process. In such a case, located channels are not stored.


### Manual Channel Scan

1. In the Installation menu, select “Manual Channel Scan” by using “^” or “v” button and press **OK** button.
2. Manual Scan options screen will be displayed.  
Select the desired “Search Type” using “<” or “>” button.  
Manual search options will change accordingly.

3. Enter the multiplex (for digital manual search) or frequency number (for analogue manual search) using the numeric buttons and press **OK** button to start search.

### Analogue Fine Tune

1. Select “Analogue Fine Tune” from the Installation menu by using “v” or “^” and **OK** buttons. Analogue fine tune screen will be displayed.

 **NOTE:** Analogue Fine Tune feature will not be available if there are no analogue channels, digital channels and external sources stored.

2. Press **OK** button to proceed. Use “<” or “>” button to set Fine Tune. When finished, press **OK** button again.

### First Time Installation

Deletes all stored channels and settings, resets TV to factory settings and starts first time installation.

1. Select **First Time Installation** option and press **OK** button if you would like to reset the TV.
2. A warning screen will be displayed. Select **YES** and press **OK** to continue. All prestored channels and settings will be deleted in such a case.
3. The TV will reset after a short time and language selection menu will be displayed.
4. Follow the steps in the **Initial set up** section.

### Clear Service List

(\*) *This setting is visible only when the Country option is set to Denmark, Sweden, Norway or Finland.*

1. Use this setting to clear channels stored. Press “^” or “v” button to select Clear Service List and then press **OK**.
2. An OSD message will be displayed on the screen. Press **OK** to cancel or select **Yes** to delete all of the stored channels.

# Other Information


## Teletext


### Analogue Teletext

Teletext system transmits information such as news, sports and weather on your TV. Note that if the signal degrades, for example in poor/adverse weather conditions, some text errors may occur or the teletext mode may be aborted.

#### Analogue Teletext

**Teletext function buttons** are listed below:

“” **Teletext / Mix**: Activates teletext mode when pressed once. Press again to place the teletext screen over the programme (mix). Pressing again will quit the teletext mode.

“” **Index**: Selects the teletext index page.

“**INFO**” **Reveal**: Shows hidden information (e.g. solutions of games).

“**OK**” **Hold**: Holds a text page when convenient. Press again to resume.

“**<**” or “**>**” **Subcode Pages**: Selects subcode pages if available when the teletext is activated.

**P+ / P- and numbers (0-9)**: Press to select a page.


*Note: Most TV stations use code 100 for their index pages.*

#### Coloured Buttons

##### (RED/GREEN/YELLOW/BLUE)

Your TV supports both **FASTTEXT** and **TOP text** systems. When these systems are available, the pages are divided into groups or topics. When **FASTTEXT** system is available, sections in a teletext page will become colour-coded and can be selected by pressing the coloured buttons. Press a coloured button that corresponds to with your needs. The coloured writings will appear, showing you which coloured buttons to use when **TOP text** transmission is present. Pressing “**^**” or “**v**” commands will request the next or previous page respectively.

### Digital Teletext (for the UK only)


1. Press the “” button. The digital teletext information appears on screen.


2. Operate using the coloured buttons, cursor buttons and **OK** button.

The operation method may differ depending on the contents of the digital teletext.

3. Follow the instructions displayed on digital teletext screen.

When “Press **OK** button” or similar message appears on the screen, press **OK** button.

When the “” button is pressed, the TV returns to television broadcasting.

When you press the “” button again, the digital teletext screen will be displayed.

# Other Information

## Specifications

<b>TV Broadcasting</b>	PAL/SECAM B/G D/K K' I/I' L/L'
<b>Receiving Channels</b>	VHF (BAND I/III) - UHF (BAND U) - HYPERBAND
<b>Number of Preset Channels</b>	1000
<b>Channel Indicator</b>	On Screen Display
<b>RF Aerial Input</b>	75 Ohm (unbalanced)
<b>Operating Voltage</b>	220-240V AC, 50Hz.
<b>Audio</b>	German+Nicam Stereo
<b>Audio Output Power (W<sub>RMS</sub>) (10% THD)</b>	2 x 8
<b>Power Consumption</b>	210W (Max), <0,5 (Standby)
<b>Weight</b>	19 kg (with foot) / 18 kg (without foot)
<b>TV Dimensions DxLxH (with foot)</b>	246 x 1014 x 687 mm
<b>TV Dimensions DxLxH (without foot)</b>	103 x 1014 x 657 mm
<b>Wall mounting bracket screw specification</b>	four M5 screws, size M5 X 25mm
<b>Display</b>	16:9 display, 42" Screen Size 1920x1200 max. resolution
<b>Digital Reception (DVB-T)</b>	
MHEG-5 ENGINE compliant with ISO/IEC 13522-5 UK engine Profile 1 - for UK	
Object carousel support compliant with ISO/IEC 135818-6 and UK DTT profile - for UK	
Frequency range: 474-850 MHz for UK models	
170-862 MHz for EU models	
Transmission standard: DVB-T. MPEG-2	
Demodulation: COFDM with 2K/8K FFT mode	
FEC: all DVB models	
Video: MP@ML, PAL, 4:3/16:9	
Audio: MPEG Layer I&II 32/44.148kHz.	
We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.	



# Product Support

## Trouble shooting

### Image persistence - ghosting

Please note that ghosting may occur while displaying a persistent image (still or paused image). LCD TVs' image persistence may disappear after a short time. Try turning off the TV for a while. To avoid this, do not leave the screen in still picture mode for extended periods.

### No power

If your TV has no power, please check the power cord plug is connect to the mains power socket.

### Poor picture

1. Have you selected the correct TV system?
2. Is your TV or house aerial located too close to a non-earthed audio equipment or neon lights, etc.?
3. Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial. Is the picture or teletext unrecognisable?
4. Check if you have entered the correct frequency.
5. Please retune the channels.
6. The picture quality may degrade when two devices are connected to the TV at the same time. In such a case, disconnect one of the devices.

### No picture

1. No Picture means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more. Also make sure the correct input source has been selected.
2. Is the aerial connected properly?
3. Are the plugs connected tightly to the aerial socket?
4. Is the aerial cable damaged?
5. Are suitable plugs used to connect the aerial?
6. If you are in doubt, consult your dealer.

### No sound

1. Has the TV been set to mute? To cancel mute, press the "🔊" button, or increase the volume level.
2. Sound is coming from only one speaker. Is the balance set to one extreme? See Sound Menu section.

### Remote control - does not operate

Your TV no longer responds to the remote control. The batteries may be exhausted, if so you can still use the control buttons on the left side of the TV. (\* Is only possible if they are not blocked by parental control.)

### Input sources - can not be selected

1. If you cannot select an input source, it is possible that no device is connected.
2. Check the AV cables and connections if you have tried to connect a device.

# Product Support

## Disposal information

### Instructions for waste disposal:

Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children. Batteries, including those which are heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environment friendly manner. Find out about the legal regulations which apply in your area.

• Don't try to recharge batteries. Danger of explosion. Replace batteries only with the same or equivalent type.

The cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow the local laws or regulations for disposal.

## Information for Users in European Union Countries

The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available.



If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.



# Product Support

## Supported DVI Resolutions

When connecting devices to your TV's connectors by using DVI converter cables (not supplied), you can refer to the following resolution information.

Index	Resolution	Frequency
1	640x400	70Hz
2	640x480	60Hz
3	640x480	72Hz
4	640x480	75Hz
5	800x600	56Hz
6	800x600	60Hz
7	800x600	70Hz
8	800x600	72Hz
9	800x600	75Hz
10	1024x768	60Hz
11	1024x768	70Hz
12	1024x768	72Hz
13	1024x768	75Hz
14	1152x864	75Hz
15	1280x768	60Hz
16	1360x768	60Hz
17	1280x768	75Hz
18	1280x960	60Hz
19	1280x960	75Hz
20	1280x1024	60Hz
21	1280x1024	75Hz
22	1400x1050	60Hz
23	1600x1200	60Hz
24	1920x1080	60Hz
25	1920x1200	60Hz
26	480p	60Hz
27	576p	50Hz
28	720p	50Hz
29	720p	60Hz
30	1080i	50Hz
31	1080i	60Hz
32	1080p	24Hz
33	1080p	25Hz
34	1080p	30Hz
35	1080p	50Hz
36	1080p	60Hz

# Product Support

## PC Input Typical Display Modes

The display has a maximum resolution of 1920 x 1200. The following table is an illustration of some of the typical video display modes. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

Index	Resolution	Frequency
1	640x400	70Hz
2	640x480	60Hz
3	640x480	72Hz
4	640x480	75Hz
5	800x600	56Hz
6	800x600	60Hz
7	800x600	70Hz
8	800x600	72Hz
9	800x600	75Hz
10	1024x768	60Hz
11	1024x768	70Hz
12	1024x768	72Hz
13	1024x768	75Hz
14	1152x864	75Hz
15	1280x768	60Hz
16	1360x768	60Hz
17	1280x768	75Hz
18	1280x960	60Hz
19	1280x960	75Hz
20	1280x1024	60Hz
21	1280x1024	75Hz
22	1400x1050	60Hz
23	1600x1200	60Hz
24	1920x1080	60Hz
25	1920x1200	60Hz

# Product Support

## Supported File Formats for USB Mode

Media	File Extension	Format		Remarks (Maximum resolution/Bit rate etc.)
		Video	Audio	
Movie	.mpg, .mpeg	MPEG1, 2	MPEG Layer 1/2/3	MAX 1920x1080 @ 30P 20Mbit/sec
	.dat	MPEG1, 2	MPEG2	
	.vob	MPEG2		
	.avi	MPEG2	PCM/MP3	MAX 1920x1080 @ 30P 20Mbit/sec
	Xvid 1.00, Xvid 1.01, Xvid 1.02, Xvid 1.03, Xvid 1.10-beta1/2	PCM		
Music	.mp3	-	MPEG 1 Layer 1 / 2 (MP3)	32Kbps ~ 320Kbps(Bit rate) 32KHz ~ 48KHz(Sampling rate)
Photo	.jpg .jpeg	Baseline JPEG		max WxH = 15360x8640 4147200bytes
		Progressive JPEG		max WxH = 1024x768 6291456bytes
	.bmp	-		max WxH = 9600x6400 3840000bytes
Subtitle	.sub	-		-
	.srt	-		

## AV and HDMI Signal Compatibility (Input Signal Types)

Source	Supported Signals		Available
EXT1 (SCART1)	PAL 50/60		O
	NTSC 60		O
	RGB 50		O
	RGB 60		O
EXT2 (SCART2)	PAL 50/60		O
	NTSC 60		O
	RGB 50		X
	RGB 60		X
Side AV	PAL 50/60		O
	NTSC 60		O
YPbPr	480i	60Hz	O
	480p	60Hz	O
	576i	50Hz	O
	576p	50Hz	O
	720p	50Hz	O
	720p	60Hz	O
	1080i	50Hz	O
	1080i	60Hz	O
HDMI1 HDMI2	480i	60Hz	O
	480p	60Hz	O
	576i	50Hz	O
	576p	50Hz	O
	720p	50Hz	O
	720p	60Hz	O
	1080i	50Hz	O
	1080i	60Hz	O
	1080p	50Hz	O
	1080p	60Hz	O
	1080p	24Hz	O

**(X: Not Available, O: Available)**

*In some cases a signal on the LCD TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc. ). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.*

# Product Support

## Definition of important terms

### **Aspect Ratio**

This refers to the ratio of the width to the height of a picture.

### **AVL**

Automatic volume limiter.

### **Brightness**

This defines the overall light level of the entire image.

### **Contrast**

This will adjust the range of optical density and tone of the complete picture.

### **Component Audio Inputs**

Used for the standard analogue audio for interconnection of components.

### **Component Video Inputs (Y/Pb/Pr)**

This video signal consists of colour differences and a luminance signal.

### **DTV**

Digital television broadcasts.

### **HDMI**

High Definition Multimedia Interface. This connection provides high-quality, uncompressed digital video and audio, combining both audio and video signals via a single connection.

### **Multichannel audio**

Means that the TV program is aired in several audio versions, for example, in two different languages. This is possible if on an analogue TV each of the two channels of the stereo tracks for left and right channels are occupied with one audio track in mono (single channel). In digital TV multiple audio streams can be broadcasted and selected on the receiver side.

### **NTSC**

United States' standard for scanning television signals that has been adopted by some other countries.

### **LCN**

LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel sequence.

### **OSD**

On Screen Display. Information, like channel number and volume on the screen of a TV.

### **PAL**

The European TV standard for scanning television signals.

### **Scart**

A 21-pin audio/video connector found primarily on European televisions.

### **SECAM**

The video format used in France and some other countries, similar to PAL.

### **Sharpness**

A control that creates the effect of greater resolution by light to dark transitions.

### **System**

Defines the broadcast type of the TV picture since these broadcast systems are not the same for all countries.

### **VGA**

VGA is a common standard graphics display system for PCs.

## Software Upgrade

Your TV is capable of finding and updating new software upgrades over broadcast channels.

For broadcast channels search, TV looks the available channels stored in your settings. So before software upgrade search, it is advised to auto search and update all available channels.

### 1) Software upgrade search via user interface

It is possible manually to check if there is a new software upgrade for your TV set.

Simply navigate on your main menu. Choose Settings and select Other Settings menu. In Other Settings menu navigate on to the Software Upgrade item and press OK button to open Upgrade Options menu.

In Upgrade Options menu select Scan for upgrade and press OK button.

If a new upgrade is found, it starts to download the upgrade. A progress bar indicates the remaining download progress. When download completes with success a message is displayed for reboot to activate new software. Press OK to continue with the reboot operation.

### 2) 3.AM search and upgrade mode

If Automatic scanning in Upgrade Options menu is enabled, TV wakes up at 03:00 and searches broadcast channels for new software upgrade. If new software is found and downloaded successfully, with next power up TV opens with new software version.

Note on reboot operation: Reboot is the last step in software upgrade operation if download of new software is finished successfully. During reboot TV makes final initializations. In reboot sequence panel power is closed and front led indicates the activity with blinking. Around 5 minutes later TV restarts with new software activated.

If your TV fails to restart in 10 minutes, unplug power for 10 minutes and re-plug again. TV should open with new software safely. If you still can not get TV working, please kindly repeat unplug and plug sequence a few times more. If your set still can not operate, please call the service personnel to fix the problem for you.

**⚠ CAUTION:** While led is blinking during reboot do not unplug your TV's power. Doing this may cause your TV not to re-open again and can only be fixed by service personnel.

**✎ NOTE:** A software update is dependent on whether the TV stations of each country support it.

# Product Support

## DVB-T functionality information

**This DVB receiver is only suitable for use in the country which it was designed to be used in.**

**Although this DVB receiver conforms to the latest DVB specifications at the time of manufacture, we cannot guarantee compatibility with future DVB transmissions due to changes that may be implemented in broadcast signals and technologies.**

**Some digital television functions may not be available in all countries.**

**We continually strive to improve our products; therefore, specifications may change without prior notice.**

**For advice on where to purchase accessories, please contact the store where you purchased your equipment.**





## Product Guarantee

This product is guaranteed against manufacturing defects for a period of



This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product within the guarantee period call the **Customer Helpline: 0845 604 0105**.

Guarantor: Argos Ltd  
489 - 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW

# HITACHI

Inspire the Next

