



# Panasonic®

## Operating Instructions LCD Television

Model No. **TX-L32GA11**  
**TX-L37GA11**

### Contents

#### Be Sure to Read

- Safety Precautions ..... 4  
(Warning / Caution)
- Notes ..... 5
- Maintenance ..... 5

#### Quick Start Guide

- Accessories / Options ..... 6
- Identifying Controls ..... 8
- Basic Connection ..... 10
- Auto Setup ..... 12
- How to Use Menu Functions ..... 14

# VIERA



Please read these instructions before operating your set and retain them for future reference.  
The images shown in this manual are for illustrative purposes only.  
Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance.

**For more detailed instructions, refer to the Operating Instructions on the CD-ROM.**  
**To view the Operating Instructions on the CD-ROM, you need a computer equipped with a CD-ROM drive, and Adobe® Reader® (Version 7.0 or later is recommended) installed on your computer.**  
Depending on the operating system or settings on your computer, the Operating Instructions may not start automatically.  
In this case, open the PDF file under \MANUAL\PDF manually to view the instructions.

English



Turn your own living room into a movie theatre!

# Experience an amazing level of multi-



## Notice for DVB functions


- Any functions related to DVB (Digital Video Broadcasting) will work in areas where DVB-T (MPEG2 and MPEG4-AVC(H.264)) digital terrestrial broadcasting are received or where DVB-C (MPEG2 and MPEG4-AVC(H.264)) digital cable services are supplied.

Consult your local dealer with coverage areas or your cable provider to access.

- DVB functions may not be available in some countries.
- Some functions may not be available in some countries.
- Some functions may not be available with some cable provider.
- This TV has the capability for DVB specifications. But future DVB services cannot be guaranteed.

# media excitement

## Enjoy rich multi-media

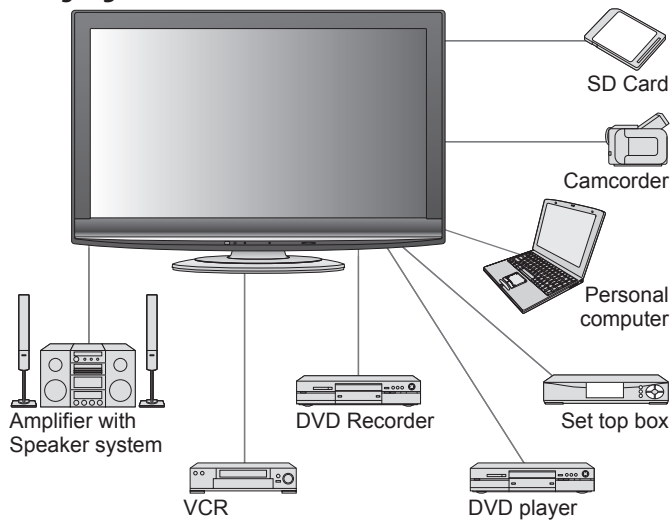

### Up to 60,000 hours LCD Panel Lifetime

The LCD display panel used in the 2009 VIERA TV range is rated for up to 60,000 hours.\*

\*This measurement is based on the time taken for the brightness of the panel to reduce to half of its maximum level.

The time taken to reach this level may vary depending on the image content and the environment where the TV is used.

Malfunctions are not taken into account.


# Safety Precautions

## Warning


### Handling the mains plug and lead

- Insert the mains plug fully into the socket outlet. (If the mains plug is loose, it could generate heat and cause fire.)
- Ensure that the mains plug is easily accessible.
- Do not touch the mains plug with a wet hand. (This may cause electrical shock.)
- Do not damage the mains lead. (A damaged lead may cause fire or electrical shock.)
  - Do not move the TV with the lead plugged in the socket outlet.
  - Do not place a heavy object on the lead or place the lead near a high-temperature object.
  - Do not twist the lead, bend it excessively, or stretch it.
  - Do not pull on the lead. Hold onto the mains plug body when disconnecting lead.
  - Do not use a damaged mains plug or socket outlet.

If you find any abnormality, remove the mains plug immediately!

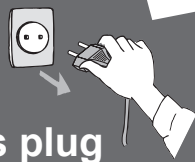

AC 220-240 V  
50 / 60 Hz

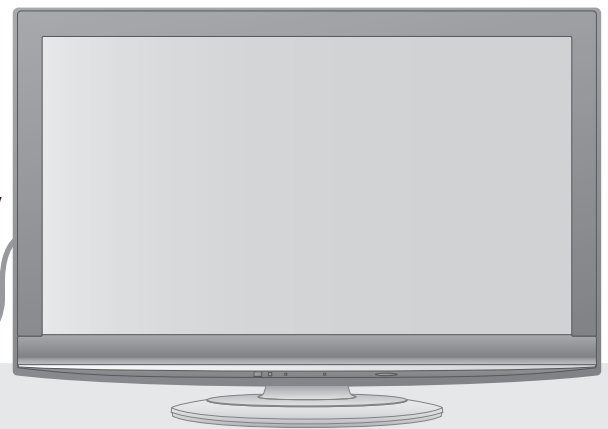

### Power source

- This TV is designed to operate on 220-240 V, 50 / 60 Hz AC.

### Do not remove covers

#### NEVER modify the TV yourself

(High-voltage components may cause serious electrical shock.)

- Have the TV checked, adjusted, or repaired at your local Panasonic dealer.

### Keep liquids away from the TV

- To prevent damage which may result in fire or shock hazard, do not expose this appliance to dripping or splashing.
- Do not place containers with water (flower vase, cups, cosmetics, etc.) above the TV. (including on shelves above, etc.)

### Do not expose to direct sunlight and other sources of heat

- Avoid exposing the TV to direct sunlight and other sources of heat. To prevent fire never place any type of candle or naked flame on top or near the TV.

### Do not place foreign objects inside the TV

- Do not allow any objects to drop into the TV through the air vents (fire or electrical shock may result).

### Do not place the TV on sloped or unstable surfaces

- The TV may fall off or tip over.

### Use only the dedicated pedestals / mounting equipment

- Using an unapproved pedestal or other fixtures may make the TV unstable, risking injury. Be sure to ask your local Panasonic dealer to perform setup.
- Use approved pedestals / mounts (p. 6).

### Do not allow children to handle SD Card

- As with a small object, SD Card can be swallowed by young children. Please remove SD Card immediately after use.

# Notes

## Caution

### ■ When cleaning the TV, remove the mains plug


- Cleaning an energized TV may cause electrical shock.

### ■ When the TV is not going to be used for a long period of time, remove the mains plug

- This TV will still consume some power even in the Off mode, as long as the mains plug is still connected to a live socket outlet.

### ■ Allow sufficient space around the TV for radiated heat

Minimum distance

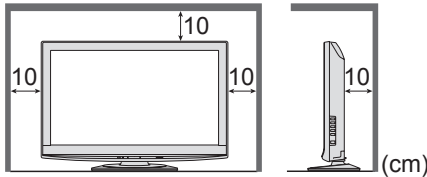

- When using the pedestal, keep the space between the bottom of the TV and the surface where the TV is set.
- In case of using Wall-hanging bracket, follow the manual of it.

### ■ Do not block the rear air vents

- Blocked ventilation by newspapers, table cloths, curtains, etc. may cause overheating, fire or electrical shock.

### ■ Do not expose your ears to excessive volume from the headphones

- Irreversible damage can be caused.

# Maintenance

First, remove the mains plug from the socket outlet.

## Display panel

Regular care: Gently wipe the surface clean of dirt by using a soft cloth.

Major contamination: Wipe the surface clean using a soft cloth dampened with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Then, using a soft dry cloth, evenly wipe the surface clean until it is dry.

### Caution

- The surface of the display panel has been specially treated and may be easily damaged. Do not tap or scratch the surface with your fingernail or other hard object.
- Take care not to subject the surface to insect repellent, solvent, thinner, or other volatile substances (this may degrade surface quality).

## Cabinet, Pedestal

Regular care: Wipe the surface clean using a soft dry cloth.

Major contamination: Dampen a soft cloth with clean water or water containing a small amount of neutral detergent. Then, wring the cloth and wipe the surface clean with it. Finally, wipe the surface clean with a dry cloth.

### Caution

- Take care not to subject the TV's surfaces to detergent (a liquid inside the TV could lead to product failure).
- Take care not to subject surfaces to insect repellent, solvent, thinner, or other volatile substances (this may deteriorate the surface by peeling the paint).
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time.

## Mains plug

Wipe the mains plug with a dry cloth at regular intervals. (Moisture and dust may lead to fire or electrical shock.)

### ■ Auto power standby function

- If no signal is received and no operation is performed in Analogue TV mode for 30 minutes, the TV will automatically go to standby mode.

### ■ Keep the TV away from these types of equipment

- Electronic equipment  
In particular, do not place video equipment near the TV (electromagnetic interference may distort images / sound).
- Equipment with an infrared sensor  
This TV also emits infrared rays (this may affect operation of other equipment).

### ■ Transport only in upright position

# Accessories / Options

## Standard accessories

 
- Remote Control
  - N2QAYB000420



- Batteries for the Remote Control (2)
  - R6 (UM3)



- Clamper
  - ➔ p. 8




- Cleaning cloth




- Operating Instructions
- Pan European Guarantee Card

 - Pedestal
  - TBLA0433 (TX-L32GA11)
  - TBLA0411 (TX-L37GA11)
  - ➔ p. 7



- Assembly screw for Pedestal (4)

 


M4

- This product contains possibly dangerous parts (such as plastic bags), that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

## Optional accessories

- Wall-hanging bracket
  - TY-WK3L2RW


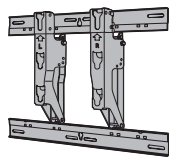


Please contact your nearest Panasonic dealer to purchase the recommended wall-hanging bracket. For additional details, please refer to the wall-hanging bracket installation manual.

### WARNING!

- Failure to use a Panasonic bracket or choosing to mount the unit yourself will be done at the risk of the consumer. Any damage resulting from not having a professional installer mount your unit will void your warranty.
- Always be sure to ask a qualified technician to carry out set-up.
  - Incorrect fitting may cause equipment to fall, resulting in injury and product damage.
- Do not mount the unit directly below ceiling lights (such as spotlights, floodlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.
- Take care when fixing wall brackets to the wall. Always ensure that there are no electrical cables or pipes in the wall before hanging bracket.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

## Installing / removing remote's batteries

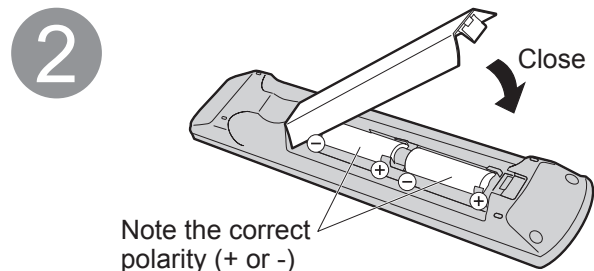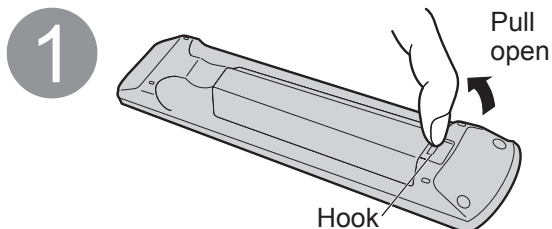

### Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
- Do not mix old and new batteries.
- Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or breakup batteries.
  - Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

## Attaching the pedestal

### Warning

**Do not disassemble or modify the pedestal.**

- Otherwise the TV may fall over and become damaged, and personal injury may result.

### Caution

**Do not use any other TV and displays.**

- Otherwise the TV may fall over and become damaged, and personal injury may result.

**Do not use the pedestal if it becomes warped or physically damaged.**

- If you use the pedestal while it is physically damaged, personal injury may result. Contact your nearest Panasonic dealer immediately.

**During set-up, make sure that all screws are securely tightened.**

- If insufficient care is taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

**Ensure that the TV does not fall over.**

- If the TV is knocked or children climb onto the pedestal with the TV installed, the TV may fall over and personal injury may result.


**Two or more people are required to install and remove the TV.**

- If two or more people are not present, the TV may be dropped, and personal injury may result.

### ■ Securing the TV


Use the assembly screws to fasten securely.

- Make sure that the screws are securely tightened.
- Carry out the work on a horizontal and level surface.

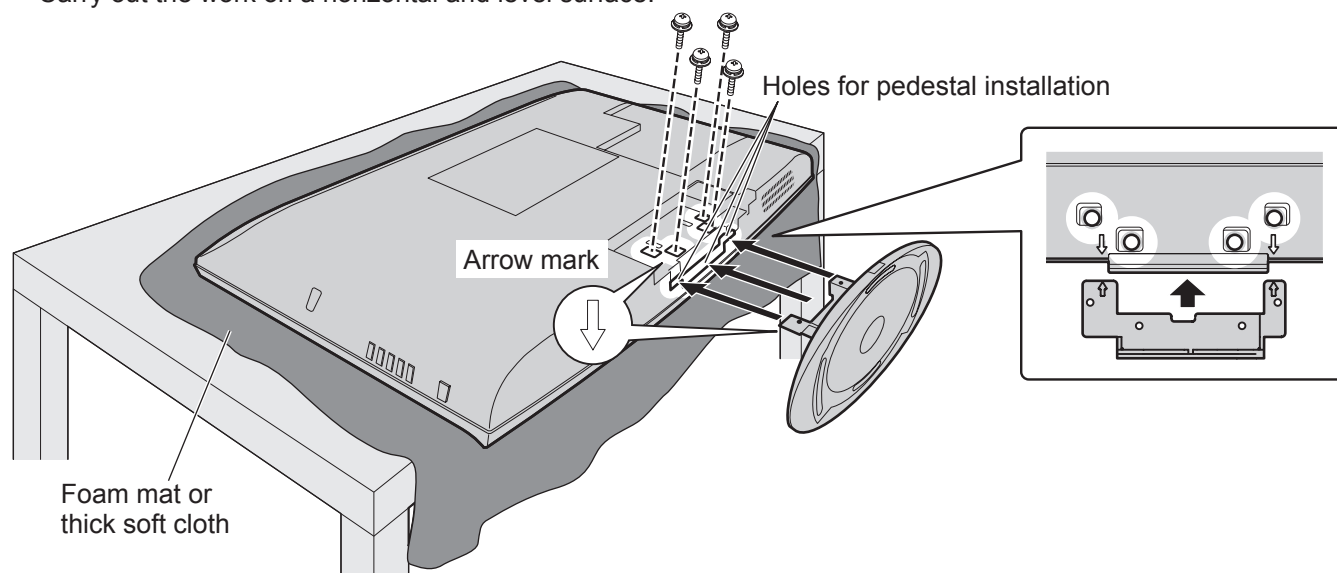


## Adjust the panel to your desired angle

- Ensure that the pedestal does not hang over the edge of the base even if the TV swivels to the full rotation range.
- Do not place any objects or hands within the full rotation range.

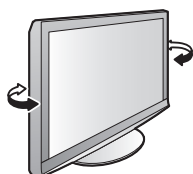

- TX-L32GA11  
a: 359 mm / b: 230 mm
- TX-L37GA11  
a: 399 mm / b: 295 mm

Set the mark at the centre as illustrated, to ensure full degree rotation in either direction.

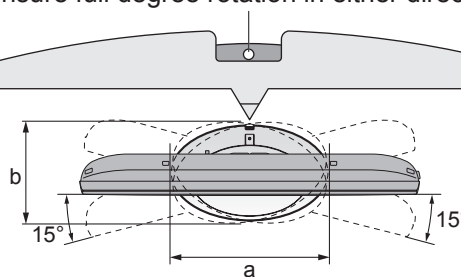


(View from the top)




# Accessories / Options

## Using the clammer

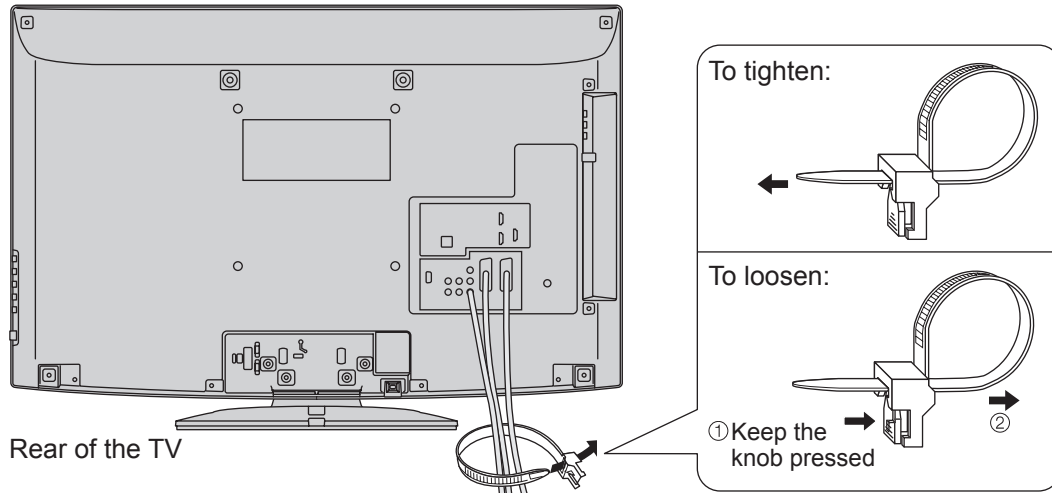

- Do not bundle the RF cable and mains lead together (could cause distorted image).
- Fix cables with clammers as necessary.
- When using the optional accessory, follow the option's assembly manual to fix cables.

# Identifying Controls

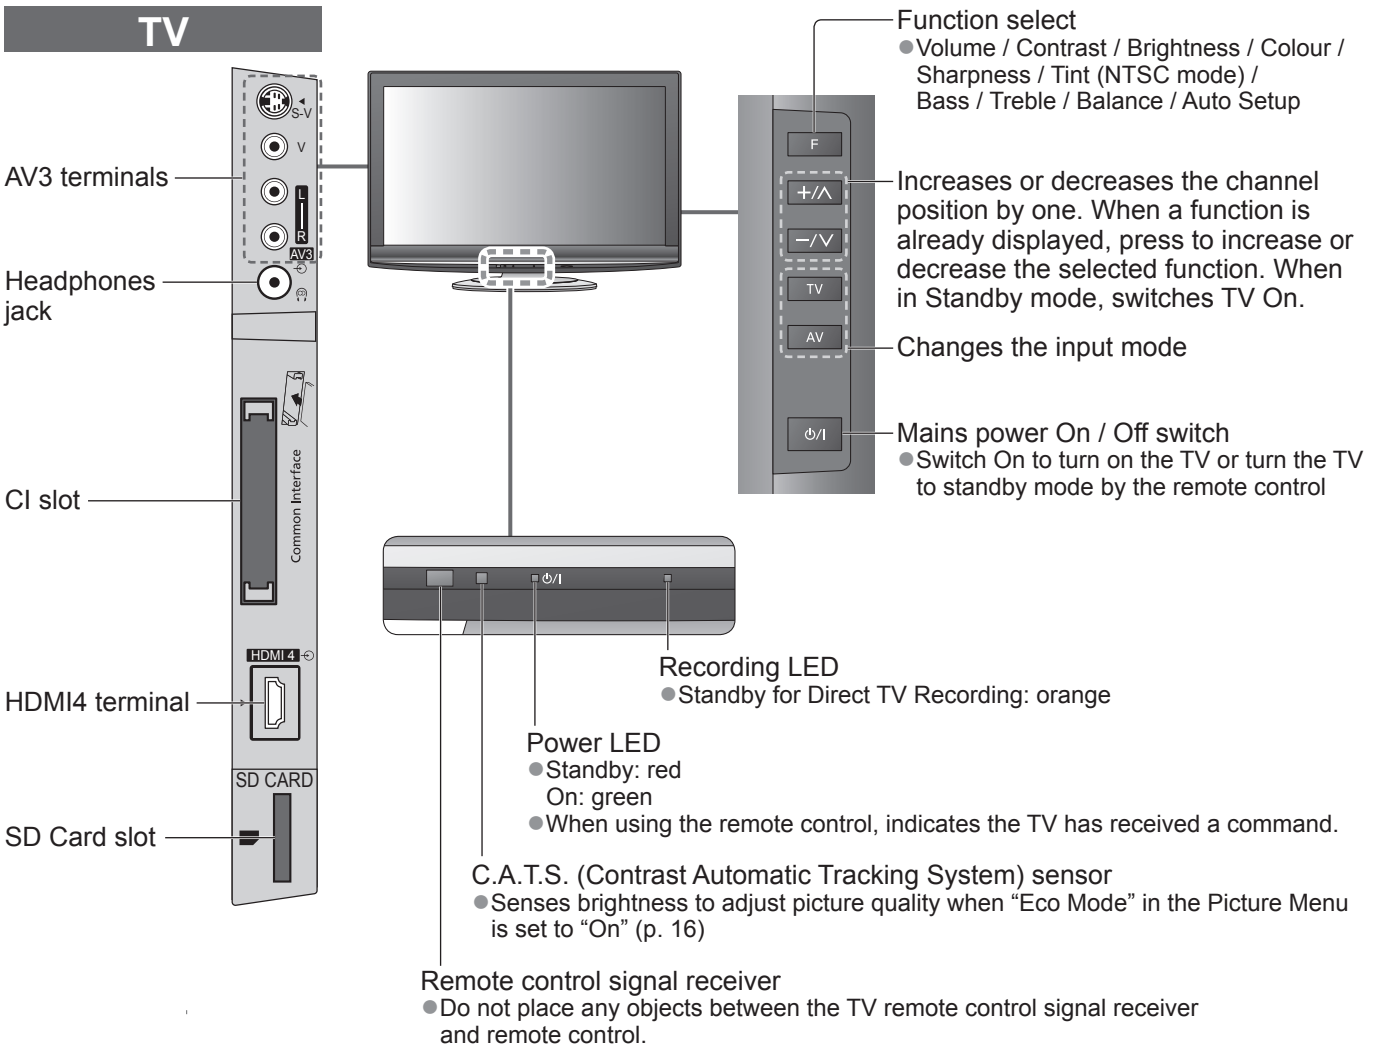



# Identifying Controls

## Remote Control

### VIERA IMAGE VIEWER

- Switches to SD Card viewing mode

### Standby On / Off switch

- Switches TV On or Off standby

### Aspect

- Changes aspect ratio from Aspect Selection list
- Also possible by pressing this button repeatedly until you reach the desired aspect

### Main Menu

- Press to access Picture, Sound and Setup Menus

### Channel / Programme Information

- Displays channel and programme information

### VIERA Link Menu

- Accesses VIERA Link Menu

### OK

- Confirms selections and choices
- Press after selecting channel positions to quickly change channel

### Option Menu

- Easy setting for viewing and sound options

### Coloured buttons

- Used for the selection, navigation and operation of various functions

### Teletext

- Switches to teletext mode

### Subtitles

- Displays subtitles

### Numeric buttons

- Changes channel and teletext pages
- Sets characters
- When in Standby mode, switches TV On

### Sound Mute

- Switches sound mute On or Off

### Volume Up / Down

### Input mode selection

- TV - switches DVB-C / DVB-T / Analogue mode
- AV - switches to AV input mode from Input Selection list

### Direct TV Recording

- Records programme immediately in DVD Recorder / VCR with Q-Link or VIERA Link connection

### Normalise

- Resets picture and sound settings to their default levels

### Exit

- Returns to the normal viewing screen

### VIERA TOOLS

- Displays some special feature icons and accesses easily

### Guide

- Displays TV Guide

### Cursor buttons

- Makes selections and adjustments

### Return

- Returns to the previous menu / page

### Hold

- Freeze / unfreeze picture
- Holds the current teletext page (teletext mode)

### Index

- Returns to the teletext index page (teletext mode)

### Surround

- Switches Surround sound

### Channel Up / Down

- Selects channel in sequence

### Connected equipment operations




# Basic Connection

External equipment and cables shown are not supplied with this TV.  
Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any leads.

## Example 1 Connecting aerial

### TV only


Rear of the TV

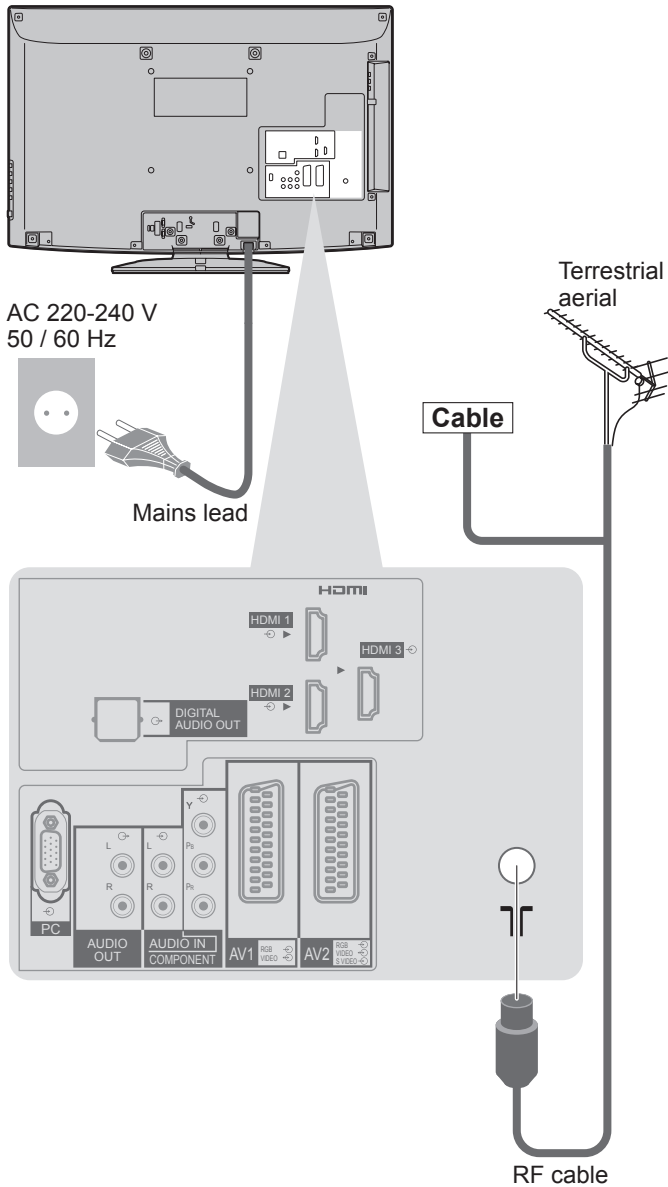

## Example 2 Connecting DVD Recorder / VCR

### TV, DVD Recorder or VCR

Rear of the TV

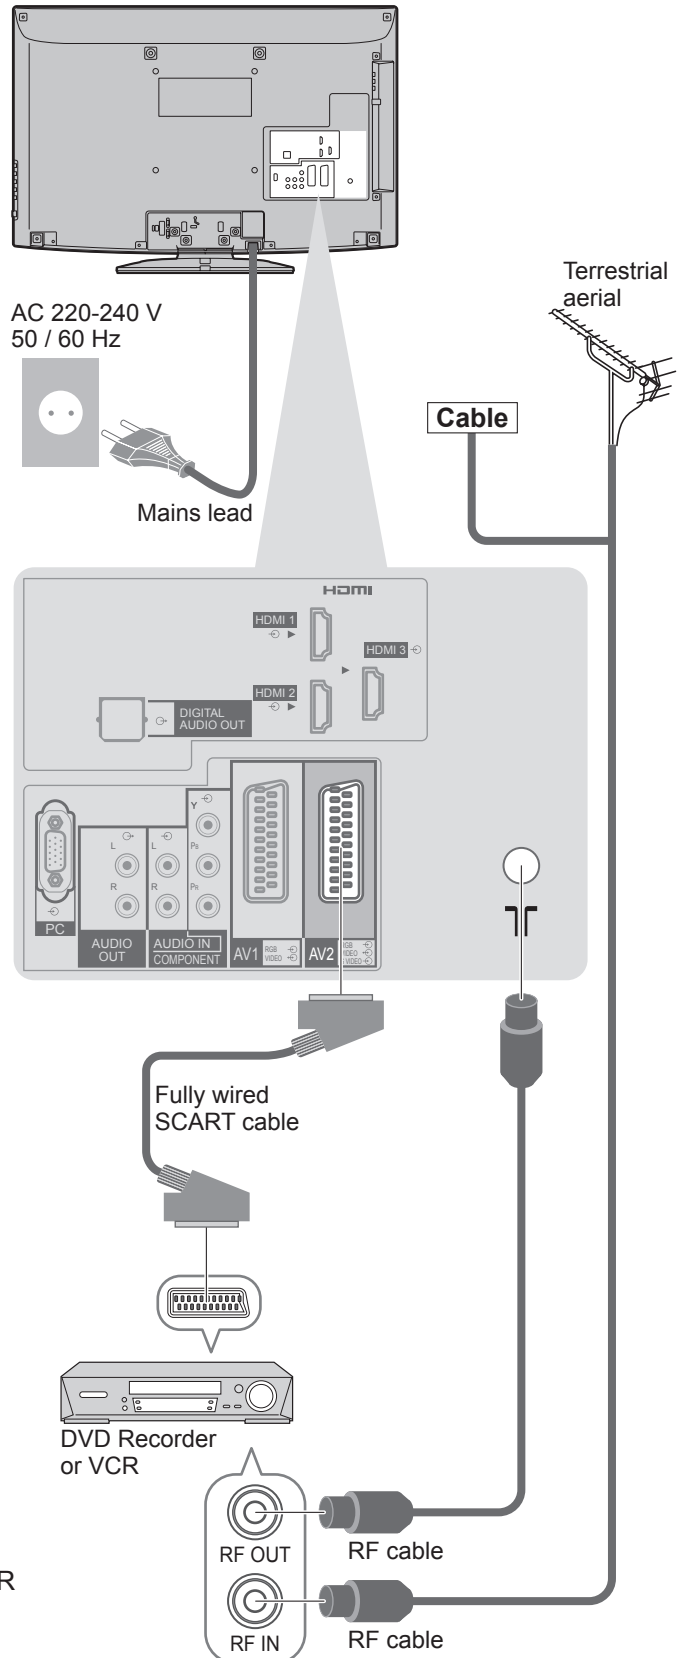


### Note

- Connect to the TV's AV1 / AV2 for a DVD Recorder / VCR supporting Q-Link.
- For HDMI-compatible equipment, possible to connect to HDMI terminals (HDMI1 / HDMI2 / HDMI3 / HDMI4) by using HDMI cable.
- Read the manual of the equipment too.

## Example 3 Connecting DVD Recorder / VCR and Set top box

### TV, DVD Recorder / VCR and Set top box


Rear of the TV

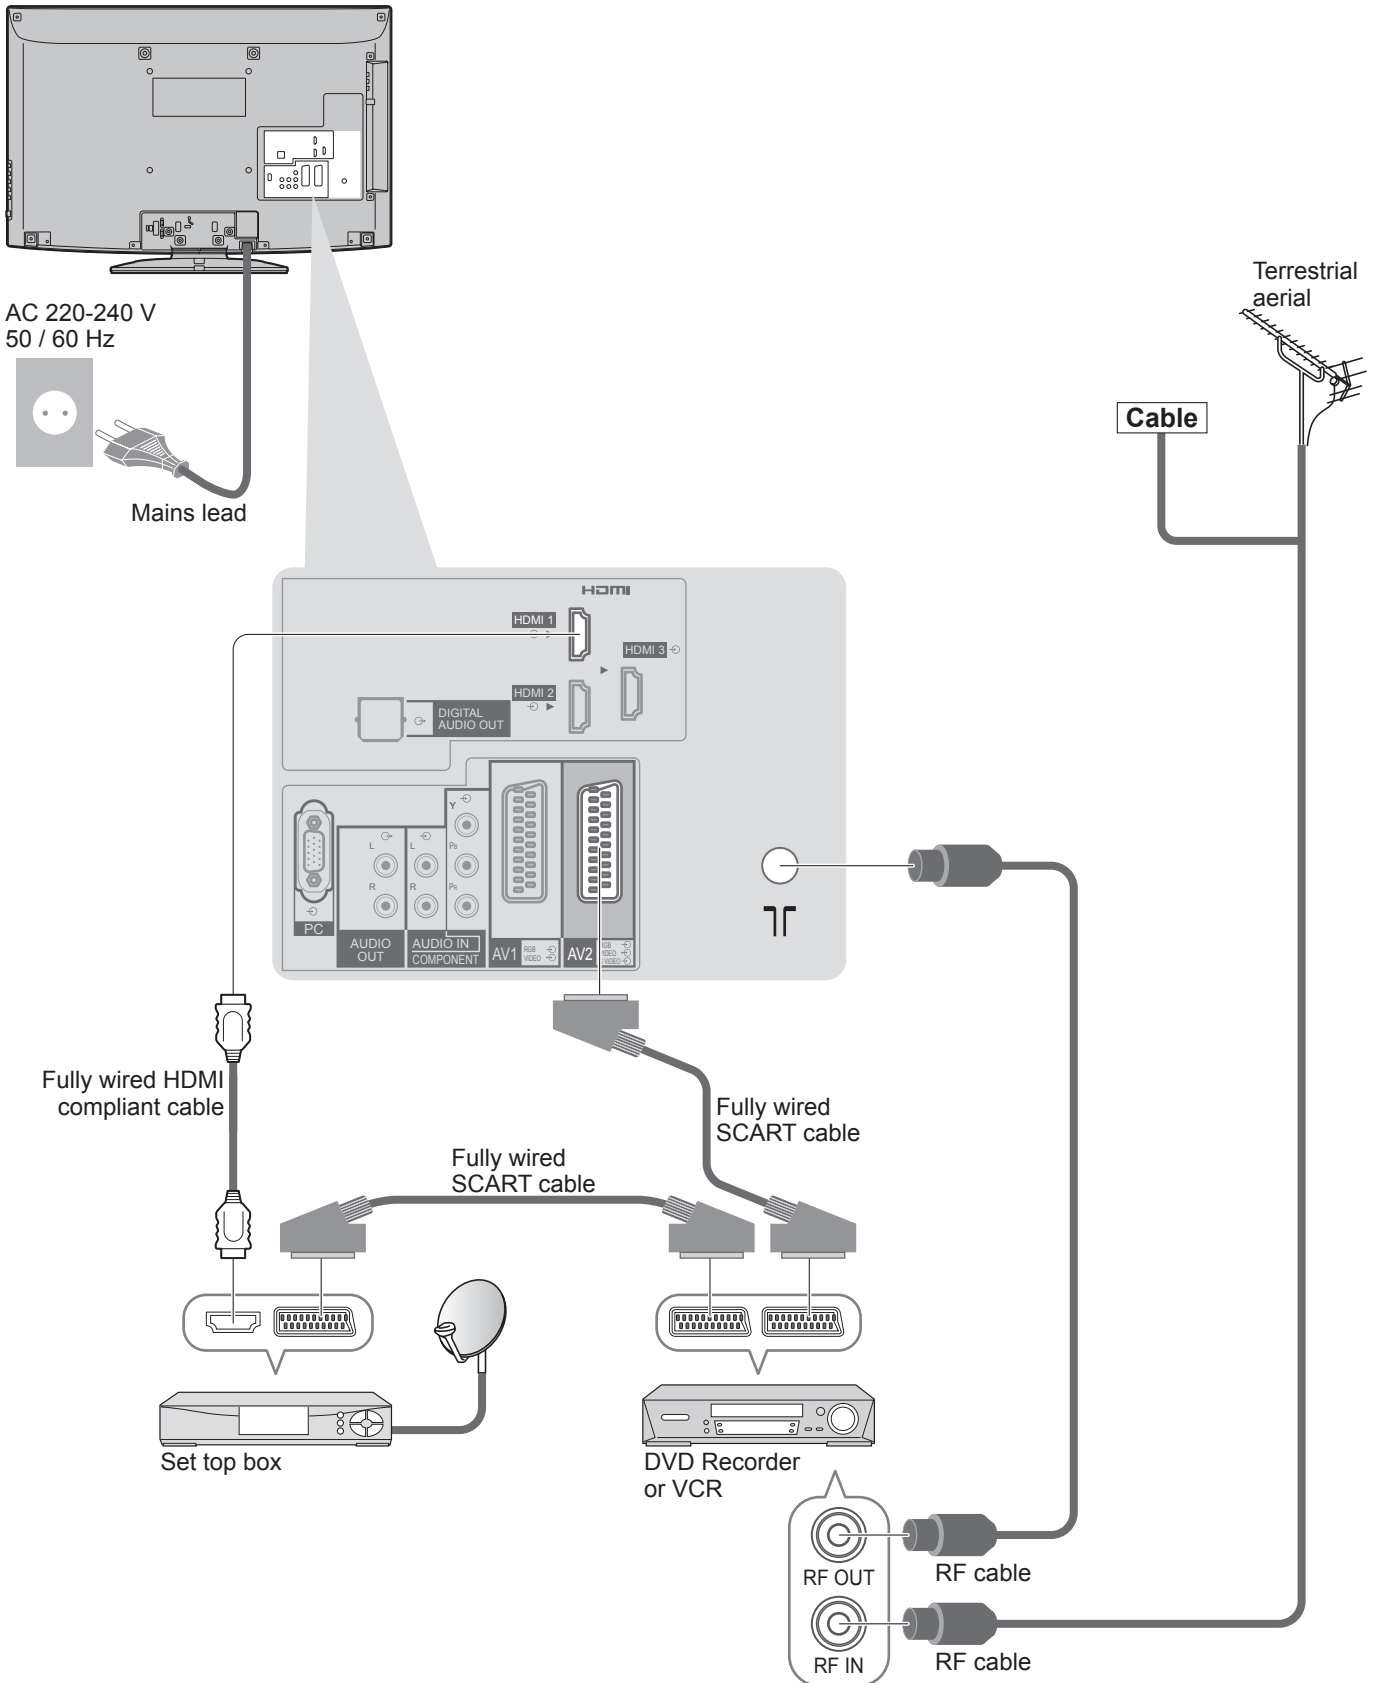

# Auto Setup

Search and store TV channels automatically.

- These steps are not necessary if the setup has been completed by your local dealer.
- Please complete connections (p. 10 and p. 11) and settings (if necessary) of the connected equipment before starting Auto Setup. For details of settings for the connected equipment, read the manual of the equipment.

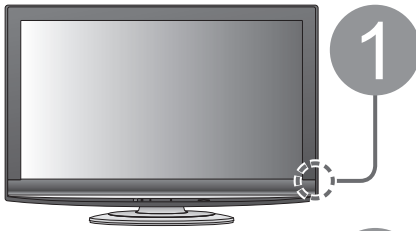

1


**Plug the TV into mains socket and switch On**  
(Takes a few seconds to be displayed)



2

**Select the language**

 
Mentüsprache			
Deutsch	Dansk	Polski	Srpski
English	Svenska	Čeština	Hrvatski
Français	Norsk	Magyar	Slovenščina
Italiano	Suomi	Slovenčina	Latviešu
Español	Türkçe	Български	eesti keel
Português	Ελληνικά	Română	Lietuvių
Nederlands			



3


**Select your country**

 Country		
Germany	Denmark	Poland
Austria	Sweden	Czech
France	Norway	Hungary
Italy	Finland	Slovakia
Spain	Luxembourg	Slovenia
Portugal	Belgium	Estonia
Switzerland	Netherlands	Lithuania
Malta	Turkey	E.Eu
Andorra	Greece	



**Auto Setup starts**


 
- Auto Setup will start to search for TV channels and store them. The sorted channel order depends upon the TV signal, the broadcasting system and reception conditions.



- If Q-Link, VIERA Link or similar technology compatible recorder is connected, channel, language, country / region settings are automatically downloaded to the recorder.
- If downloading has failed, you can download later by the menu item. ➔ "Download" (p. 18)

4

**Select "Home"**

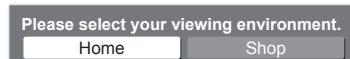  

**Auto Setup is now complete and your TV is ready for viewing.**



## Using the On Screen Displays

Many features available on this TV can be accessed via the On Screen Display menu.

### How to use remote control



Move the cursor / select the menu item



Move the cursor / adjust levels / select from a range of options



Access the menu / store settings after adjustments have been made or options have been set



Return to the previous menu




Open the main menu



Exit the menu system and return to the normal viewing screen

### ON SCREEN HELP Instructions box - Operation guide

(example: Sound Menu)

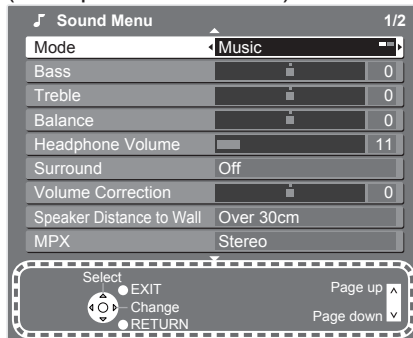



Operation guide will help you.

### Note

 - If tuning has failed → "Auto Setup" (p. 18 and p. 19)
- To initialize all settings → "Shipping Condition" (p. 19)
- If you turned the TV Off during Standby mode last time, the TV will be in Standby mode when you turn the TV On with Mains power On / Off switch.

### Auto Setup varies depending on the country you select

- Favourite Network Selection (if you select "Sweden")

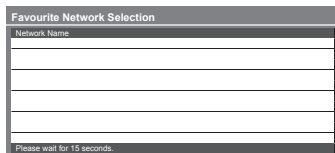


- Region Selection (if you select "Finland")




- Search Mode (if you select "Sweden" or "Finland")




- Analogue Auto Setup

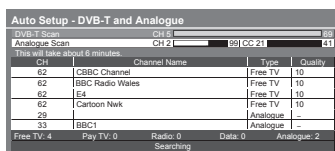

- DVB-T Auto Setup (if you select a country except "Portugal", "Poland", "Hungary" and "E.Eu")

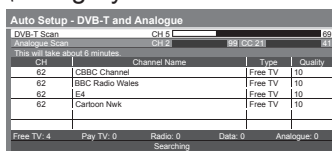

- DVB-C Auto Setup (if you select "Sweden" or "Finland")

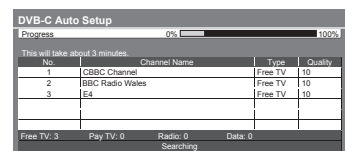

### If you select "Shop" by mistake

Return to viewing environment selection by pressing the RETURN button.

 


Select "Home"



Auto Setup is complete

- If you set to "Off" or "On" in this menu the TV will be in "Shop" viewing environment. To return to "Home" viewing environment initialise all settings by accessing Shipping Condition.



→ "Shipping Condition" (p. 19)

# How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions.




1

## Display the menu


- MENU ● Displays the functions that can be set (varies according to the input signal)

2

## Select the menu

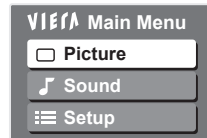


(example: Picture Menu)

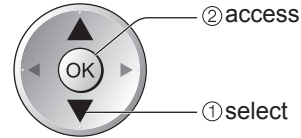

3

## Select the item

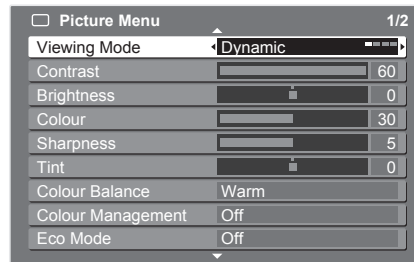


(example: Picture Menu)




4

## Adjust or select

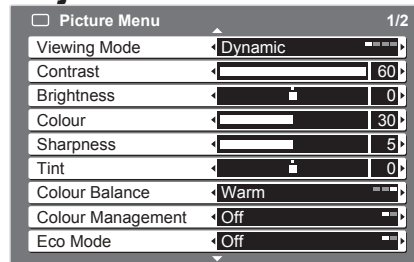

(example: Picture Menu)

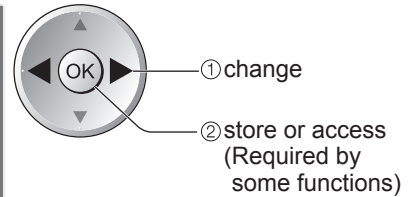


### ■ To return to TV at any time




### ■ To return to the previous screen


 
### ■ To change menu pages




### ■ Choose from among alternatives

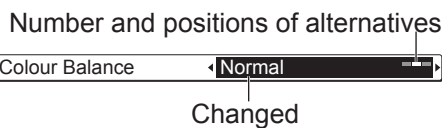

### ■ Adjust using the slide bar


 
### ■ Go to the next screen




### ■ Enter characters by free input menu

You can enter names or numbers freely for some items.



 Set characters one by one




- You can set characters by using numeric buttons.

### ■ To reset the settings

- To reset the picture settings only  
➔ "Reset to Defaults" in the Picture Menu (p. 16)
- To reset the sound settings only  
➔ "Reset to Defaults" in the Sound Menu (p. 17)
- To reset the picture and sound settings together  
➔ (Also volume level and aspect mode are reset)
- To initialize all settings  
➔ "Shipping Condition" in the Setup Menu (p. 19)

## Overview

How to operate → p. 14

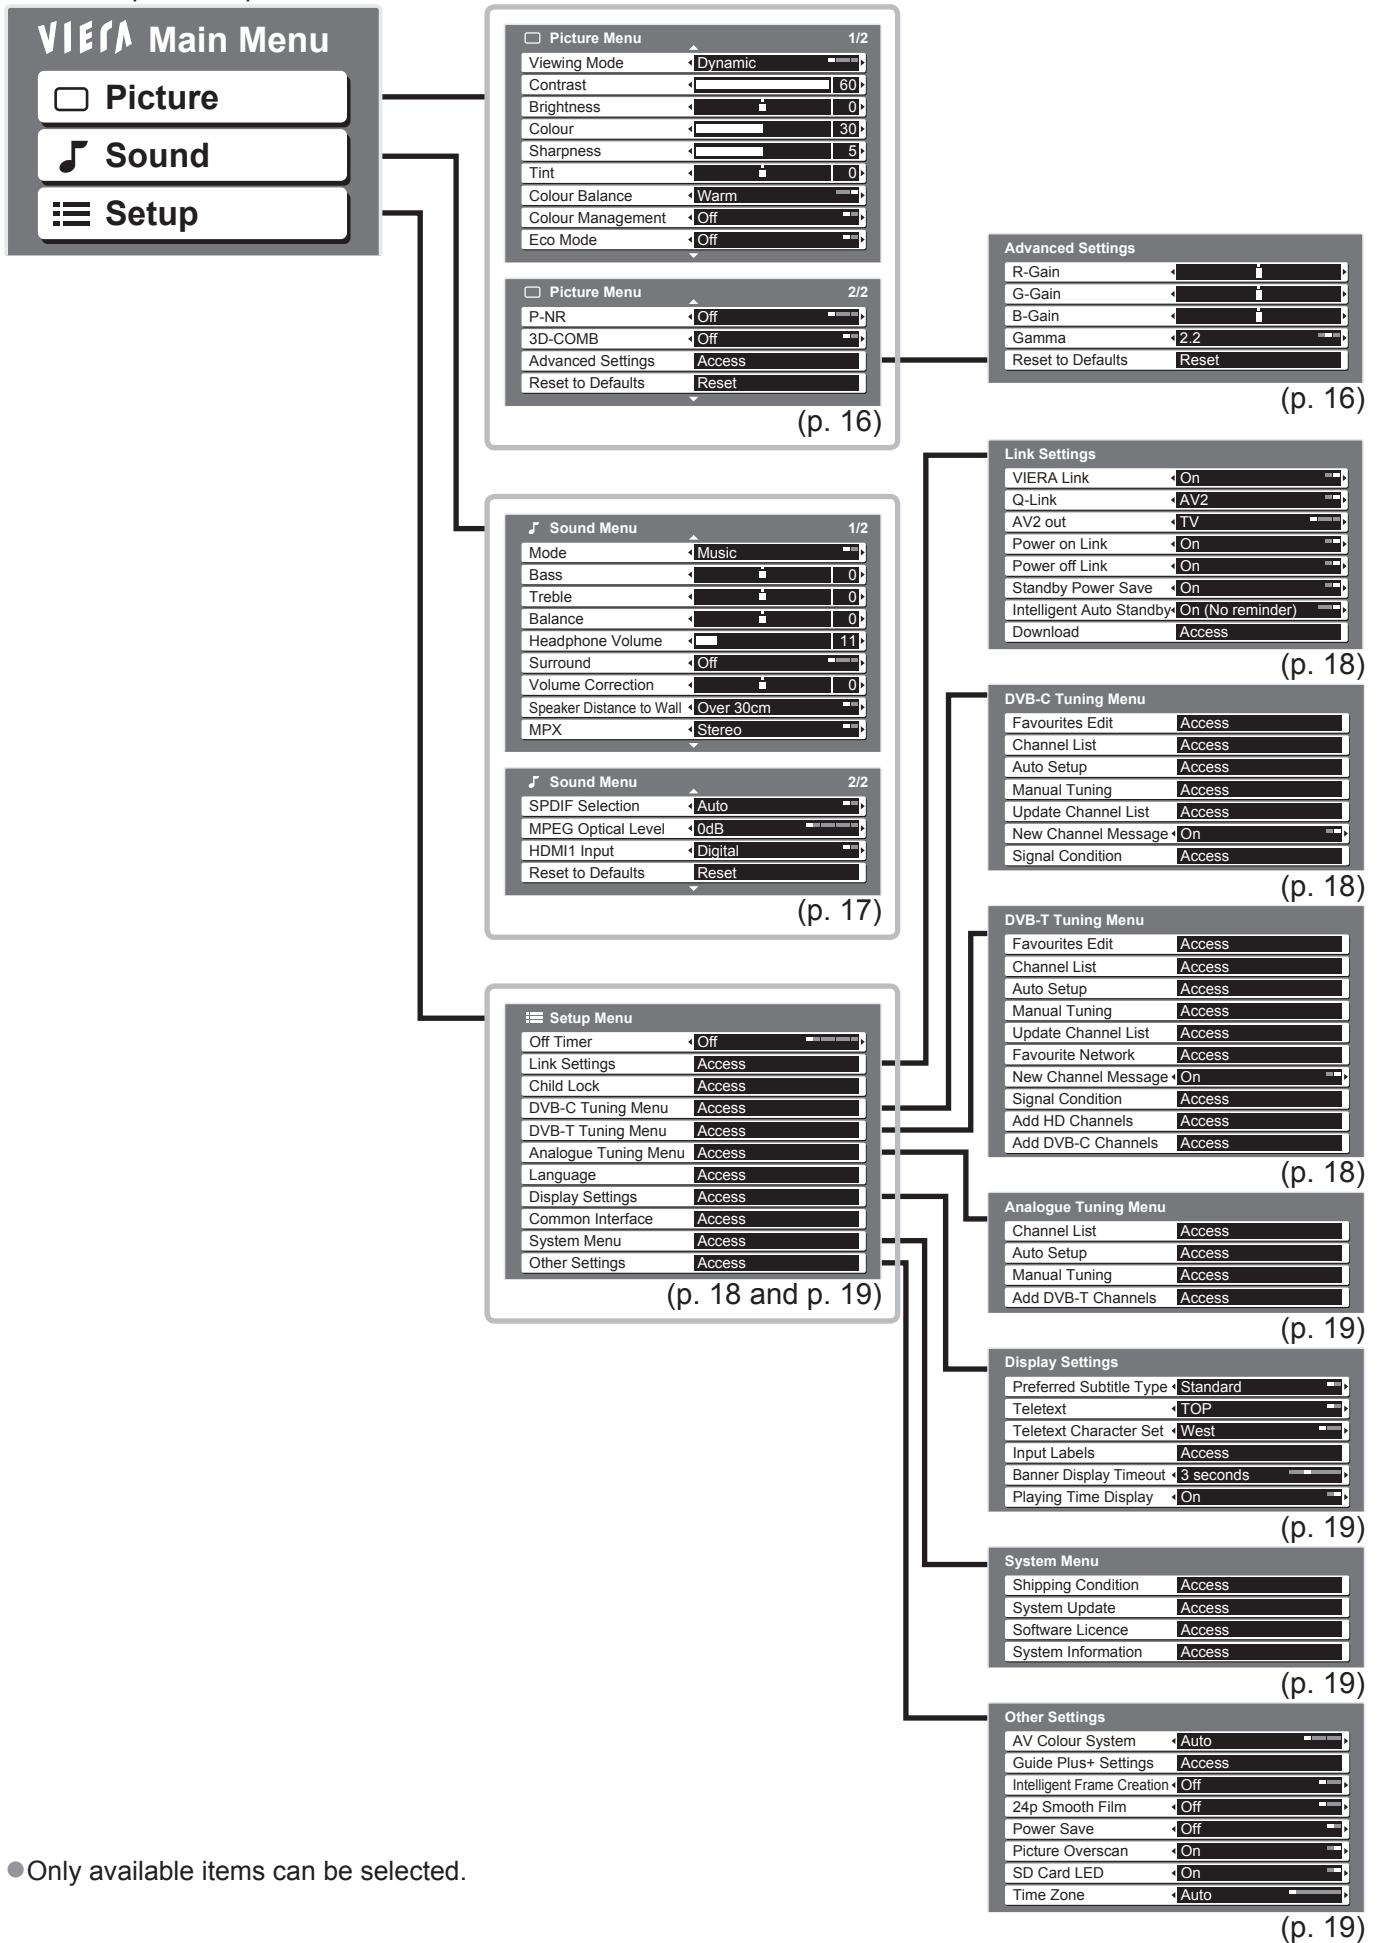

Only available items can be selected.



# How to Use Menu Functions

## ■ Menu list

Menu	Item	Adjustments / Configurations (alternatives)	
Picture	Viewing Mode	<p>Basic picture mode (<b>Dynamic / Normal / Cinema / Game</b>)</p> <ul style="list-style-type: none"> <li>● Set for each input signal</li> </ul> <p>Dynamic : Provides enhanced picture contrast and sharpness when viewing in a bright room            Normal : Recommended for viewing under normal ambient room lighting conditions            Cinema : For watching movies in a darkened room producing a cinema-like picture            Game : Fast response signal specifically to provide suitable images for playing games</p> <ul style="list-style-type: none"> <li>● Not valid on TV mode</li> <li>● A continuous record of time spent using Game mode can be displayed in the top right of the screen.               <ul style="list-style-type: none"> <li>➔ "Playing Time Display" (p. 19)</li> </ul> </li> </ul>	
	Contrast, Brightness, Colour, Sharpness	Increases or decreases the levels of these options according to your personal preference	
	Tint	<p>With an NTSC signal source connected to the TV, the picture hue can be adjusted to suit your taste</p> <ul style="list-style-type: none"> <li>● For NTSC signal reception only</li> </ul>	
	Colour Balance	Allows you to set the overall colour tone of the picture ( <b>Cool / Normal / Warm</b> )	
	Colour Management	<p>Automatically adjusts colours to vivid ones (<b>Off / On</b>)</p> <ul style="list-style-type: none"> <li>● Not valid on PC signal</li> </ul>	
	Eco Mode	Adjusts picture settings automatically dependent on ambient lighting conditions ( <b>Off / On</b> )	
	P-NR	<p>Picture Noise Reduction</p> <p>Automatically reduces unwanted picture noise and flicker noise in the contoured parts of a picture (<b>Off / Min / Mid / Max</b>)</p> <ul style="list-style-type: none"> <li>● Not valid on PC signal</li> </ul>	
	3D-COMB	<p>Occasionally, whilst viewing still or slow moving pictures, colour patterning may be seen. Set to "On" to display sharper and more accurate colours (<b>Off / On</b>)</p> <ul style="list-style-type: none"> <li>● For PAL or NTSC signal reception only</li> <li>● Not valid on RGB, S-Video, Component, PC, HDMI and SD Card</li> </ul>	
	Advanced Settings	R-Gain	<p>Adjusts the white balance for red areas</p> <ul style="list-style-type: none"> <li>● For PC input mode or when "Viewing Mode" is set to "Normal" / "Cinema"</li> </ul>
		G-Gain	<p>Adjusts the white balance for green areas</p> <ul style="list-style-type: none"> <li>● For PC input mode or when "Viewing Mode" is set to "Normal" / "Cinema"</li> </ul>
B-Gain		<p>Adjusts the white balance for blue areas</p> <ul style="list-style-type: none"> <li>● For PC input mode or when "Viewing Mode" is set to "Normal" / "Cinema"</li> </ul>	
Gamma		<p>Switches the gamma curve (<b>2.0 / 2.2 / 2.5</b>)</p> <ul style="list-style-type: none"> <li>● For PC input mode or when "Viewing Mode" is set to "Normal" / "Cinema"</li> </ul>	
Reset to Defaults		<p>Press the OK button to reset to the default Advanced Settings</p> <ul style="list-style-type: none"> <li>● For PC input mode or when "Viewing Mode" is set to "Normal" / "Cinema"</li> </ul>	
Reset to Defaults	Press the OK button to reset the present Picture Viewing Mode to the default settings		

Menu	Item	Adjustments / Configurations (alternatives)
Sound	<b>Mode</b>	Basic sound mode ( <b>Music / Speech</b> )
	<b>Bass</b>	Increases or decreases level to enhance or minimise lower, deeper sound output
	<b>Treble</b>	Increases or decreases level to enhance or minimise sharper, higher sound output
	<b>Balance</b>	Adjusts volume level of right and left speakers
	<b>Headphone Volume</b>	Adjusts the volume of the headphones
	<b>Surround</b>	Surround sound settings ( <b>Off / V-Audio / V-Audio Surround / V-Audio ProSurround</b> ) V-Audio: Provides a dynamic enhancer of width to simulate improved spatial effects V-Audio Surround: Provides a dynamic enhancer of width and depth to simulate improved spatial effects V-Audio ProSurround: Provides a more progressive enhancer and reverberation to simulate improved spatial effects. ● Switching is also possible by the Surround button on the remote control.
	<b>Volume Correction</b>	Adjusts the volume of individual channel or input mode
	<b>Speaker Distance to Wall</b>	Adjusts the low frequency sound ( <b>Over 30cm / Up to 30cm</b> ) ● If the back space between the TV and wall is over 30 cm, "Over 30cm" is recommended. ● If the back space between the TV and wall is within 30 cm, "Up to 30cm" is recommended.
	<b>MPX</b>	Select stereo / monaural ( <b>Mono / Stereo</b> ) ● Normally: Stereo ● Stereo signal cannot be received: Mono ● M1 / M2: Available while mono signal is transmitted ● Analogue mode only
	<b>SPDIF Selection</b>	Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT terminal ( <b>Auto / PCM</b> ) Auto : Dolby Digital Plus and Dolby Digital are output as Dolby Digital Bitstream. HE-AAC (48 kHz) is output as DTS. MPEG is output as PCM. PCM : Digital output signal is fixed to PCM. ● DVB mode or Movie View Mode only
<b>MPEG Optical Level</b>	Normally, MPEG sound is larger comparing with the other types of audio track You can adjust the audio level of MPEG output from DIGITAL AUDIO OUT terminal as the initial setting ( <b>0 / -2 / -4 / -6 / -8 / -10 / -12dB</b> ) ● DVB mode only	
<b>HDMI1 / 4 Input</b>	Select to fit the input signal ( <b>Digital / Analogue</b> ) Digital : HDMI cable connection Analogue : HDMI-DVI adapter cable connection ● HDMI input mode only ● HDMI2 / 3 terminals are for digital signal only ● No setting for HDMI2 / 3 available	
<b>Reset to Defaults</b>	Press the OK button to reset the present Sound Mode to the default settings	

- A different menu will be displayed while PC or SD Card is used.
- Only available items can be selected.

# How to Use Menu Functions

## ■ Menu list

Menu	Item	Adjustments / Configurations (alternatives)	
Setup	Off Timer	Sets the time the TV automatically turns Off (Off / 15 / 30 / 45 / 60 / 75 / 90 minutes)	
	Link Settings	VIERA Link	Sets to use VIERA Link functions (Off / On)
		Q-Link	Selects which AV terminal is to be used for data communication between this TV and a compatible recorder (AV1 / AV2) ● Select the connected terminal to the recorder even it is not compatible with Q-Link.
		AV1 / AV2 out	Chooses the signal to be transmitted from the TV to Q-Link (TV / AV1 / AV2 / AV3 / Monitor) ● Monitor: Image displayed on screen ● Component, PC and HDMI signals cannot be outputted.
		Power on Link	Sets to use Power on Link function (Off / On)
		Power off Link	Sets to use Power off Link function (Off / On)
		Standby Power Save	Controls the power consumption in Standby mode of the connected equipment to reduce the consumption (Off / On) ● This function is available when "VIERA Link" is set to "On" and "Power off Link" is set to "On".
		Intelligent Auto Standby	Makes non-watched or non-used connected equipment go into Standby mode to reduce the power consumption (Off / On (With reminder) / On (No reminder)) ● This function is available when "VIERA Link" is set to "On".
		Download	Downloads channel, language, country / region settings to a Q-Link or VIERA Link compatible equipment connected to the TV ● DVB-C channel setting cannot be downloaded.
	Child Lock	Locks a channel / AV input to prevent access to it	
	DVB-C Tuning Menu	Favourites Edit	Creates list of favourite DVB-C channels
		Channel List	Skips the unwanted DVB-C channels or edits DVB-C channels
		Auto Setup	Automatically sets the DVB-C channels supplied
		Manual Tuning	Sets the DVB-C channels manually
		Update Channel List	Updates DVB-C Channel List with keeping your settings
		New Channel Message	Selects whether to give a notification message when a new DVB-C channel is found
		Signal Condition	Checks the DVB-C signal condition
	DVB-T Tuning Menu	Favourites Edit	Creates list of favourite DVB-T channels
		Channel List	Skips the unwanted DVB-T channels or edits DVB-T channels
Auto Setup		Automatically sets the DVB-T channels received in the area	
Manual Tuning		Sets the DVB-T channels manually	
Update Channel List		Updates DVB-T Channel List with keeping your settings	
Favourite Network		Selects your favourite network for each broadcasters	
New Channel Message		Selects whether to give a notification message when a new DVB-T channel is found	
Signal Condition		Checks the DVB-T signal condition	
Add HD Channels		Retunes all TV channels to add HD channels ● All the previous tuning settings are erased. ● Use this function if HD services start in your area.	
Add DVB-C Channels		Retunes all TV channels to add DVB-C channels ● All the previous tuning settings are erased. ● Use this function if DVB-C services supply.	

Menu	Item	Adjustments / Configurations (alternatives)		
Setup	Analogue Tuning Menu	<b>Channel List</b>	Skips the unwanted Analogue channels or edits Analogue channels	
		<b>Auto Setup</b>	Automatically sets the Analogue channels received in the area	
		<b>Manual Tuning</b>	Sets the Analogue channels manually	
		<b>Add DVB-T Channels</b>	Retunes all TV channels to add DVB-T channels ● All the previous tuning settings are erased. ● Use this function if DVB-T services start in your area.	
	Language	<b>OSD Language</b>	Changes language for on-screen displays	
		<b>Preferred Audio 1 / 2</b>	Selects the first and second preferred language for DVB multi audio (depending on the broadcaster)	
		<b>Preferred Subtitles 1 / 2</b>	Selects the first and second preferred language for DVB subtitles (depending on the broadcaster)	
		<b>Preferred Teletext</b>	Selects the preferred language for DVB teletext service (depending on the broadcaster)	
	Display Settings	<b>Preferred Subtitle Type</b>	Selects the preferred subtitle type ( <b>Standard / Hard of Hearing</b> ) ● "Hard of Hearing" provides aids in understanding and enjoyment with DVB subtitles (depending on the broadcaster). ● "Preferred Subtitles 1 / 2" in "Language" are given priority.	
		<b>Teletext</b>	Teletext display mode ( <b>TOP (FLOF) / List</b> )	
		<b>Teletext Character Set</b>	Selects teletext language ( <b>West / East1 / East2</b> ) ● West: English, French, German, Greek, Italian, Spanish, Swedish, Turkish, etc. ● East1: Czech, English, Estonian, Lettish, Rumanian, Russian, Ukrainian, etc. ● East2: Czech, Hungarian, Lettish, Polish, Rumanian, etc.	
		<b>Input Labels</b>	Labels or skips each input terminal	
		<b>Banner Display Timeout</b>	Sets how long the Information banner stays on screen ( <b>0 (No display) / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 seconds</b> )	
		<b>Playing Time Display</b>	Set to "On" to display a continuous record of time spent using Game mode every 30 mins ( <b>Off / On</b> ) ● This function is available when "Game" is selected in "Viewing Mode" (p. 16).	
		<b>Common Interface</b>	Uses include to watch pay-TV	
	System Menu	<b>Shipping Condition</b>	Resets all settings, for example, when moving house	
		<b>System Update</b>	Downloads new software to TV	
		<b>Software Licence</b>	Displays the software licence information	
		<b>System Information</b>	Displays the system information of this TV	
	Other Settings	<b>AV Colour System</b>	Selects optional colour system based on video signals in AV mode ( <b>Auto / PAL / SECAM / M.NTSC / NTSC</b> )	
		GUIDE Plus+ Settings	<b>Update</b>	Performs the update of the GUIDE Plus+ schedule and advertising informations for the GUIDE Plus+ system
			<b>Postcode</b>	Sets your postcode to display advertisements in the GUIDE Plus+ system
			<b>System Information</b>	Displays the system information of the GUIDE Plus+ system
		<b>Intelligent Frame Creation</b>	Automatically compensates the picture frame rate to make the image smooth ( <b>Off / Mid / Max</b> ) ● Not valid on 24p signal ● Set to "Off" if noise is generated on the screen.	
		<b>24p Smooth Film</b>	Automatically compensates the picture frame rate to make the image smooth ( <b>Off / Mid / Max</b> ) ● 24p signal input only ● Set to "Off" if noise is generated on the screen.	
		<b>Power Save</b>	Reduces brightness of picture to economise on power consumption ( <b>Off / On</b> )	
		<b>Picture Overscan</b>	Selects the screen area displaying the image ( <b>Off / On</b> ) On : Enlarged the image to hide the edge of the image. Off : Displayed the image in the original size. ● Set to "On" if noise is generated on the edge of the screen. ● This function is available when aspect is set to Auto (16:9 signal only) or 16:9. ● This function can be memorized separately for SD (Standard definition) and HD (High definition) signals.	
<b>SD Card LED</b>		Lights blue LED while SD Card is inserted ( <b>Off / On</b> )		
<b>Time Zone</b>		Adjusts the time data ● The time data will be corrected based on GMT. ● Set to "Auto" to adjust the time automatically according to your area.		

- A different menu will be displayed while PC or SD Card is used.
- Only available items can be selected.

### Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

#### [Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

#### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



Cd

	TX-L32GA11	TX-L37GA11
Power Source	AC 220-240 V, 50 / 60 Hz	
Power Consumption	123 W	145 W
Power Consumption in Standby mode	0.3 W (Without monitor out recording) 15 W (With monitor out recording)	

- This equipment complies with the EMC standards listed below.  
EN55013, EN61000-3-2, EN61000-3-3, EN55020, EN55022, EN55024.

### Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

## Panasonic Corporation

Web Site : <http://www.panasonic.net>

© Panasonic Corporation 2009

Printed in Czech Republic