


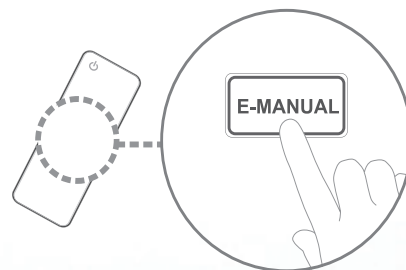

E-MANUAL



imagine the possibilities

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at www.samsung.com/register

Model _____ Serial No. _____

Contents

Channel

- Using the INFO button (Now & Next guide) 1
- Using Channel menu 2
- Retuning Channels 17

Basic Features

- Changing the Preset Picture Mode 27
- Adjusting Picture Settings 28
- Changing the Picture Options 34
- Changing the Preset Sound Mode 41
- Adjusting Sound Settings 42
- Selecting the Sound Mode 50

Preference Features

- Setting the Time 51
- Using the Sleep Timer 53
- Setting the On / Off Timer 54
- Locking Programme 58
- Picture In Picture (PIP) 60
- Economical Solutions 62
- Other Features 65
- Support Menu 76

Advanced Features

- Using the My Downloads 84
- Connecting a USB Device 85
- Screen Display 91
- Music 92
- Photos 94
- My Downloads - Additional Functions 95


Other Information


- Analogue Channel Teletext Feature 98
- Anti-theft Kensington Lock 102
- Connections Common Interface Slot 104
- Troubleshooting 106
- Licence 123

❑ Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audio-video settings.

The Now & Next guide shows daily TV programme information for each channel according to the broadcasting time.

- Scroll ◀, ▶ to view information for a desired programme while watching the current channel.
- Scroll ▲, ▼ to view information for other channels. If you want to move to the currently selected channel, press the **ENTER**  button.

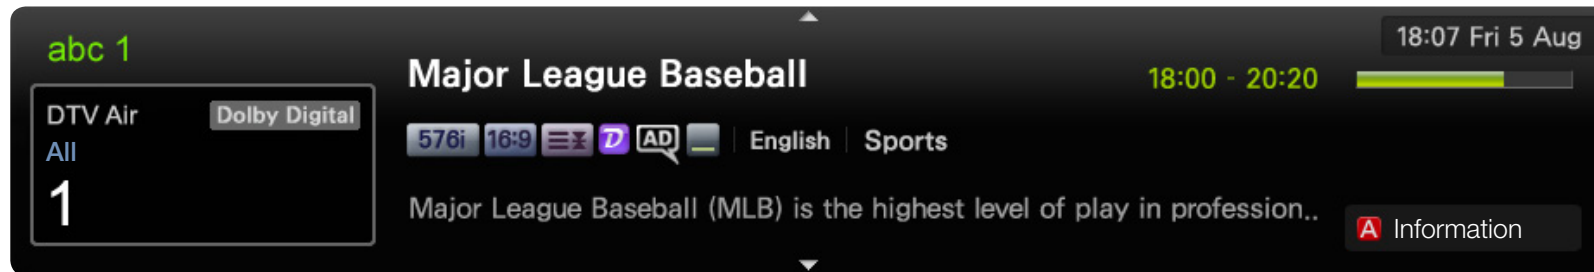

- The displayed image may differ depending on the model.

❑ Using Channel menu

 MENU  → Support → Contents Home → ENTER 

Press the **CONTENT** button to select **Watch TV**, then select the desired menu. Each screen will be displayed.

■ Guide


The EPG (Electronic Programme Guide) information is provided by broadcasters. Using programme schedules provided by broadcasters, you can specify programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time. Programme entries may appear blank or out of date depending on a channel status.



- The displayed image may differ depending on the model.

Using Guide

Guide 19:10 Tue 1 Jun



DTV Air 3 five
Home and Away
19:00 - 19:30
Drama
Dani is devastated when scott makes clear his views on marriage...

Channel View - All

Today		19:00	19:30	20:00	20:30
1	Discovery	American Chopper	Tine Team		
2	DiscoveryH&L	Tsunami Pri...	The Curious...	Dark Angel	Fiv...
3	five	Home and...	No Information		
4	price-drop.tv	No Information			
5	QVC	No Information			
▼ 6	R4DTT	No Information			

A Sche.Mgr **B** -24 Hours **C** +24 Hours **D** Ch. Mode **i** Information ↕ Page 📄 Schedule

1 2 3 4 5 6 7

- The displayed image may differ depending on the model.






- ① **A** Red (**Sche.Mgr**): Moves to the reserved programmes in **Sche.Mgr**.
- ② **B** Green (**-24 Hours**): Viewing the list of programmes to be broadcasted before 24 hours.
- ③ **C** Yellow (**+24 Hours**): Viewing the list of programmes to be broadcasted after 24 hours.
- ④ **D** Blue (**Ch. Mode**): Select the type of channels you want to display on the **Channel List** window. (**All, TV, Radio, Data/Other, Favourites 1-5**)
- ⑤ **i** (**Information**): Displays details of the selected programme.
- ⑥ **↕** (**Page**): Move to previous or next page.
- ⑦ **⏪** (**Watch / Schedule**)
 - When selecting the current programme, you can watch the selected programme.
 - When selecting the future programme, you can reserve to watch the selected programme. To cancel the schedule, press the **ENTER** **⏪** button again and select **Cancel Schedules**.

■ Schedule Manager

Cancel or set the **Timer Viewing** to display the channel you want at the intended time.

Using Timer Viewing

You can set a desired channel to be displayed automatically at the intended time. Set the current time first to use this function.

1. Press the **ENTER**  button to add programme to schedule manually.
2. Press the /// button to set the **Antenna, Channel, Repeat, Date, Start Time**.
 - **Antenna**: Select the desired broadcasting signal.
 - **Channel**: Select the desired channel.

- **Repeat:** Select **Once**, **Manual**, **Sat~Sun**, **Mon~Fri** or **Everyday** to set at your convenience. If you select **Manual**, you can set the day you want.

 The (✓) mark indicates the day you've selected.

- **Date:** You can set the desired date.

 It is available when you select **Once** in **Repeat**.

- **Start Time:** You can set the start time you want.

 If you want to edit or cancel the schedule, select the reserved schedule on the **Schedule List**, and select the **Edit** or **Cancel Schedules**.

Channel List

You can view channel information, **All**, **TV**, **Radio**, **Data/Other**, **Analogue** or **Favourites 1-5**.

When you press the **CH LIST** button on the remote control, **Channel List** screen will be displayed at once.

- **All**: Shows all currently available channels.
- **TV**: Shows all currently available TV channels.
- **Radio**: Shows all currently radio channels.
- **Data/Other**: Shows all currently available MHP or other channels.
- **Analogue**: Shows all currently available analogue channels.
- **Favourites 1-5**: Shows all favourite channels.






- The displayed image may differ depending on the model.



 **Favourites 1-5** will be displayed when you set **Add to Favourites**.

 If you want to view favourite channels you added, press the **CH LIST** button and use  (**Ch.Mode**) button to move **Favourites 1-5**.




 Using the remote control buttons with the **Channel List**.

-  Red (**Antenna**): Switches to **Air** or **Cable**.
-  Yellow (**Programme View / Channel View**): Displays the programme when digital channel is selected. Returns to the channel view.
-  (**Ch.Mode / Channel**): Move to the **All, TV, Radio, Data/Other, Analogue, Favourites 1-5**. / Change channels.

 When you press the  (**Programme View**) button, you can move to other channels using  (**Channel**) button.




-  (**Watch / Information**): Watches the channel you select. / Displays details of the selected programme.
-  (**Page**): Move to next or previous page.

Channel Status Display Icons

Icon	Operations
	An analogue channel.
	A reserved programme.
	A locked channel.

How to use Timer Viewing in Channel List (digital channels only)

When you set the **Timer Viewing** in **Channel List**, you can only set the programme in **Programme View**.

1. Press the **CH LIST** button, then select a desired digital channel.
 2. Press the **c** (**Programme View**) button.
 3. Press the **▲ / ▼** buttons to select the desired programme, then press the **ENTER**  (**Information**) or **INFO** button.
 4. Select **Timer Viewing**, then press the **ENTER**  button when done.
-  If you want to cancel **Timer Viewing**, follow steps 1 through 3. Select **Cancel Schedules**.

Channel Manager

You can edit the channel to your preference.

- (📡) **Channels**: Shows the channel list according to the channel type.
- (★) **Favourites 1-5**: Shows favourite channels.






✍ Using the colour buttons with the **Channel Manager**.

- **A** Red (**Antenna**): Switches to **Air** or **Cable**.
- **D** Blue (**Sorting**): Changes the list ordered by channel number or channel name.



- The displayed image may differ depending on the model.

Channel Status Display Icons

Icon	Operations
	An analogue channel.
	A channel selected.
	A channel set as a favourite.
	A locked channel.
	Displays the Channel Manager option menu.





Channel Manager Option Menu

Set each channel using the **Channel Manager** menu options (**Watch, Add to Favourites/Edit Favourites, Lock/Unlock, Edit Channel Name, Edit Channel Number, Delete, Select All/Deselect All**).

Option menu items may differ depending on the channel status.

1. Select a channel and press the **TOOLS** button.
2. Select a function and change its settings.



- **Watch:** Watch the selected channel.
- **Add to Favourites / Edit Favourites:** Set channels you watch frequently as favourites. / Add or Delete the selected channel in **Favourites 1-5**.
 1. Select the **Add to Favourites/Edit Favourites**, then press the **ENTER**  button.
 -  If the channel is already added to favourite channel, **Edit Favourites** will be shown.
 2. Press the **ENTER**  button to select **Favourites 1-5**, then press the **OK** button.
 -  One favourite channel can be added in several of Favourites among **Favourites 1-5**.

- **Lock/Unlock:** Lock a channel so that the channel cannot be selected and viewed.



NOTE

- This function is available only when the **Channel Lock** is set to **On**.
- The PIN input screen appears. Enter your 4-digit PIN. Change the PIN using the **Change PIN** option.
- **Edit Channel Name** (analogue channels only): Assign your own channel name.
- **Edit Channel Number:** Edit the number by pressing the number buttons desired.



Some area may not be able to support **Edit Channel Name** and **Edit Channel Number** function.

- **Delete**: You can delete a channel to display the channels you want.
- **Deselect All**: Deselect all the selected channels.
 - 📄 You can only select **Deselect All** when one or more channels are selected.
- **Select All**: Select all the channels in the channel list.



❑ Retuning Channels

🔑 MENU  → Channel → ENTER 

■ Antenna (Air / Cable) **TOOLS**

Before your television can begin memorising the available channels, you must specify the type of signal source that is connected to the TV (i.e. an **Air** or **Cable** system).



■ Country

(depending on the country)

The PIN input screen appears. Enter your 4 digit PIN number.


- **Digital Channel:** Change the country for digital channels.
- **Analogue Channel:** Change the country for analogue channels.



■ Auto Tuning

(depending on the country)

Scans for a channel automatically and stores in the TV.

 Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked, the PIN input window appears.


- **Auto Tuning**

Air / Cable: Select the antenna source to memorise.

Digital & Analogue / Digital / Analogue: Select the channel source to memorise.

When Antenna Source is set to Air or Cable:

When selecting **Cable** → **Digital & Analogue** or **Digital**: Provide a value to scan for cable channels.

- **Search Mode (Full / Network / Quick)**: Scans for all channels with active broadcast stations and stores them in the TV.
 -  If you select **Quick**, you can set up the **Network, Network ID, Frequency, Modulation** and **Symbol Rate** manually by pressing the button on the remote control.
- **Network (Auto / Manual)**: Selects the **Network ID** setting mode among **Auto** or **Manual**.
- **Network ID**: When **Network** is **Manual**, you can set up **Network ID** using the numeric buttons.

- **Frequency**: Displays the frequency for the channel. (differs in each country)
- **Modulation**: Displays available modulation values.
- **Symbol Rate**: Displays available symbol rates.

- **Cable Search Option**

(depending on the country & cable channels only)

Sets additional search options such as the frequency and symbol rate for a cable network search.

Start frequency / Stop frequency: Set the start or stop frequency (differs in each country).

Symbol Rate: Displays available symbol rates.

Modulation: Displays available modulation values.

■ Manual Tuning

Scans for a channel manually and stores in the TV.

- 📄 If a channel is locked, the PIN input window appears.
- 📄 According to the channel source, **Manual Tuning** may be supported.

When Antenna Source is set to Air or Cable:

- **Digital Channel Tuning**: Scans for a digital channel manually and stores in the TV. Press the **A** (**New**) button to search the digital channels. When scanning has finished, a channel is updated in the channel list.
 - When selecting **Antenna** → **Air: Channel, Frequency, Bandwidth**
 - When selecting **Antenna** → **Cable: Frequency, Modulation, Symbol Rate**

- **Analogue Channel Tuning** : Scans for an analogue channel. Press the **A** (**New**) button to search the digital channels by adjusting the **Programme, Colour System, Sound System, Channel, Search**.



Channel mode

- **P** (programme mode): When tuning is complete, the broadcasting stations in your area have been assigned to the position numbers from P0 to P99. You can select a channel by entering the position number in this mode.
- **C** (aerial channel mode) / **S** (cable channel mode): These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or cable channel.

■ Edit Channel Number (Disable / Enable)

(depending on the country)

Use this to change channel number. When channel number is changed, channel information is not updated automatically.



■ Fine Tune

(analogue channels only)

If the signal is weak or distorted, fine tune the channel manually.

 Fine tuned channels are marked with an asterisk “*”.

 To reset the fine-tuning, select **Reset**.



■ Transfer Channel List

(depending on the country)

Imports or exports the channel map. You should connect a USB storage to use this function.

 The PIN number input screen appears. Enter your 4 digit PIN number.

- **Import from USB:** Import channel list from USB.
- **Export to USB:** Export channel list to USB.


❑ Changing the Preset Picture Mode

 MENU  → **Picture** → **Picture Mode** → ENTER 

■ **Picture Mode** **TOOLS**

Select your preferred picture type.

 When connecting a PC, you can only make changes to the **Entertain** and **Standard**.

- **Dynamic**: Suitable for a bright room.
- **Standard**: Suitable for a normal environment.
- **Natural**  for LED 5 series 40 inches and LCD 5 series: Suitable for reducing eye strain.
- **Movie**: Suitable for watching movies in a dark room.
- **Entertain**: Suitable for watching movies and games.

 It is only available when connecting a PC.

❑ Adjusting Picture Settings

■ Samsung MagicAngle for LED 4 series 19-22 inches, 5 series 22 inches

 MENU  → Picture → Samsung MagicAngle → ENTER 

Adjust screen viewing Angle to optimize screen quality according to your viewing position.


- **Samsung MagicAngle:** When viewing the screen at an angle from below or above by setting the appropriate mode for each position you can obtain a similar picture quality as viewing the screen directly from the front.

Off: Select when viewing from the front position.

Lean Back Mode: Select when viewing from a slightly lower position.

Standing Mode: Select when viewing from the upper position.

- **Mode:** Adjust screen viewing angle.

 When **Samsung MagicAngle** is set to **Lean Back Mode** or **Standing Mode**, **Gamma** is not available.

■ **Backlight** for LED and LCD TV / **Cell Light** for PDP TV / **Contrast** / **Brightness** / **Sharpness** / **Colour** / **Tint (G/R)**

Your television has several setting options for picture quality control.

NOTE

- In analogue **TV**, **Ext.** modes of the PAL system, the **Tint (G/R)** function is not available.
- When connecting a PC, you can only make changes to **Backlight** for LED and LCD TV / **Cell Light** for PDP TV, **Contrast**, **Brightness** and **Sharpness**.
- Settings can be adjusted and stored for each external device connected to the TV.
- Lowering picture brightness reduces power consumption.

■ Screen Adjustment

Set the various picture options such as picture size and aspect ratio.

- **Picture Size:** Your cable box/satellite receiver may have its own set of screen sizes as well. However, we highly recommend you use 16:9 mode most of the time.

Auto Wide: Automatically adjusts the picture size to the **16:9** aspect ratio.

16:9: Sets the picture to 16:9 wide mode.


Wide Zoom: Magnifies the picture size more than 4:3.

 Adjusts the **Position** by using ▲, ▼ buttons.

Zoom: Magnifies the 16:9 wide pictures vertically to fit the screen size.

 Adjusts the **Zoom** or **Position** by using ▲, ▼ button.

4:3: Sets the picture to basic (4:3) mode.

 Do not watch in 4:3 format for a long time. Traces of borders displayed on the left, right and centre of the screen may cause image retention (screen burn) which are not covered by the warranty.

Screen Fit: Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p) signals are inputted.

Smart View1 **for LED 5 series 40 inches and LCD 5 series**: Reduces original screen by 50%.

Smart View2 **for LED 5 series 40 inches and LCD 5 series**: Reduces original screen by 25%.


 **NOTE**

- **Smart View1** is enabled only in HDMI mode.
- **Smart View2** is enabled only in DTV and HDMI modes.

- **Position**: Adjust the picture position. It is only available in **Wide Zoom**.
- **Zoom/Position**: Adjust the picture size and position. It is only available in **Zoom**.



NOTE

- After selecting **Screen Fit** in HDMI (1080i / 1080p), you may need to centre the picture:
 1. Press the ▲ or ▼ button to select **Position**.
 2. Press the **ENTER**  button.
 3. Press the ▲, ▼, ◀ or ▶ button to move the picture.
- Depending on the input source, the picture size options may vary.
- If you want to reset the position you adjusted, select **Reset** in the **Position** screen. The picture will be set to its default position.

- The available items may differ depending on the selected mode.
- When connecting a PC, only **16:9** and **4:3** modes can be adjusted.
- Settings can be adjusted and stored for each external device connected to an input on the TV.
- If you use the **Screen Fit** function with HDMI 720p input, 1 line will be cut at the top, bottom, left and right as in the overscan function.
- **4:3 Screen Size (16:9 / Wide Zoom / Zoom / 4:3)**: Available only when picture size is set to **Auto Wide**. You can determine the desired picture size at the 4:3 WSS (Wide Screen Service) size or the original size. Each European country requires different picture size.

❑ Changing the Picture Options

■ Advanced Settings


🖱️ MENU  → Picture → Advanced Settings → ENTER 

(available in **Standard / Movie** mode)

You can adjust the detailed setting for the screen including colour and contrast.

🖱️ When connecting a PC, you can only make changes to **Gamma** and **White Balance**.

- **Black Tone (Off / Dark / Darker / Darkest)**: Select the black level to adjust the screen depth.

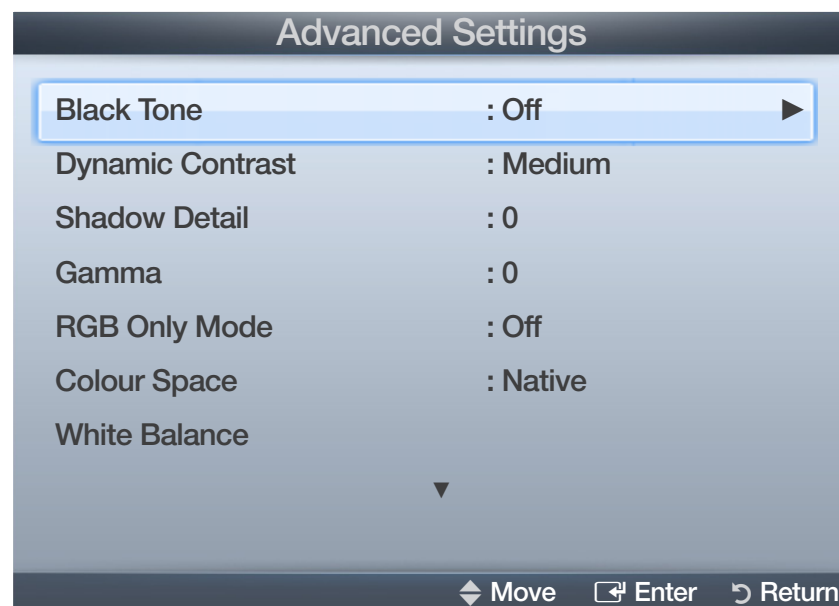


- The displayed image may differ depending on the model.

- **Dynamic Contrast (Off / Low / Medium / High)**: Adjust the screen contrast.
- **Shadow Detail** for LED and LCD TV: Increase the brightness of dark images.
- **Gamma**: Adjust the primary colour intensity.
- **RGB Only Mode (Off / Red / Green / Blue)**: Displays the Red, Green and Blue colour for making fine adjustments to the hue and saturation.
- **Colour Space (Auto / Native)**: Adjust the range of colours available to create the image.


- **White Balance:** Adjust the colour temperature for a more natural picture.
R-Offset / G-Offset / B-Offset: Adjust each colour's (red, green, blue) darkness.
R-Gain / G-Gain / B-Gain: Adjust each colour's (red, green, blue) brightness.
Reset: Resets the **White Balance** to its default settings.
- **Flesh Tone:** Emphasize pink "Flesh Tone".
- **Edge Enhancement (Off / On):** Emphasize object boundaries.
- **Motion Lighting (Off / On):** Reduce power consumption by brightness control adapted motion.
- **LED Motion Plus (Off / On)** **for LED 5 series 40 inches**: Removes drag from fast scenes with a lot of movement to provide a clear picture.


Picture Options

 MENU  → **Picture** → **Picture Options** → ENTER 

 When connecting a PC, you can only make changes to the **Colour Tone**.

- **Colour Tone (Cool / Standard / Warm1 / Warm2)**


 **Warm1** or **Warm2** will be deactivated when the picture mode is **Dynamic**.

 Settings can be adjusted and stored for each external device connected to an input on the TV.



- The displayed image may differ depending on the model.

- **Digital Noise Filter (Off / Low / Medium / High / Auto / Auto Visualisation):** If the broadcast signal received by your TV is weak, you can activate the **Digital Noise Filter** feature to reduce any static and ghosting that may appear on the screen.

 When the signal is weak, try other options until the best picture is displayed.

Auto Visualisation: When changing analogue channels, displays signal strength.

 Only available for analogue channels.

 When the **INFO** button is pressed, the signal strength bar is displayed.

 When bar is green, you are receiving the best possible signal.

- **MPEG Noise Filter (Off / Low / Medium / High / Auto):** Reduces MPEG noise to provide improved picture quality.



- **HDMI Black Level (Low / Normal)**: Selects the black level on the screen to adjust the screen depth.
 - ☞ Available only in **HDMI** mode (RGB signals).
- **Film Mode (Off / Auto1 / Auto2 / Cinema Smooth for PDP TV)**: Sets the TV to automatically sense and process film signals from all sources and adjust the picture for optimum quality.
 - ☞ Available in TV mode, EXT and HDMI (1080i).
 - ☞ If the screen does not seem natural, change its option to **Off / Auto1 / Auto2** in **Film Mode**.
 - ☞ The **Cinema Smooth** function is only activated when HDMI 24Hz signal is inputted.

■ **Reset Picture (OK / Cancel)**

Resets your current picture mode to its default settings.





❑ Changing the Preset Sound Mode

 MENU  → Sound → Sound Mode → ENTER 

■ Sound Mode

- **Standard**: Selects the normal sound mode.
- **Music**: Emphasizes music over voices.
- **Movie**: Provides the best sound for movies.
- **Clear Voice**: Emphasizes voices over other sounds.
- **Amplify**: Increase the intensity of high-frequency sound to allow a better listening experience for the hearing impaired.

□ Adjusting Sound Settings

 MENU  → **Sound** → **Sound Effect** → ENTER 

■ **Sound Effect**

(standard sound mode only)

Use the up and down arrow keys to select an option, and then press **ENTER** .

- **SRS TruSurround HD (Off / On)** 

(standard sound mode only)

This function provides a virtual 5.1 channel surround sound experience through a pair of speakers using HRTF (Head Related Transfer Function) technology.

- **SRS TruDialog (Off / On)**

(standard sound mode only)

This function allows you to increase the intensity of a voice over background music or sound effects so that dialog can be heard more clearly.

- **Equalizer**

Use Equalizer to customize sound setting for each speaker.

Balance: Adjusts the balance between the right and left speaker.

100Hz / 300Hz / 1kHz / 3kHz / 10kHz (Bandwidth Adjustment): Adjusts the level of specific bandwidth frequencies.

Reset: Resets the equalizer to its default settings.

■ Broadcast Audio Options

- **Audio Language** 

(digital channels only)

Change the default value for audio languages.

 The available language may differ depending on the broadcast.

- **Audio Format**

(digital channels only)

Select the audio format.

- **Audio Description**

(not available in all locations) (digital channels only)

This function handles the Audio Stream for the AD (Audio Description) which is sent along with the Main audio from the broadcaster.

 **Audio Description (Off / On):** Turn the audio description function on or off.


 **Volume:** Adjust the audio description volume.



■ Additional Settings

- **DTV Audio Level (MPEG / HE-AAC)** (digital channels only): This function allows you to reduce the disparity of a voice signal (which is one of the signals received during a digital TV broadcast) to a desired level.
 - ☞ According to the type of broadcast signal, **MPEG / HE-AAC** can be adjusted between -10dB and 0dB.
 - ☞ To increase or decrease the volume, adjust between the range 0 and -10 respectively.

- **Dolby Digital Comp (Line / RF)**: This function minimizes signal disparity between a dolby digital signal and a voice signal (i.e. MPEG Audio, HE-AAC, ATV Sound).

 Select **Line** to obtain dynamic sound, and **RF** to reduce the difference between loud and soft sounds at night time.

Line: Set the output level for signals greater or less than -31dB (reference) to either -20dB or -31dB.


RF: Set the output level for signals greater or less than -20dB (reference) to either -10dB or -20dB.

■ Speaker Settings

- **Auto Volume (Off / Normal / Night)**

To equalize the volume level on each channel, set to **Normal**.

Night: This mode provides an improved sound experience compared to **Normal** mode, making almost no noise. It is useful at night.

 To use the volume control on the source device connected to the TV, set **Auto Volume** to **Off** on the TV. Otherwise, a change to the volume control of the source device may not be applied.

■ **Reset Sound (OK / Cancel)**

Reset all sound settings to the factory defaults.



❑ Selecting the Sound Mode **TOOLS**

When you set to **Dual I-II**, the current sound mode is displayed on the screen.

	Audio Type	Dual I-II	Default
A2 Stereo	Mono	Mono	Automatic change
	Stereo	Stereo ↔ Mono	
	Dual	Dual I ↔ Dual II	Dual I
NICAM Stereo	Mono	Mono	Automatic change
	Stereo	Mono ↔ Stereo	
	Dual	Mono → Dual I ↖ Dual II ↙	Dual I

- 📝 If the stereo signal is weak and an automatic switching, occurs, then switch to the mono.
- 📝 Only activated in stereo sound signal.
- 📝 Only available when the **Source** is set to **TV**.

□ Setting the Time

 MENU  → System → Time → ENTER 

■ Time

 The current time will appear every time you press the **INFO** button.

- **Clock**: Setting the clock is for using various timer features of the TV.


 If you disconnect the power cord, you have to set the clock again.

Clock Mode: Set up the current time manually or automatically.

- **Auto**: Set the current time automatically using the time from a digital channel.

 The antenna must be connected in order to set the time automatically.

– **Manual**: Set the current time manually.

 Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually.

Clock Set: Set the **Day, Month, Year, Hour** and **Minute** manually.

 Available only when **Clock Mode** is set to **Manual**.


Time Zone (depending on the country): Select your time zone.

 This function is only available when the **Clock Mode** is set to **Auto**.

 When selecting **Manual** in **Time Zone**, **GMT** and **DST** will be activated.

Using the Sleep Timer

 MENU  → System → Time → Sleep Timer → ENTER 

- **Sleep Timer** : Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes).

 To cancel **Sleep Timer**, select **Off**.

❑ Setting the On / Off Timer

👉 MENU  → System → Time → On Timer <or> Off Timer → ENTER 

- On Timer 1 / On Timer 2 / On Timer

3: Three different on timer settings can be made. You must set the clock first.

- **Setup**: Select **Off**, **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual** to set at your convenience. If you select **Manual**, you can set up the day you want to activate the timer.

👉 The ✓ mark indicates the day you've selected.



- The displayed image may differ depending on the model.

- **On Time**: Set the hour and minute.
- **Volume**: Set the desired volume level.
- **Source**: Select **TV** or **USB** content to be played when the TV is turned on automatically. (**USB** can be selected only when a USB device is connected to the TV)
- **Antenna** (when the **Source** is set to **TV**): Select **ATV** or **DTV**.
- **Channel** (when the **Source** is set to **TV**): Select the desired channel.
- **Music / Photo** (when the **Source** is set to **USB**): Select a folder in the USB device containing music or photo files to be played when the TV is turned on automatically.




NOTE


- If there is no music file on the USB device or the folder containing a music file is not selected, the Timer function does not operate correctly.
- When there is only one photo file in the USB device, the Slide Show will not play.
- If a folder name is too long, the folder cannot be selected.
- Each USB you use is assigned its own folder. When using more than one of the same type of USB, make sure the folders assigned to each USB have different names.
- It is recommended that you use a USB memory stick and a multi card reader when using **On Timer**.
- The **On Timer** function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because these devices take a long time to be recognized.

- **Off Timer 1 / Off Timer 2 / Off Timer 3:** Three different off timer settings can be made. You must set the clock first.

Setup: Select **Off, Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun** or **Manual** to set at your convenience. If you select **Manual**, you can set up the day you want to activate the timer.

 The ✓ mark indicates the day you've selected.

Off Time: Set the hour and minute.

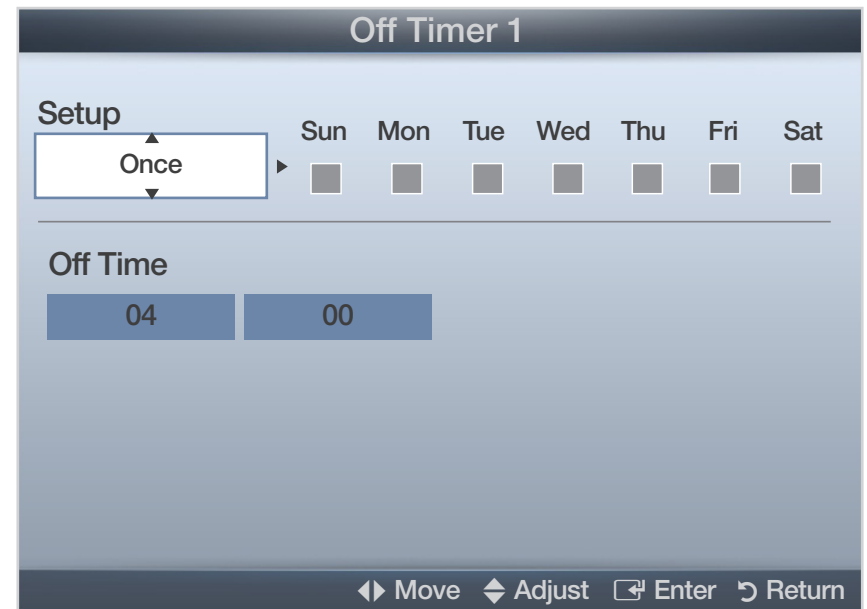

- The displayed image may differ depending on the model.

❑ Locking Programme

 MENU  → System → Security → ENTER 



■ Security

 The PIN input screen appears before the setup screen.

 Enter your 4-digit PIN. Change the PIN using the **Change PIN** option.

- **Channel Lock (Off / On)**: Lock channels in Channel Manager, to prevent unauthorized users, such as children, from watching unsuitable programme.

 Only available when the Input source is set to **TV**.

- **Program Rating Lock** (depending on the country): Prevent unauthorized users, such as children, from watching unsuitable programme with a user-defined 4-digit PIN code. If the selected channel is locked, the “” symbol will be displayed.
 -  The items of **Program Rating Lock** differs depending on the country.
- **Change PIN**: Change your password required to set up the TV.

□ Picture In Picture (PIP)

 MENU  → System → PIP → ENTER 

■ PIP TOOLS







You can watch the TV tuner and one external video source simultaneously. **PIP** (Picture-in-Picture) does not function in the same mode.

NOTE

- For PIP sound, refer to the **Sound Select** instructions.
- If you turn the TV off while watching in **PIP** mode, the PIP window will disappear.
- You may notice that the picture in the PIP window becomes slightly unnatural when you use the main screen to view a game or karaoke.

- PIP settings


Main picture	Sub picture
HDMI	TV

- **PIP (Off / On)**: Activate or deactivate the PIP function.
- **Channel**: Select the channel for the sub-screen.
- **Size** ( / ): Select a size for the sub-picture.
- **Position** ( /  /  / ): Select a position for the sub-picture.
- **Sound Select (Main / Sub)**: You can choose the desired sound (**Main** / **Sub**) in **PIP** mode.

□ Economical Solutions

 MENU  → System → Eco Solution → ENTER 


■ Eco Solution

- **Energy Saving (Off / Low / Medium / High / Picture Off)** : This adjusts the brightness of the TV in order to reduce power consumption. If you select **Picture Off**, the screen is turned off, but the sound remains on. Press any button except volume button to turn on the screen.

- **Eco Sensor (Off / On)** for LED 5 series 40 inches, LCD 5 series and PDP TV: To enhance your power savings; the picture settings will automatically adapt to the light in the room.

 If you adjust the **Backlight** for LED and LCD TV / **Cell Light** for PDP TV, the **Eco Sensor** will be set to **Off**.

Min Backlight for LED and LCD TV / **Min Cell Light** for PDP TV: When **Eco sensor** is **On**, the minimum screen brightness can be adjusted manually.

 If **Eco Sensor** is **On**, the display brightness may change (become slightly darker or brighter) depending on the surrounding light intensity.

- **No-Signal Power Off (Off / 15 min / 30 min / 60 min):**

To avoid unnecessary energy consumption, set how long you want the TV to remain on if it's not receiving a signal.


- **Auto Power Off (Off / On):** The TV will be automatically turned off when no user operation is received for 4 hours.



❏ Other Features

 MENU  → **System** → ENTER 

■ Language

- **Menu Language:** Set the menu language.
- **Teletext Language** (depending on the country): Set a desired language for teletext.
 -  English is the default in cases where the selected language is unavailable in the broadcast.


- **Preference (Primary Audio Language / Secondary Audio Language / Primary Subtitle Language / Secondary Subtitle Language / Primary Teletext Language / Secondary Teletext Language):** Select a language, which will be the default language when a channel is selected.


 **Primary Teletext Language** and **Secondary Teletext Language** may not be supported in some locations.

■ Subtitle

Use this menu to set the **Subtitle** mode.

- **Subtitle (Off / On)**: Switches subtitles on or off.
- **Subtitle Mode (Normal / Hearing Impaired)**: Sets the subtitle mode.
- **Subtitle Language**: Sets the subtitle language.

 If the programme you are watching does not support the **Hearing Impaired** function, **Normal** automatically activates even if the **Hearing Impaired** mode is selected.

 English is the default in cases where the selected language is unavailable in the broadcast.

■ Digital Text (Disable / Enable)

(UK only)

If the programme broadcasts with digital text, this feature is enabled.

MHEG (Multimedia and Hypermedia Information Coding Experts Group)

An International standard for data encoding systems used in multimedia and hypermedia. This is at a higher level than the MPEG system which includes data-linking hypermedia such as still images, character service, animation, graphic and video files as well as multimedia data. MHEG is user runtime interaction technology and is being applied to various fields including VOD (Video-On-Demand), ITV (Interactive TV), EC (Electronic Commerce), teleeducation, tele-conferencing, digital libraries and network games.

■ Auto Protection Time for LED and LCD TV

- **Auto Protection Time (Off / 2 hours / 4 hours / 8 hours / 10 hours):** If the screen remains idle with a still image for a certain period of time defined by the user, the screen saver is activated to prevent the formation of ghost images on the screen.



Screen Burn Protection for PDP TV

To reduce the possibility of screen burn, this unit is equipped with screen burn prevention technology. The Time setting allows you to programme the time between movement of the picture in minutes.

- **Pixel Shift (Off / On)**: Using this function, you can minutely move pixels on the PDP in horizontal or vertical direction to minimize after image on the screen.


 Optimum condition for pixel shift

	Item	TV / HDMI
Horizontal	0~4	4
Vertical	0~4	4
Time (minute)	1~4 min	4 min

 The **Pixel Shift** value may differ depending on the monitor size (inches) and mode.

 This function is not available in the **Screen Fit** mode.

- **Auto Protection Time (Off / 10 min / 20 min / 40 min / 1 hour)**: If the screen remains idle with a still image for a certain period of time defined by the user, the screen saver is activated to prevent the formation of ghost images on the screen.
- **Scrolling**: This function removes after-images on the screen by moving all the pixels on the PDP according to a pattern. Use this function when there are remaining after images or symbols on the screen, especially when you displayed a still image on the screen for a long time.

 The after-image removal function has to be executed for a long time (approximately 1 hour) to effectively remove after-images on the screen. If the after-image is not removed after performing the function, repeat the function again.

 Press any key on the remote control to cancel this feature.

- **Side Grey (Light / Dark)**: When you watch TV with the screen ratio set to 4:3, the screen is prevented from any damage by adjusting the white balance on both extreme left and right sides.

■ General

- **Game Mode (Off / On):** When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience by selecting game mode.



NOTE

- Precautions and limitations for game mode
 - To disconnect the game console and connect another external device, set **Game Mode** to **Off** in the setup menu.
 - If you display the TV menu in **Game Mode**, the screen shakes slightly.
- **Game Mode** is not available in **TV** mode.

- After connecting the game console, set **Game Mode** to **On** to prevent poor picture quality.
- If **Game Mode** is **On**:
 - **Picture Mode** is set to **Standard** and **Sound Mode** is set to **Movie**.
- **Menu Transparency (Bright / Dark)**: Set the Transparency of the menu.
- **Boot Logo (Off / On)**: Display Samsung logo when the TV is turned on.



■ Common Interface

- **CI Menu:** This enables the user to select from the CAM-provided menu. Select the CI Menu based on the menu PC Card.
- **Application Info:** View information on the CAM inserted into the CI slot and on the “CI or CI+ CARD” which is inserted into the CAM. You can install the CAM anytime whether the TV is on or off.
 1. Purchase a CI CAM module at your nearest dealer or by phone.
 2. Firmly insert the “CI or CI+ CARD” into the CAM in the direction of the arrow.
 3. Insert the CAM with the “CI or CI+ CARD” into the common interface slot, in the direction of the arrow so that it aligns parallel with the slot.
 4. Check if you can see a picture on a scrambled signal channel.

Support Menu

 MENU  → Support → e-Manual → ENTER 

■ e-Manual

You can read the introduction and instructions about the TV features stored in your TV.

 For the detailed information about e-Manual Screen, refer to “How to use the e-Manual” in User Manual.

■ Self Diagnosis

 **Self Diagnosis** might take few seconds, this is part of the normal operation of the TV.

- **Picture Test (Yes / No):** Use to check for picture problems.

Yes: If the test picture does not appear or there is noise in the test picture, select **Yes**. There may be a problem with the TV. Contact Samsung's Call Centre for assistance.

No: If the test picture is properly displayed, select **No**. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

- **Sound Test (Yes / No):** Use the built-in melody sound to check for sound problems.

Yes: If you can hear sound only from one speaker or not at all during the sound test, select **Yes**. There may be a problem with the TV. Contact Samsung's Call Centre for assistance.

No: If you can hear sound from the speakers, select **No**. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.


- **Signal Information:** (digital channels only) HDTV channel's reception quality is either perfect or the channels are unavailable. Adjust your antenna to increase signal strength.
- **Troubleshooting:** If the TV seems to have a problem, refer to this description.
 - ✍ If none of these troubleshooting tips apply, contact the Samsung customer service centre.

■ Software Upgrade

Software Upgrade can be performed by downloading the latest firmware from “www.samsung.com” to a USB memory device.

Current Version-the software already installed in the TV.


 Software is represented as “Year/ Month/Day_Version”.

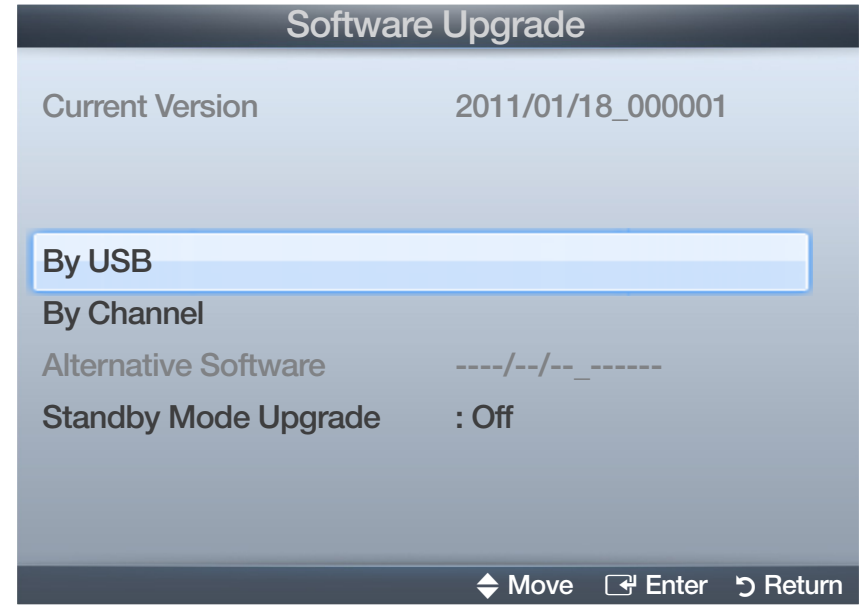

- The displayed image may differ depending on the model.

Installing the Latest Version

- **By USB:** Insert a USB drive containing the firmware upgrade file, downloaded from “www.samsung.com” into the TV. Please be careful not to disconnect the power or remove the USB drive until upgrades are complete. The TV will be turned off and on automatically after completing the firmware upgrade. When software is upgraded, video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade.

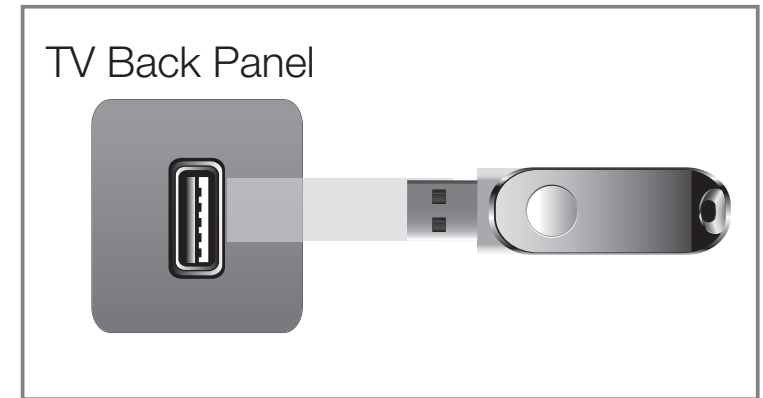

- The displayed image may differ depending on the model.

- **By Channel:** Upgrade the software using the broadcasting signal.
 - ☞ If the function is selected during the software transmission period, software will be automatically searched and downloaded.
 - ☞ The time required to download the software is determined by the signal status.
- **Alternative Software** (backup): If there is an issue with the new firmware and it is affecting operation, you can change the software to the previous version.
 - ☞ If the software was changed, existing software is displayed.
- **Standby Mode Upgrade (Off / 1 hour later / 2 hours later / 00:00 / 02:00 / 12:00 / 14:00):** A manual upgrade will be automatically performed at selected time. Since the power of the unit is turned on internally, the screen may be turned on slightly for the product. This phenomenon may continue for more than 1 hour until the software upgrade is complete.

■ **Contact Samsung**

View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres, and how to download products and software.


■ **Contents Home**

You can enjoy useful and various contents.



❑ Using the My Downloads

Enjoy photos, music files saved on a USB Mass Storage Class (MSC) device.


1. Press the **CONTENT** button to select **My Downloads**.
2. Press **▲/▼** button to select desired menu (**Photos**, **Music**), then press the **ENTER**  button.





- The displayed image may differ depending on the model.

❑ Connecting a USB Device

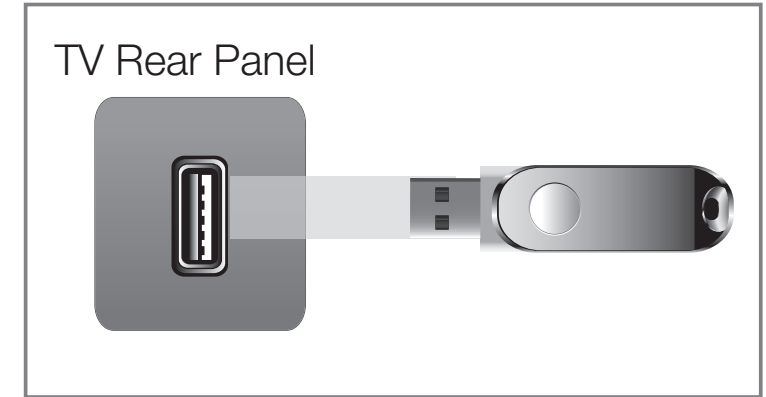1. Turn on your TV.
2. Connect a USB device containing photo, music files to the USB jack on the back of the TV.
3. When USB is connected to the TV, popup window appears. Then you can select **New device connected**.



- The displayed image may differ depending on the model.

-  It might not work properly with unlicensed multimedia files.
-  Need-to-Know List before using **My Downloads**
 - MTP (Media Transfer Protocol) is not supported.
 - The file system supports FAT16, FAT32 and NTFS.
 - Certain types of USB Digital camera may not be compatible with this TV.
 - **My Downloads** only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers and USB HDD (USB HUB are not supported). Devices should be connected directly to the TV's USB port.
 - Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.

- USB (HDD) is not supported.
- Do not disconnect the USB device while it is loading.
- The higher the resolution of the image, the longer it takes to display on the screen.
- The maximum supported JPEG resolution is 15360 x 8640 pixels.
- For unsupported or corrupted files, the “Not Supported File Format” message is displayed.
- If the files are sorted by **Folder View**, up to 1000 files can be displayed in each folder.

- MP3 files with DRM that have been downloaded from a non-free site cannot be played. Digital Rights Management (DRM) is a technology that supports the creation, distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements.
- If more than 2 PTP devices are connected, you can only use one at a time.
- If more than two MSC devices are connected, some of them may not be recognized. A USB device that requires high power (more than 500mA or 5V) may not be supported.

- If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be recognized or may malfunction.
- If the TV has been no input during time set in **Auto Protection Time**, the Screensaver will run.
- The power-saving mode of some external hard disk drives may be released automatically when connected to the TV.




- If a USB extension cable is used, the USB device may not be recognized or the files on the device may not be read.
- If a USB device connected to the TV is not recognized, the list of files on the device is corrupted or a file in the list is not played, connect the USB device to the PC, format the device and check the connection.
- If a file deleted from the PC is still found when **My Downloads** is run, use the “Empty the Recycle Bin” function on the PC to permanently delete the file.
- **My Downloads** only supports sequential jpeg format.
- If the number of files and folders saved on a USB storage device is approximately over 4000, the files and folders may not appear and some folders may not be opened.

❑ Screen Display

Move to the desired file using the ◀/▶/▲/▼ buttons and then press the **ENTER** ↵. The file is played. **My Downloads** screen may differ depending on the way to enter the screen.

Information:

You can ascertain the selected device name, contents mode, folder/file name, page and sorting list.

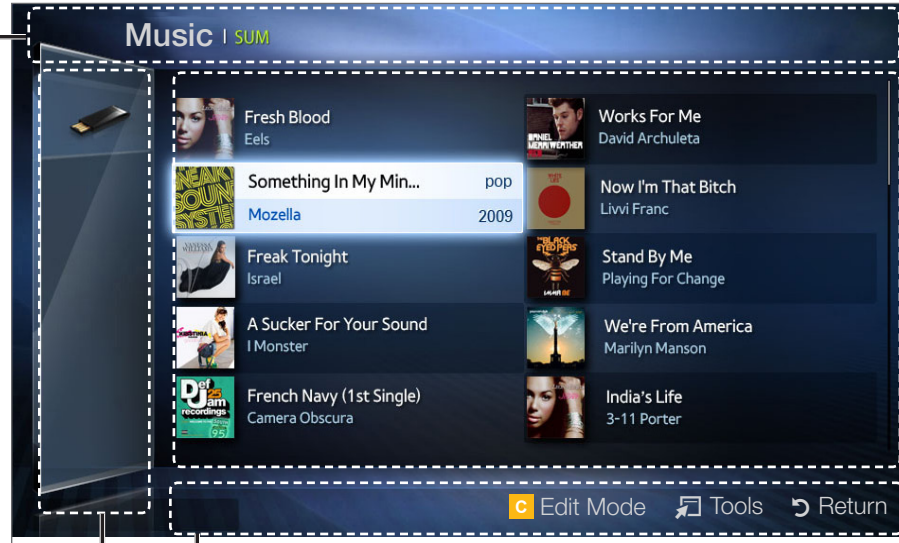

File List Section:

You can confirm the files and groups that are sorted by category.

Contents mode / Device name:

You can select the desired Contents mode or Device name.

Operation Buttons:

- **c** Yellow (**Edit Mode**): Selects the desired music. The check box is shown in the screen to check the music you want. It is only available in Music.
- **Tools**: Displays the option menu.
- **Return**: Move to the previous step.
- **Select**: Select the contents in **Edit Mode**.

Music


Playing Music

1. Press the ◀/▶/▲/▼ button to select the desired Music in the file list.




2. Press the **ENTER** ↵ button.

☞ Only displays the files with MP3 file extension. Other file extensions are not displayed, even if they are saved on the same USB device.

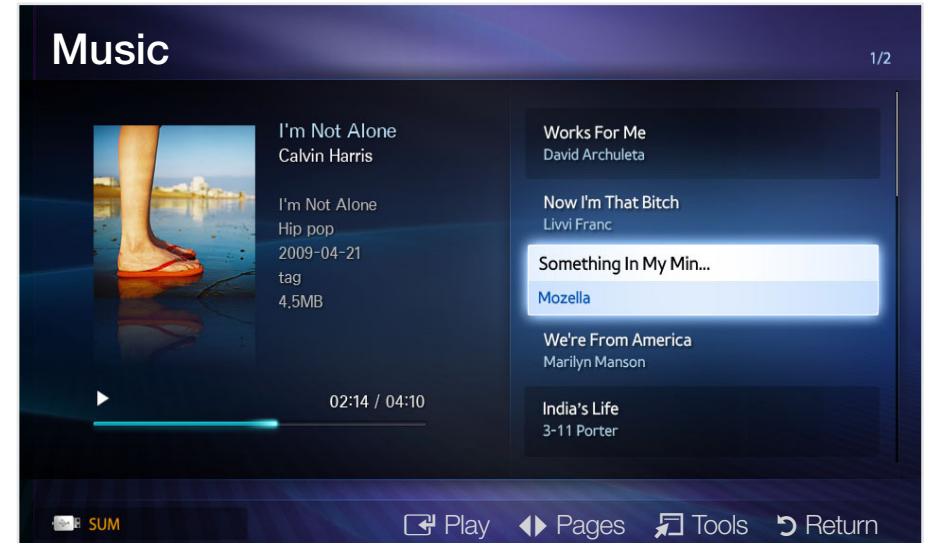☞ If the sound is abnormal when playing MP3 files, adjust the **Equalizer** in the **Sound** menu. (An over-modulated MP3 file may cause a sound problem.)




Playing the selected music

1. Press the  (**Edit Mode**) button.
2. Select the desired music.
 -  The check box appears to the left of the selected files.
3. Press the **TOOLS** button and select **Play Selected Contents**.
 -  You can select or deselect all music by pressing the **Select All / Deselect All**.

■ Photos

Viewing a Photo (or Slide Show)

1. Press the ◀/▶/▲/▼ button to select the desired photo in the file list.
 2. Press the **ENTER** ↵ button.
 - When a selected photo is displayed, press the **ENTER** ↵ button to start the slide show.
 - During the slide show, all files in the file list will be displayed in order.
- 📄 Music files can be automatically played during the Slide Show if the **Background Music** is set to **On**.

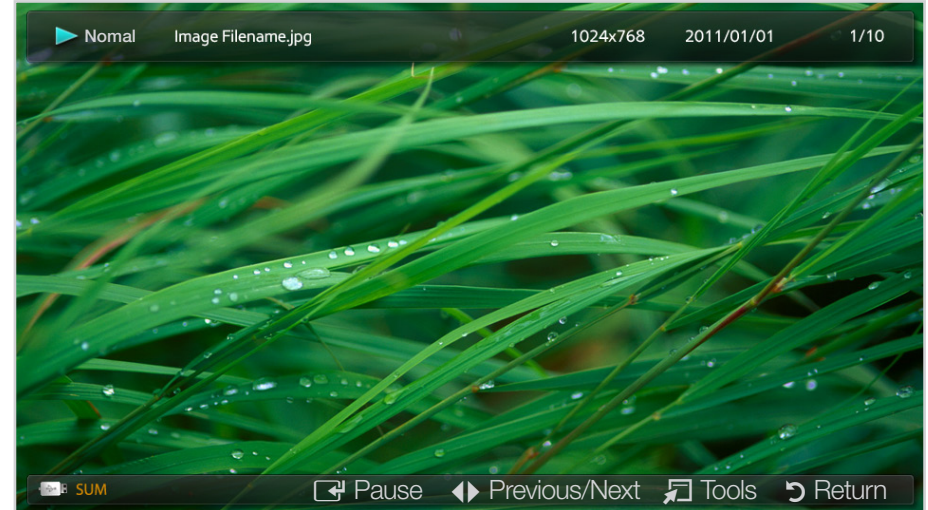

❏ My Downloads - Additional Functions

Music/Photos Play Option menu

During playing a file, press the **TOOLS** button.

Category	Operation	Music	Photos
Shuffle Mode	You can play the music randomly.	✓	
Repeat Mode	You can play music files repeatedly.	✓	
Picture Mode	You can adjust the picture setting.		✓

Category	Operation	Music	Photos
Sound Mode	You can adjust the sound setting.	✓	✓
Start Slide Show / Pause Slide Show	You can start or pause a Slide Show.		✓
Slide Show Speed	You can select the slide show speed during the slide show.		✓
Background Music	You can on/off background music when watching a Slide Show.		✓





Category	Operation	Music	Photos
Background Music Setting	You can select background music when watching a Slide Show.		✓
Zoom	You can zoom into images in full screen mode.		✓
Rotate	You can rotate images in full screen mode.		✓
Information	You can see detailed information about the played file.	✓	✓










 

❑ Analogue Channel Teletext Feature

The index page of the Teletext service gives you information on how to use the service. For Teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

You can change Teletext pages by pressing the numeric buttons on the remote control.


-  (mode): Selects the Teletext mode (LIST/FLOF). If pressed during LIST mode, switches the mode to List save mode. In List save mode, you can save a Teletext page into a list using the 8(store) button.
-  (Teletext on/mix/off): Activates the Teletext mode for the current channel. Press the button twice to overlap the Teletext mode with the current broadcasting screen. Press it one more time to exit teletext.

-  (sub-page): Displays the available sub-page.
-  (store): Stores the Teletext pages.
-  (index): Displays the index (contents) page at any time while you are viewing Teletext.
-  (size): Displays the teletext on the upper half of the screen in double-size. To move the text to the lower half of the screen, press it again. For normal display, press it once again.
-  (hold): Holds the display at the current page, in the case that there are several secondary pages that follow automatically. To undo, press it again.
-  (page up): Displays the next Teletext page.
-  (page down): Displays the previous Teletext page.

-  (reveal): Displays the hidden text (answers to quiz games, for example). To display the normal screen, press it again.
-  (cancel): Shrinks the Teletext display to overlap with the current broadcast.
- Colour buttons (red, green, yellow, blue): If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colour-coded and can be selected by pressing the coloured buttons. Press the colour corresponding to the topic of your choice. A new colourcoded page is displayed. Items can be selected in the same way. To display the previous or next page, press the corresponding coloured button.

The Teletext pages are organized according to six categories:

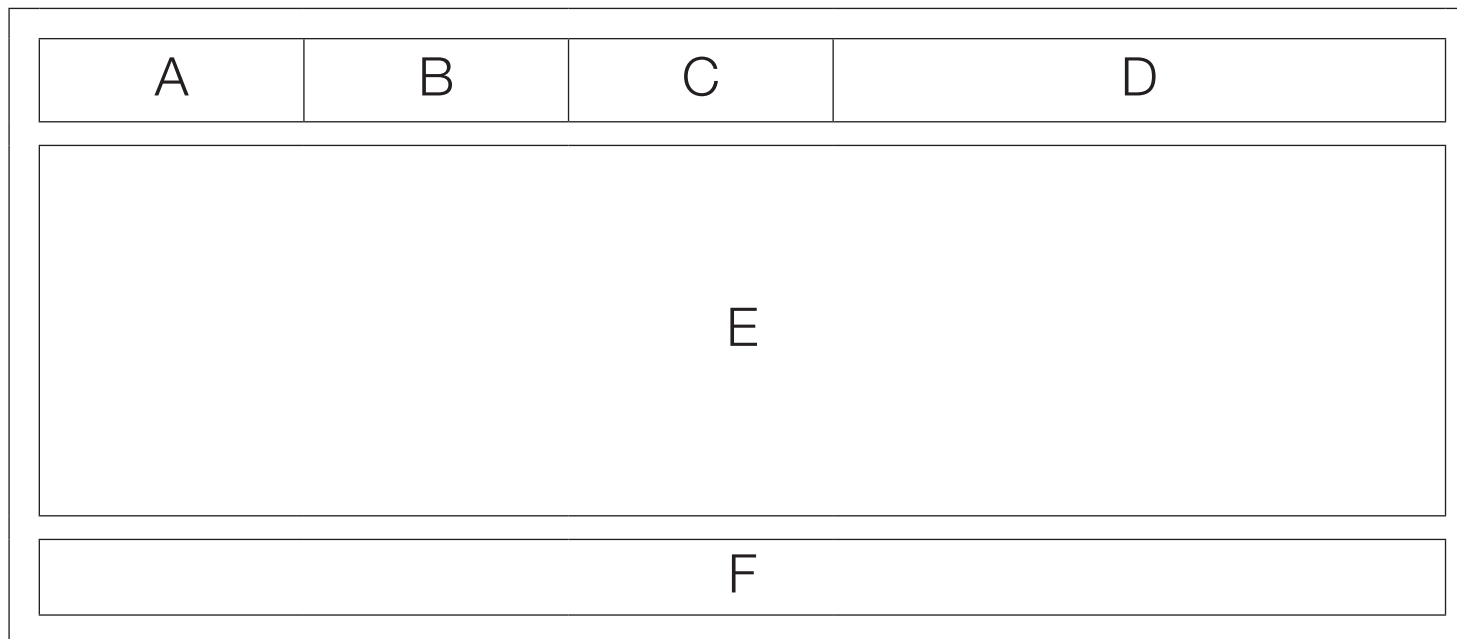

Part	Contents
A	Selected page number.
B	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
E	Text.
F	Status information. FASTEXT information.



❑ Anti-theft Kensington Lock

(depending on the model)


The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. The appearance and locking method may differ from the illustration depending on the manufacturer. Refer to the manual provided with the Kensington Lock for additional information on proper use.

- 📖 Please find a “” icon on the rear of the TV. A kensington slot is beside the “” icon.
- 📖 The position and colour may differ depending on the model.

To lock the product, follow these steps:

1. Wrap the Kensington lock cable around a large, stationary object such as desk or chair.

TV Rear

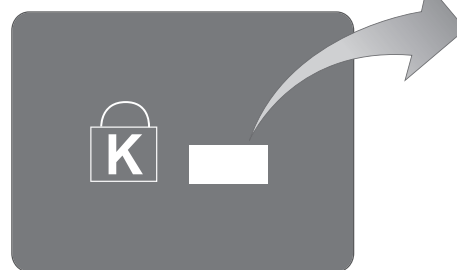

Optional

2. Slide the end of the cable with the lock attached through the looped end of the Kensington lock cable.
3. Insert the locking device into the Kensington slot on the product **1**.
4. Lock the lock.




NOTE

- These are general instructions. For exact instructions, see the User manual supplied with the locking device.
- The locking device has to be purchased separately.
- The location of the Kensington slot may be different depending on the TV model.

❑ Connections Common Interface Slot

To watch paid channels, the “CI or CI+ CARD” must be inserted.

- If you do not insert the “CI or CI+ CARD,” some channels will display the message “Scrambled Signal”.
- The pairing information containing a telephone number, the “CI or CI+ CARD” ID, the Host ID and other information will be displayed in about 2~3 minutes. If an error message is displayed, please contact your service provider.
- When the configuration of channel information has finished, the message “Updating Completed” is displayed, indicating the channel list is updated.

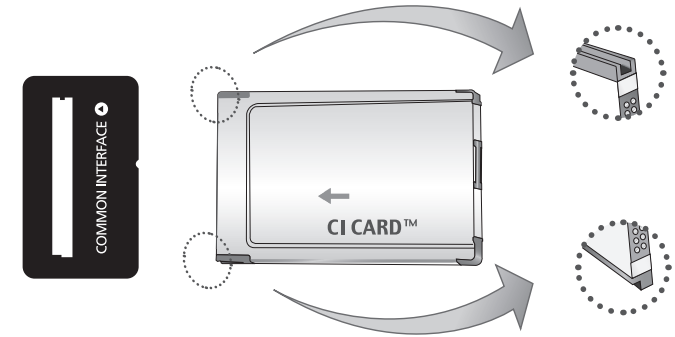

- The displayed image may differ depending on the model.



NOTE

- You must obtain a “CI or CI+ CARD” from a local cable service provider.
- When removing the “CI or CI+ CARD”, carefully pull it out with your hands since dropping the “CI or CI+ CARD” may cause damage to it.
- Insert the “CI or CI+ CARD” in the direction marked on the card.
- The location of the COMMON INTERFACE slot may be different depending on the model.
- “CI or CI+ CARD” is not supported in some countries and regions; check with your authorized dealer.
- If you have any problems, please contact a service provider.
- Insert the “CI or CI+ CARD” that supports the current antenna settings. The screen will be distorted or will not be seen.

❑ Troubleshooting

If you have any questions about the TV, first refer to this list. If none of these troubleshooting tips apply, please visit “www.samsung.com”, then click on Support.

Issues	Solutions and Explanations
Picture Quality	First of all, please perform the Picture Test and confirm that your TV is properly displaying test image. (go to MENU - Support - Self Diagnosis - Picture Test) If the test image is properly displayed, the poor picture may be caused by the source or signal.

Issues

The TV image does not look as good as it did in the store.

Solutions and Explanations

- If you have an analogue cable/set top box, upgrade to a digital set top box. Use HDMI to deliver HD (high definition) picture quality.
- Cable/Satellite subscribers: Try HD stations from the channel line up.
- Antenna connection: Try HD stations after performing Auto tuning.
 - ✍ Many HD channels are up scaled from SD(Standard Definition) contents.
- Adjust the Cable/Set top box video output resolution to 1080i or 720p.
- Make sure you are watching the TV at the minimum recommended distance based on the size and definition of the signal.

Issues

The picture is distorted: macroblock error, small block, dots, pixelization

Solutions and Explanations

- Compression of video contents may cause picture distortion especially in fast moving pictures such as sports and action movies.
- Low signal level or bad quality can cause picture distortion. This is not a TV issue.
- Mobile phones used close to the TV (cca up to 1m) may cause noise in picture on analogue and digital TV.

Issues	Solutions and Explanations
There is poor colour or brightness.	<ul style="list-style-type: none">● Adjust the Picture options in the TV menu. (go to Picture Mode / Colour / Brightness / Sharpness)● Adjust Energy Saving option in the TV menu. (go to MENU - System - Eco Solution - Energy Saving)● Try resetting the picture to view the default picture settings. (go to MENU - Picture - Reset Picture)
There is a dotted line on the edge of the screen.	<ul style="list-style-type: none">● If the picture size is set to Screen Fit, change it to 16:9.● Change cable/satellite box resolution.

Issues	Solutions and Explanations
<p>When changing channels, the picture freezes or is distorted or delayed.</p>	<ul style="list-style-type: none">● If connected with a cable box, please try to reset the cable box. Reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes.● Set the output resolution of the cable box to 1080i or 720p.
<p>Sound Quality</p>	<p>First of all, please perform the Sound Test to confirm that your TV audio is properly operating. (go to MENU - Support - Self Diagnosis - Sound Test)</p> <p>If the audio is OK, the sound problem may be caused by the source or signal.</p>
<p>There is no sound or the sound is too low at maximum volume.</p>	<ul style="list-style-type: none">● Please check the volume of the device (Cable/Sat Box, DVD, Blu-ray etc) connected to your TV.

Issues	Solutions and Explanations
The picture is good but there is no sound.	<ul style="list-style-type: none">● If you are using a DVI to HDMI cable, TV set does not support audio.● Reboot the connected device by reconnecting the device's power cable.● If your TV has a headphone jack, make sure there is nothing plugged into it.
The speakers are making an inappropriate noise.	<ul style="list-style-type: none">● For antenna or cable connections, check the signal strength. Low signal level may cause sound distortion.

Issues

Solutions and Explanations

No Picture, No Video

The TV will not turn on.

- Make sure the AC power cord is securely plugged in to the wall outlet and the TV.
- Make sure the wall outlet is working.
- Try pressing the **POWER** button on the TV to make sure the problem is not the remote. If the TV turns on, refer to “The remote control does not work” below.

Issues

Solutions and Explanations

The TV turns off automatically.

- Ensure the **Sleep Timer** is set to **Off** in the **Time** menu.
- If your PC is connected to the TV, check your PC power settings.
- Make sure the AC power cord is plugged in securely to the wall outlet and the TV.
- When watching TV from an antenna or cable connection, the TV will turn off after 10 ~ 15 minutes if there is no signal.

Issues

There is no picture/
video.

Solutions and Explanations

- Check cable connections (remove and reconnect all cables connected to the TV and external devices).
- Set your external devices' (Cable/Set top Box, DVD, Blu-ray etc) video outputs to match the connections to the TV input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV.
- Make sure your connected devices are powered on.
- Be sure to select the TV's correct source by pressing the button on the TV remote.
- Reboot the connected device by reconnecting the device's power cable.

Issues	Solutions and Explanations
RF(Cable/Antenna) Connection	
The TV is not receiving all channels.	<ul style="list-style-type: none">● Make sure the Antenna cable is connected securely.● Please try Plug & Play (Initial setup) to add available channels to the channel list. Go to MENU - System - Plug & Play (Initial setup) and wait for all available channels to be stored.● Verify the Antenna is positioned correctly.
The picture is distorted: macro block error small block, dots, pixelization	<ul style="list-style-type: none">● Compression of video contents may cause picture distortion, especially on fast moving pictures such as sports and action movies.● A low signal can cause picture distortion. This is not a TV issue.

Issues

Solutions and Explanations

Others

The picture will not display in full screen.

- HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents.
- Black bars on the top and bottom will appear during movies that have aspect ratios different from your TV.
- Adjust the picture size options on your external device or TV to full screen.

Issues


Plasma TV is making humming noise. [for PDP TV](#)

Solutions and Explanations

- Plasma TVs typically make a soft humming sound. This is normal. It's caused by the electrical charges that are used to create the images on the screen.
- If the humming sound is loud, you may have set the brightness on the TV too high. Try setting the brightness lower.
- You can also have loud humming if the back of your Plasma TV is too close to a wall or other hard surface. Also try rerouting your connection cables.
- Improper installation of wall mount can create excessive noise.

Issues	Solutions and Explanations
The remote control does not work.	<ul style="list-style-type: none">● Replace the remote control batteries with the poles (+/-) in the right direction.● Clean the sensor's transmission window on the remote.● Try pointing the remote directly at the TV from 5~6 feet away.
The cable/set top box remote control doesn't turn the TV on or off, or adjust the volume.	<ul style="list-style-type: none">● Programme the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set user manual for the SAMSUNG TV code.
A “ Mode Not Supported ” message appears.	<ul style="list-style-type: none">● Check the supported resolution of the TV, and adjust the external device's output resolution accordingly.

Issues	Solutions and Explanations
There is a plastic smell from the TV.	<ul style="list-style-type: none">● This smell is normal and will dissipate over time.
The TV Signal Information is unavailable in the Self Diagnosis Test menu.	<ul style="list-style-type: none">● This function is only available with digital channels from an Antenna / RF / Coax connection.
TV is tilted to the right or left side.	<ul style="list-style-type: none">● Remove the stand base from the TV and reassemble it.
There are difficulties assembling the stand base.	<ul style="list-style-type: none">● Make sure the TV is placed on a flat surface. If you can not remove the screws from the TV, please use a magnetized screw driver.

Issues	Solutions and Explanations
The Channel menu is grey out (unavailable).	<ul style="list-style-type: none"> ● The Channel menu is only available when the TV source is selected.
Your settings are lost after 30 minutes or every time the TV is turned off.	<ul style="list-style-type: none"> ● If the TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Change the settings from Store Demo mode to Home Use mode in the Plug & Play (Initial setup) procedure. Press the SOURCE button to select TV mode, and go to MENU → System → Plug & Play (Initial setup) → ENTER .
You have intermittent loss of audio or video.	<ul style="list-style-type: none"> ● Check the cable connections and reconnect them. ● Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.

Issues	Solutions and Explanations
You see small particles when you look closely at the edge of the frame of the TV.	<ul style="list-style-type: none">● This is part of the product's design and is not a defect.
The PIP menu is not available.	<ul style="list-style-type: none">● PIP functionality is only available when you are using a HDMI source.
You turned the TV off 45 minutes ago, and it turned on again.	<ul style="list-style-type: none">● It is normal. The TV operates the OTA (Over The Aerial) function itself to upgrade firmware downloaded whilst your watching TV.

Issues	Solutions and Explanations
The message “ Scramble signal ” or “ Weak Signal/No Signal ” appears.	<ul style="list-style-type: none">● If you are using a CAM CARD (CI/CI+), check that it is installed into the common interface slot.● If there is still a problem, pull the CAM CARD out of the TV and insert it into the slot again.
There are recurrent picture/sound issues.	<ul style="list-style-type: none">● Check and change the signal/source.
A reaction may occur between the rubber cushion pads on the base stand and the top finish of some furniture.	<ul style="list-style-type: none">● To prevent this, use felt pads on any surface of the TV that comes in direct contact with furniture.

❑ Licence



Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



TheaterSound, SRS and  symbol are trademarks of SRS Labs, Inc.

TheaterSound technology is incorporated under licence from SRS Labs, Inc.

Open Source Licence Notice

In the case of using open source software, Open Source Licences are available on the product menu. Open Source Licence Notice is written only English.