

# **SANYO**

---


**INSTRUCTION MANUAL**

**CE21DN5-B**

**CE25DN5-B**

**CE28DN5-B**

**Colour Television**

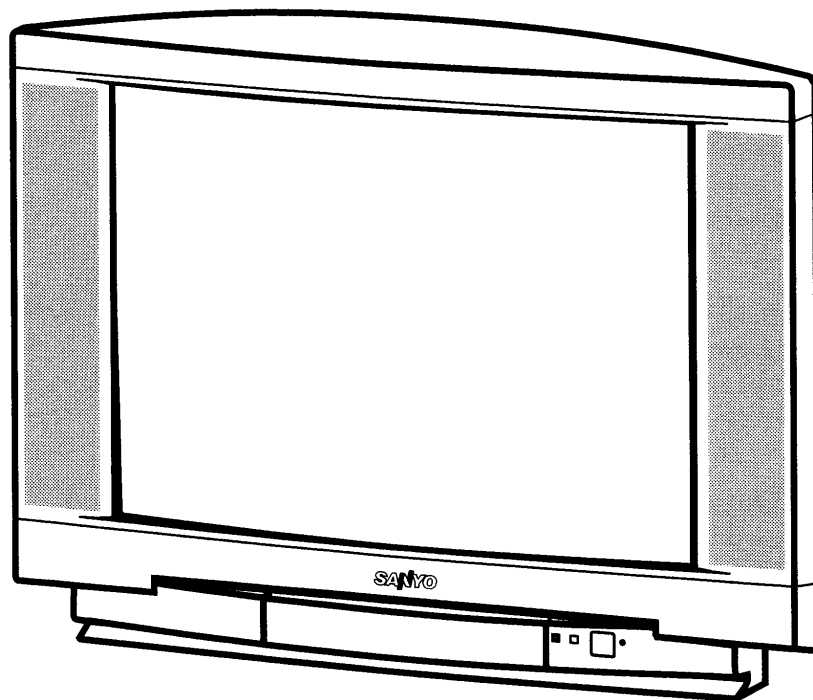


**Please read this Instruction book before using your television.  
We wish you many hours of pleasure from your new television.**

# SAFETY PRECAUTIONS

**CAUTION: Please read and retain for your safety.** This unit has been engineered and manufactured to assure your personal safety. But improper use can result in potential electric shock or fire hazards. In order not to defeat the safeguards incorporated in this receiver observe the following basic rules for its installation, use and servicing.


## Installation

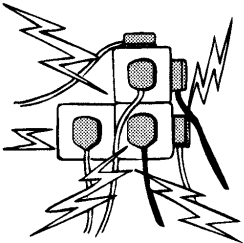

**Do not** allow anything to rest on the power cord. **Do not** locate this television receiver where the cord will be damaged by people walking on it.


**Do not** overload wall outlets and extension cords as this can result in fire or electric shock.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation to ensure reliable operation and to protect it from overheating. These openings **must not** be blocked or covered. The opening **should never** be covered with a cloth or other material, and the bottom openings **should not** be blocked by placing the television receiver on a bed, sofa, rug, or other similar surface. This television receiver **should never** be placed near or over a radiator or heater.


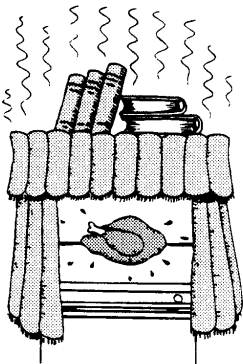


This television receiver **should not** be placed in a built-in installation such as a bookcase unless proper ventilation is provided.


**Do not** place your television receiver on an unstable stand, shelf or table. Serious injury to an individual, and damage to the television may result if it should fall. Your sales person can recommend approved stands or shelf and wall mounting instructions.

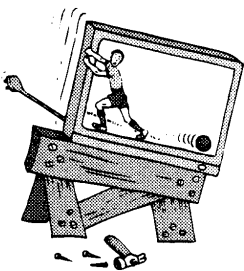

If the television is built into a unit, or enclosed, the minimum distances for ventilation must be maintained. Heat build up can reduce the life of your television, and can be dangerous.

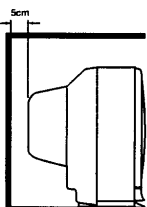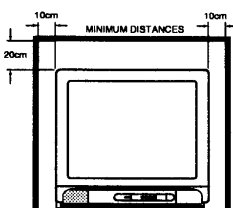


## Use

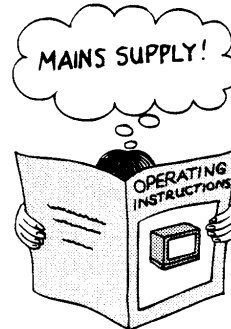


This television receiver should be operated only from the type of power source indicated on the television or as indicated in the Operating Instructions. If you are not sure of the type of power supply in your home, consult your sales person or your local power company.

**Never** add accessories that have not been specifically designed for this television.


**Do not** drop or push objects into the television cabinet slots or openings. Some internal parts carry hazardous voltages and contact may result in an electric shock hazard. **Never** spill liquids of any kind on the television receiver.

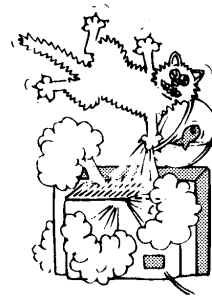


**Do not** expose the television receiver to rain or use near water. For example, near a bathtub, kitchen sink, in a wet basement, etc. Before cleaning, unplug the television receiver from the wall socket.

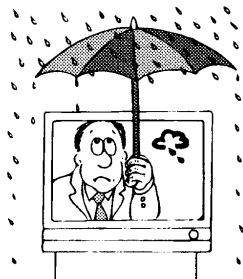

**Never** stand on, lean on or push suddenly the television or its stand. You should pay special attention to children. Serious injury may result if it should fall.

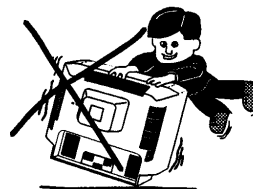

**Do not** apply liquid cleaners or aerosol cleaners directly onto the television receiver. Use a damp cloth for cleaning.

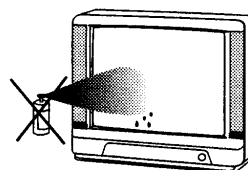


# INSTALLATION

## Aerial Connections

- The aerial socket is located on the back of the TV set.
- For all aerial problems please consult your local dealer.
- The connection to the peripheral AV equipment, refer to section "CONNECTION OF AV EQUIPMENT" on page 8.

## Mains Supply

The TV set is prepared for a mains voltage AC220~240V, 50Hz. Connect the power cord of the TV set to a wall outlet. When the TV set is not to be used for an extended period of time, it is advisable to disconnect the power cord from the power outlet.

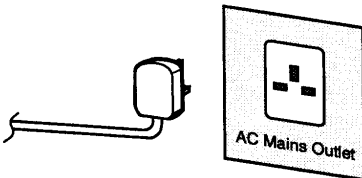

### WARNING!

High voltages are used in the operation of this set. Refer service to qualified service personnel.

#### Important:

This equipment is fitted with an approved non rewirable UK mains plug. To change a fuse in this type of plug proceed as follows:

1. Remove the fuse cover and fuse.
2. Fit a new fuse which should be a BS1362 5Amp A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a rating of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

**Note:** The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

The wires in this mains lead are coloured in accordance with the following code:


Blue -----> Neutral  
Brown ----> Live

1. The Blue wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2. The Brown wire must be connected to the terminal with the letter "L" or coloured RED.
3. **Do not** connect either wire to the earth terminal in the plug which is marked with the letter "E" or by the earth symbol or coloured GREEN or GREEN and YELLOW.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the wires.

## Battery Installation

1. Remove the battery cover by sliding it in direction of the arrow.
2. Install two "AA" 1.5 volt batteries so that the "+" and "-" marks on the batteries match the "+" and "-" marks inside the unit.
3. Close the battery cover.

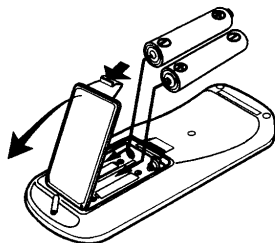

**NOTE:** Replace the batteries when the TV set is showing the following symptoms: Operation is unsteady or erratic, sometimes the TV does not work with the transmitter. Discharged batteries may leak and damage the unit. The normal life of batteries should be from nine to ten months.


## Switching on your TV

This TV set provides a self-automatic tuning function called "Plug & Play". The first time you switch on this TV set, it will automatically begin to search and store all available channels.

Please make sure that the aerial cable is connected to the aerial socket of the TV set before switching on.

To receive the satellite broadcasting, a satellite tuner is required. Before carrying out the automatic setting up, receive the satellite broadcasting on the satellite tuner.


1. Press the **Mains ON/OFF** switch on the front of the TV. The power indicator illuminates red to show the power is on.

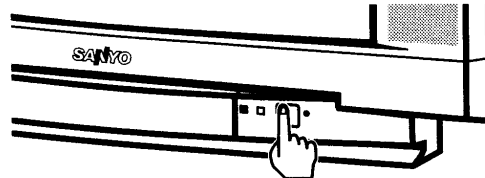


If no picture appears but the power indicator is on, press the **⏻**, **P▲**, **P▲** or **0-9** button as the TV set is in the standby mode.

- A self-automatic tuning and sorting system will be started as follows;

*The tuning status and welcome messages will appear on the screen.*

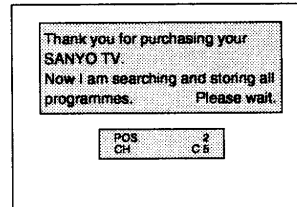

*After completing this procedure, the ending messages appear on the screen.*

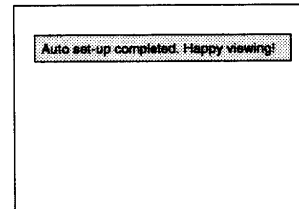

To make this message disappear, press any of the control buttons.

**Now the installation is completed !**

## Channel Sorting

The channels are stored in consecutive programme positions starting at programme position "7". After all receivable channels have been found and stored, the TV set automatically allocates following major stations in the UK into the programme positions 1 to 6.

<b>BBC1</b>	<b>BBC2</b>	<b>ITV</b>	<b>CH4</b>
<b>CH5</b>	<b>SKY</b>	<b>BBC-W</b>	<b>BBC-P</b>

**CH4** : Channel 4 or S4C  
**SKY** : SKY GOLD, SKY SPORTS.etc  
**BBC-W** : BBC World, BBC Worldwide feature 1  
**BBC-P** : BBC Prime


Programme position 1 : BBC1  
Programme position 2 : BBC2  
Programme position 3 : ITV  
Programme position 4 : CH4 or S4C  
Programme position 5 : CH5  
Programme position 6 : SKY, BBC-W or BBC-P

If any of them are not available in your reception area, some programme positions from 1 to 6 will not have a stored station. The remaining stations will be stored from programme position 7 in sequence as found. This procedure only appears the first time you switch on.

If additional channels become available (you move to another city or cable is installed), please follow the description "PRESETTING". (on pages 11 & 12).


# CONTROLS

## Controls and terminals on the front of the TV

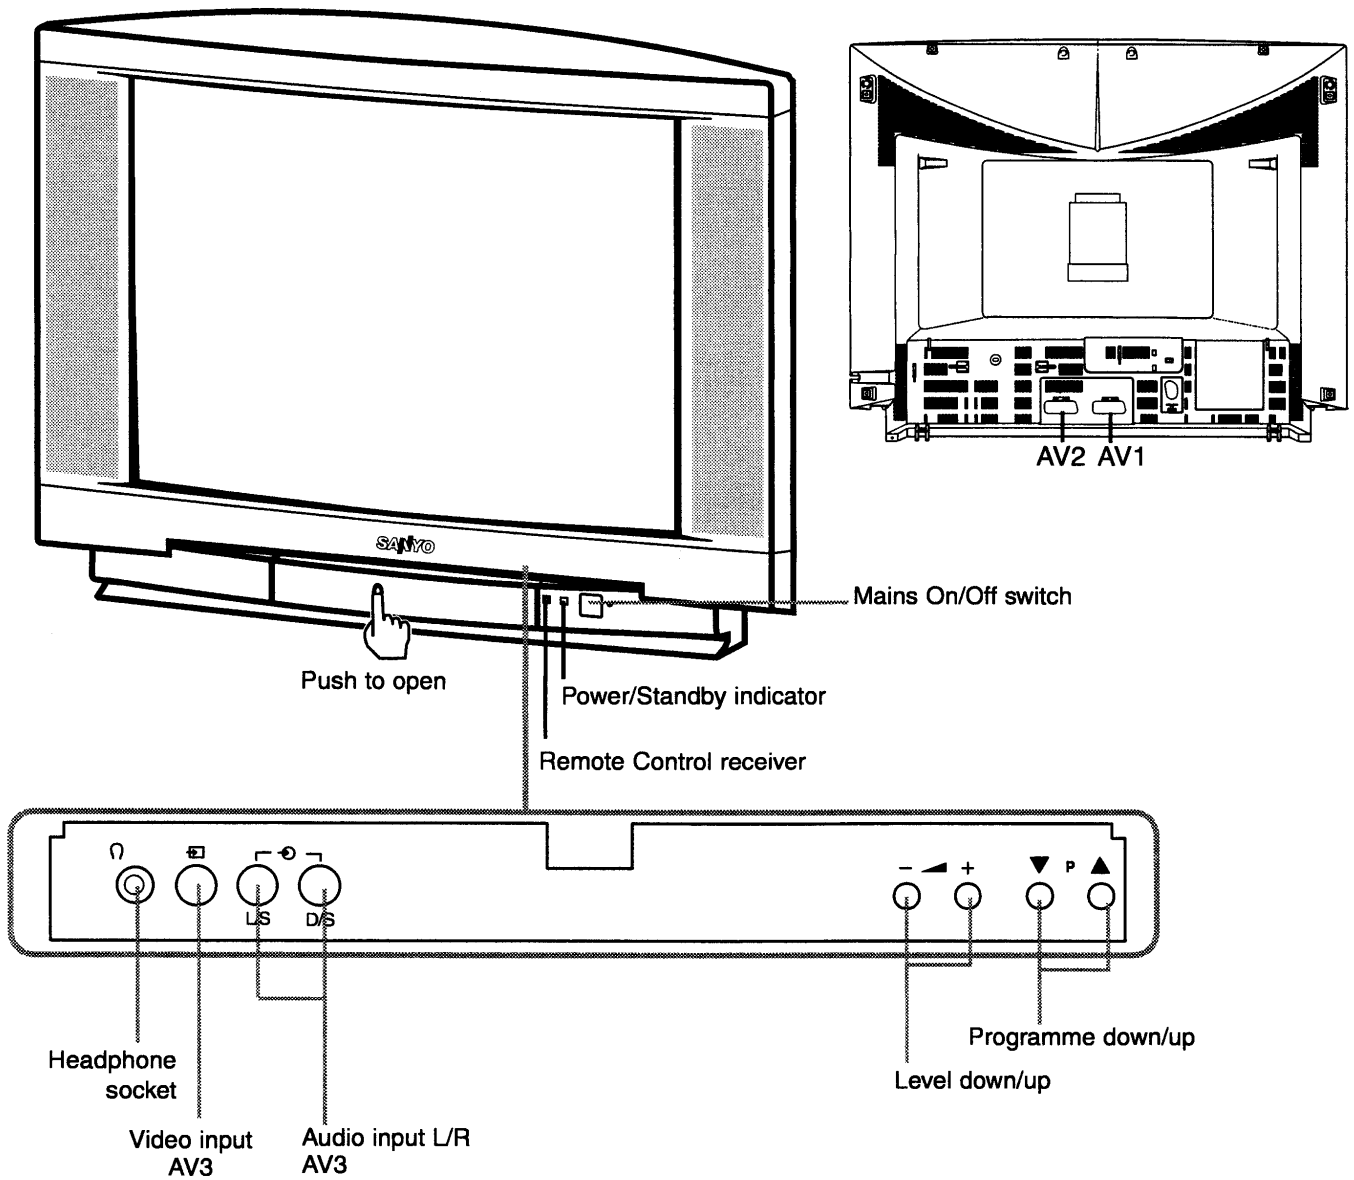

# GENERAL OPERATION

## Handset Controls

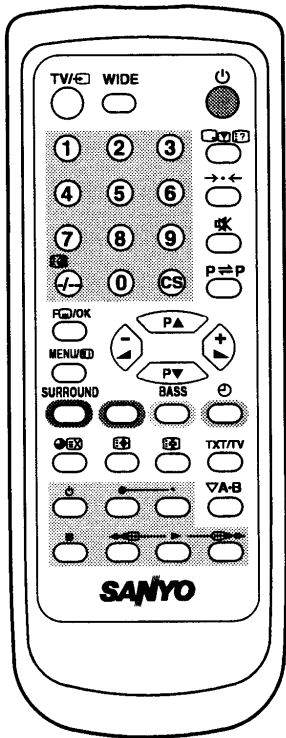

Symbol	Function
	Power on/Standby
	Function or OK button
	Menu display
	TV/AV selector
	Sound attenuation
	Programme up/down
	Level down/up
	0-9 Numeric buttons
	Digit
	Channel Selection mode selector
	Picture setting level recall
	Time display
	Programme status display
	Active 3D surround mode selector
	16:9 compression
	Previous programme selection
	Bass Expander
	Stereo/Nicam/Bilingual switch
	Timer setting

## Standby

- To turn the TV set into standby mode, press the button. The power indicator illuminates more brightly.
- To turn the TV set ON from standby mode, press any of the following buttons: , , or **0-9 buttons**.

In the Standby mode the TV set is still partially powered, this is denoted by the red Standby/Power indicator illuminating more brightly than in Power mode.

The **Mains ON/OFF switch** must be in the ON position before the using remote control transmitter.


**NOTE:** It is not possible to turn on with the **Mains ON/OFF switch** from the standby mode.

Be sure to set the **Mains ON/OFF switch** to the off position, if a power failure occurs while viewing.

If you found a power indicator flashing, please turn the TV set off completely with the **Mains ON/OFF switch** and contact our Service desk. This warning is a sign to let you know that the power protection function of this TV set is now operating.

## Auto Shut Off

This TV set will automatically switch into the standby mode, 10 minutes after a signal is no longer received. The time until the set will switch off is displayed on the screen.

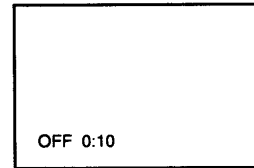

- If the aerial is removed the TV set will automatically switch into the standby mode after 10 minutes.
- When the TV set is switched on by using the On-timer function with no signal being received, the auto-shut off function will be ignored.


## Programme Selection

### ■ Direct Programme Selection


For selection of programme position 0 to 9, press the corresponding **numeric button**. If the required programme is equal or more than 10, for example 23, first press the **-/- button** and enter 2 then 3.

### ■ Up/Down Programme Selection

Press the **P▲ button** to increase the programme position. Press the **P▼ button** to decrease the programme position.

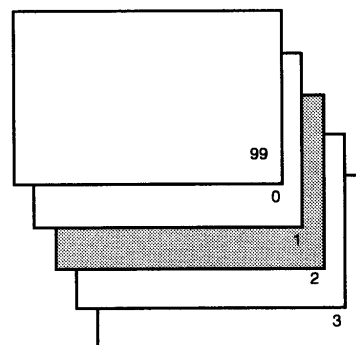

## Mains ON/OFF

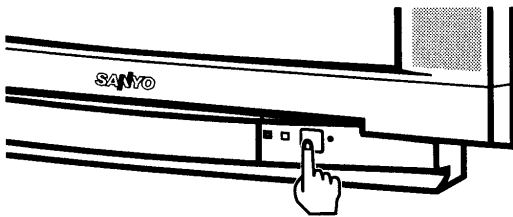

- To turn the TV set ON, press the **Mains ON/OFF switch**. The power indicator illuminates to show the power is on.

- To turn the TV set OFF, press it again.

If no picture appears but the power indicator is on, press the button, **P▲, P▼** or **0-9 button** as the TV set is in the Standby mode.

# GENERAL OPERATION

## Sound & Picture settings

1. To adjust the sound volume, press the **button**.




2. Each time the **F** button is pressed, the function display changes.

### Picture Controls

- CONTRAST** : To adjust the picture contrast.
- BRIGHTNESS** : To adjust the picture brightness.
- COLOUR** : To adjust the picture colour.
- TINT**: To adjust the colour phase (appears when receiving a NTSC signal only).
- SHARPNESS** : To adjust the picture sharpness.
- TEXT BRIGHTNESS** : To select the teletext brightness level of the teletext mode (see page 12).
- < > FINE TUNING** : To make fine adjustments to tuning. (appears in TV mode only)

### Sound Controls

- BASS** : To adjust low frequency sounds.
- TREBLE** : To adjust high frequency sounds.
- BALANCE** : To equalise the output from the left and right speakers.

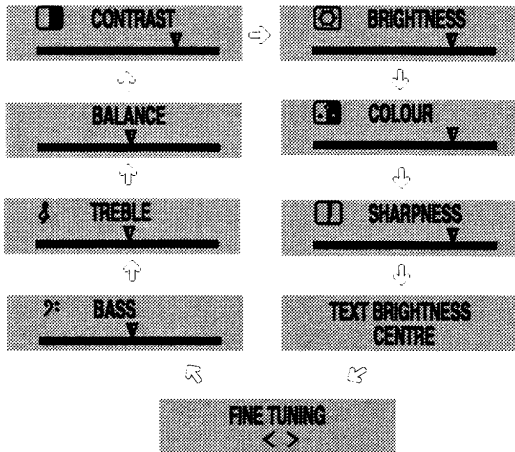

3. To adjust the level of the selected function, press the **button**.

## Sound Attenuation

This function has two sound mute stages. Press the **button** once, the sound from the speakers will be reduced, press it again and it will be muted completely.



Press the **button** again to switch the sound back on.

When the **button** is pressed, the sound attenuation is cancelled.



## Picture adjustment using the menu function

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **PICTURE** menu.
2. Press the **F** button.
3. Use the **P▲** or **P▼** button to highlight the desired control from the menu eg. **BRIGHTNESS**.

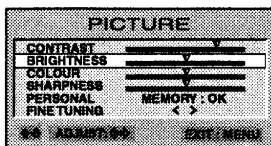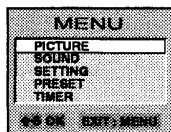

4. When pressing the **button** once, the screen display will change for selected control mode, and then press and keep button to change desired picture control level. The mode returns to control selecting mode in 3 seconds if no key pressed.





Repeat steps 3-4 for setting the proper picture levels.

To return to the TV mode, press the **MENU** button.

## Sound adjustment using the menu function

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **SOUND** menu.
2. Press the **F** button on the remote control handset.
3. Use the **P▲** or **P▼** button to highlight the desired control from the menu eg. **BASS**.

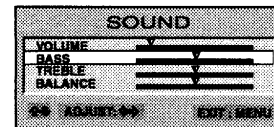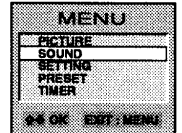


4. Press the **button** to adjust the selected control level up or down.

To return to the TV mode, press the **MENU** button.

## Picture mode selection and Personal preference setting


This TV provides predefined three picture modes and one adjustable personal picture preference mode. You can choose your preferred picture mode by pressing the **button** repeatedly.

- PERSONAL** : Personal preference mode
- STANDARD** : Normal viewing mode
- ECO** : Low contrast, brightness and colour picture setting (Suitable for dimly lit rooms and gives a cinema-like effect which the lights are switched off, or Economical mode).
- DYNAMIC** : High contrast, brightness and colour picture setting (Suitable for brightly lit rooms).

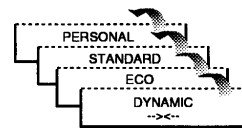

### To store your personal preference into "PERSONAL" mode

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **PICTURE** menu and press the **F** button.
2. Adjust picture controls to your preferred control level by using the **P▲**, **P▼** or **buttons**.
3. Use the **P▲** or **P▼** button to highlight the **PERSONAL** menu and press the **F** button. The control window will momentary blink to show the memorisation.

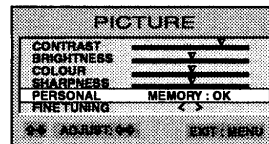

To return to the TV mode, press the **MENU** button.

The fine tuning control level will not be memorised into the "PERSONAL" mode.


# GENERAL OPERATION

## What is Active 3D surround?

In traditional stereo sound, left and right channels combine to create a stereo image. Better speakers can create a larger perceived sound stage, so sound seems to emanate from a few feet behind the monitor. Sound can have a much wider presence with Active 3D surround technologies. Music and sound effects appear to come from points in the room far from the speakers. Objects (such as jets) seem to move towards and then past the listener, whilst the important channel sound still appears to come from the centre of the screen.



The QSound Trademarks are registered in the United States, Canada and numerous foreign countries. QXpander™ is a trademark of QSound Labs, Inc.

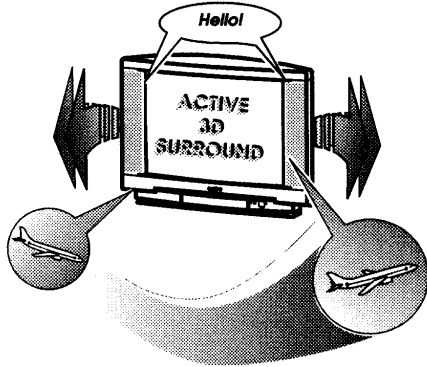


### ● Active 3D Surround

This TV provides an active 3D surround processor which can create an incredible 3 dimensional sound effect when receiving a standard stereo signal, bilingual signal or monaural signal.

You can choose the following 3D surround modes by pressing the **SURROUND** button.

- SUPER** : This emphasises the 3D surround sound to produce a wider sound effect, similar to listening at a cinema or theatre.
- ACTIVE** : Normal 3D surround sound, set to give the optimum 3D surround effect.
- MONO** : This mode is specially prepared for Nicam-mono broadcasting. Select this mode, when you can not get the 3D surround effect because the sound is Nicam mono.
- OFF** : To switch off 3D surround effect.

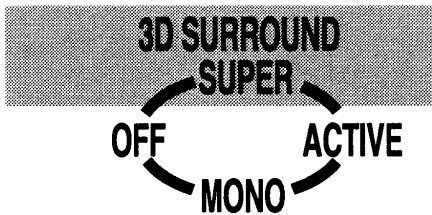


### ■ Guidance for the best enjoyment of active 3D surround

#### Optimum positioning

Sit at a distance of approximately 2 to 4 meters from the TV set.

Listen facing the centre of the TV set.


Remove any obstructions between you and the TV set.

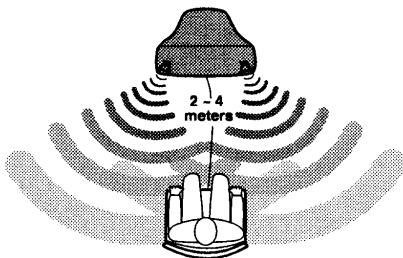

## Stereo Bilingual Reception


### ■ Nicam sound reception

If the TV receives nicam programs, it automatically switches to nicam sound reception. The word "NICAM" appears on the screen briefly.

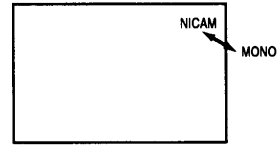

### ■ Bilingual reception

If the TV receives bilingual programs, the TV initially selects language A and displays "A" on the screen briefly. If you want to switch to language B or Mono, press the **VA•B** button.

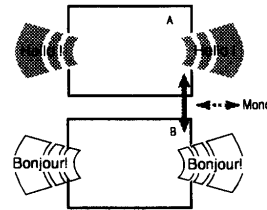


If the nicam sound reception is poor in quality, you can switch to "MONO" sound reception by pressing the **VA•B** button.

## Bass Expander

 To get an emphasised bass sound, press the **BASS** button.

The word "BASS" appears on the sound display.




## 16:9 Format Signal Reception

The future trend is towards transmission in a 16:9 picture ratio instead of the current 4:3 picture ratio. If you receive one of these transmissions, the vertical scale will be expanded to fill the screen giving a squashed picture.

Press the **WIDE** button, the picture will obtain its proper height.

If this button is pressed during a 4:3 transmission, the picture will be compressed vertically.

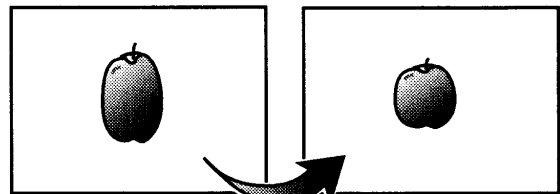

# CONNECTION OF AV EQUIPMENT

## Using AV Equipment

You can connect a VCR, S-VHS VCR, Satellite Tuner, PAY TV Decoder or Camcorder, as this TV has two Scart terminals on the rear panel and one pair of AV input terminals on the front panel.

### ■ Selection of AV mode


Most AV equipment will automatically switch to the AV mode (because of the pin 8 function signal) by pressing the PLAY button on your AV equipment. If not, press the TV/AV button to select the desired AV mode manually.

### ■ Setting of AV2 input mode

If you want to use a VCR which is equipped with the S-VHS capability, to obtain the best performance, you should connect to the AV2 terminal and select the S-Video mode in the AV2 mode.


### ● SETTING

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **SETTING** menu.

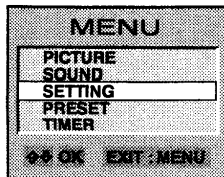

2. Press the **F/OK** button on the remote control handset.

3. Use the **P▲** or **P▼** button to highlight the **AV2** menu. Select "S-VIDEO" or "VIDEO" by pressing the **◀** or **▶** button.

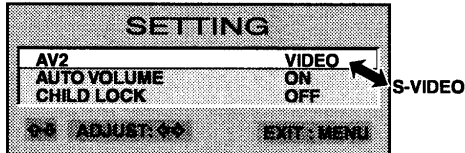


To return to the TV mode, press the **MENU** button.


### ■ Selection of colour system

By pressing the **□/▽** button repeatedly in the AV mode, the colour system mode will be changed as follows:

**AUTO -> PAL -> NTSC4.43 -> NTSC3.58 ->**

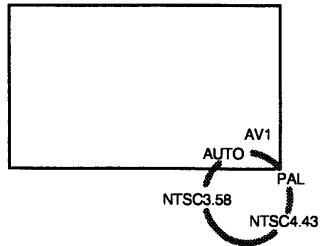

The following is our recommended standard connection for AV equipment. There are various types of connections depending on the equipment which you have or its particular use. For further information please consult your local dealer. If you have a S-VHS type VCR, to obtain the best performance it should be connected to the AV2 terminal which has been specially designed for S-VHS. The table below shows usable sources and abilities if you connect your AV equipment according to the standard connection.

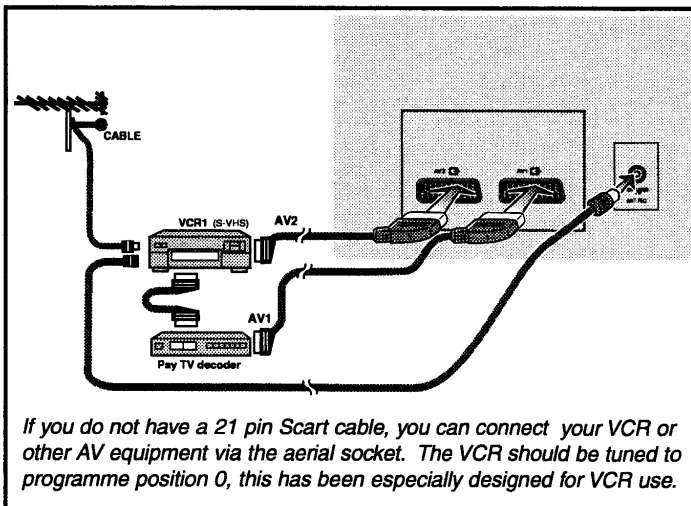

If you do not have a 21 pin Scart cable, you can connect your VCR or other AV equipment via the aerial socket. The VCR should be tuned to programme position 0, this has been especially designed for VCR use.

### ■ Use of front AV3 terminal

This TV provides one pair of AV input terminal on the front panel. It is very convenient for use as a game or camcorder connection.

Press the **TV/AV** button to select the AV3 mode.

### ■ Selection of the sound track from the equipment

By pressing the **▽A•B** button repeatedly, you can select the sound track L (left), R (right) or L/R from the equipment connected to the scart terminals or the front AV terminal.

## VCR Use

This remote control transmitter has been designed to be used in conjunction with selected **SANYO VCR's**. Some SANYO VCR's may have their own functions, so please refer to the individual instruction booklet when using this remote control to ensure compatibility.

**POWER On/Off** : Use to turn VCR power on and off.

**▶ PLAY** : Use to playback the tape.

**■ STOP** : Use to stop the movement of the tape.

**▶▶ FAST/CUE** : Use to advance the tape at fast speed, or in order to playback the tape at fast speed.

**◀◀ REWIND/REVIEW** : Use to rewind the tape or in order to playback the tape in reverse at fast speed.


**● — ● RECORD** : Use to record on the tape. Press both of the buttons at the same time.

## USE OF CAMCORDER OR GAME EQUIPMENT

### Connection


✓ Connect an RCA cable from the front AV terminal (AV3) to a camcorder or to game equipment.

For monaural units, connect the sound cable to the L/S socket, and press the **▽A•B** button to select L channel.

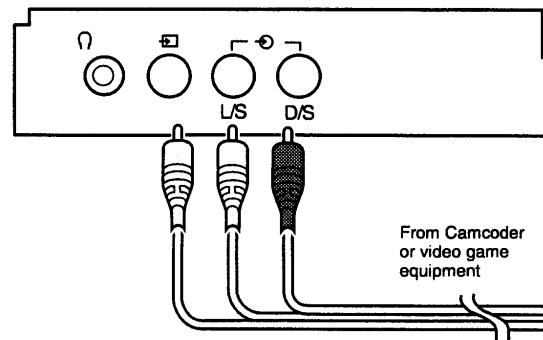

## USE OF HEADPHONES

The 3.5mm mini-stereo jack socket located behind the door of the TV can be used for headphones. When the headphones are inserted the sound from the TV speakers is muted.

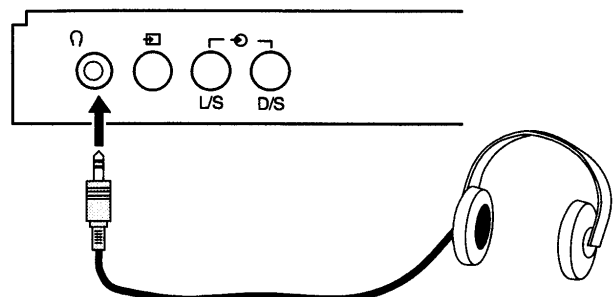





# GENERAL OPERATION / OTHER FUNCTIONS

## Auto volume level

Sometimes we notice a volume level difference between the receiving sources, such as on-air programs and VCR playback, channels, and programmes and commercials. When this function is set to "ON" the TV set automatically equalises the volume level difference to make a standard volume level.

### ● SETTING

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **SETTING** menu.
2. Press the **F(□)/OK** button.
3. Use the **P▲** or **P▼** button to highlight the **AUTO VOLUME** menu. Select "ON" or "OFF" by pressing the **◀-** or **▶+** button.

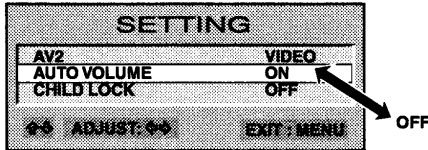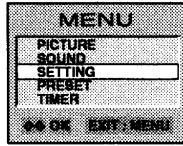



To return to the TV mode, press the **MENU** button.

## Child Lock

This TV has a child lock function which inhibits the use of the buttons on the front of the TV set. With this you can prevent small children unexpectedly pressing buttons.

### ● SETTING

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **SETTING** menu.
2. Press the **F(□)/OK** button.
3. Use the **P▲** or **P▼** button to highlight the **CHILD LOCK** menu. Select "ON" or "OFF" by pressing the **◀-** or **▶+** button.

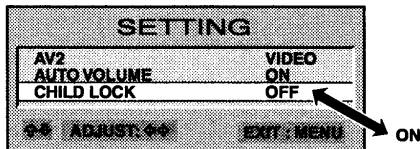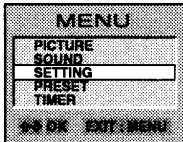

To return to the TV mode, press the **MENU** button.

To cancel the child lock mode, follow the above procedure and you should select "OFF" in step 3 or switching off the TV set with the **Mains ON/OFF** Ⓛ switch.

## Time Display

In the TV mode, if the receiving programme has a teletext service when the **Ⓛ** button is pressed, the present time will be displayed on the screen for 5 seconds.

## Programme information display

Press the **□(TV)** button once, the programme information such as current programme number, stereo status, remaining timer if set and colour system.

## Previous Programme Selection

Press the **P⇌P** button and the TV set will alternately select the current programme position and the previous programme position viewed.

## Timer Setting

This TV has three timer functions and you can select the following modes by pressing the **●** button repeatedly.

 
- **Off timer setting** You can select a time period from which the set will switch into the standby mode.
- **On timer setting** You can set a time period from which the set will switch on from the standby mode.
- **Alarm timer setting** You can set a time which you want to display the time up sign on the screen and the alarm will beep.

Function	Maximum time periods	Step
Off Timer	120 minutes	30 minutes
On-Timer	24:00 Hours	15 minutes
Alarm Timer	3:00 Hours	5 minutes

## Off Timer Setting

### Timer Button Selection

1. Press the **●** button once, the word "OFF TIMER" will appear on the screen.




2. Set the time period by pressing the **◀-** or **▶+** button. The display changes in 30 minute steps.




### MENU Selection

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **TIMER** menu.

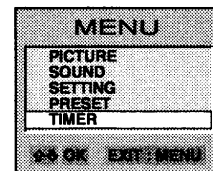


2. Press the **F(□)/OK** button.

3. Use the **P▲** or **P▼** button to highlight the **OFF TIMER** menu.

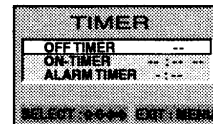

4. Highlight the time setting column by using the **◀-** or **▶+** button, and using the **P▲** or **P▼** button to select a time period from which the set will switch into the standby mode.

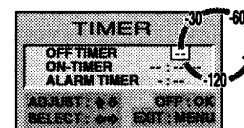

To return to the TV mode, press the **MENU** button.

If you have set a time, then one minute before the TV switches off the remaining minute (-1) automatically appears on the screen.


To cancel the Off timer, select timer "--" by pressing the **F(□)/OK** button or using the **P▲** or **P▼** button until screen display is still on the screen.

## OTHER FUNCTIONS

 
### On-Timer Setting

#### Timer Button Selection

1. Press the **●** button twice. The word "ON-TIMER" will appear on the screen.



 
2. Set the time period by pressing the **◀** - or **▶** + button. The display changes in 15 minutes steps. The maximum time period is 24:00 hours.




3. Set the start up programme position by using the **P▲** or **P▼** button.
4. Press the **⏻** button to switch into the standby mode.

#### MENU Selection


1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **TIMER** menu.

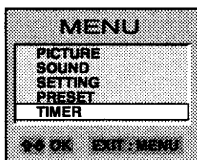

2. Press the **F(⏻)**/OK button.
3. Use the **P▲** or **P▼** button to highlight the **ON-TIMER** menu.

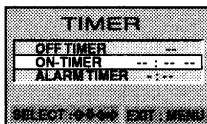

4. Highlight the time setting column or start up program setting column by using the **◀** - or **▶** + button, and using the **P▲** or **P▼** button to set a time or program position which you want to switch on from the standby mode.

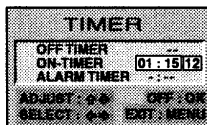

5. Return to the TV mode by pressing the **MENU** button, and press the **⏻** button to switch into the standby mode.

*When it reaches the set on-time, the TV set will switch on and select the start-up programme automatically.*

To cancel the On-timer, select timer "--:--" by pressing the **F(⏻)**/OK button or using the **P▲** or **P▼** button until screen display is still on the screen.

#### Advance

When it reaches the set on-time and the TV set is kept on, the TV set changes automatically to the programme position which you have set the start-up programme in the on-timer function.

- When the TV set is switched on by using the on-timer function, the TV set will automatically switch into the standby mode in 2 hours if no key control is input.

### Alarm Timer Setting

This function can display the time up sign on the screen as illustrated to let you know that the time has come when the set alarm time is reached. This only happens when the TV is on. This may remind you to do something.

#### Timer Button Selection

1. Press the **●** button three times, the word "ALARM TIMER" will appear on the screen.




2. Set the time period by pressing the **◀** - or **▶** + button. The display changes in 5 minutes steps. The maximum time period is 3:00 hours.




#### MENU Selection


1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **TIMER** menu.

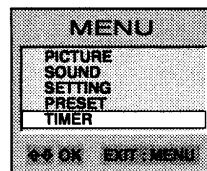

2. Press the **F(⏻)**/OK button.
3. Use the **P▲** or **P▼** button to highlight the **ALARM TIMER** menu.

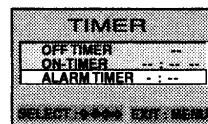

4. Highlight the time setting column by using the **◀** - or **▶** + button, and using the **P▲** or **P▼** button to set a time which you want to display the time up sign on the screen and beep a sound.

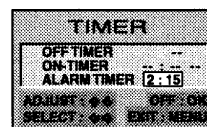

*When it reaches the set alarm time, the time up signal will appear on the screen and the alarm will sound for 15 seconds.*

To cancel the Alarm timer, select timer "--:--" by pressing the **F(⏻)**/OK button or using the **P▲** or **P▼** button until screen display is still on the screen.

- When the set alarm time is reached whilst in teletext mode, the TV set automatically returns to the TV mode.
- If the TV set is switched off by the **Mains Switch** **⓪** or a power failure occurs, the timer settings will be cancelled.
- You can confirm the set time for each timer mode by pressing the **●** button repeatedly.

# PRESETTING

Up to 100 broadcast stations in your reception area can be stored in the electronic memory.

There are three modes of pre-setting channels as follows:

## ■ Automatic tuning and sorting (AUTO TUNE/SORT)

All receivable channels are automatically tuned in and stored as specified programme position as follows.

## ■ Channel selection

Used to preset a receivable channel if you know the channel numbers of the stations.


## ■ Manual tuning (PRG. PRESET)

Used to preset a receivable channel in any desired programme position.

**NOTE:** If the presetting functions are not operative refer to "Special Functions" on page 14 to check Item 1 is set to "0".

## Automatic Tuning/Sorting (AUTO TUNE/SORT)

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **PRESET** menu.

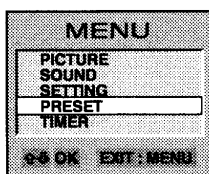


2. Press the **F□/OK** button.

3. Use the **P▲** or **P▼** button to highlight the **AUTO TUNE/SORT** menu, then press the **F□/OK** button.



4. Press the **F□/OK** button on the remote control handset or the **OK** button on the TV front panel to begin automatic tuning and sorting.

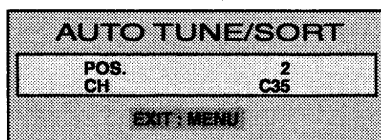

● A self-automatic tuning and sorting system will be started.

The automatic tuning operation can be cancelled at any time by pressing the **MENU** button.

After completing this procedure, the TV set returns to normal TV mode and selects programme position 1.

## Channel Sorting

The channels are stored in consecutive programme positions starting at programme position "7". After all receivable channels have been found and stored, the TV set automatically allocates following major stations in the UK into the programme positions 1 to 6.

<b>BBC1</b>	<b>BBC2</b>	<b>ITV</b>	<b>CH4</b>
<b>CH5</b>	<b>SKY</b>	<b>BBC-W</b>	<b>BBC-P</b>

**CH4:** Channel 4 or S4C

**SKY:** SKY GOLD, SKY SPORTS.etc

**BBC-W:** BBC World,BBC Worldwide feature 1

**BBC-P:** BBC Prime

Programme position 1 : BBC1

Programme position 2 : BBC2

Programme position 3 : ITV

Programme position 4 : CH4 or S4C

Programme position 5 : CH5

Programme position 6 : SKY, BBC-W or BBC-P

You can change the order of station, use the channel swapping function, refer to page 12.

## Channel Selection

■ If you know the channel numbers of the stations you wish to store you can store them in your desired programme positions without having to search for them.

1. Select the programme position where you wish to store a channel.


2. Press the **CS** button on the remote control handset. The current channel number, programme position and channel ID if available will be displayed on the screen.

3. Enter the channel number using the **0-9** numeric buttons.

For example: To enter channel number 2 enter **0** and **2**.  
To enter channel number 35 enter **3** and **5**.


4. While the screen display is still on the screen, press the **F□/OK** button to store in the memory.

The programme and channel number will momentarily flash.

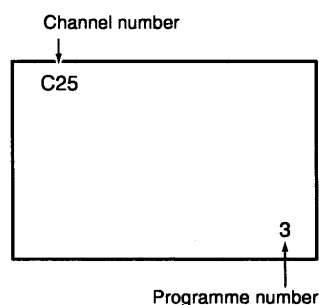


## Manual Tuning (PRG.PRESET)

1. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **PRESET** menu.

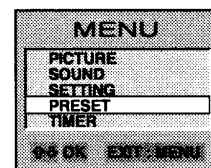


2. Press the **F□/OK** button.


3. Use the **P▲** or **P▼** button to highlight the **PRG.PRESET** menu, then press the **F□/OK** button.

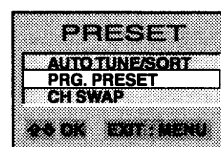

4. Select the programme position you wish to preset by using the **▲** - or **▲** + , **-** or **0-9** numeric buttons.

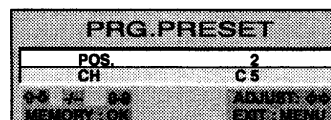

5. Use the **P▲** or **P▼** button to highlight the **CH** menu, then press the **▲** - or **▲** + button to start channel searching until your desired station is found.

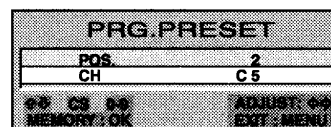

Or if you know the channel number of the station, press **CS** button first then enter the channel number directly.

**Repeat steps 4 to 5 for other desired channels.**

☞ To return to the normal TV mode, press the **MENU** button.


This completes the Manual presetting.

# PRESETTING / TELETEXT


## Channel Swapping

Use this channel swapping feature to swap the channels between two stored programme positions. This feature is particularly useful after automatic presetting.

1. Select one of TV channels you wish to swap by using the **P▲**, **P▼** or using the **(0-9)** numeric buttons.
2. Press the **MENU** button to display the main menu. Use the **P▲** or **P▼** button to highlight the **PRESET** menu.
3. Press the **F□/OK** button.
4. Use the **P▲** or **P▼** button to highlight the **CH SWAP** menu, then press the **F□/OK** button.

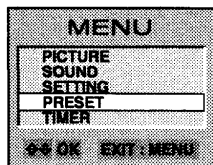

5. Use the **P▲** or **P▼** button to select the target programme position for swap channels then press the **F□/OK** button. The preset window will blink momentarily.

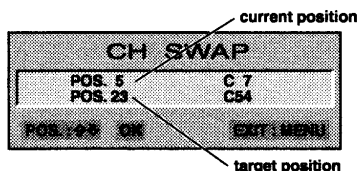


The two TV channels will now have changed places.

Repeat steps 1 to 5 for all the other TV channels you want to swap.

To return to the normal TV mode, press the **MENU** button.


## Teletext Controls

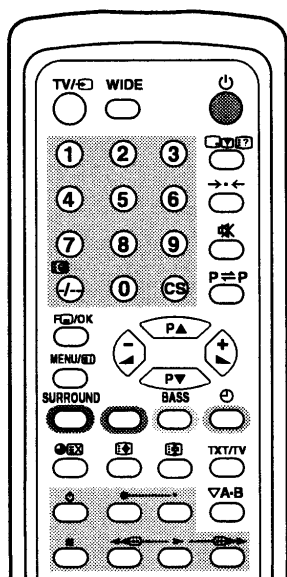

Symbol	Function
TXT/TV	Teletext/Mix/TV mode switch
0-9	0-9 numeric buttons
P▼ P▲	Page down/up
P⇒P	Previous viewed page selection
[E]	Index page selection
[H]	Hold
[S]	Size
[X]	Cancel
[E]	Sub code entry mode
[E?]	Reveal
[Red]	Red
[Green]	Green
[Yellow]	Yellow
[Blue]	Blue

## Switching to the Teletext mode

Press the **TXT/TV** button, and the screen changes as illustrated.

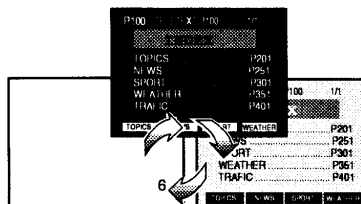

## Picture & Sound in teletext mode

**Picture and Text brightness controls in the teletext mode.**

You can not adjust the picture or teletext brightness in the teletext mode. You must first switch back to the TV mode and then adjust the picture control or set the teletext brightness level.

**How to set the teletext brightness level**

1. Press the **F□** button repeatedly in the TV mode until the word "TEXT BRIGHTNESS" appears on the screen.



2. Press the **◀** - or **▶** + button to select one of the 3 teletext brightness levels either MAXIMUM, CENTRE or MINIMUM.
3. Confirm the selected teletext brightness level by switching to the teletext mode by pressing the **TXT/TV** button.

**Sound control in the teletext mode.**

Only sound volume and muting can be controlled in the teletext mode but the on-screen display will not appear.

## Page Selection

■ **Direct page access**

A page can be selected with the **0-9** Numeric buttons. eg. To display page 301, press buttons 3, 0 and then 1. The selected page number will appear on the screen.

■ **Up/down page access**

When a page is displayed on the screen and you want to read the following page number, press the up (**P▲**) button instead of selecting the new page number. To read the previous page, press the (**P▼**) button.

**P▲** : P301 → P302 → P303 .... P399 → P400 ....

**P▼** : P301 → P300 → P299 → P298 .... P201 ....

Hold the button for rapid page change.

## Index Page Selection

**Receiving TOP teletext system**

When you press the **[E]** button, the classified table will appear on the screen. To highlight your desired category page by using **Red** or **Blue** button and press **Green** button to go to it's page directly.

**Receiving FLOF or another teletext systems**

Press the **[E]** button to select one of the teletext index pages.



# TELETEXT

## Coloured Page Access

Depending on the TV channel, teletext is transmitted in different systems. The system utilised can be recognised by the coloured line at the bottom of the screen.

Press one of the 4 coloured buttons to select the topics shown at the bottom of the text screen.

For example the Red topic can be selected using the Red button, the Blue topic by the Blue button, and so forth with the other colours.

You can select the previous viewed pages up to 4 pages, by pressing the P=P button repeatedly.



Red Green Yellow Blue



## Stop

Press the **EX** button to stop sub pages changing. The word "stop !" will appear instead of the page number. Some teletext pages are made up of several sub pages. These sub pages are automatically changed. Sub page is shown as P4/8 (sub page 4 of 8 pages) the location on the text page depends on the text service.




## Viewing TV while searching for a page

Sometimes the page access can take some time. While waiting you can view the TV picture by pressing the **EX** button.

1. Enter the new page number. Press the **EX** button.
2. When the page is found, the page number will appear over the TV picture.
3. Press the **TXT/TV** button to view the teletext page.


## Double Letter Height

Either the top half or the bottom half of the page can be expanded to fill the whole screen by pressing the **EX** button. Each time the button is pressed, the display changes as illustrated.

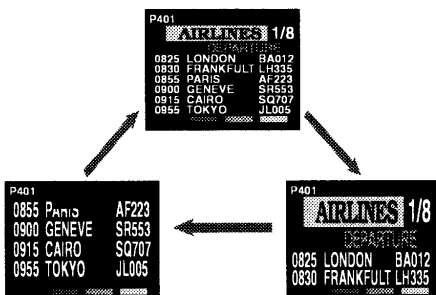

## Displaying Concealed Information

Press the **EX** button to reveal hidden items on the text page. Some pages such as quiz pages have the answers hidden. The button may have to be held to keep the answer on the screen, or pressed again to remove the answers.

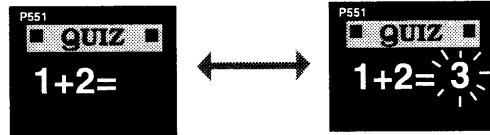


## Sub Page Access

With a text page selected which has sub pages, you may wish to read a known sub page number.

1. Press the **EX** button. "Sub-Code ----" will be displayed on top of the screen.
2. Enter the sub page number by using the (0-9) buttons.
3. Press the **EX** button to return the normal TV picture.

Immediately the requested sub-coded page is found, the page number will appear over the TV picture.


4. Press the **TXT/TV** button to view the sub-coded page.

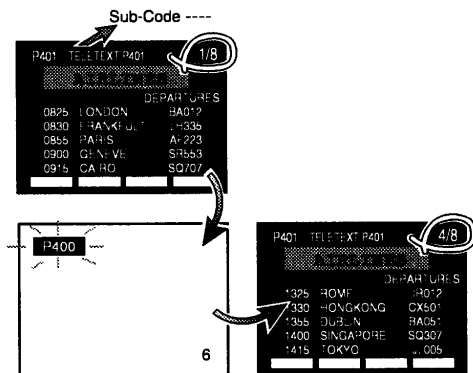

## Updated Pages

There are teletext pages which are updated as events progress, such as sports results, news reports or traffic information. Select a page which will be updated.

1. Press the **EX** button to return to the normal TV picture.
- Immediately the selected page is updated, the page number will appear over the normal TV picture.
2. Press the **TXT/TV** button to view the updated page.
- Note:** If the page has sub pages the number will appear when the sub page is changed.

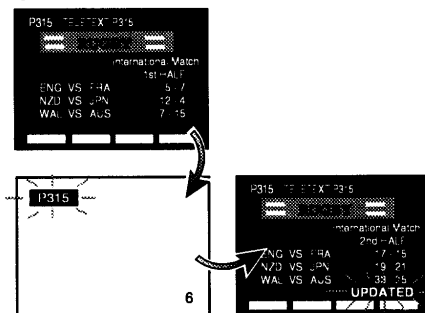

- **Cancel** When you press the **EX** button, the TV picture appears on the screen. Whilst in this mode you can not select another TV programme. You should first switch back to TV reception by pressing the **TXT/TV** button if required.
- **Teletext reception** If your aerial signal is poor, the teletext reception may be poor.

# SPECIFICATIONS

## Special Functions

This TV set allows you to set up the following special functions.

### ■ Prohibition of presetting and CS key entry, and maximum volume setting




**ITEM-1**    **SET → 0**    **NO**  
                   **SET → 1**    **YES**    Sets prohibition of presetting and CS key entry, and sets the current volume as the maximum volume.


### ■ Start up programme position

**ITEM-2**  
 Presets the programme position when the set is switched on.

**SET -> 0**            Last programme position start  
**SET -> 1**            Programme position "1" start  
**SET -> 2**            Programme position "2" start  
**SET -> 3**            Programme position "3" start  
**SET -> 4**            Programme position "4" start  
**SET -> 5**            Programme position "5" start  
**SET -> 6**            Programme position "6" start  
**SET -> 7**            Programme position "7" start  
**SET -> 8**            Programme position "8" start  
**SET -> 9**            "AV1" start

### SETTING PROCEDURE

1. To enter the special function mode, press and hold the  button on the **Remote control handset** and then press the **P▲** button on the TV set.
2. To select the "Item" number, press the /OK button on the **remote control handset**.
3. To select the "Set" number, press the **◀** or **▶** button repeatedly.
4. To return to the normal TV mode, press the  button.

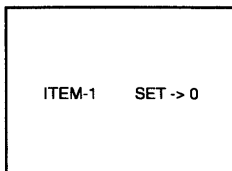

The setting conditions of all items can be confirmed.

Special functions are not cancelled if the TV set is switched off or the mains disconnected.

## TV Specifications

Power source	AC 220~240V, 50Hz
Television system	System I
Colour system	PAL/NTSC 4.43
	NTSC 3.58 in AV mode
Channel Coverage	UHF: 21~69
Aerial input impedance	75 ohm
AV terminal	
21-Pin Terminal	AV1 : CENELEC Standard with RGB AV2 : CENELEC Standard with S-Inputs
Front AV Terminal	AV3 : RCA Terminal, Video and Audio (L/R) Input
Sound output Main L/R (Continuous)	12 watts x 2
Picture tube (Inches)	21" (CE21DN5-B) 25" (CE25DN5-B) 28" (CE28DN5-B)
(Visible picture diagonal)	51cm (CE21DN5-B) 59cm (CE25DN5-B) 66cm (CE28DN5-B)
Dimensions (W x H x D mm)	612 x 476 x 482 (CE21DN5-B) 680 x 543 x 442 (CE25DN5-B) 736 x 597 x 494 (CE28DN5-B)
Weight	21 Kg (CE21DN5-B) 26 Kg (CE25DN5-B) 32 Kg (CE28DN5-B)

Specification subject to change without notice.

## Scart Specifications

Pin	Signal function	Level	AV1	AV2
Pin 1	Audio output (right channel)	0.5V/ 1 K ohm	✓	✓*monitor out
Pin 2	Audio Input (right channel)	0.5V/10 K ohm	✓	✓
Pin 3	Audio output (left channel)	0.5V/ 1 K ohm	✓	✓*monitor out
Pin 4	Audio earth			
Pin 5	Earth (blue)			
Pin 6	Audio Input (left channel)	0.5V/10 K ohm	✓	✓
Pin 7	Blue (B) input	0.7Vpp/75 ohm	✓	
Pin 8	Remote switch input	L:0-2V H:10-12V	✓	✓
Pin 9	Earth (green)			
Pin 10				
Pin 11	Green (G) input	0.7Vpp/75 ohm	✓	
Pin 12				
Pin 13	Earth (red)			
Pin 14	Earth			
Pin 15	Red (R) or C(chrominance) input	0.7Vpp/75 ohm	✓ *Red input	✓ *C-input
Pin 16	Fast blanking	L:0-0.4V H:1-3V	✓	
Pin 17	Earth(video)			
Pin 18	Earth			
Pin 19	Video output	1 Vpp/75 ohm	✓*TV output	✓*monitor output
Pin 20	Video/sync *1 or Y (luminance) input	1 Vpp/75 ohm	✓ *Video/sync-input	✓*Video/Y-input
Pin 21	Connector shield			

# SERVICING & HELPFUL HINTS

## Servicing

Your television is fully transistorised and does not contain any user serviceable components.

Removal of the cabinet cover may expose you to dangerous voltages. Refer all servicing to qualified service personnel.

Unplug the television receiver from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- If the power cord or plug is damaged.
- If liquid has been spilt into the television receiver.
- If television receiver has been exposed to rain or water.
- If the television receiver has been dropped or the cabinet has been damaged.
- If the television receiver exhibits a distinct change in performance.
- If the television receiver does not operate normally by following the operating instructions.

Adjust only those controls that are covered in the operating instructions as improper adjustment of other controls may result in damage. This will often require extensive work by a qualified technician to restore the television receiver to normal operation.

When replacement parts are required, have the service technician verify that the replacements he uses have the same safety characteristics as the original parts. Use of manufacturers specified replacements can prevent fire, shock or other hazards.



## Helpful Hints



### ■ NO PICTURE, NO SOUND

- Check if TV is plugged in.
- Try a different channel, if OK, probably station trouble.




### ■ POOR PICTURE, SOUND OK

- Adjust BRIGHTNESS control.
- Adjust FINE TUNING control.
- Check aerial connections.



### ■ NO COLOUR, PICTURE OK


- Adjust COLOUR control.
- Adjust FINE TUNING control.
- Is the programme in colour ?

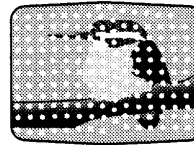

### ■ WEAK PICTURE

- Check aerial connections on back of set.
- Check aerial for broken wires.
- Re-orient aerial.

The following faults are not caused by the receiver:

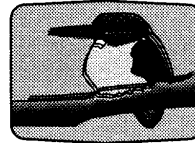

### "GHOSTS"

Reflections of signals from mountains or high buildings will cause multiple images, called "Ghosts". These abnormal conditions can be reduced to minimum by repositioning aerial or by installing new one suited for your area.



### "INTERFERENCE"

Interference may be caused by electrical appliances, car ignition systems, etc. This should normally be a temporary condition, but should this interference persist, contact your dealer.

## WARRANTY TO CUSTOMER

Sanyo U.K. Sales Ltd. (the company) warrants to the initial retail purchaser that if this equipment is or becomes defective and that, in the opinion of the Company, the defect is due to faulty material or workmanship the Company will, for a period of 12 calendar months from the date of sale to the original purchaser repair or replace, at its sole option, free of charge, any such defective component part of the equipment, always provided that:-

- 1: The equipment has at all times been used in accordance with the operating instructions issued by the Company, and has not been connected to an electrical mains supply for which it has not been adjusted.
- 2: Accidental damage or damage caused by negligence of misuse by the user, is specifically excluded.
- 3: Unauthorised repairs, or any modification to the equipment which has not been expressly approved by the Company, shall render this warranty null and void.
- 4: Failure due to fair wear and tear of any item is specifically excluded.

This warranty is not transferable and is only applicable within the United Kingdom (and the Republic of Ireland). Nothing in this express warranty affects the statutory rights available to the purchaser of this equipment.

Note: This warranty supersedes any other form of guarantee that may inadvertently have been enclosed with or attached to the product.

### **Dear Customer.**

Thank you for buying **SANYO**. This equipment should give you many years of pleasure and faithful service but in the event that a fault occurs, the following notes for your guidance may be helpful:-

- 1: PLEASE RETAIN YOUR PURCHASE RECEIPT WHICH WILL BE REQUIRED FOR SERVICE DURING WARRANTY.
- 2: If your Sanyo equipment proves faulty during the period of guarantee, take it or send it back to the dealer who originally supplied it together with this guarantee and the proof of purchase. We have made arrangements with our approved dealers under which they will carry out inguarantee service repairs on our behalf. In this way, we hope to reduce to a minimum the amount of time you will be without your equipment.
- 3: If for some reason it is impossible to return the equipment to the original supplier, please contact our Service Department at the address below for further advice.
- 4: Should the equipment require servicing after the expiry of the guarantee period, take or send it to the original supplier or any other Sanyo dealer. He will be pleased to give you a quotation for the repair.

Service Department,  
Sanyo UK Sales,  
(A Division of SANYO Europe Ltd.),  
Sanyo House,  
Otterspool Way,  
Watford, Hertfordshire, WD2 8JX.  
Tel: 01923 246363