


# SANYO

---

**INSTRUCTION MANUAL**

**CE28WP4-B**  
**CE32WP4-B**

**Colour Television**

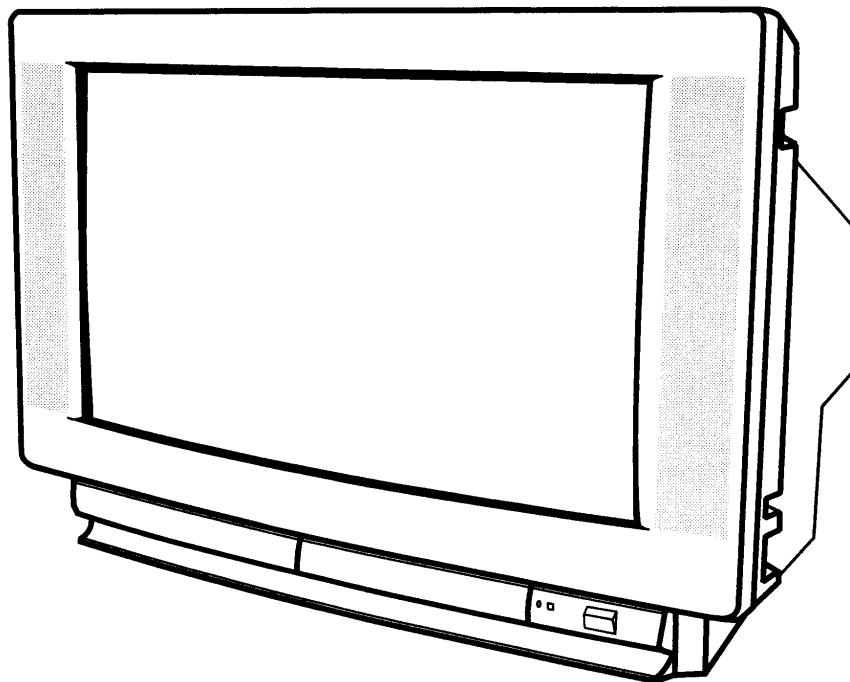

 **DOLBY SURROUND**  
PRO • LOGIC



**MAXXBASS**

**Please read this Instruction book before using your television.  
We wish you many hours of pleasure from your new television.**

# TABLE OF CONTENTS

## SAFETY PRECAUTIONS

Installation . . . . .	3
Use . . . . .	3

## INSTALLATION

Aerial Connection . . . . .	4
Surround Speakers . . . . .	4
Battery Installation . . . . .	4
Mains Supply . . . . .	4
Automatic Channel Set up . . . . .	5
Channel Sorting . . . . .	5

## CONTROLS

Controls and Terminals on TV . . . . .	6
Controls on Remote Control Handset . . . . .	6

## GENERAL OPERATION

Mains ON/OFF . . . . .	7
Standby . . . . .	7
Auto Shut Off . . . . .	7
Programme Selection . . . . .	7
Sound & Picture Settings . . . . .	8
Sound Attenuation . . . . .	8
Picture adjustment using the menu function . . . . .	9
Sound adjustment using the menu function . . . . .	9
Picture mode selection and personal preference setting . . . . .	9
Auto Volume Level . . . . .	10
Child Lock . . . . .	10
Time Display . . . . .	10
Programme Information Display . . . . .	10
Previous Programme Selection . . . . .	10

### SCREEN OPTIONS

Selection of Picture Sizes . . . . .	11
--------------------------------------	----

### SOUND OPTIONS

Selection of Surround Mode . . . . .	12
Stereo Bilingual Reception . . . . .	13
Adjusting of sound balance . . . . .	14
Setting of sound balance with test tone . . . . .	14
MaxxBass : Virtual Subwoofer . . . . .	14

## CONNECTION OF AV EQUIPMENT

Using AV Equipment . . . . .	15
VCR use . . . . .	15
Use of Camcorder or Game Equipment . . . . .	16
Use of Headphones . . . . .	16

## OTHER FUNCTIONS

Off Timer Setting . . . . .	17
On-Timer Setting . . . . .	17
Alarm Timer Setting . . . . .	18

## PRESETTING

Automatic Tuning/Sorting . . . . .	19
Channel Sorting . . . . .	19
Channel Selection . . . . .	19
Semi-automatic tuning . . . . .	20
Channel Swapping . . . . .	20

## TELETEXT

Teletext Controls . . . . .	21
Switching to the Teletext mode . . . . .	21
Picture & Sound in Teletext mode . . . . .	21
Page Selection . . . . .	21
Coloured Page Access . . . . .	21
Index Page Selection . . . . .	21
Stop . . . . .	22
Double Letter Height . . . . .	22
Displaying Concealed Information . . . . .	22
Viewing TV while searching for a page . . . . .	22
Sub Page Access . . . . .	22
Updated Pages . . . . .	22

## SPECIFICATIONS . . . . . 23

## SPECIAL FUNCTIONS . . . . . 23

## SERVICING . . . . . 24


## HELPFUL HINTS . . . . . 24

## WARRANTY TO CUSTOMER . . . . . 25

# SAFETY PRECAUTIONS


**CAUTION: Please read and retain for your safety.** This unit has been engineered and manufactured to assure your personal safety. But improper use can result in potential electric shock or fire hazards. In order not to defeat the safeguards incorporated in this receiver observe the following basic rules for its installation, use and servicing.

## Installation

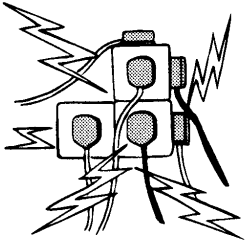


**Do not** allow anything to rest on the power cord. **Do not** locate this television receiver where the cord will be damaged by people walking on it.

**Do not** overload wall outlets and extension cords as this can result in fire or electric shock.

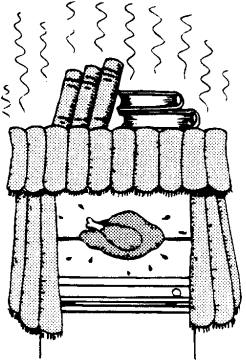


Slots and openings in the cabinet and in the back or bottom are provided for ventilation to ensure reliable operation and to protect it from overheating. These openings **must not** be blocked or covered. The opening **should never** be covered with a cloth or other material, and the bottom openings **should not** be blocked by placing the television receiver on a bed, sofa, rug, or other similar surface. This television receiver **should never** be placed near or over a radiator or heater.


This television receiver **should not** be placed in a built-in installation such as a bookcase unless proper ventilation is provided.

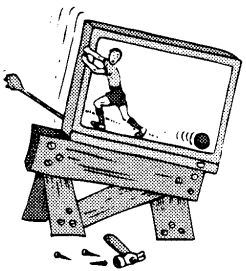


**Do not** place your television receiver on an unstable stand, shelf or table. Serious injury to an individual, and damage to the television may result if it should fall. Your sales person can recommend approved stands or shelf and wall mounting instructions.

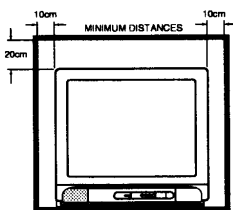


If the television is built into a unit, or enclosed, the minimum distances for ventilation must be maintained. Heat build up can reduce the life of your television, and can be dangerous.

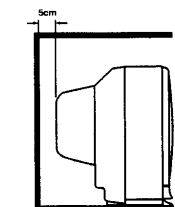

## Use

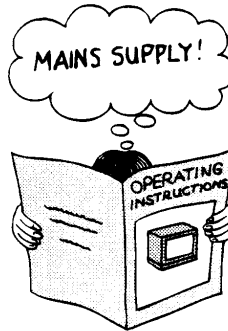


This television receiver should be operated only from the type of power source indicated on the television or as indicated in the Operating Instructions. If you are not sure of the type of power supply in your home, consult your sales person or your local power company.

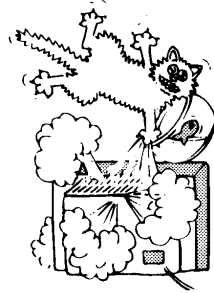


**Never** add accessories that have not been specifically designed for this television.


**Do not** drop or push objects into the television cabinet slots or openings. Some internal parts carry hazardous voltages and contact may result in an electric shock hazard. **Never** spill liquids of any kind on the television receiver.

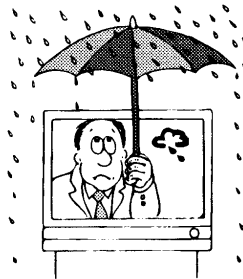

**Do not** expose the television receiver to rain or use near water. For example, near a bathtub, kitchen sink, in a wet basement, etc. Before cleaning, unplug the television receiver from the wall socket.

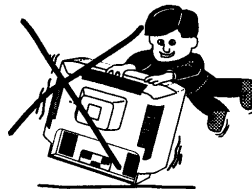

**Never** stand on, lean on or push suddenly the television or its stand. You should pay special attention to children. Serious injury may result if it should fall.

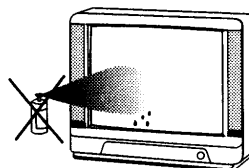


**Do not** apply liquid cleaners or aerosol cleaners directly onto the television receiver. Use a damp cloth for cleaning.

# INSTALLATION


## Aerial Connection

- Insert an aerial plug tightly into the aerial socket on the back of the TV set.
- For all aerial problems please consult your local dealer.
- The connection to the peripheral AV equipment, refer to section "CONNECTION OF AV EQUIPMENT" on page 16.

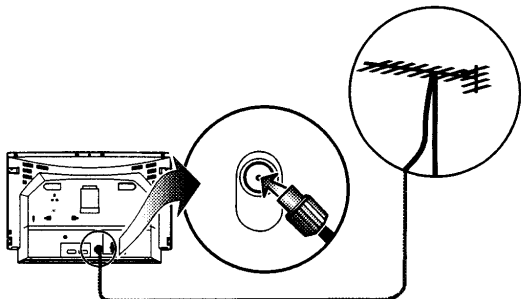


## Surround Speakers

- Check if the Internal/External speaker selector on the back of the TV set is in the **INT.** position.
- Connect the two rear surround speakers to the connector clips on the back of the TV set.
- Connect the left rear surround speaker at **REAR L** and the right rear surround speaker at **REAR R** on the back of the TV set.
- Push the connector clip down and insert the end of the wire into the opening: the positive wire (marked with white line) to the red surround speaker connection; the negative wire to the black surround connection. Do not insert the wires too far.
- The rear surround speakers should always be located behind or to either side of the listener. If preferred you can also hang the rear surround speakers on the wall.
- If you want to use the external speakers instead of the internal front speakers, connect the external left front speaker at **FRONT L** and the right front speaker at **FRONT R** on the back of the TV set, and then switch the Internal/External speaker selector to **EXT.** position.

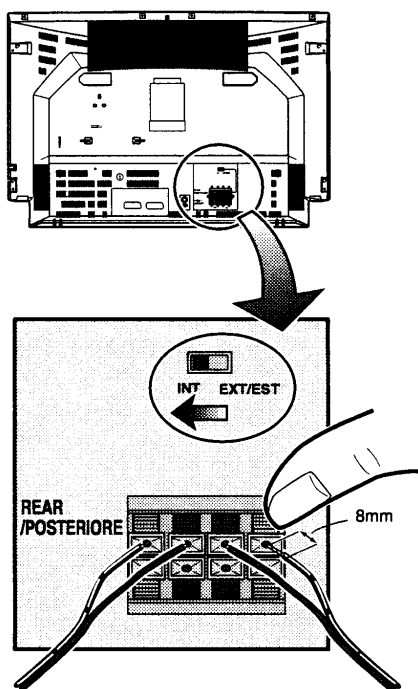

## Battery Installation


1. Remove the battery cover by sliding it in direction of the arrow.
2. Install two "AA" 1.5 volt batteries so that the "+" and "-" marks on the batteries match the "+" and "-" marks inside the unit.
3. Close the battery cover.

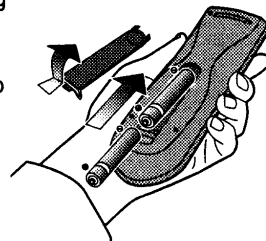

**NOTE:** Replace the batteries when the TV set is showing the following symptoms: Operation is unsteady or erratic, sometimes the TV does not work with the transmitter. Discharged batteries may leak and damage the unit. The normal life of batteries should be from nine to ten months.

## Mains Supply

The TV set is prepared for a mains voltage AC220~240V, 50Hz. Connect the power cord of the TV set to a wall outlet. When the TV set is not to be used for an extended period of time, it is advisable to disconnect the power cord from the power outlet.

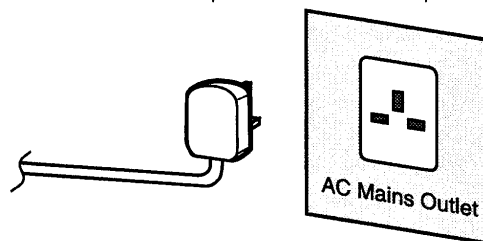

### WARNING!

High voltages are used in the operation of this set. Refer service to qualified service personnel.

### Important:

This equipment is fitted with an approved non rewirable UK mains plug. To change a fuse in this type of plug proceed as follows:

1. Remove the fuse cover and fuse.
2. Fit a new fuse which should be a BS1362 5Amp A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a rating of 5Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5Amp.

**Note:** The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13Amp socket elsewhere.

The wires in this mains lead are coloured in accordance with the following code:

**Blue** -----> **Neutral**  
**Brown** ----> **Live**

1. The Blue wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2. The Brown wire must be connected to the terminal with the letter "L" or coloured RED.
3. **Do not** connect either wire to the earth terminal in the plug which is marked with the letter "E" or by the earth symbol or coloured GREEN or GREEN and YELLOW.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the wires.

# INSTALLATION

## Automatic Channel Set up


This TV set provides a self-automatic tuning and sorting function called "Plug & Play". The first time you switch on this TV set, it will automatically begin to search and store all available channels.

**Please make sure that the aerial cable is connected to the aerial socket of the TV set before switching-on.**

**To receive the satellite broadcasting, a satellite tuner is required. Before carrying out the automatic setting up, receive the satellite broadcasting on the satellite tuner.**

1. Press the **Mains ON/OFF** switch on the front of the TV.


The power indicator illuminates red to show the power is on.

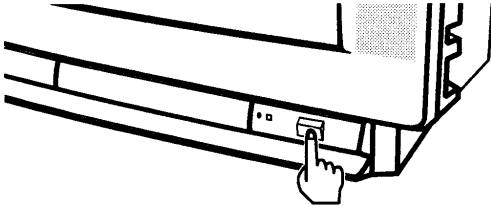


If no picture appears but the power indicator is on, press the **⏻**, **▶**, **▶** or **0-9** button as the TV set is in the standby mode.

● A self-automatic tuning and sorting system will be started as follows;

*The tuning status and welcome messages will appear on the screen.*

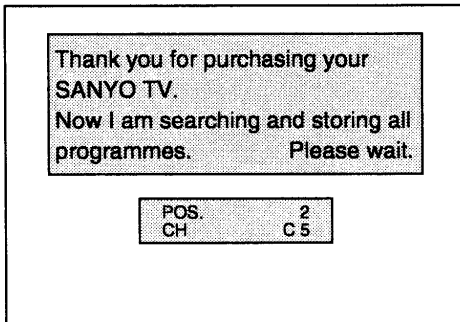

*After completing this procedure, the ending messages appear on the screen.*

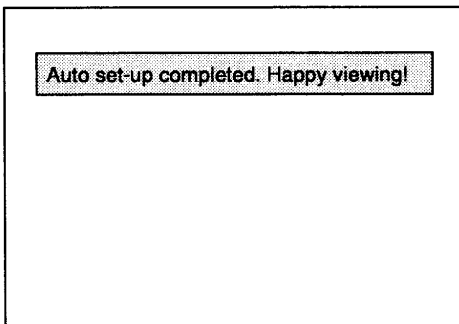

To make this message disappear, press any of the control buttons.

**Now the installation is completed !**

## Channel Sorting

The channels are stored in consecutive programme positions starting at programme position "7". After all receivable channels have been found and stored, the TV set automatically allocates following major stations in the UK into the programme positions 1 to 6.

<b>BBC1</b>	<b>BBC2</b>	<b>ITV</b>	<b>CH4</b>
<b>CH5</b>	<b>SKY</b>	<b>BBC-W</b>	<b>BBC-P</b>

**CH4** : Channel 4 or S4C

**SKY** : SKY GOLD, SKY SPORTS.etc

**BBC-W** : BBC World, BBC Worldwide feature 1

**BBC-P** : BBC Prime

Programme position 1 : BBC1

Programme position 2 : BBC2

Programme position 3 : ITV

Programme position 4 : CH4 or S4C

Programme position 5 : CH5


Programme position 6 : SKY, BBC-W or BBC-P

If any of them are not available in your reception area, some programme positions from 1 to 6 will not have a stored station. The remaining stations will be stored from programme position 7 in sequence as found.

This procedure only appears the first time you switch on.

If additional channels become available (you move to another city or cable is installed), please follow the description "PRESETTING". (on pages 19 & 20).

# CONTROLS

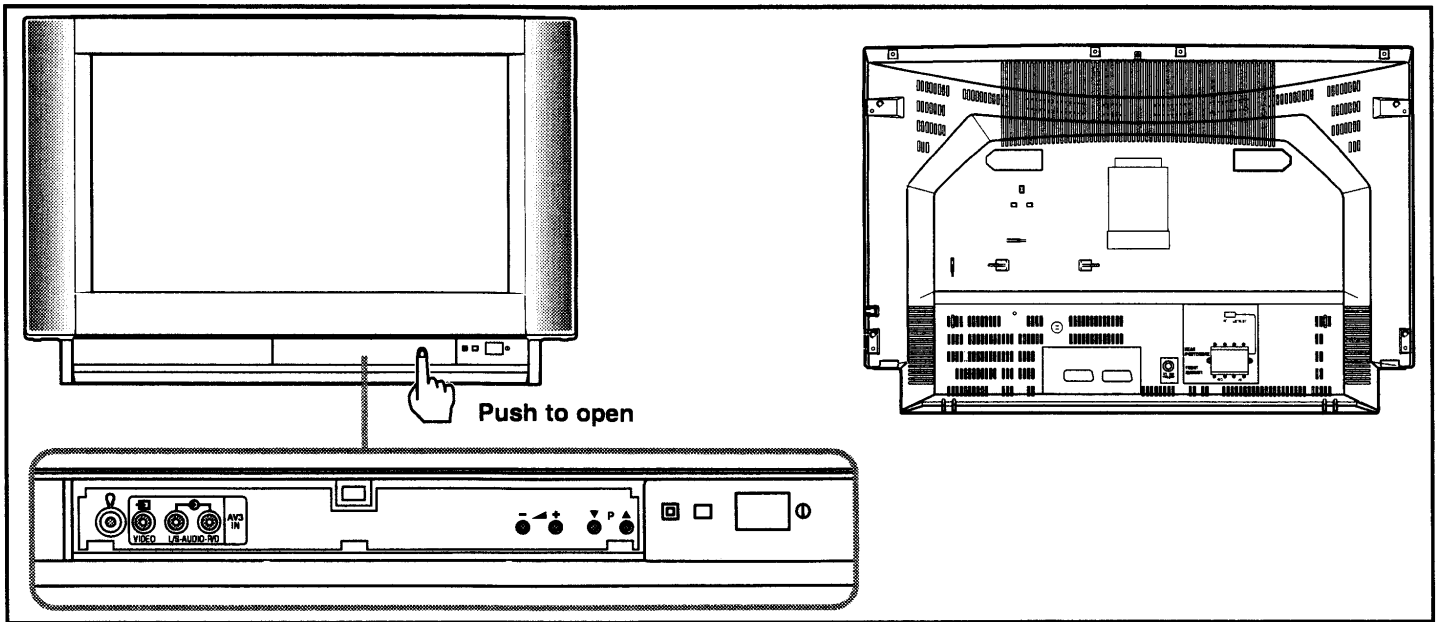


## Controls and Terminals on TV

Symbol	Function
	Mains On/Off switch
	Programme Down/Up
	Level Down/Up
	Video input AV3
	Audio input L R AV3
	Headphone socket

## Controls on the Remote Control Handset


Symbol	Function
	Pointer Up/Down operates as the Programme Down/Up button
	Pointer Left/Right operates as the Level Down/Up button
	Programme Down/Up
	Level Down/Up
	TV/AV selector
	Sound attenuation
	Power on/Standby
<b>MENU</b>	Menu function call
<b>SURROUND</b>	Active 3D & Dolby Pro Logic surround mode selector
	Picture setting recall
	Programme status call
	Time display
<b>BASS</b>	Bass
<b>0-9</b>	0-9 Numeric buttons
<b>-/-</b>	Digit
<b>CS</b>	Channel Selection mode selector
<b>F[ ]/OK</b>	Function or OK
	Timer setting
<b>VA•B</b>	Nicam/Bilingual selector
<b>P⇌P</b>	Previous programme selector
<b>WIDE</b>	Screen Mode selector

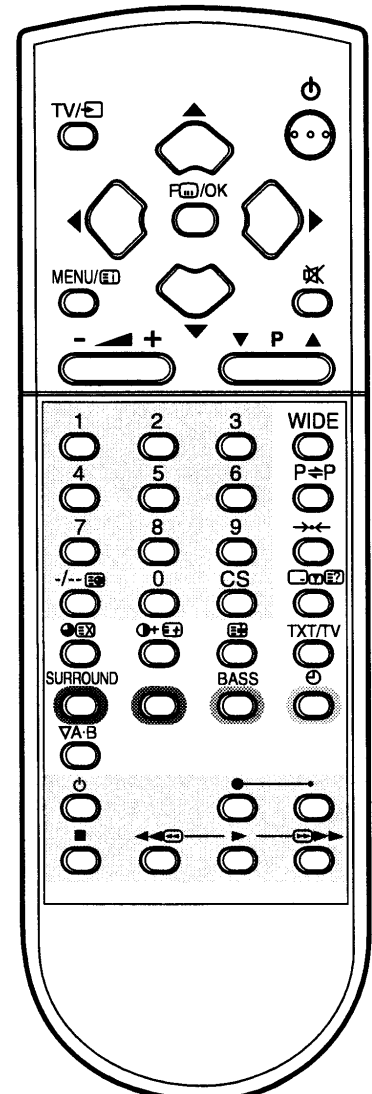

# GENERAL OPERATION

## Mains ON/OFF

- To turn the TV set ON, press the **Mains ON/OFF switch**. The power indicator illuminates to show the power is on.

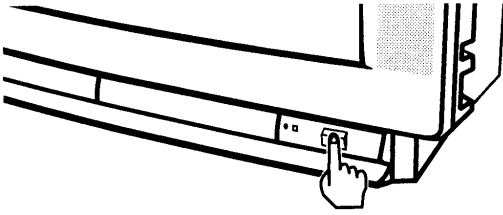

If no picture appears but the power indicator is on, press the **⏻ button, P▲, P▼ or 0-9 button** as the TV set is in the Standby mode.

- To turn the TV set OFF, press it again.

## Standby

- To turn the TV set into standby mode, press the **⏻ button**. The power indicator illuminates more brightly.
- To turn the TV set ON from standby mode, press any of the following buttons: **⏻, P▲, P▼ or 0-9 buttons**.

In the Standby mode the TV set is still partially powered, this is denoted by the red Standby/Power indicator illuminating more brightly than in Power mode.

The **Mains ON/OFF switch** must be in the ON position before the using remote control transmitter.

**NOTE:** It is not possible to turn on with the **Mains ON/OFF switch** from the standby mode.




Be sure to set the **Mains ON/OFF switch** to the off position, if a power failure occurs while viewing.



If you found a power indicator flashing, please turn the TV set off completely with the **Mains ON/OFF switch** and contact our Service desk. This warning is a sign to let you know that the power protection function of this TV set is now operating.

## Auto Shut Off

This TV set will automatically switch into the standby mode, 10 minutes after a signal is no longer received. The time until the set will switch off is displayed on the screen.

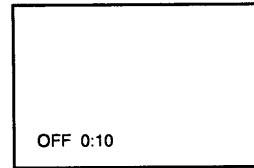

- If the aerial is removed the TV set will automatically switch into the standby mode after 10 minutes.
- When the TV set is switched on by using the On-timer function with no signal being received, the auto-shut off function will be ignored.


## Programme Selection

### ■ Direct Programme Selection

For selection of programme position 0 to 9, press the corresponding **numeric button**. If the required programme is equal or more than 10, for example 23, first press the **-/- button** and enter 2 then 3.

### ■ Up/Down Programme Selection


Press the **P▲ button** to increase the programme position. Press the **P▼ button** to decrease the programme position.

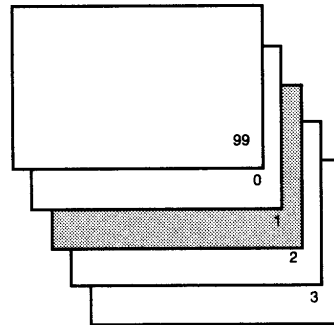

# GENERAL OPERATION

## Sound & Picture Settings

 To adjust the sound volume, press the + / - button.



Press the **F** / **OK** button repeatedly to select your desired control and then press the + or - button.

### Picture Controls

**CONTRAST** : To adjust the picture contrast.

**BRIGHTNESS** : To adjust the picture brightness.

**COLOUR** : To adjust the picture colour.

**TINT**: To adjust the colour phase (appears when receiving a NTSC signal only).

**SHARPNESS** : To adjust the picture sharpness.

**TEXT BRIGHTNESS** : To select the teletext brightness level of the teletext mode.

**FINE TUNING** : To make fine adjustments to tuning. (appears in TV mode only)

### Sound Controls

**BASS** : To adjust low frequency sounds.

**TREBLE** : To adjust high frequency sounds.


 
**BALANCE** : To equalise the output from the left and right speakers.

## Sound Attenuation

This function has two sound mute stages. Press the button once, the sound from the speakers will be reduced, press it again and it will be muted completely.

Press the button again to switch the sound back on.

When the + / - button is pressed, the sound attenuation is cancelled.

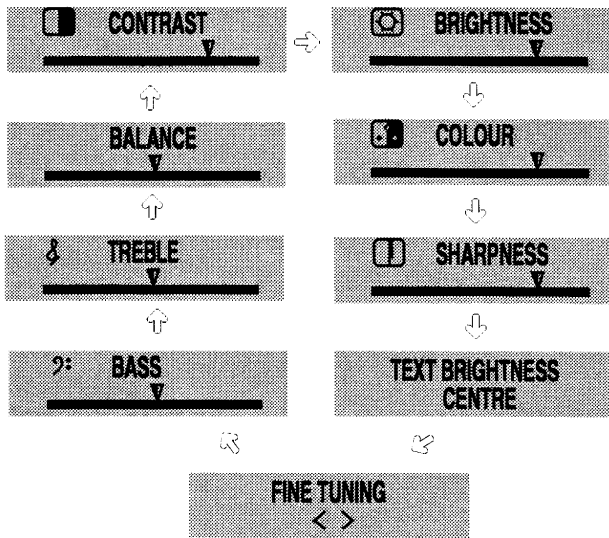





# GENERAL OPERATION

## Picture adjustment using the menu function

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **PICTURE** menu.
2. Press the **F** / **OK** button.
3. Use the **▲** or **▼** button to highlight the desired control from the menu eg. **BRIGHTNESS**.

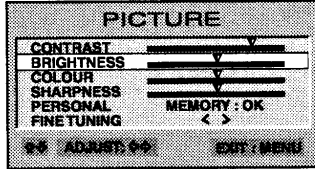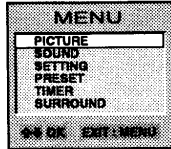

4. When pressing the **◀** or **▶** button once, the screen display will change for selected control mode, and then press and keep button to change desired picture control level. The mode returns to control selecting mode in 3 seconds if no key pressed.





Repeat steps 3-4 for setting the proper picture levels.

To return to the TV mode, press the **MENU** button.

## Sound adjustment using the menu function

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **SOUND** menu.
2. Press the **F** / **OK** button on the remote control handset or the **OK** button on the TV front panel.
3. Use the **▲** or **▼** button to highlight the desired control from the menu eg. **BASS**.

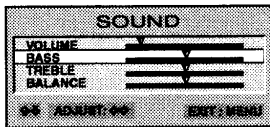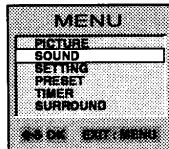

4. Press the **◀** or **▶** button to adjust the selected control level up or down.

To return to the TV mode, press the **MENU** button.

## Picture mode selection and personal preference setting


This TV provides predefined three picture modes and one adjustable personal picture preference mode. You can choose your preferred picture mode by pressing the **→◀** button repeatedly.

**PERSONAL** : Personal preference mode.

**STANDARD** : Normal viewing mode.



**ECO** : Low contrast, brightness and colour picture setting (Suitable for dimly lit rooms and gives a cinema-like effect which the lights are switched off, or Economical mode).

**DYNAMIC** : High contrast, brightness and colour picture setting (Suitable for brightly lit rooms).

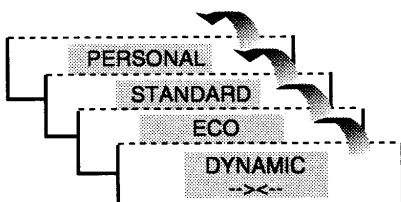

## To store your personal preference into "PERSONAL" mode

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **PICTURE** menu and press the **OK** button.
2. Adjust picture controls to your preferred control level by using the **▲**, **▼** or **◀**, **▶** buttons.
3. Use the **▲** or **▼** button to highlight the **PERSONAL** menu and press the **F** / **OK** button. The control window will momentarily blink to show the memorisation.

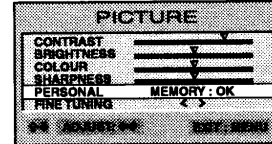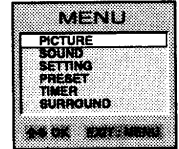

To return to the TV mode, press the **MENU** button.

The fine tuning control level will not be memorised into the "PERSONAL" mode.


# GENERAL OPERATION

## Auto Volume Level

Sometimes we notice a volume level difference between the receiving sources, such as on-air programs and VCR playback, channels, and programmes and commercials. When this function is set to "ON" the TV set automatically equalises the volume level difference to make a standard volume level.


### ● SETTING

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **SETTING** menu.

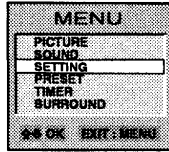

2. Press **OK** button.

3. Use the **▲** or **▼** button to highlight the **AUTO VOLUME** menu. Select "ON" or "OFF" by pressing the **◀** or **▶** button.

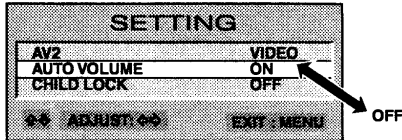


To return to the TV mode, press the **MENU** button.

## Child Lock

This TV has a child lock function which inhibits the use of the buttons on the front of the TV set. With this you can prevent small children unexpectedly pressing buttons.


### ● SETTING

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **SETTING** menu.

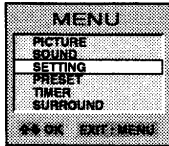


2. Press the **OK** button.

3. Use the **▲** or **▼** button to highlight the **CHILD LOCK** menu. Select "ON" or "OFF" by pressing the **◀** or **▶** button.

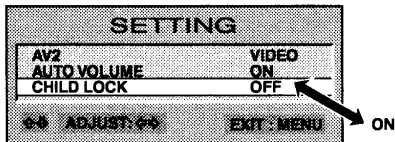


To return to the TV mode, press the **MENU** button.

To cancel the child lock mode, follow the above procedure and you should select "OFF" in step 3 or switching off the TV set with the **Mains ON/OFF**  switch.

## Time Display


In the TV mode, if the receiving programme has a teletext service when the **⊖** button is pressed, the present time will be displayed on the screen for 5 seconds.

## Programme Information Display

Press the  button once, the programme information such as current programme number, stereo status, remaining timer if set and colour system.

## Previous Programme Selection

Press the **P≡P** button and the TV set will alternately select the current programme position and the previous programme position viewed.

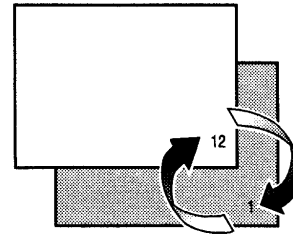

# GENERAL OPERATION - SCREEN OPTIONS

## WSS (Wide-Screen-Signaling)

This function is to be automatically set to the optimum screen mode for the wide screen television according to the aspect ratio bits of the picture format (16:9, 14:9, 4:3, etc.) on the teletext broadcast. To use this function, the picture mode should be selected to the "AUTO" mode and the picture format information is available on the teletext service.

### Selection of Picture Sizes

The size of the picture image can be selected in many modes, the resultant picture will depend upon the transmission format. Currently pictures are transmitted in a variety of aspect ratios, eg. 4:3, 16:9, 14:9 or video formats such as letterbox. To select the picture modes press the **WIDE** button, each time it is pressed the mode changes as follows.

#### ■ AUTO

**4:3:** This will automatically switch to the NATURAL WIDE mode.

**14:9:** This will automatically switch to the NATURAL WIDE mode.

**16:9:** This will automatically switch to the NATURAL WIDE mode.

**LETTERBOX:** Automatically detects the black bands at the top and bottom of the screen and switches to ZOOM 16:9 mode.

#### ■ NATURAL WIDE

**4:3:** Stretches the picture horizontally and fills the screen, the picture is more stretched at the sides.

**14:9:** Height is expanded to fill screen.

**16:9:** Fills the whole screen with the correctly proportioned picture.

**LETTERBOX:** The black bars top and bottom remain and the height is compressed to fit into the picture area.

#### ■ ZOOM (14:9)

**4:3:** The correct picture width is maintained but the top and bottom of the picture are cropped.

**14:9:** Zooms in slightly cropping the top and bottom.

**16:9:** Zooms in slightly cropping the top and bottom.

**LETTERBOX:** The black bars top and bottom are smaller and the pictures height is compressed slightly.

#### ■ TITLE IN (14:9)

**4:3:** Zoom as zoom 14:9 but the bottom half of the picture is compressed to show more image to include sub titles.

**14:9:** The bottom half of the picture is compressed to show sub titles.

**16:9:** The bottom half of the picture is compressed to show sub titles.

**LETTERBOX:** The bottom half of the picture is compressed to show more image to include sub titles. A small black bar becomes visible.

#### ■ ZOOM (16:9)

**4:3:** The correct picture width is maintained but the top and bottom of the picture are cropped more than in zoom 14:9.

**14:9:** Zooms in slightly cropping the top and bottom more than in zoom 14:9.

**16:9:** Zooms in slightly cropping the top and bottom more than in zoom 14:9.

**LETTERBOX:** Fills the screen with the correct proportions with no black bars.

#### ■ TITLE IN (16:9)

As Zoom 14:9 TITLE-IN but the picture is compressed more at the bottom.

#### ■ FULL

**4:3:** The whole screen is filled stretching the width.

**14:9:** The whole screen is filled with the height slightly expanded at the edges.

**16:9:** The whole screen is filled with the correct aspect ratio.

**LETTERBOX:** A black bar is present top and bottom with the picture compressed to fit the height.

#### ■ NORMAL

**4:3:** The correct ratio is maintained giving black bars left and right.

**14:9:** Black bars left and right the height is stretched to fill the height.

**16:9:** Black bars left and right the height is stretched to fill the height.

**LETTERBOX:** Black bars left and right and top and bottom.

RECEPTION⇒	4:3	14:9	16:9	Letterbox Video
MODE				
AUTO				
NATURAL WIDE				
ZOOM (14:9)				
TITLE-IN (14:9)				
ZOOM (16:9)				
TITLE-IN (16:9)				
FULL				
NORMAL				

# GENERAL OPERATION - SOUND OPTIONS

## Selection of Surround Mode

This TV provides the following surround modes. Please select the optimum surround mode according to your speaker placement and receiving signal source. The below table shows our recommended surround mode for input source and speaker system.

Source	Speaker system	Recommended surround mode
Encoded Dolby Surround	Front L/R	--
Dolby Surround	Front-L/R, Centre	Dolby 3 Stereo
	Front-L/R, Centre, Surround	Dolby Pro Logic Surround
Stereo	Front-L/R, Centre, surround	3D Pro Surround
Stereo or Monaural	Front-L/R	Active 3D Surround

**Note:** This TV has built-in centre speakers on both the left and right sides.

There are 2 ways to select desired surround mode as below:


### ● Use of SURROUND button

Press the **SURROUND** button repeatedly, the surround mode changes as follows;


**DOLBY PRO LOGIC SURROUND -> DOLBY 3 STEREO -> 3D PRO SURROUND -> ACTIVE 3D SURROUND -> SURROUND OFF ->**

### ● Use of Menu function


1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **SURROUND** menu. Press the **F** / **OK** button.

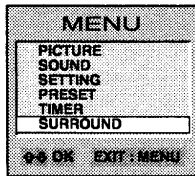


2. Use the **▲** or **▼** button to highlight the **SURROUND** menu. Press the **F** / **OK** button.

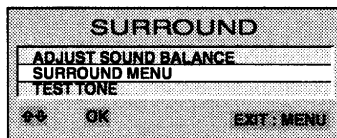


3. Use the **▲** or **▼** button to select your desired surround mode and then press the **F** / **OK** button.

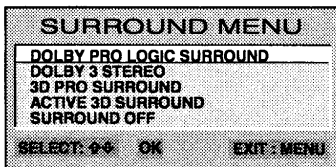

Selected mode is momentarily displayed on the screen.

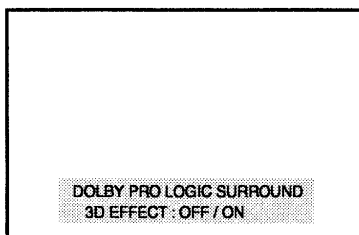

## What is Dolby Pro Logic Surround ?

 


Manufactured under license from Dolby Laboratories Licensing Corporation. Dolby, the double-D symbol and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.

This TV set is equipped with a Dolby Pro Logic Surround decoder which gives you an enhanced audio visual experience when watching programmes encoded with Dolby Surround. In Dolby Pro Logic Surround system, in addition to the left and right sound channels there are two special sound channels available by giving to the sound a three dimensional quality. A centre channel is added to balance stereo image because the traditional stereo sound is effective only for viewers sitting near the centre axis of the screen. A rear surround channel is added to give depth and presence to the surround image.

### ■ DOLBY PRO LOGIC SURROUND

This mode is recommended when you watch a movie or programme which is encoded with Dolby Surround. It is marked with **DD** **Dolby Surround**. The left and right front speakers, the centre and rear surround speakers reproduce the Dolby Pro Logic Surround sound.

DOLBY PRO LOGIC SURROUND  
3D EFFECT: OFF / ON

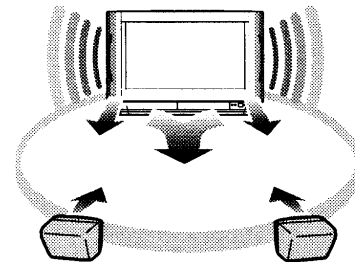


DOLBY PRO LOGIC SURROUND

**3D EFFECT : ON** To add an enhanced 3 dimensional sound effect to the receiving sound source, select 'On' by pressing the **+** or **-** button while the 3D effect display is still on the screen.

### ■ DOLBY 3 STEREO

This mode is recommended when the rear surround speakers are not connected and you want to watch a movie or programme which is encoded with Dolby Surround. It is marked with **DD** **Dolby Surround**. You can obtain the Dolby Pro Logic Surround effect through the left and right front and centre speakers.

DOLBY 3 STEREO  
3D EFFECT: OFF / ON

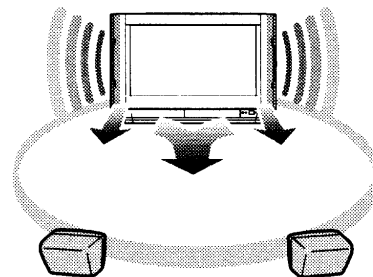

DOLBY 3 STEREO


**3D EFFECT : ON** To add an enhanced 3 dimensional sound effect to the receiving sound source, select 'On' by pressing the **◀** or **▶** button while the 3D effect display is still on the screen.

## GENERAL OPERATION - SOUND OPTIONS

### ■ 3D PRO SURROUND

This mode is recommended when you wish to add the surround sound to a programme not encoded with Dolby Surround or movie. This TV provides an active 3D surround processor which can realise an incredible 3 dimensional sound effect when receiving a standard stereo signal, bilingual signal or monaural signal.

#### 3D PRO SURROUND

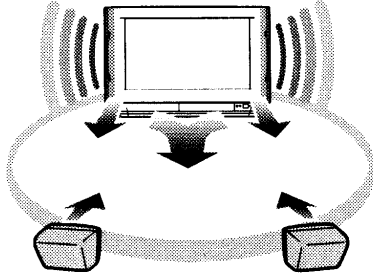


3D PRO SURROUND

### What is Active 3D surround?

In traditional stereo sound, left and right channels combine to create a stereo image. Better speakers can create a larger perceived sound stage, so sound seems to emanate from a few feet behind the monitor. Sound can have a much wider presence with Active 3D surround technologies. Music and sound effects appear to come from points in the room far from the speakers. Objects (such as jets) seem to move towards and then past the listener, whilst the important channel sound still appears to come from the centre of the screen.




The QSound Trademarks are registered in the United States, Canada and numerous foreign countries. QXpander™ is a trademark of QSound Labs, Inc.

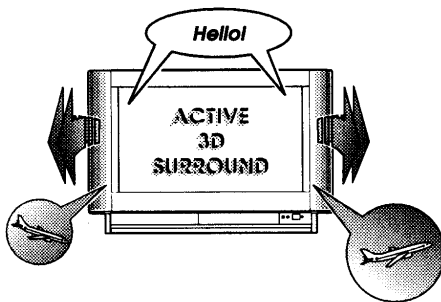

### ■ ACTIVE 3D SURROUND

This mode is recommended when you wish to add the surround sound to a programme not encoded with Dolby Surround or movie. This TV provides an active 3D surround processor which can create a 3 dimensional sound effect when receiving a standard stereo signal, bilingual signal or monaural signal. You can choose the following 3D surround modes by pressing the ◀ or ▶ button while the active 3D surround display is still on the screen.

#### ACTIVE 3D SURROUND ACTIVE / MONO

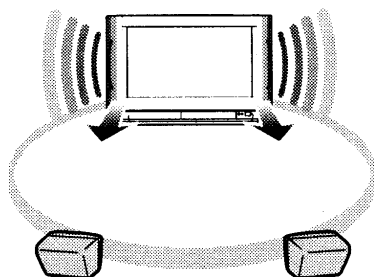

ACTIVE 3D SURROUND


**ACTIVE** : Normal 3D surround sound, set to give the optimum 3D surround effect.

**MONO** : This mode is specially prepared for Nicam-mono broadcasting. Select this mode, when you can not get the 3D surround effects even is the status is Nicam stereo. You may feel 3D surround effect.

### ■ SURROUND OFF

This mode reproduces only the left and right front sound signals. The rear and centre speakers are not active.

#### SURROUND OFF

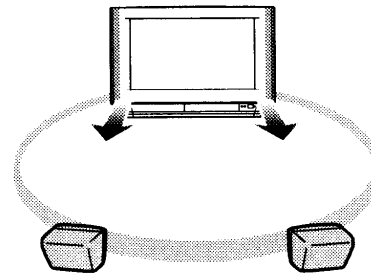

SURROUND OFF

If the receiving signal source is a monaural programme, and the surround mode is selected to the **DOLBY PRO LOGIC SURROUND**, **DOLBY 3 STEREO** or **3D PRO SURROUND** the sound only reproduces from the centre speaker. In this case, you should select the **ACTIVE 3D SURROUND** or **SURROUND OFF** mode.


### ■ Guidance for the best enjoyment of active 3D surround and Dolby Pro Logic Surround

#### Optimum positioning

Sit at a distance of approximately 2 to 4 meters from the TV set.

Listen facing the centre of the TV set.


Remove any obstructions between you and the TV set.

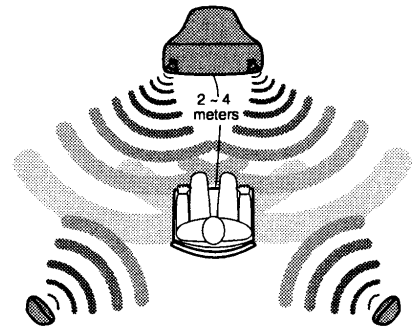

## Stereo Bilingual Reception


### ■ Nicam sound reception

If the TV receives nicam programs, it automatically switches to nicam sound reception. The word "NICAM" appears on the screen briefly.

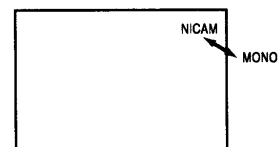

### ■ Bilingual reception

If the TV receives bilingual programs, the TV initially selects language A and displays "A" on the screen briefly. If you want to switch to language B or Mono, press the ◀A▶ button.

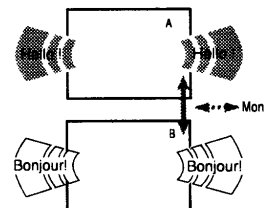


If the nicam sound reception is poor in quality, you can switch to "MONO" sound reception by pressing the ◀A▶ button.

# GENERAL OPERATION - SOUND OPTIONS


## Adjusting of sound balance

If you wish to adjust the sound level for each speaker individually, proceed as follows:

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **SURROUND** menu.
2. Press the **F** button on the remote control handset or the **OK** button on the TV front panel.

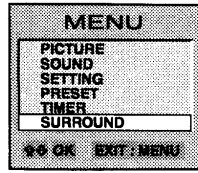


3. Use the **▲** or **▼** button to highlight the **ADJUST SOUND BALANCE** menu. Press the **F** button.

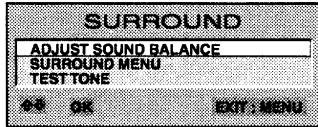

Current surround mode is selected. If you want to change the surround mode, press the **▲** or **▼** button.

4. Use the **▲** or **▼** button to highlight the desired control from the menu as follows and adjust the level by pressing the **◀** or **▶** button.

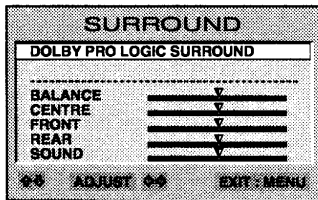

- BALANCE** : To equalise sound level from the left and right front speakers.
- CENTRE** : To adjust sound level from the centre speaker.
- FRONT** : To adjust sound level from the front speakers.
- REAR** : To adjust sound level from the rear surround speakers.
- SOUND** : To adjust the whole of sound level.

To return to the TV mode, press the **MENU** button.

Blacked out controls may appear depending on the selected surround mode or centre mode, as these controls are not available.

To obtain the best sound performance, please set the front sound level to the centre or greater. When it is set around the minimum level an adequate sound output may not be obtained.


The following table shows the adjustable sound controls under the each surround mode.

Surround Mode \ Controls	Balance	Centre	Front	Rear	Sound
3D Pro Surround	✓	✓	✓	✓	✓
Dolby Pro Logic Surround	✓	✓	✓	✓	✓
Dolby 3 Stereo	✓	✓	✓	--	✓
Active 3D Surround	✓	--	--	--	✓
Surround Off	✓	--	--	--	✓


## Setting of sound balance with test tone

For optimum surround sound performance, adjust the sound volume as follows. The adjustment can be made at the listening point using the remote control handset.

1. Press the **MENU** button to display the main menu. If required use the **▲** or **▼** button to highlight the **SURROUND** menu.
2. Press the **F** button on the remote control handset.

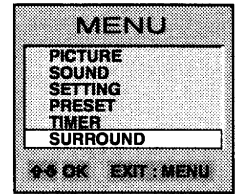


3. Use the **▲** or **▼** button to highlight the **TEST TONE** menu.

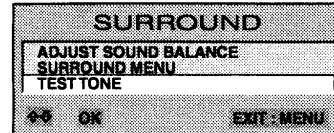

Press the **F** button on the remote control handset or the **OK** button on the TV front panel. The steady noise tone is switched sequentially through the left, right, centre speakers and rear surround speakers for about 2 seconds each. The active speaker is represented with the red screen text, and allows you to adjust the sound level.

- **DOLBY PRO LOGIC SURROUND-WIDE/NORMAL**  
Front Left → Front Right → Centre → Rear →
- **DOLBY 3 STEREO**  
Front Left → Front Right → Centre

4. Adjust each sound level by pressing the **◀** or **▶** button until the sound level from each speaker sounds the same.

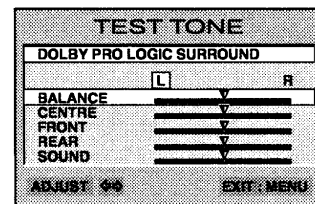

5. To return to the TV mode, press the **MENU** button.

When you wish to adjust the whole of sound volume, press the **▲** or **▼** button on the TV set.

The blanked out controls may appear depending on the selected surround mode or centre mode.

To obtain the best sound performance, please set the front sound level to the centre or greater. When it is set around the minimum level an adequate sound output may not be obtained.

## MaxxBass: Virtual Subwoofer™

This television includes MaxxBass, the most advanced signal processing available for enhanced bass audio response. This patented digital technology transforms your television speaker system into a Virtual Subwoofer™, thereby producing a richer, psychoacoustically-pleasing bass sound usually associated with high-end audiophile systems. You can choose your preferred level of MaxxBass response from the following menu options:

You can choose your preferred bass mode by pressing the **BASS** button repeatedly.

**VIRTUAL SUBWOOFER ON: CINEMA**  
**VIRTUAL SUBWOOFER ON: STUDIO**  
**VIRTUAL SUBWOOFER OFF**

VIRTUAL SUBWOOFER  
ON: CINEMA

VIRTUAL SUBWOOFER  
ON: STUDIO

VIRTUAL SUBWOOFER  
OFF

# CONNECTION OF AV EQUIPMENT

## Using AV Equipment

You can connect a VCR, S-VHS VCR, Satellite Tuner, PAY TV Decoder or Camcorder, as this TV has three Scart terminals on the rear panel and one pair of AV input terminals on the front panel.

### ■ Selection of AV mode


Most AV equipment will automatically switch to the AV mode (because of the pin 8 function signal) by pressing the PLAY button on your AV equipment. If not, press the TV/□ button to select the desired AV mode manually.

### ■ Setting of AV2 input mode


If you want to use a VCR which is equipped with the S-VHS capability, to obtain the best performance, you should connect to the AV2 terminal and select the S-Video mode in the AV2 mode.

### ● SETTING

1. Press the **MENU** button to display the main menu. Use the ▲ or ▼ button to highlight the **SETTING** menu.

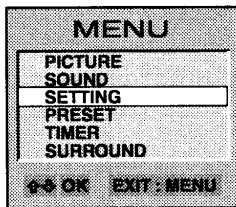

2. Press the **F** / **OK** button on the remote control handset or the **OK** button on the TV front panel.
3. Use the ▲ or ▼ button to highlight the **AV2** menu. Select "S-VIDEO" or "VIDEO" by pressing the ◀ or ▶ button.

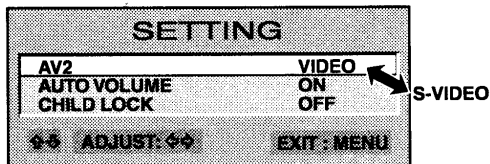

To return to the TV mode, press the **MENU** button.


### ■ Use of front AV3 terminal

This TV provides one pair of AV input terminal on the front panel. It is very convenient for use as a game or camcorder connection.

Press the TV/□ button to select the AV3 mode.

### ■ Selection of the sound track from the equipment


By pressing the **VA-B** button repeatedly, you can select the sound track L (left), R (right) or L/R from the equipment connected to the scart terminals or the front AV terminal.

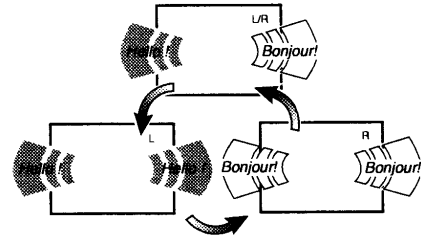

### ■ Selection of colour system

By pressing the **Y** button repeatedly in the AV mode, the colour system mode will be changed as follows;

AUTO -> PAL -> NTSC4.43 -> NTSC3.58 ->

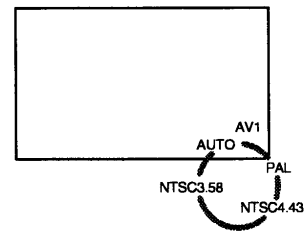

## VCR Use

This remote control transmitter has been designed to be used in conjunction with selected **SANYO VCR's**. Some SANYO VCR's may have their own functions, so please refer to the individual instruction booklet when using this remote control to ensure compatibility.

### ⏻ POWER On/Off :

Use to turn VCR power on and off.

### ▶ PLAY :

Use to playback the tape.

### ■ STOP :

Use to stop the movement of the tape.

### ▶▶ FAST/CUE :


Use to advance the tape at fast speed, or in order to playback the tape at fast speed.

### ◀◀ REWIND/REVIEW :

Use to rewind the tape or in order to playback the tape in reverse at fast speed.


### ● RECORD :

Use to record on the tape. Press both of the buttons at the same time.

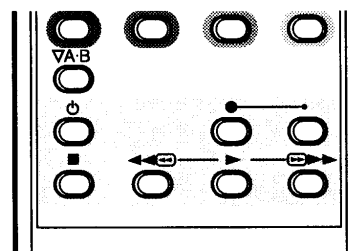

## CONNECTION OF AV EQUIPMENT

The following is our recommended standard connection for AV equipment. There are various types of connections depending on the equipment which you have or its particular use. For further information please consult your local dealer. If you have a S-VHS type VCR, to obtain the best performance it should be connected to the AV2 terminal which has been specially designed for S-VHS. The table below shows usable sources and abilities if you connect your AV equipment according to the standard connection.

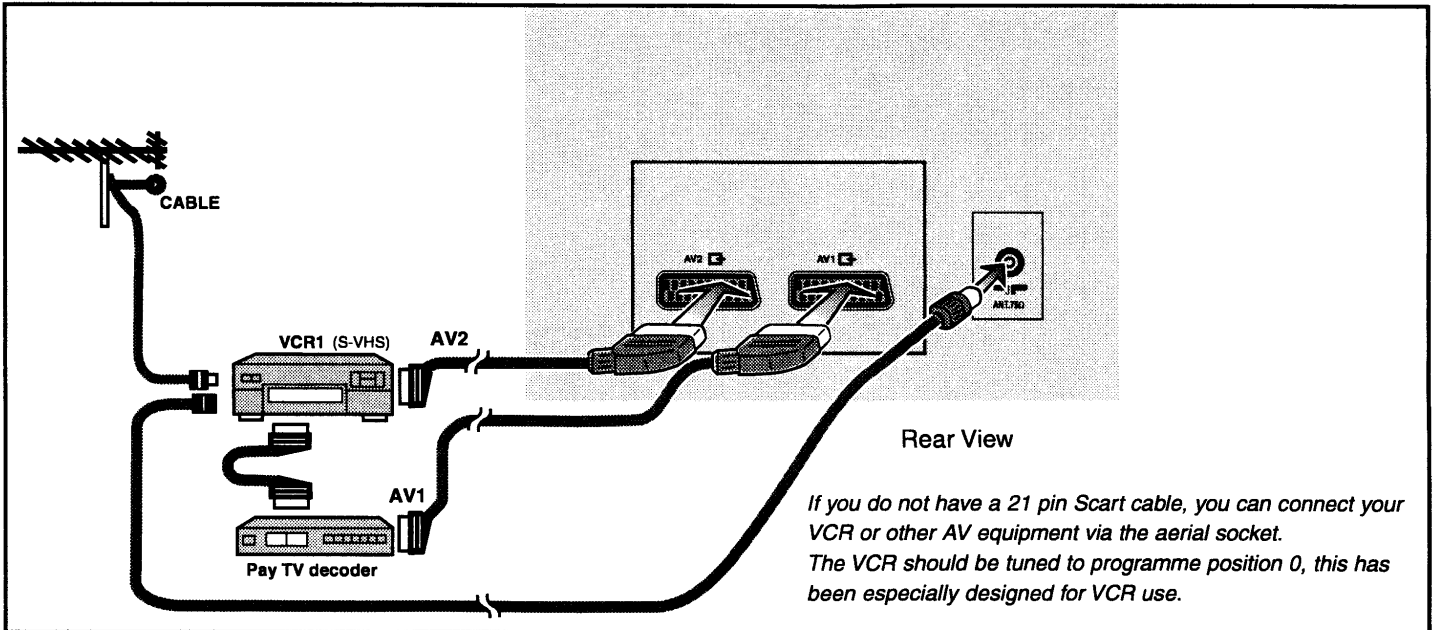


### Use of Camcorder or Game Equipment

#### Connection

- ✓ Connect an RCA cable from the front AV terminal (AV3) to a camcorder or to game equipment.


*For monaural units, connect the sound cable to the L socket.*

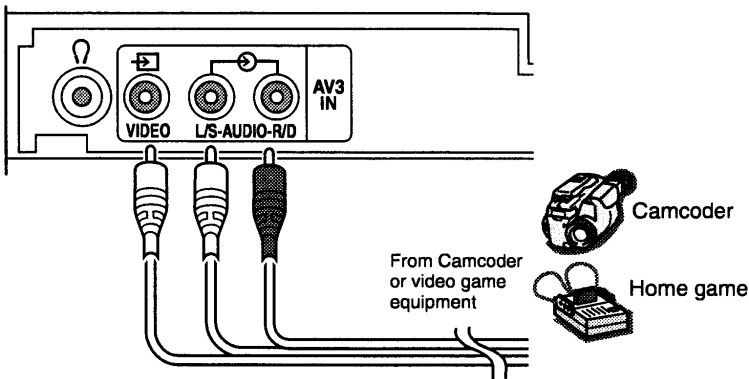

- ☞ *When you insert the video plug to the video socket, the mode is automatically changed to Front AV3 mode.*

### Use of Headphones

The 3.5mm mini-stereo jack socket located behind the door of the TV can be used for headphones.

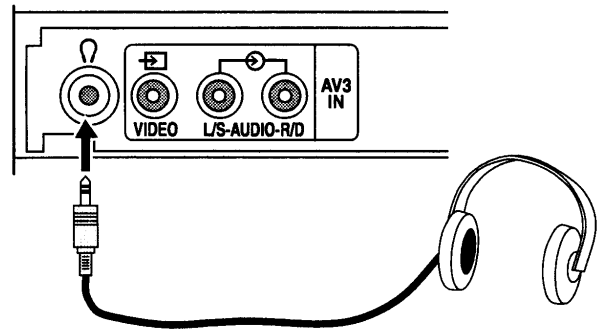

The TV speakers are only muted in **ACTIVE 3D SURROUND** or **SURROUND OFF** mode. In **DOLBY PRO LOGIC SURROUND**, **DOLBY 3 STEREO** and **3D PRO SURROUND** modes the centre, front and rear speakers are not muted. Refer to "Selection of Surround Mode" on pages 12 & 13.



# OTHER FUNCTIONS

## Timer Setting

This TV has three timer functions and you can select the following modes by pressing the **●** button repeatedly.

 
- **Off timer setting** You can select a time period from which the set will switch into the standby mode.
- **On-timer setting** You can set a time period from which the set will switch on from the standby mode.
- **Alarm timer setting** You can set a time which you want to display the time up sign on the screen and the alarm will beep.

Function	Maximum time periods	Step
Off Timer	120 minutes	30 minutes
On-Timer	24:00 Hours	15 minutes
Alarm Timer	3:00 Hours	5 minutes


## Off Timer Setting

### Timer Button Selection

1. Press the **●** button once, the word "OFF TIMER" will appear on the screen.




2. Set the time period by pressing the **◀** or **▶** button. The display changes in 30 minute steps.

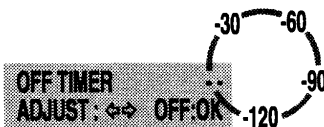


### MENU Selection

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **TIMER** menu.

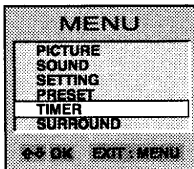


2. Press the **F** / **OK** button.

 3. Use the **▲** or **▼** button to highlight the **OFF TIMER** menu.



4. Highlight the time setting column by using the **◀** or **▶** button, and using the **▲** or **▼** button to select a time period from which the set will switch into the standby mode.

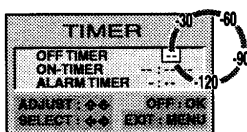

To return to the TV mode, press the **MENU** button.


If you have set a time, then one minute before the TV switches off the remaining minute (-1) automatically appears on the screen.

To cancel the Off timer, select timer "--" by pressing the **F** / **OK** button or using the **▲** or **▼** button until screen display is still on the screen.


## On-Timer Setting
 
### Timer Button Selection

1. Press the **●** button twice. The word "ON-TIMER" will appear on the screen.



 
2. Set the time period by pressing the **◀** or **▶** button. The display changes in 15 minutes steps. The maximum time period is 24:00 hours.



3. Set the start up programme position by using the **▲** or **▼** button.
4. Press the **⏻** button to switch into the standby mode.


### MENU Selection

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **TIMER** menu.

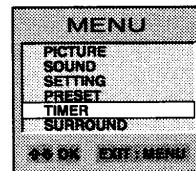


2. Press the **F** / **OK** button.

3. Use the **▲** or **▼** button to highlight the **ON-TIMER** menu.

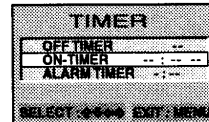

4. Highlight the time setting column or start up program setting column by using the **◀** or **▶** button, and using the **▲** or **▼** button to set a time or program position which you want to switch on from the standby mode.

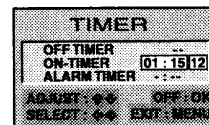

5. Return to the TV mode by pressing the **MENU** button, and press the **⏻** button to switch into the standby mode.

*When it reaches the set on-time, the TV set will switch on and select the start-up programme automatically.*

To cancel the On-timer, select timer "--" by pressing the **OK** button or using the **▲** or **▼** button until screen display is still on the screen.

### Advance

When it reaches the set on-time and the TV set is kept on, the TV set changes automatically to the programme position which you have set the start-up programme in the on-timer function.

- When the TV set is switched on by using the on-timer function, the TV set will automatically switch into the standby mode in 2 hours if no key control is input.

## OTHER FUNCTIONS

### Alarm Timer Setting

 
This function can display the time up sign on the screen as illustrated to let you know that the time has come when the set alarm time is reached. This only happens when the TV is on. This may remind you to do something.

#### Timer Button Selection

1. Press the **●** button three times, the word "ALARM TIMER" will appear on the screen.




2. Set the time period by pressing the **◀** or **▶** button. The display changes in 5 minutes steps. The maximum time period is 3:00 hours.




#### MENU Selection


1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **TIMER** menu.

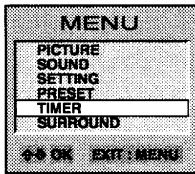


2. Press the **F** button/OK button.
3. Use the **▲** or **▼** button to highlight the **ALARM TIMER** menu.

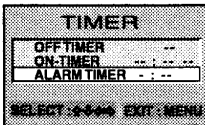

4. Highlight the time setting column by using the **◀** or **▶** button, and using the **▲** or **▼** button to set a time which you want to display the time up sign on the screen and beep a sound.

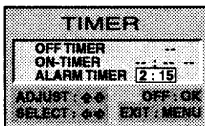

*When it reaches the set alarm time, the time up signal will appear on the screen and the alarm will sound for 15 seconds.*

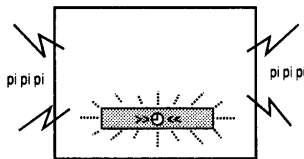

To cancel the Alarm timer, select timer "-:--" by pressing the **OK** button or using the **▲** or **▼** button until screen display is still on the screen.

- When the set alarm time is reached whilst in teletext mode, the TV set automatically returns to the TV mode.

# PRESETTING

Up to 100 broadcast stations in your reception area can be stored in the electronic memory.

There are three modes of pre-setting channels as follows:

## ■ Automatic tuning and sorting (AUTO TUNE/SORT)

All receivable channels are automatically tuned in and stored as specified programme position as follows.

### ■ Channel selection

Used to preset a receivable channel if you know the channel numbers of the stations.


### ■ Manual tuning (PRG. PRESET)

Used to preset a receivable channel in any desired programme position.

**NOTE:** If the presetting functions are not operative refer to "Special Functions" on page 23 to check Item 1 is set to "0".

## Automatic Tuning/Sorting (AUTO TUNE/SORT)

1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **PRESET** menu.

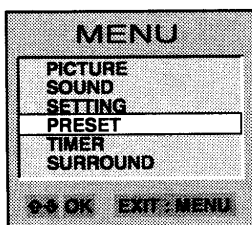


2. Press the **F** button/OK button.

3. Use the **▲** or **▼** button to highlight the **AUTO TUNE/SORT** menu, then press the **OK** button.



4. Press the **F** button/OK button on the remote control handset or the **OK** button on the TV front panel to begin automatic tuning and sorting.

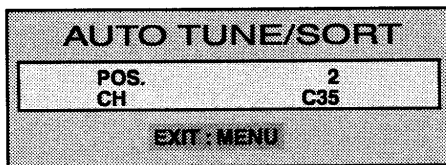

- A self-automatic tuning and sorting system will be started.

The automatic tuning operation can be cancelled at any time by pressing the **MENU** button.

After completing this procedure, the TV set returns to normal TV mode and selects programme position 1.

## Channel Sorting

The channels are stored in consecutive programme positions starting at programme position "7". After all receivable channels have been found and stored, the TV set automatically allocates following major stations in the UK into the programme positions 1 to 6.

<b>BBC1</b>	<b>BBC2</b>	<b>ITV</b>	<b>CH4</b>
<b>CH5</b>	<b>SKY</b>	<b>BBC-W</b>	<b>BBC-P</b>

**CH4:** Channel 4 or S4C

**SKY:** SKY GOLD, SKY SPORTS.etc

**BBC-W:** BBC World, BBC Worldwide feature 1

**BBC-P:** BBC Prime

Programme position 1 : BBC1

Programme position 2 : BBC2

Programme position 3 : ITV

Programme position 4 : CH4 or S4C

Programme position 5 : CH5

Programme position 6 : SKY, BBC-W or BBC-P

You can change the order of station, use the channel swapping function, refer to page 20.

## Channel Selection


■ If you know the channel numbers of the stations you wish to store you can store them in your desired programme positions without having to search for them.

1. Select the programme position where you wish to store a channel.
2. Press the **CS** button on the remote control handset. The current channel number, programme position and channel ID if available will be displayed on the screen.
3. Enter the channel number using the **0-9** numeric buttons.

For example: To enter channel number 2 enter **0** and **2**.  
To enter channel number 35 enter **3** and **5**.

4. While the screen display is still on the screen, press the **F** button/OK button to store in the memory.


The programme and channel number will momentarily flash.

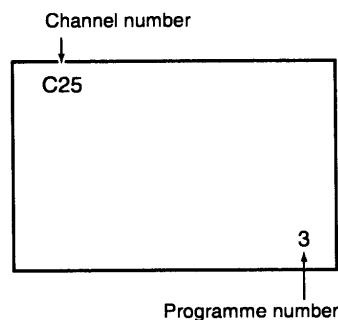


# PRESETTING

## Semi-automatic tuning (PRG.PRESET)


1. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **PRESET** menu.

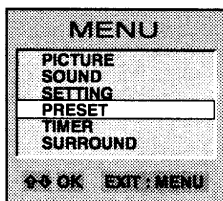


2. Press the **F** button on the remote control handset.
3. Use the **▲** or **▼** button to highlight the **PRG.PRESET** menu, then press the **F** button on the remote control handset

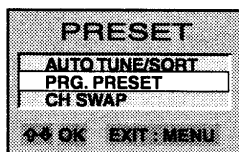

4. Use the **▲** or **▼** button to highlight the **POS.** menu. Select a programme position where you wish the station to be stored by using the **0** to **9**, **-/-**, **◀** or **▶** button.

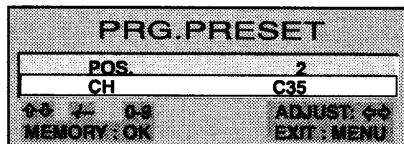

5. Use the **P▲** or **P▼** button to highlight the **CH** menu. Select your desired station by using the **0** to **9**, **◀** or **▶** button

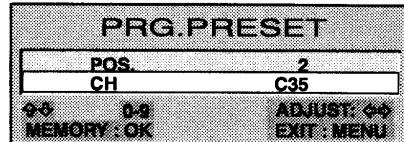

6. Press the **F** button to store a station into a memory. The preset window will blink momentarily.


Repeat steps 4 to 5 for other desired channels.

To exit the presetting mode, press the **MENU** button once.

## Channel Swapping


Use this channel swapping feature to swap the channels between two stored programme positions. This feature is particularly useful after automatic presetting.

1. Select one of TV channels you wish to swap by using the **P▲**, **P▼** or using the **(0-9)** numeric buttons.
2. Press the **MENU** button to display the main menu. Use the **▲** or **▼** button to highlight the **PRESET** menu.

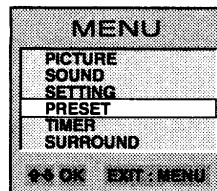


3. Press the **F** button.

4. Use the **▲** or **▼** button to highlight the **CH SWAP** menu, then press the **F** button.

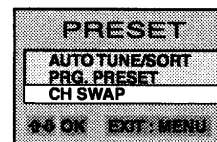

5. Use the **▲** or **▼** button to select the target programme position for swap channels then press the **F** button. The preset window will blink momentarily.

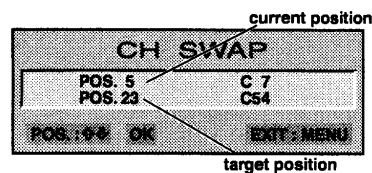


The two TV channels will now have changed places.

Repeat steps 1 to 5 for all the other TV channels you want to swap.

To return to the normal TV mode, press the **MENU** button.

# TELETEXT


## Teletext Controls

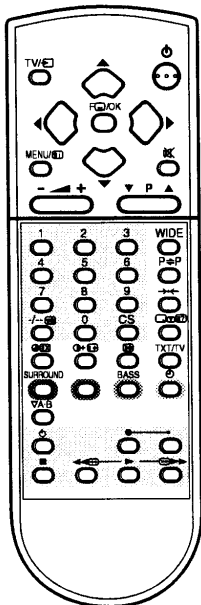

Symbol	Function
TXT/TV	Teletext/Mix/TV mode switch
0-9	0-9 numeric buttons
P▼ P▲	Page down/up
P⇒P	Previous viewed page selection
[E]	Index page selection
[H]	Hold
[S]	Size
[X]	Cancel
[EQ]	Sub code entry mode
[E?]	Reveal
[Red]	Red
[Green]	Green
[Yellow]	Yellow
[Blue]	Blue

## Switching to the Teletext mode

Press the **TXT/TV** button, and the screen changes as illustrated.

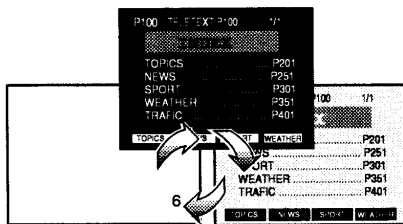

When switching from TV mode at AUTO, NORMAL, NATURAL WIDE, ZOOM, TITLE IN or FULL picture size to teletext mode, the teletext screen will always be at FULL picture size.

## Picture & Sound in teletext mode

### Picture and Text brightness controls in the teletext mode.

You can not adjust the picture or teletext brightness in the teletext mode. You must first switch back to the TV mode and then adjust the picture control or set the teletext brightness level.

### How to set the teletext brightness level

1. Press the **F** button repeatedly in the TV mode until the word "TEXT BRIGHTNESS" appears on the screen.



2. Press the **◀** or **▶** button to select one of the 3 teletext brightness levels either MAXIMUM, CENTRE or MINIMUM.
3. Confirm the selected teletext brightness level by switching to the teletext mode by pressing the **TXT/TV** button.

When the teletext service is not transmitting with the FLOF, 4 coloured page numbers will appear at the bottom of the screen instead of the topics.


### Sound control in the teletext mode.

Only sound volume and muting can be controlled in the teletext mode.

## Page Selection

### Direct page access

A page can be selected with the **0-9 Numeric buttons**. eg. To display page 301, press buttons 3, 0 and then 1. The selected page number will appear on the screen.

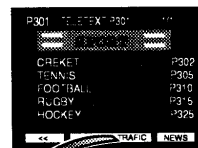

### Up/down page access

When a page is displayed on the screen and you want to read the following page number, press the **up (P▲) button** instead of selecting the new page number. To read the previous page, press the **down (P▼) button**.



**P▲** : P301 → P302 → P303 .... P399 → P400 ....

**P▼** : P301 → P300 → P299 → P298 ....P201 ....

Hold the button for rapid page change.


## Coloured Page Access

Depending on the TV channel, teletext is transmitted in different systems. The system utilised can be recognised by the coloured line at the bottom of the screen.

Press one of the **4 coloured buttons** to select the topics shown at the bottom of the text screen.

For example the Red topic can be selected using the **Red** button, the Blue topic by the **Blue** button, and so forth with the other colours.

You can select the previous viewed pages up to 4 pages, by pressing the **P⇒P** button repeatedly.

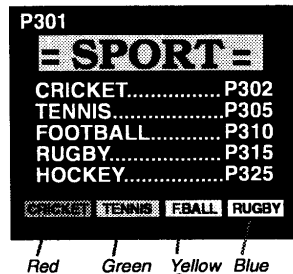

Red Green Yellow Blue



## Index Page Selection

Press the **[E]** button to select one of the teletext index pages.



# TELETEXT

## Stop


Press the **STOP** button to stop sub pages changing. The word "stop !" will appear instead of the page number.

Some teletext pages are made up of several sub pages. These sub pages are automatically changed. Sub page is shown as P4/8 (sub page 4 of 8 pages) the location on the text page depends on the text service.



## Double Letter Height


Either the top half or the bottom half of the page can be expanded to fill the whole screen by pressing the **DLH** button. Each time the button is pressed, the display changes as illustrated.

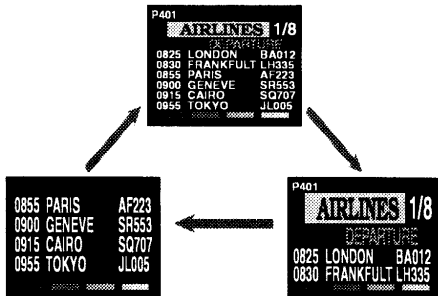

## Displaying Concealed Information

Press the **CON** button to reveal hidden items on the text page.


Some pages such as quiz pages have the answers hidden. The button may have to be held to keep the answer on the screen, or pressed again to remove the answers.

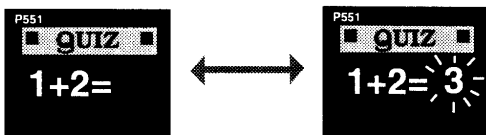

## Viewing TV while searching for a page

Sometimes the page access can take some time. While waiting you can view the TV picture by pressing the **TV** button.

1. Enter the new page number. Press the **TV** button.
2. When the page is found, the page number will appear over the TV picture.
3. Press the **TXT/TV** button to view the teletext page.

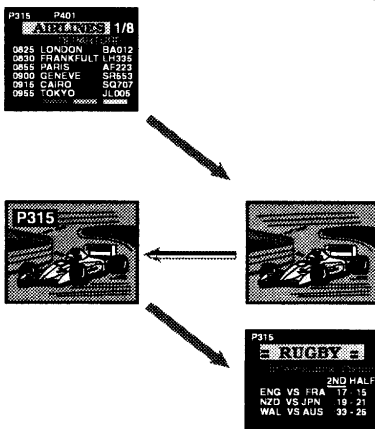

## Sub Page Access

With a text page selected which has sub pages, you may wish to read a known sub page number.

1. Press the **SP** button.

"Sub-Code ----" will be displayed on top of the screen.


2. Enter the sub page number by using the (0-9) buttons.

For example, to enter the sub page 4, press buttons 0, 0, 0 and 4.

3. Press the **TV** button to return the normal TV picture.

Immediately the requested sub-coded page is found, the page number will appear over the TV picture.

4. Press the **TXT/TV** button to view the sub-coded page.

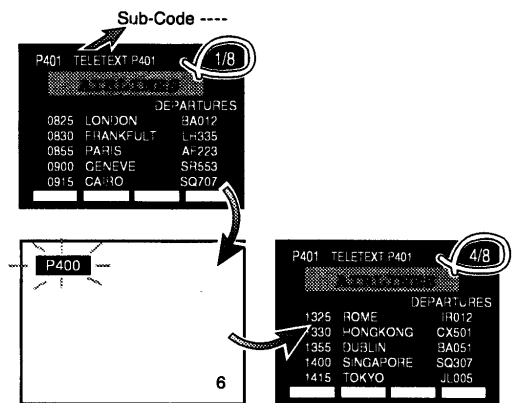

## Updated Pages


There are teletext pages which are updated as events progress, such as sports results, news reports or traffic information. Select a page which will be updated.

1. Press the **TV** button to return to the normal TV picture.

Immediately the selected page is updated, the page number will appear over the normal TV picture.

2. Press the **TXT/TV** button to view the updated page.

**Note:** If the page has sub pages the number will appear when the sub page is changed.

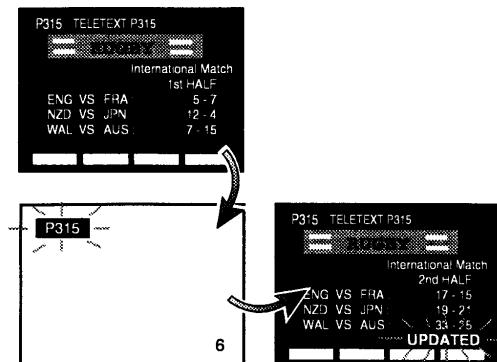

● **Cancel**  
When you press the **TV** button, the TV picture appears on the screen. Whilst in this mode you can not select another TV programme. You should first switch back to TV reception by pressing the **TXT/TV** button if required.

● **Teletext reception**  
If your aerial signal is poor, the teletext reception may be poor.

# SPECIFICATIONS / SPECIAL FUNCTIONS

## TV Specifications

	<b>Common specification</b>	
Power source	AC 220~240V, 50Hz	
Television system	System I	
Colour system	PAL/NTSC4.43 (PAL/NTSC4.43/NTSC3.58 in AV mode)	
Channel coverage	UHF: 21-69	
Aerial input impedance	75 ohm	
AV terminal		
21-pin terminals	AV1: CENELEC Standard with RGB AV2: CENELEC Standard with S-inputs	
Front AV terminals	AV3: RCA Terminal, Video and Audio(L/R) Input	
Sound output	Main L/R	10.0 x 2
(Continuous) (watts)	Centre	12.0
	Rear	6.0 x 2
	<b>CE28WP4-B</b>	<b>CE32WP4-B</b>
Picture tubes (inches)	28	32
Dimensions (WxHxD mm)	780 x 526 x 513	876 x 584 x 556
Weight (kg)	35	50

<b>Speaker system</b>	<b>Surround speakers</b>	
Unit used	Full range	
	10 cm cone type	
Rated Input power (watts)	8.0	
Maximum Input power (watts)	10.0	
Normal impedance (ohm)	8	
Dimensions	180 x 130 x 130	
(W x H x D mm)		
Weight (g/speaker)	630	

*Specifications subject to change without notice.*

## Special Functions

This TV set allows you to set up the following special functions.

### ■ Prohibition of presetting, CS key entry

<b>ITEM-1</b>	<b>SET → 0</b>	<b>NO</b>	
	<b>SET → 1</b>	<b>YES</b>	Sets prohibition of presetting and CS key entry.

 


### ■ Start up programme position

#### ITEM-2

Preset the programme position when the set is switched on.

<b>SET -&gt; 0</b>	Last programme position start
<b>SET -&gt; 1</b>	Programme position "1" start
<b>SET -&gt; 2</b>	Programme position "2" start
<b>SET -&gt; 3</b>	Programme position "3" start
<b>SET -&gt; 4</b>	Programme position "4" start
<b>SET -&gt; 5</b>	Programme position "5" start
<b>SET -&gt; 6</b>	Programme position "6" start
<b>SET -&gt; 7</b>	Programme position "7" start
<b>SET -&gt; 8</b>	Programme position "8" start
<b>SET -&gt; 9</b>	"AV1" start

### SETTING PROCEDURE

1. To enter the special function mode, press and hold the  button on the **Remote control handset** and then press the **P▲** button on the TV set.
2. To select the "Item" number, press the **F**  **/OK** button on the **remote control handset**.
3. To select the "Set" number, press the **◀** or **▶** button repeatedly.
4. To return to the normal TV mode, press the  button.

ITEM-1    SET -> 0

The setting conditions of all items can be confirmed.

Special functions are not cancelled if the TV set is switched off or the mains disconnected.

## Scart Specifications

Pin	Signal function	Level	AV1	AV2
Pin 1	Audio output (right channel)	0.5V/ 1 K ohm	✓	✓*monitor out
Pin 2	Audio Input (right channel)	0.5V/10 K ohm	✓	✓
Pin 3	Audio output (left channel)	0.5V/ 1 K ohm	✓	✓*monitor out
Pin 4	Audio earth			
Pin 5	Earth (blue)			
Pin 6	Audio Input (left channel)	0.5V/10 K ohm	✓	✓
Pin 7	Blue (B) input	0.7Vpp/75 ohm	✓	
Pin 8	Remote switch input	L:0-2V H:10-12V M: 4.5-9.5V -> 16:9 mode	✓	✓
Pin 9	Earth (green)			
Pin 10				
Pin 11	Green (G) input	0.7Vpp/75 ohm	✓	
Pin 12				
Pin 13	Earth (red)			
Pin 14	Earth			
Pin 15	Red (R) or C(chrominance) input	0.7Vpp/75 ohm	✓ *Red input	✓ *C-input
Pin 16	Fast blanking	L:0-0.4V H:1-3V	✓	
Pin 17	Earth(video)			
Pin 18	Earth			
Pin 19	Video output	1 Vpp/75 ohm	✓*TV output	✓*monitor output
Pin 20	Video/sync *1 or Y (luminance) input	1 Vpp/75 ohm	✓ *Video/sync-input	✓*Video/Y-input
Pin 21	Connector shield			

# SERVICING & HELPFUL HINTS

## Servicing

Your television is fully transistorised and does not contain any user serviceable components.

Removal of the cabinet cover may expose you to dangerous voltages. Refer all servicing to qualified service personnel.

Unplug the television receiver from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- If the power cord or plug is damaged.
- If liquid has been spilt into the television receiver.
- If television receiver has been exposed to rain or water.
- If the television receiver has been dropped or the cabinet has been damaged.
- If the television receiver exhibits a distinct change in performance.
- If the television receiver does not operate normally by following the operating instructions.

Adjust only those controls that are covered in the operating instructions as improper adjustment of other controls may result in damage. This will often require extensive work by a qualified technician to restore the television receiver to normal operation.

When replacement parts are required, have the service technician verify that the replacements he uses have the same safety characteristics as the original parts. Use of manufacturers specified replacements can prevent fire, shock or other hazards.



## Helpful Hints



### ■ NO PICTURE, NO SOUND

- Check if TV is plugged in.
- Try a different channel, if OK, probably station trouble.




### ■ POOR PICTURE, SOUND OK

- Adjust BRIGHTNESS control.
- Adjust FINE TUNING control.
- Check aerial connections.



### ■ NO COLOUR, PICTURE OK


- Adjust COLOUR control.
- Adjust FINE TUNING control.
- Is the programme in colour ?

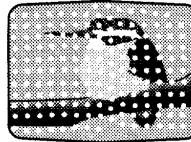

### ■ WEAK PICTURE

- Check aerial connections on back of set.
- Check aerial for broken wires.
- Re-orient aerial.

The following faults are not caused by the receiver:

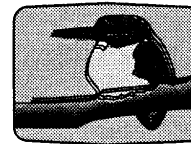

### "GHOSTS"

Reflections of signals from mountains or high buildings will cause multiple images, called "Ghosts". These abnormal conditions can be reduced to minimum by repositioning aerial or by installing new one suited for your area.



### "INTERFERENCE"

Interference may be caused by electrical appliances, car ignition systems, etc. This should normally be a temporary condition, but should this interference persist, contact your dealer.



## WARRANTY TO CUSTOMER

Sanyo U.K. Sales Ltd. (the company) warrants to the initial retail purchaser that if this equipment is or becomes defective and that, in the opinion of the Company, the defect is due to faulty material or workmanship the Company will, for a period of 12 calendar months from the date of sale to the original purchaser repair or replace, at its sole option, free of charge, any such defective component part of the equipment, always provided that:-

- 1: The equipment has at all times been used in accordance with the operating instructions issued by the Company, and has not been connected to an electrical mains supply for which it has not been adjusted.
- 2: Accidental damage or damage caused by negligence of misuse by the user, is specifically excluded.
- 3: Unauthorised repairs, or any modification to the equipment which has not been expressly approved by the Company, shall render this warranty null and void.
- 4: Failure due to fair wear and tear of any item is specifically excluded.

This warranty is not transferable and is only applicable within the United Kingdom (and the Republic of Ireland). Nothing in this express warranty affects the statutory rights available to the purchaser of this equipment.

Note: This warranty supersedes any other form of guarantee that may inadvertently have been enclosed with or attached to the product.

### *Dear Customer.*

Thank you for buying SANYO. This equipment should give you many years of pleasure and faithful service but in the event that a fault occurs, the following notes for your guidance may be helpful:-

- 1: PLEASE RETAIN YOUR PURCHASE RECEIPT WHICH WILL BE REQUIRED FOR SERVICE DURING WARRANTY.
- 2: If your Sanyo equipment proves faulty during the period of guarantee, take it or send it back to the dealer who originally supplied it together with this guarantee and the proof of purchase. We have made arrangements with our approved dealers under which they will carry out in-guarantee service repairs on our behalf. In this way, we hope to reduce to a minimum the amount of time you will be without your equipment.
- 3: If for some reason it is impossible to return the equipment to the original supplier, please contact our Service Department at the address below for further advice.
- 4: Should the equipment require servicing after the expiry of the guarantee period, take or send it to the original supplier or any other Sanyo dealer. He will be pleased to give you a quotation for the repair.

Service Department,  
Sanyo UK Sales,  
(A Division of SANYO Europe Ltd.),  
Sanyo House,  
Otterspool Way,  
Watford, Hertfordshire, WD2 8JX.  
Tel: 01923 246363





Part No. 1AA6P1P2230-- C2HC/YC

**SANYO**  

---

Printed in U.K.