


Technika

EXCLUSIVELY FROM **TESCO**

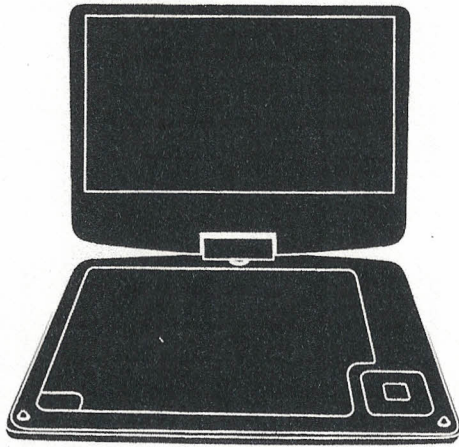


TK9PD14

Owner's Handbook

9" Portable DVD Player

REMOTE CONTROL

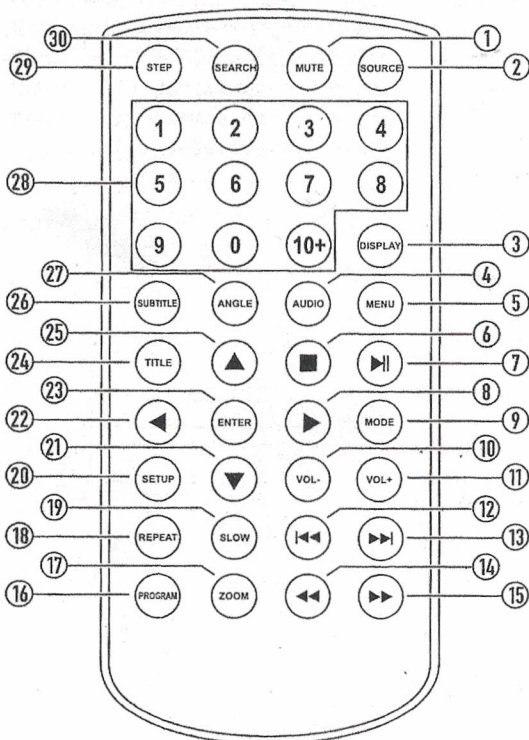

1. Mute button
2. Source button (DVD/USB/SD)
3. Display button
4. Audio button
5. Menu button
6. Stop button
7. Play/pause button
8. Right cursor button
9. Mode button
10. Volume down button
11. Volume up button
12. Previous button
13. Next button
14. Fast search back button
15. Fast search forward button
16. Program button
17. Zoom button
18. Repeat button
19. Slow button
20. Setup button
21. Down cursor button
22. Left cursor button
23. Enter button
24. Title button
25. Up cursor button
26. Subtitle button
27. Angle button
28. Numeric keypad
29. Step button
30. Search button