

# TOSHIBA



## DVD RECORDER & VCR

# D-VR35SB

### OWNER'S MANUAL




### Read this booklet first.



# Warning

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

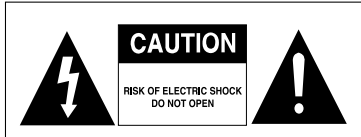

This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Do not install this equipment in a confined space such as a bookcase or similar unit.

**WARNING :** To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

**CAUTION :** DVD RECORDER & VCR USES AN INVISIBLE LASER BEAM WHICH CAN CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED.

BE SURE TO OPERATE RECORDER CORRECTLY AS INSTRUCTED.

## CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOUR-SELF. REFER SERVICING TO QUALIFIED PERSONNEL.

This product satisfies CE regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

## IMPORTANT NOTE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug. If it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover omitted if the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket, as there is a risk of shock hazard from the bared flexible cord.

- It is permissible to record television programs, film, video tapes and other material only in the event that third party copyrights and other rights are not violated.
- It is prohibited by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.
- Some DVD video discs are copy protected, and any recordings made from these discs will be distorted.
- Toshiba is not liable for any damage caused by fires, natural disaster (such as thunder, earthquake, etc...) acts by third parties, accidents, owner's intentional or unintentional misuse, or uses in other improper conditions.
- Toshiba is not liable for incidental damages (such as profit loss or interruption in business, modification or erasure of recorded data, etc.) caused by use or inability to use of this product.
- Toshiba is not liable for any damage caused by neglect of the instructions described in the owner's manual.
- Toshiba is not liable for any damage caused by misuse malfunction through simultaneous use of this product and the connected equipment or software that Toshiba is not concerned with.
- Toshiba does not compensate for contents which were not recorded/edited because of some malfunctions of this product or discs during operation, and is not liable for incidental damages (such as profit loss or interruption in business, etc.) produced by such conditions.

The product unit accompanying this user manual is licensed under certain intellectual property rights of certain third parties. This license is limited to private non-commercial use by end-user consumers for licensed contents. No rights are granted for commercial use. The license does not cover any product unit other than this product unit and the license does not extend to any unlicensed product unit or process conforming to ISO/IEC 11172-3 or ISO/IEC 13818-3 used or sold in combination with this product unit. The license only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/IEC 11172-3 or ISO/IEC 13818-3. No rights are granted under this license for product features or functions that do not conform to the ISO/IEC 11172-3 or ISO/IEC 13818-3.

|           |  |
|-----------|--|
| DANGER    | – VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.                |
| CAUTION   | – VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.                       |
| ATTENTION | – RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.  |
| ADVARSEL  | – SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNNGÅ UDSÆTTELSE FOR STRÅLING.                     |
| VARO!     | – AVATTAESSA OLET ALTTIINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.            |
| VARNING   | – SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.                |
| ADVARSEL  | – SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.               |
| VORSICHT  | – SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET, NICHT DEM STRAHL AUSSETZEN. |
| 注意        | – 打开时有可见及不可见激光辐射。避免激光束照射。  |
| 注意        | – ここを開くと可視及び不可視のレーザー光が出ます。ビームを直接見たり、触れたりしないでください。  |

## Precaution

### Important Safety Instructions

**CAUTION** : PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

**DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide

blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) When you use headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.
- 16) Do not overload wall outlets : extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 17) Apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- 18) Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.
- 19) Do not place a heavy object on or step on the apparatus. The object may fall, causing serious personal injury and serious damage to the apparatus.
- 20) Do not place the apparatus on amplifiers or equipment that may produce heat.
- 21) Do not cover the ventilating holes for the inside cooling fan.
- 22) Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and apparatus malfunction.
- 23) If the apparatus should smoke or smell, immediately disconnect the power cord from the wall outlet. Wait until the smoke or smell stops, then ask your dealer for a check and repair. Neglecting to do so may cause fire.
- 24) While it is thundering, do not touch the connecting cables or the apparatus.
- 25) The apparatus includes lead, an ingredient of solder human and the environment. When disposing of this apparatus, follow the rules and regulations in your area.

## Handling Cautions

- Before connecting other components to this recorder, be sure to turn them all off.
- Do not move the recorder while a disc is being played, or the disc may be scratched or broken, and the recorder's internal parts may be damaged.
- Do not put a flower vase filled with water or any small metal objects on the recorder.
- Be careful not to put your hand into the disc tray.
- Do not place anything other than the disc in the disc tray.
- Exterior interference such as lightning and static electricity can affect normal operation of this recorder. If this occurs, turn the recorder off and on again with the ON/STANDBY button, or disconnect and then reconnect the AC power cord to the AC power outlet. The recorder will operate normally.
- Be sure to remove the disc and turn off the recorder after use.
- Disconnect the AC power cord from the AC outlet when you don't intend to use the recorder for long periods of time.
- Clean the disc by wiping in a straight line from the inside to the outside of the disc.

## Maintenance of Cabinet

For safety reasons, be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

## Disc Handling

- Use discs with regular shapes. If an irregular disc (a disc with a special shape) is used, this DVD RECORDER & VCR may be damaged.



### Holding discs

- Avoid touching the surface of a disc where recording is performed.



### DVD-RAM/-RW/-R

- Clean with an optional DVD-RAM/PD disc cleaner. Do not use cleaners or cloths for CDs to clean DVD-RAM/-RW/-R discs.



### DVD-Video, CD

- Wipe off dirt or contamination on the disc with a soft cloth.

### Cautions on handling discs

- Do not write on the printed side with a ball-point pen or pencil.
- Do not use record cleaning sprays or antistatic. Also, do not use volatile chemicals, such as benzene or thinner.
- Do not apply labels or stickers to discs. (Do not use discs fixed with exposed tape adhesive or leftover peeled-off stickers.)
- Do not use scratch-proof protectors or covers.
- Do not use discs printed with label printers available on the market.
- Do not load warped or cracked discs.

## Disc Storage

Be careful not to harm the disc because the data on these discs is highly vulnerable to the environment.

- Do not keep under direct sunlight.
- Keep in a cool ventilated area.
- Store vertically.
- Keep in a clean protection jacket.
- If you move your DVD RECORDER & VCR suddenly from a cold place to a warm place, condensation may generate on the operating parts and lens and cause abnormal disc playback. If this occurs, remove the disc and wait for one to two hours with the power on before attempting playback.

VIDEO Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VIDEO Plus+ system is manufactured under license from Gemstar Development Corporation.



---

### Notes on recording and editing

---

- When you record/edit important content, make trial operations beforehand to confirm the recorder can function properly.  
Toshiba does not compensate for content which was not recorded/edited because of some malfunction of this product or discs during operation, and is not liable for incidental damages (such as profit loss or interruption of business, etc.) produced in such conditions.
- When the power cord is disconnected or when a power failure occurs during any operation of this product, all contents recorded in this recorder may be erased.
- Depending on the channel or program, an excessive sound. Adjust the initial setting of the recording level when necessary.
- If a program you have set a timer recording includes copy restriction signals, it may not be recorded. When programming a recording, confirm that a program you want to record is not copy-restricted.

---

### Exemptions

---

- Toshiba is not liable for any damage caused by fires, natural disaster (such as thunder, earthquake, etc.), acts by third parties, accidents, owner's intentional or unintentional misuse, or uses in other improper conditions.
- Toshiba is not liable for incidental damages (such as profit loss or interruption in business, modification or erasure of recorded data, etc.) caused by use or inability to use of this product.
- Toshiba is not liable for any damage caused by neglect of the instructions described in the owner's manual.
- Toshiba is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment or software that Toshiba is not concerned with.
- Toshiba does not compensate for contents which were not recorded/edited because of some malfunctions of this product or discs during operation, and is not liable for incidental damages (such as profit loss or interruption in business, etc.) produced by such conditions.

---

### Power Outage

---

- After a power outage the clock display will flash. Set the clock to the correct time.

---

### Notes on copyright

---

- It is prohibited law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.
- Some DVD video discs are copy protected, and any recordings made from these discs will be distorted.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.
- This unit incorporates CPRM (Content Protection for Recording Media) technology for copyright protection. Recording and copying on this recorder depend on the contents as described next page.

## ■ Disc Specifications

---

### DVD-Video

---

- A digital versatile disc (DVD) can contain up to 135-minutes of images, 8 audio languages and 32 subtitle languages. It is equipped with MPEG-2 picture compression and Dolby 3D surround, allowing you to enjoy vivid and clear theater quality images in the comfort of your own home.
- When switching from the first layer to the second layer of a double-layered DVD Video disc, there may be momentary distortion in the image and sound.  
This is not a malfunction of the unit.
- Once a DVD-RW/-R recorded in V mode is finalised, it becomes DVD-Video.

---

### Audio CD

---

- An audio disc on which 44.1kHz PCM Audio is recorded.
- Plays CD-DA format audio CD-R and CD-RW discs. This unit may not be able to play some CD-R or CD-RW discs due to the condition of the recording.

## CD-R/-RW

### MP3 CD-R/-RW

- Only CD-R discs with MP3 files recorded with ISO9660 or JOLIET format can be played back
- Only MP3 files with the ".mp3", and ".MP3" extension can be used.
- For MP3 files recorded with a VBR(Variable Bit Rates), from 32 Kbps to 320 Kbps, the sound may cut in out.
- Playable bitrate range is from 56Kbps to 320Kbps.
- The unit can handle a maximum of 1000 files and folders.

### JPEG CD-R/-RW

- Only JPEG files with the ".jpg", ".JPG" extension can be used.
- The unit can handle a maximum of 1000 files and folders.
- Maximum size of progressive JPEG is 3M pixels.
- MOTION JPEG is not supported.

### Using CD-R/-RW

- Use a 700MB (80 minutes) CD-R/-RW disc. If possible, do not use a 800MB(90 minutes) or above disc, as the disc may not play back.
- If the CD-R/-RW disc was not recorded as a closed session, you may experience a delay in the early play-back time, and all recorded files may not play.
- Some CD-R/-RW discs may not be playable with this unit, depending on the device which was used to burn them.

For contents recorded on CD-R/-RW media from CDs for your personal use, playability may vary depending on contents and discs.

## DVD-R Disc Playback and Recording

- Once a DVD-R recorded in V mode is finalised, it becomes DVD-Video.
- You can record onto the available space on the disc and perform editing functions such as giving titles to discs and programs and erasing programs before finalising.
- When programming is erased from a DVD-R, that space does not become available. Once an area on a DVD-R is recorded on, that area is no longer available for recording, whether the recording is erased or not.

- It takes about 30 seconds for the unit to complete recording management information after recording finishes.
- This product optimizes the DVD-R for each recording. Optimizing is carried out when you start recording after inserting the disc or turn on the unit. Recording onto the disc may become impossible if optimizing is carried out too many times.
- Playback may be impossible in some cases due to the condition of recording.
- This unit can play back DVD-R discs recorded and finalised with a Toshiba DVD recorder. It may not be able to play some DVD-R discs depending on the disc and the condition of the recording.

## DVD-RW Disc Playback and Recording

- Recording and playback can be performed on DVD-RW discs in both Video and VR Modes.
- Once a DVD-RW recorded in VR Mode is finalised, you cannot perform additional recording.
- Once a DVD-RW recorded in V mode is finalised, it becomes DVD-Video.
- In both modes, playback can be performed before and after finalization, but additional recording, deleting and editing can not be performed after finalization.
- If you want to record the disc in VR Mode and then record in V Mode, be sure to execute Format. Be careful when executing Format because all the recorded data may be lost.
- A DVD-RW blank disc is initialized to VR Mode when first initialized.
- **DVD-RW (VR mode)**
  - This is a format that is used for recording data on a DVD-RAM or DVD-RW disc. You can repeat recording, editing, deleting, partial deletion, creation of playlist, and etc.
  - A disc that is recorded in this mode may not be played by existing DVD players.
- **DVD-RW (V mode)**
  - This is a format that is used for recording data on a DVD-RW or DVD-R disc. The disc can be played by an existing DVD player once it has been finalised.
  - If a disc that has been recorded in V mode by a different manufacturer's recorder but has not been finalised it cannot be played or additionally be recorded by this recorder.

## DVD-RAM Disc Playback and Recording

- For cartridge type DVD-RAM discs, remove the cartridge and use the disc only.
- Ensure that the recording mode is set to VR mode. Otherwise, this product will not be able to play the recording.
- You cannot play a DVD-RAM in most DVD players due to compatibility issues.
- Only DVD-RAM standard Version 2.0 discs can be played in this unit.
- DVD-RAM recorded on this unit may not work with other DVD Players. To determine compatibility with these DVD-RAM discs, refer to the user's manual for the player.

### Protection

- Program-protected: See page 73 "Locking (Protecting) a Title"
- Disc-protected: See page 85 "Disc Protection"
- \* DVD-RAM/-RW/-R discs that are incompatible with the DVD-VIDEO format can not be played with this product.
- \* For more information on recording a DVD, consult your DVD-RAM/-RW/-R manufacturer.
- \* If poor quality DVD-RAM/-RW/-R discs are used, your recordings may fail.

### Do not use the following discs!

- LD, CD-G, CD-I, CD-ROM, DVD-ROM, DVD+R and DVD+RW discs should not be used in this product.

[Note]

Disc types that can be played : CD/CD-R/-RW/MP3/JPEG/DVD-VIDEO/DVD-RAM/-RW/-R. However, if your DVD-RW disc was recorded with another device, it can be played only if it was recorded and finalised in V mode.

- Some commercial discs and DVD discs purchased outside your region may not be playable with this product. When these discs are played, either "No disc." or "Please check the regional code." will be displayed.
- If your DVD-RW disc is an illegal copy or is not in DVD video format, it may also not be playable.

## COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD RECORDER & VCR directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.
- It is permissible to record television programs, film, video tapes and other material only in the event that third party copyrights and other rights are not violated.

# Contents



## Getting Started

|                                   |     |
|-----------------------------------|-----|
| Warning                           | .2  |
| Precaution                        | .3  |
| Important Safety Instructions     | .3  |
| Handling Cautions                 | .4  |
| Maintenance of Cabinet            | .4  |
| Disc Handling                     | .4  |
| Disc Storage                      | .4  |
| Disc Specifications               | .5  |
| General Features                  | .10 |
| Before Reading the User's Manual  | .10 |
| How to use the DVD Recorder & VCR | .11 |
| Unpacking                         | .12 |
| Description                       | .14 |
| Front Panel                       | .14 |
| Front Panel Display               | .14 |
| Rear Panel                        | .15 |
| Tour of the Remote Control        | .16 |

## Connecting & Setting Up

|   |     |
|---|-----|
| Quick Overview  | .17 |
| Connecting DVD Recorder & VCR to the TV using the RF Cable                        | .18 |
| Connecting the SCART Cable  | .18 |
| Case 1 : Connecting DVD Recorder & VCR to the TV using the SCART Cable            | .18 |
| Case 2 : Connecting DVD Recorder & VCR to a Satellite Receiver or Other Equipment | .19 |
| Connecting the Audio/Video Cable  | .20 |
| Connecting the S-Video Cable  | .20 |
| Connecting the Component Video Cable  | .21 |
| AV Receiver Connections   | .22 |
| Connecting an external devices to the AUX jacks                                   | .22 |

## System Setup

|  |     |
|--|-----|
| On-Screen Menu Navigation              | .23 |
| Plug & Auto Setup                      | .24 |
| Setting the Date and Time              | .25 |
| Auto Setup                             | .26 |
| Manual Setup                           | .27 |
| Clearing a Preset Station              | .28 |
| Changing the Preset Manual Setup Table | .29 |
| VIDEO Output CH                        | .30 |
| Setting Up the Language Options        | .30 |
| Setting Up the Audio Options           | .31 |
| Setting Up the Display (Video) Options | .32 |
| Setting Up the Parental Control        | .33 |
| VCR Setting                            | .34 |
| DVD EP Mode Time                       | .36 |
| Automatic Chapter Creator              | .36 |
| Front Display                          | .37 |
| NICAM                                  | .38 |
| Video Output                           | .38 |
| Setting up the Progressive scan        | .39 |
| Canceling the Progressive scan         | .40 |

## Playback

|   |     |
|---|-----|
| ◆ DVD Playback                          |     |
| Before Playing                          | .41 |
| Playing a Disc                          | .42 |
| Using the Disc menu and Title menu      | .43 |
| Using the Search & Skip Functions       | .43 |
| Slow Motion Play / Step Motion Play     | .44 |
| About QUICK                             | .44 |
| Repeat Play                             | .45 |
| Selecting the Subtitle & Audio Language | .47 |
| Changing the Camera Angle               | .48 |
| Zooming-In                              | .48 |
| Using the Bookmarks                     | .49 |
| Using the Markers                       | .50 |
| Playing back an Audio CD (CD-DA)        | .51 |
| Playing back an MP3 Disc                | .52 |
| Play Option Mode                        | .53 |
| To Programme Tracks                     | .53 |
| Playing back a Picture Disc             | .54 |

|                               |     |
|-------------------------------|-----|
| ◆ VCR Playback                |     |
| Playing back a VHS Tape (VCR) | .55 |
| Tracking                      | .55 |
| Special VCR Playback Features | .55 |
| Variable Search System        | .56 |

## Recording

---

|  |     |
|--|-----|
| ◆ DVD Recording                                  |     |
| Before Recording                                 | .57 |
| Recordable discs                                 | .57 |
| Recording Formats                                | .58 |
| Recording Mode                                   | .58 |
| Unrecordable video                               | .58 |
| Recording the current Programme you are watching | .59 |
| Recording From External Devices                  | .60 |
| Watching the Images Being Recorded (Time Slip)   | .60 |
| Making a One Touch Recording (OTR)               | .61 |
| Making a Timer Recording                         | .62 |
| Editing the Scheduled Record List                | .63 |
| Deleting the Scheduled Record List               | .64 |
| Using the Video Plus+ Feature                    | .65 |
| Video Plus+ Extended                             | .66 |

|                            |     |
|----------------------------|-----|
| ◆ VCR Recording            |     |
| Basic VCR Recording        | .66 |
| Check Remaining Time       | .67 |
| Special Recording Features | .67 |
| Copy to DVD or VCR         | .68 |

## Editing

---

|                                       |     |
|---------------------------------------|-----|
| Playing the Title List                | .70 |
| Basic Editing (Title List)            | .72 |
| Renaming(Labeling) a Title            | .72 |
| Locking(Protecting) a Title           | .73 |
| Deleting a Title                      | .73 |
| Deleting a Section of a Title         | .74 |
| Advanced Editing (Playlist)           | .76 |
| Creating a Playlist                   | .76 |
| Playing Titles in the Playlist        | .77 |
| Renaming a Playlist Title             | .78 |
| Editing a Scene for the Playlist      | .79 |
| Copying a Playlist to the VCR         | .82 |
| Deleting a Playlist from the Playlist | .83 |

|                                 |     |
|---------------------------------|-----|
| Disc Manager                    | .84 |
| Editing the Disc Name           | .84 |
| Disc Protection                 | .85 |
| Formatting a Disc               | .85 |
| Finalising a disc               | .86 |
| Unfinalising a disc (V/VR mode) | .87 |
| Delete All Title Lists          | .88 |

## Reference

---

|                 |     |
|-----------------|-----|
| Troubleshooting | .90 |
| Specifications  | .93 |

## General Features

The D-VR35SB allows you to record and playback high quality digital images on a DVD-RAM/-RW/-R disc. You can also edit digital images on DVD-RAM/-RW discs.

### High quality digital audio and video recording and playback

Record up to about 16-hour images with a double side 9.4 GB DVD-RAM disc, and up to about 8-hour images with a 4.7 GB DVD-RAM/-RW/-R disc, depending on the recording mode.

### Creating DVD video titles using DVD-RW/-R discs

With the D-VR35SB, you can create your own DVD video titles on 4.7 GB DVD-RW/-R discs.

### A Variety of Recording Options

Select an appropriate recording mode between XP, SP, LP and EP to meet your recording needs.

(See page 58)

- XP mode - High quality, about 1 hour
- SP mode - Standard quality, about 2 hours
- LP mode - Lower quality, about 4 hours
- EP mode - Lowest quality, about 6 or 8 hours

### High quality progressive scan

Progressive scanning provides high resolution and flicker free images. The 10-bit 54-MHz DAC, 2D Y/C Separating circuitry and Time Base Corrector processor technology provide you with the highest image playback and recording quality. (See page 21)













### A variety of functions with easy-to-use user interface

Integrated menu system and messaging functionality allow you to perform the desired operations easily and conveniently. With a DVD-RAM/-RW(VR mode) disc, you can edit recorded images, create playlist, and edit images in specific sequence according to your needs.

## Before Reading the User's Manual

Make sure to check the following terms before reading the user's manual.

### Icons that will be used in manual

| Icon  | Term             | Definition  |
|---|------------------|---|
|    | DVD              | This involves a function available in DVD or DVD-RW/-R discs that have been recorded and finalised in V mode. |
|    | RAM              | This involves a function available in DVD-RAM.  |
|    | RW               | This involves a function available in DVD-RW.   |
|    | R                | This involves a function available in DVD-R.  |
|    | CD               | This involves a function available in a data CD (CD-R or CD-RW).  |
|   | JPEG             | This involves a function available in a data picture CD (CD-R or CD-RW).                                      |
|  | MP3              | This involves a function available in a data CD (CD-R or CD-RW) on which MP3 is recorded).                    |
|  | Caution          | This involves a case where a function does not operate or settings may be cancelled.                          |
|  | VHS              | This involves a function available in VIDEO Tape.   |
|  | NOTE             | This involves tips or instructions on the page that help each function operate.                               |
|  | One-Touch button | A function that can be operated by using only one button.   |
|  | QUICK button     | A function that can be operated by using QUICK button.  |

### About the use of this user's manual

- 1) Be sure to be familiar with Safety Instructions before using this product. (See pages 2~7)
- 2) If a problem occurs, check the Troubleshooting. (See pages 90~92)

### Copyright

©2005 Toshiba Corporation.  
All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Toshiba Corporation.

# How to use the DVD Recorder & VCR

## Step 1 Select the disc type

This unit can record on the following types of discs. If you want to repeatedly record on the same disc or you want to edit the disc after recording, select a rewritable DVD-RW or DVD-RAM type disc. If you want to save a recording without any changes, choose a non-rewritable DVD-R.



## Step 2 Format the disc to start recording

Unlike a VCR, the recorder automatically starts formatting when an unused disc is inserted. This is required for the preparation of recording on a disc.

### Using a DVD-RAM

This type of disc can be formatted in DVD-Video Recording format (VR mode). You can edit recorded images and create a playlist in a specific sequence according to your requirements.

### Using a DVD-RW

This type of disc can be formatted in either DVD-Video format (V mode) or DVD-Video Recording format (VR mode). For an unused disc, a message that asks whether to format in VR Mode or not is displayed. You can play a V mode disc on various DVD components. A VR mode disc allows more varied editing.

### Using a DVD-R

This type of disc can be formatted in DVD Video format. After formatting is complete, you can record on the disc. You can play this type of disc on various DVD components only when they have been finalised.



Note

- You can only use either the VR or Video mode on a DVD-RW, but not both at the same time.
- You can change the DVD-RW format to another format. It should be noted that the data of the disc may be lost when changing formats.

## Step 3 Recording

There are two different recording methods: Direct Recording and Timer Recording. Timer recording is classified as a Date : Once, Daily or Weekly Recording mode : XP (high quality mode), SP (standard quality mode), LP (long recording mode), and EP (extended mode).

## Step 4 Playing

You can select the title you want to play in a displayed menu and then immediately start playback. A DVD consists of sections called titles, and sub sections called chapters.

During recording, a title is created between two points where you start and stop recording. Chapters will be created automatically when you finalise recording on DVD-RW/-R discs in V mode. The chapter's length (interval between chapters) varies according to the recording mode.

## Step 5 Editing a recorded disc

Editing on discs is easier than conventional video tapes. The recorder supports many different edit functions, possible only with DVDs.

With a simple and easy edit menu, you can operate various edit functions, such as delete, copy, rename, lock, etc., on a recorded title.

### Creating a playlist (DVD-RAM/-RW in VR mode)

With this recorder, you can create a new playlist on the same disc and edit it without the change of the original recording.

## Step 6 Finalising & Playing on other DVD components

To play your DVD on other DVD components, finalising may be necessary. First, finish all editing and recording operations, then finalise the disc.

### When using a DVD-RW disc in VR Mode

Although finalising is generally unnecessary when playing the disc on a VR Mode compatible component, a finalised disc should be used for playback.

### When using a DVD-RW disc in V Mode

The disc should be finalised first to enable playback on anything other than this recorder. No more editing or recording can be made on the disc once it has been finalised.

### When using a DVD-R disc

You should finalise the disc to play it on a component other than this recorder. You cannot edit or record on the disc once it has been finalised.



## Unpacking

### Accessories

Check for the supplied accessories below.

- Audio/Video Cable
- RF Cable for TV Control
- Remote Control
- Batteries for Remote Control (AA Size)
- User's Manual
- Quick guide

#### Following information is only for EU-member states:

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



### Preparing the Remote Control


#### Install Batteries in the Remote Control

- Open the battery cover on the back of the remote control.
- Insert two AA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- Replace the battery cover.

#### If the remote control does not operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if the remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.


Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

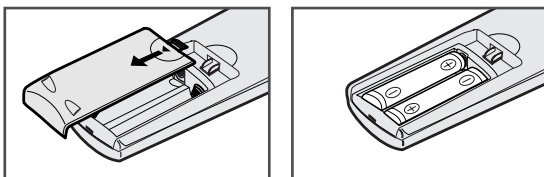

- Do not expose the remote sensor of the recorder to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the recorder via the remote control.

### Setting the Remote Control


Your DVD Recorder & VCR remote control will work with Toshiba televisions and compatible brands.

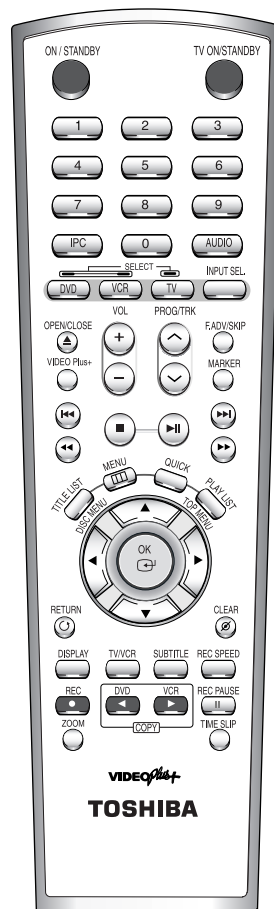

#### To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the TV button and enter the 4-digit code (listed on page 13) simultaneously corresponding to the brand of your television.
4. If your television is compatible with the remote control, it will switch off.

It is now programmed to operate with the remote control.

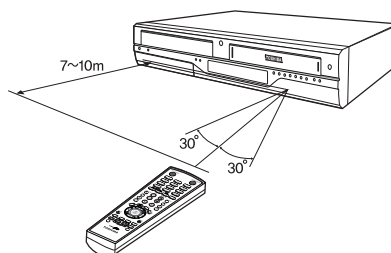

## Controllable TV Codes

| Brand name      | Brand code          |      |      |      |      |      |      |  |
|-----------------|---------------------|------|------|------|------|------|------|--|
| TOSHIBA         | 0001                | 0071 | 0211 | 0571 |      |      |      |  |
| AIWA            | 0921                |      |      |      |      |      |      |  |
| AKAI            | 0201                | 0241 | 0311 | 0431 | 0501 | 0521 | 0641 |  |
| BAIRD           | 0171 0241           |      |      |      |      |      |      |  |
| BANG & OLUFSEN  | 0471                |      |      |      |      |      |      |  |
| BEKO            | 0181                |      |      |      |      |      |      |  |
| BLAUPUNKT       | 0071                | 0321 | 0331 |      |      |      |      |  |
| BRIONVEGA       | 0461 0471 0651      |      |      |      |      |      |      |  |
| BUSH            | 0071                | 0501 | 0551 | 0571 |      |      |      |  |
| CROWN           | 0111                | 0131 | 0411 | 0491 | 0501 | 0661 |      |  |
| DANSAI          | 0501                |      |      |      |      |      |      |  |
| DEAWOO          | 0401                | 0411 | 0501 |      |      |      |      |  |
| DECCA           | 0091                | 0141 | 0171 | 0441 | 0451 | 0501 |      |  |
| FERGUSON        | 0031                | 0071 | 0131 | 0191 | 0291 | 0311 | 0381 |  |
|                 | 0541 0601           |      |      |      |      |      |      |  |
| FINLUX          | 0021                | 0041 | 0071 | 0081 | 0091 | 0111 | 0271 |  |
|                 | 0281                | 0291 | 0301 | 0341 | 0471 |      |      |  |
| FISHER          | 0041                | 0121 | 0181 | 0201 | 0281 | 0471 | 0571 |  |
|                 | 0651                |      |      |      |      |      |      |  |
| FUNAI           | 0001                | 0191 | 0481 | 0491 | 0891 |      |      |  |
| GEC             | 0171 0221           |      |      |      |      |      |      |  |
| GOLDSTAR        | 0201                | 0251 | 0281 | 0411 | 0501 |      |      |  |
| GOODMANS        | 0171                | 0281 | 0501 | 0571 |      |      |      |  |
| GRANADA         | 0171                | 0241 | 0271 | 0501 | 0571 | 0651 | 0671 |  |
| GRUNDIG         | 0011                | 0071 | 0271 | 0321 | 0331 |      |      |  |
| HINARI          | 0241 0411 0571 0631 |      |      |      |      |      |      |  |
| HITACHI         | 0021                | 0221 | 0251 | 0351 | 0371 | 0381 | 0431 |  |
|                 | 0571 0641 0751      |      |      |      |      |      |      |  |
| INNO HIT        | 0171                | 0281 | 0411 | 0501 | 0631 | 0661 |      |  |
| ITT             | 0231                | 0241 | 0261 | 0271 | 0401 | 0611 |      |  |
| ITT-NOKIA       | 0231                | 0241 | 0261 | 0271 | 0401 | 0611 |      |  |
| JVC             | 0311                | 0431 | 0521 | 0571 |      |      |      |  |
| LOEWE OPTA      | 0471 0501 0571 0651 |      |      |      |      |      |      |  |
| LUXOR           | 0241                | 0261 | 0271 | 0281 | 0351 |      |      |  |
| MAGNAVOX        | 0501                | 0071 | 0191 | 0221 | 0461 | 0471 | 0591 |  |
|                 | 0611 0651           |      |      |      |      |      |      |  |
| MARANTZ         | 0201 0501           |      |      |      |      |      |      |  |
| MATSUI          | 0001                | 0171 | 0191 | 0231 | 0411 | 0441 | 0451 |  |
|                 | 0501 0551 0571      |      |      |      |      |      |      |  |
| METZ            | 0041                | 0331 | 0361 | 0461 | 0471 | 0651 |      |  |
| MITSUBISHI      | 0201                | 0321 | 0331 | 0451 | 0501 | 0511 | 0571 |  |
|                 | 0651 0771           |      |      |      |      |      |      |  |
| NATIONAL        | 0371                | 0501 | 0511 | 0531 | 0761 | 0841 | 0911 |  |
|                 | 1061                |      |      |      |      |      |      |  |
| NOKIA           | 0231                | 0241 | 0261 | 0271 | 0401 | 0611 |      |  |
| NORDMENDE       | 0281                | 0351 | 0381 | 0421 | 0431 | 0461 | 0521 |  |
|                 | 0541 0641 0671      |      |      |      |      |      |      |  |
| OCEANIC         | 0481                |      |      |      |      |      |      |  |
| ORION           | 0001                | 0191 | 0231 | 0361 | 0411 | 0441 | 0451 |  |
|                 | 0501 0551 0611      |      |      |      |      |      |      |  |
| PANASONIC       | 0371                | 0501 | 0511 | 0531 | 0761 | 0841 | 0911 |  |
|                 | 1061                |      |      |      |      |      |      |  |
| PHILCO          | 0071                | 0111 | 0181 | 0201 | 0271 | 0301 | 0461 |  |
|                 | 0501 0651           |      |      |      |      |      |      |  |
| PHILIPS         | 0071                | 0191 | 0221 | 0461 | 0471 | 0501 | 0591 |  |
|                 | 0611 0651           |      |      |      |      |      |      |  |
| PIONEER         | 0381                | 0431 | 0501 | 0831 | 1051 |      |      |  |
| PROSCAN-THOMSON | 0971 1041 0201 0501 |      |      |      |      |      |      |  |
| RCA             | 0971                | 1071 | 1081 | 1091 | 0201 | 1041 | 0501 |  |
| REALISTIC       | 0631                | 1001 | 1011 | 1021 | 1031 | 0851 | 0201 |  |
|                 | 0501                | 0481 | 0321 | 0331 | 0501 | 0651 | 0771 |  |

|            |                     |      |      |      |      |      |      |  |
|------------|---------------------|------|------|------|------|------|------|--|
| SABA       | 0281                | 0351 | 0381 | 0421 | 0431 | 0471 | 0541 |  |
|            | 0641 0651 0661      |      | 0671 |      |      |      |      |  |
| SAISHO     | 0231                | 0411 | 0441 | 0451 | 0551 |      |      |  |
| SALORA     | 0231 0241 0351      |      |      |      |      |      |      |  |
| SAMSUNG    | 0171                | 0181 | 0251 | 0281 | 0411 | 0491 | 0501 |  |
|            | 0631 0661 0791      |      | 1101 | 1111 |      |      |      |  |
| SANYO      | 0021                | 0041 | 0081 | 0121 | 0171 | 0181 | 0201 |  |
|            | 0231                | 0241 | 0451 | 0571 | 0651 | 0671 | 0701 |  |
|            | 0711 0721           |      |      |      |      |      |      |  |
| SCHNEIDER  | 0011                | 0051 | 0061 | 0281 | 0461 | 0501 | 0581 |  |
|            | 0591                |      |      |      |      |      |      |  |
| SEG        | 0091                | 0121 | 0151 |      |      |      |      |  |
| SELECO     | 0031                | 0051 | 0061 | 0351 | 0501 | 0561 |      |  |
| SHARP      | 0851                | 0511 | 0571 | 0201 | 0501 |      |      |  |
| SIEMENS    | 0071                | 0321 | 0331 | 0571 | 0631 |      |      |  |
| SINGER     | 0091 0471 0651      |      |      |      |      |      |      |  |
| SINUDYNE   | 0001                | 0091 | 0101 | 0131 | 0191 | 0231 | 0361 |  |
|            | 0471                | 0501 | 0551 | 0581 | 0651 |      |      |  |
| SONY       | 0441 0451 0571 0681 |      |      |      |      |      |      |  |
| TANDBERG   | 0041                | 0301 | 0351 | 0431 | 0461 | 0571 | 0651 |  |
| TATUNG     | 0091                | 0141 | 0171 | 0441 | 0451 | 0501 |      |  |
| TECHNICS   | 0371                | 0501 | 0511 | 0531 | 0761 | 0841 | 0911 |  |
|            | 1061                |      |      |      |      |      |      |  |
| TELEFUNKEN | 0071                | 0281 | 0381 | 0421 | 0431 | 0521 | 0601 |  |
|            | 0621 0671           |      |      |      |      |      |      |  |
| TENSAI     | 0041                |      |      |      |      |      |      |  |
| THOMSON    | 0281                | 0351 | 0371 | 0381 | 0391 | 0421 | 0461 |  |
|            | 0521                | 0541 | 0641 | 0971 | 1041 |      |      |  |
| THORN      | 0041                | 0071 | 0281 | 0291 | 0341 | 0421 | 0491 |  |
|            | 0601 0671           |      |      |      |      |      |      |  |
| UNIVERSUM  | 0021 0491           |      |      |      |      |      |      |  |
| YAMAHA     | 0201                | 0501 | 0321 | 0331 | 0451 | 0511 | 0571 |  |
|            | 0651 0771           |      |      |      |      |      |      |  |
| ZANUSSI    | 0031                | 0051 | 0061 | 0351 | 0501 | 0561 |      |  |
| ZENITH     | 0931                |      |      |      |      |      |      |  |



Note

- If several codes are indicated for your television brand, try each one in turn until you find one that works.
- Please note if TV manufacturer may change their remote control code without notice, this function may not work.

 
**You can then control the television using the following buttons.**

| Button              | Function                                     |
|---------------------|--|
| TV ON/STANDBY       | Used to switch the television on and off.    |
| INPUT SEL.          | Used to select an external source.           |
| VOL + or -          | Used to adjust the volume of the television. |
| PROG/TRK ( ^ or v ) | Used to select the required programme.       |




Note

- The various functions will not necessarily work on all televisions. If you encounter problems, operate the television with its own remote control.




# Description

## Front Panel

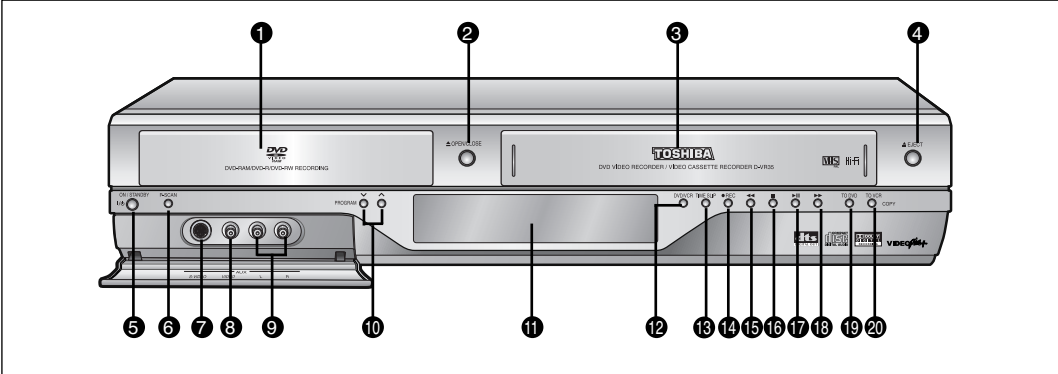


- |  |   |
|--|---|
| <ol style="list-style-type: none"> <li>1. DVD DECK</li> <li>2. DVD OPEN/CLOSE BUTTON</li> <li>3. VCR DECK</li> <li>4. VCR EJECT BUTTON</li> <li>5. ON/STANDBY BUTTON</li> <li>6. P-SCAN BUTTON</li> <li>7. S-VIDEO INPUT JACK</li> <li>8. VIDEO INPUT JACK</li> <li>9. AUDIO L.R INPUT JACK</li> <li>10. PROGRAM <math>\Delta</math> / <math>\nabla</math> BUTTON</li> </ol> | <ol style="list-style-type: none"> <li>11. FRONT PANEL DISPLAY</li> <li>12. DVD/VCR SELECT BUTTON</li> <li>13. TIME SLIP BUTTON</li> <li>14. RECORD BUTTON</li> <li>15. REW(VCR)/SKIP BUTTON (DVD)</li> <li>16. STOP BUTTON</li> <li>17. PLAY/STILL BUTTON</li> <li>18. F.F(VCR)/SKIP BUTTON (DVD)</li> <li>19. TO DVD COPY BUTTON</li> <li>20. TO VCR COPY BUTTON</li> </ol> |
|--|---|


## Front Panel Display

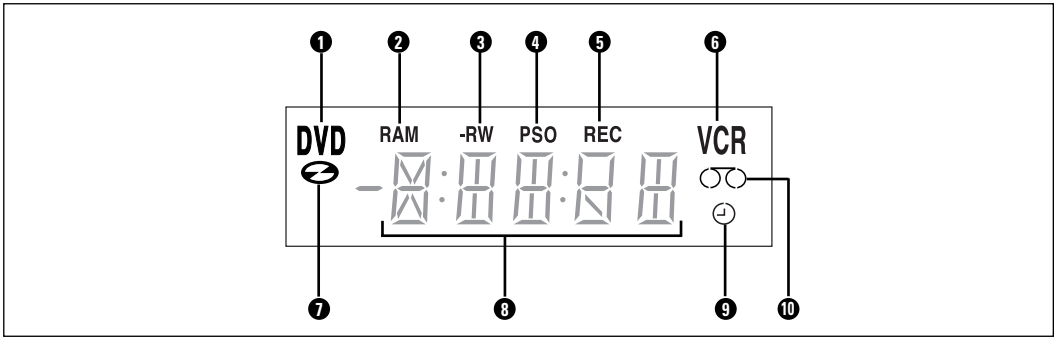

- |  |   |
|--|---|
| <ol style="list-style-type: none"> <li>1. DVD is activated.</li> <li>2. DVD-RAM is activated.</li> <li>3. DVD-R or DVD-RW is activated.</li> <li>4. Progressive Scan mode is activated.</li> <li>5. Record function is activated.</li> <li>6. VCR is activated.</li> </ol> | <ol style="list-style-type: none"> <li>7. DVD or CD media is loaded.</li> <li>8. The time, counter position or current deck status is indicated.</li> <li>9. When you set a Timer recording, this indicator will light up.</li> <li>10. VHS Videotape is loaded.</li> </ol> |
|--|---|

 


## Rear Panel

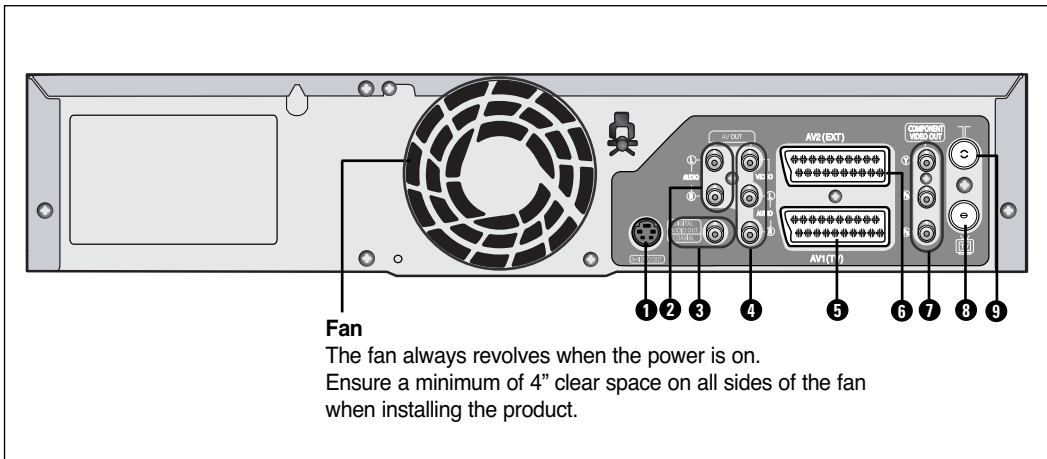

- |                                     |                              |
|-------------------------------------|------------------------------|
| 1. S-VIDEO OUT JACK                 | 5. AV1(TV) IN/OUT SCART      |
| 2. AUDIO L, R OUT JACKS             | 6. AV2(EXT) SCART            |
| 3. DIGITAL AUDIO OUT JACK (COAXIAL) | 7. COMPONENT VIDEO OUT JACKS |
| 4. AUDIO/VIDEO JACK(AV OUT)         | 8. OUT TO TV CONNECTOR       |
|                                     | 9. AERIAL IN CONNECTOR       |

## Tour of the Remote Control

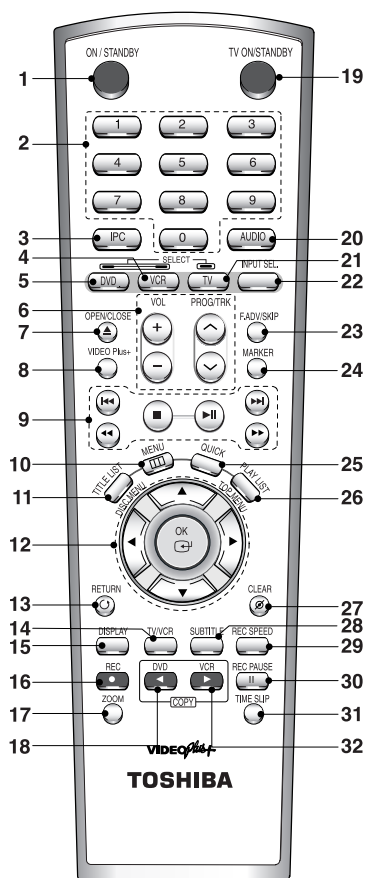

### 1. ON/STANDBY Button

### 2. NUMBER Button

### 3. IPC Button

### 4. VCR Button

Press this when you use a VCR.

### 5. DVD Button

Press this when you use a DVD.

### 6. TV Control Buttons

- VOLUME Button  
TV volume adjustment
- PROG Button  
Press this to select a TV programme.
- TRK Button  
Press this to remove the white line.

### 7. OPEN/CLOSE Button

To open and close the disc tray.

### 8. VIDEO Plus+ Button

Press this when you use video plus+.

### 9. Playback-related Buttons

Forward/Rewind, Search, Skip, Stop, Play/Still

### 10. MENU Button

Brings up the DVD Recorder & VCR's setup menu.

### 11. TITLE LIST/DISC MENU Button

Press this to enter the TITLE list/Disc menu.

### 12. OK/DIRECTION Buttons (▲/▼, ◀/▶)

### 13. RETURN Button

Returns to previous menu.

### 14. TV/VCR Button

### 15. DISPLAY Button

This will display current setting or disc status.

### 16. REC Button

Press this to make a recording on DVD-RAM/-RW/-R discs and VHS Video tape.

### 17. ZOOM Button

Zooms in on screen.

### 18. TO DVD copy Button

Press this when you copy from the VCR to the DVD.

### 19. TV ON/STANDBY Button

### 20. AUDIO Button

Press this to access various audio functions.

### 21. TV Button

Press this to operate TV.

### 22. INPUT SEL Button

Select input signal in external input mode (Tuner or AV1, AV2 or AUX input).

### 23. F.ADV/SKIP Button

### 24. MARKER Button

Press this to bookmark or mark a position while playing a disc.

### 25. QUICK Button

Press this to view the status of the disc that is being played.

### 26. PLAY LIST/TOP MENU Button

Use this to return to the TOP MENU, or to view the recorded files list.

### 27. CLEAR Button

### 28. SUBTITLE Button

Press this to switch the DVD's subtitle language.

### 29. REC SPEED Button

Press this to set the desired recording time and picture quality.

### 30. REC PAUSE Button

Press this to pause during recording.

### 31. TIME SLIP Button

### 32. TO VCR copy Button

Press this when you copy from the DVD to the VCR.

# Connecting & Setting Up

## Quick Overview

A Quick overview presented in this guide will give you enough information to start using the DVD Recorder & VCR.

### Connecting DVD Recorder & VCR to the TV using the RF Cable

### Connecting the SCART Cable

### Connecting the Audio/Video Cable

### Connecting the S-Video Cable

### Connecting the Component Video Cable

### AV Receiver Connections

### Connecting an external devices to the AUX jacks

- *Quick Overview* ..... 17
- *Connecting DVD Recorder & VCR to the TV using the RF Cable* .....18
- *Connecting the SCART Cable* .....18
- *Connecting the Audio/Video Cable* .... .20
- *Connecting the S-Video Cable* .....20
- *Connecting the Component Video Cable* .21
- *AV Receiver Connections* .....22
- *Connecting an external devices to the AUX jacks* .....22

## Connecting DVD Recorder & VCR to the TV using the RF Cable



Note


- Make sure that both the television and the DVD Recorder & VCR are switched off before connecting the cables.

- Remove the aerial or network input cable from the television.
- Connect this cable to the 75Ω aerial jack marked on the rear of your DVD Recorder & VCR.
- Plug the RF Cable supplied into the jack on your DVD Recorder & VCR.
- Plug the other end of the RF Cable into the connector previously used for the aerial on the television.



Note

- To obtain better quality pictures and sound on your television, you can also connect your DVD Recorder & VCR to the television via the SCART cable if your television equipped with a scart type of connection.

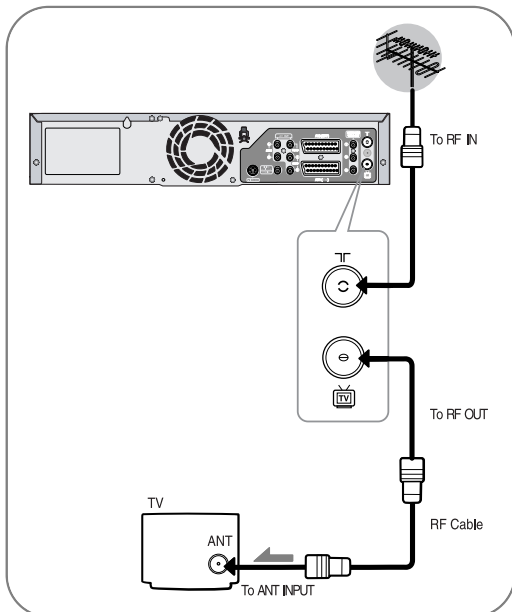

## Connecting the SCART Cable

### Case 1 : Connecting DVD Recorder & VCR to the TV using the SCART Cable

You can connect your DVD Recorder & VCR to the television using the SCART cable if the appropriate input is available on the television. You thus:


- Obtain better quality sound and pictures
- Simplify the setting up procedure of your DVD Recorder & VCR



Note

- Regardless of the type of connection chosen, you must always connect the RF Cable. Otherwise, no picture will be visible on the screen when the DVD Recorder & VCR is switched off.
- Make sure that both the television and the DVD Recorder & VCR are switched off before connecting the cables.

- Connect the Aerial Cable.
- Connect one end of the SCART cable to the AV1 (TV) jack on the rear of the DVD Recorder & VCR.
- Plug the other end into the appropriate connector on the television.

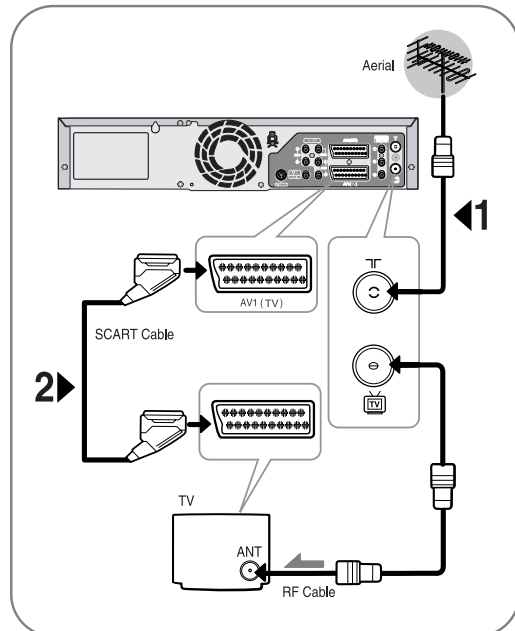



## Case 2 : Connecting DVD Recorder & VCR to a Satellite Receiver or Other Equipment

You can connect your DVD Recorder & VCR to a Satellite receiver or other DVD Recorder & VCR using the SCART cable if the appropriate outputs are available on the equipment chosen. The following illustrations give a few examples of the connection possibilities.

### 1 AV1 (TV): By means of 21-pin Scart Cable

Plug the SCART Cable with satellite receiver or other equipment into the AV1 (TV) jack on the rear of the DVD Recorder & VCR. After making this connection, select the source by pressing the **INPUT SEL.** button for the **AV1** input sources.

### 2 By means of RF Cable

After making this connection, you must preset the station received through the satellite tuner. RF output channel of the satellite receiver should be adjusted away from channel 60, which is used by the DVD Recorder & VCR, e.g. re-adjust to channel 59.

### 1 AV2 IN (EXT): By means of 21-pin Scart Cable



Plug the SCART Cable with satellite receiver or other equipment into the AV2 (EXT) jack on the rear of the DVD Recorder & VCR. After making this connection, select the source by pressing the **INPUT SEL.** button for the **AV2** input sources.

### 2 By means of RF Cable

After making this connection, you must preset the station received through the satellite tuner. RF output channel of the satellite receiver should be adjusted away from channel 60, which is used by the DVD Recorder & VCR, e.g. re-adjust to channel 57.

### 3 AV1(TV) : By means of 21-pin Scart Cable


Connect the end of the SCART cable to the AV1(TV) jack on the rear of the DVD Recorder & VCR. Plug the other end into the appropriate connector on the television.

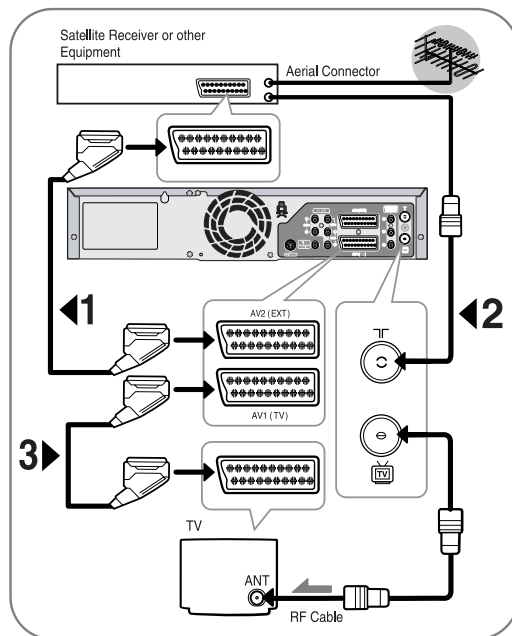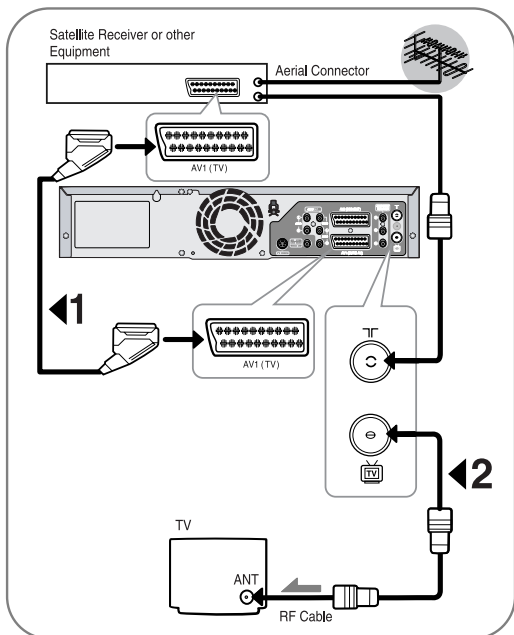

## Connecting the Audio/Video Cable

You can connect your DVD Recorder & VCR to the television using the audio/video cable if the appropriate input is available on the television.


- 1** Connect one end of the video cable into the **VIDEO** output jack on the rear of the DVD Recorder & VCR.
- 2** Plug the other end of the video cable into the appropriate input connector on the television.
- 3** Connect one end of the audio cables supplied into the **AUDIO** output jacks on the rear of the DVD Recorder & VCR.
  - Take care to respect the colour coding of the left and right channels.
- 4** Plug the other end of the audio cables into the appropriate input connectors on the television.

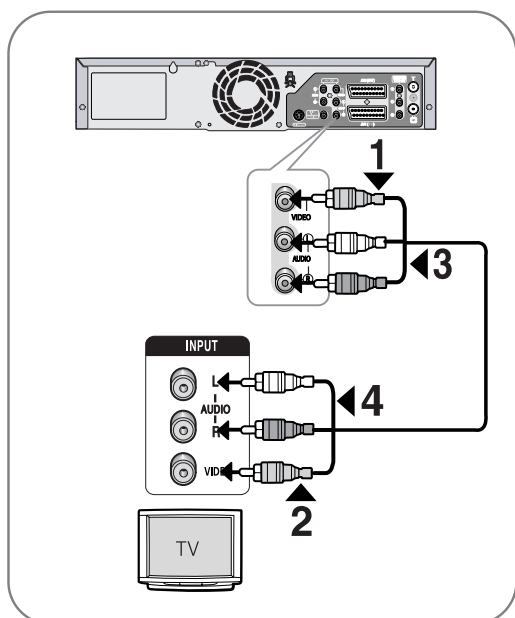

## Connecting the S-Video Cable

You will enjoy high quality images. S-Video separates the picture element into black and white(Y) and colour(C) signals to present clearer images than composite video output mode.


- 1** Connect one end of the S-Video cable into the **S-VIDEO** output jack on the rear of the DVD Recorder & VCR.
- 2** Plug the other end of the S-Video cable into the appropriate input connector on the television.
- 3** Connect one end of the audio cable supplied into the **AUDIO** output jacks on the rear of the DVD Recorder & VCR.
  - Take care to respect the colour coding of the left and right channels.
- 4** Plug the other end of the audio cables into the appropriate input connectors on the television.

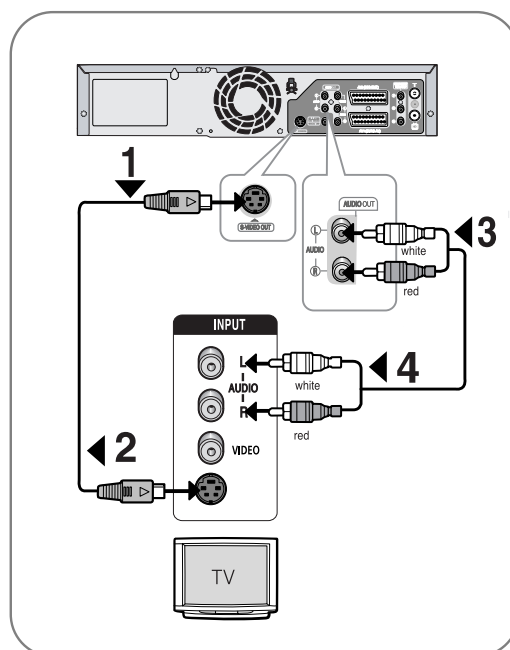

## Connecting the Component Video Cable

You will enjoy high quality accurate colour reproduction images. Component video separates the picture element into black and white (Y), blue (P<sub>B</sub>), red (P<sub>R</sub>) signals to present most clear and clean images.

- 1** Connect Component video cables between the **COMPONENT VIDEO OUT** jacks on the rear of the DVD Recorder & VCR and **COMPONENT VIDEO IN** jacks on the rear of the TV.
- 2** Connect audio cables between the audio output jacks on the rear of the DVD Recorder & VCR and **AUDIO IN** jacks on the rear of the TV.
  - Take care to respect the colour coding of the up and down channels.

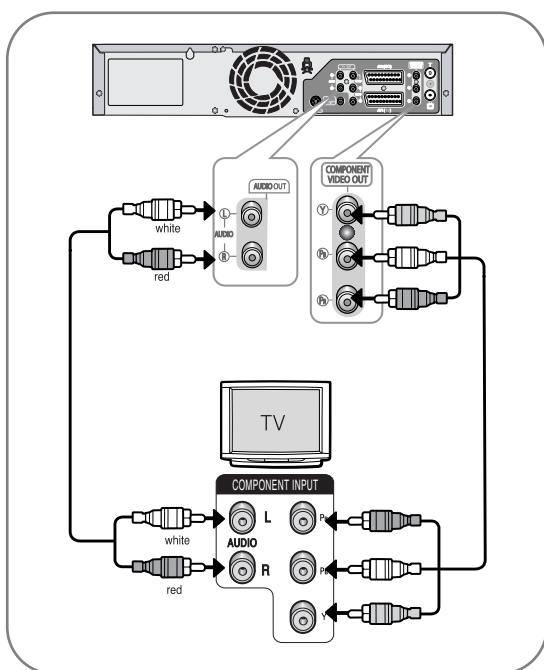

## Progressive Scan

Your TV must support PAL progressive scan input to allow to watch progressive scan component video out. (See page 39)



- For more information about Progressive setting, refer to the page 39~40.
- Make sure that the colour coded connections match. That is, the Y, P<sub>B</sub> and P<sub>R</sub> component output jacks of your DVD Recorder & VCR should be connected to the exact corresponding component input jacks on your TV. Otherwise, red or blue images will be displayed on the TV screen.
- Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of progressive scan picture problems, it is recommended that you switch the connection to the standard definition output. If there are questions regarding your Toshiba TV set's compatibility with this DVD Recorder & VCR, please contact our customer service centre.



Note

- See your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's instructions regarding Progressive Scan settings in the TV's menu system.
- Depending on your TV, the method of connection may differ from the illustration above.
- What is "Progressive Scan"? Progressive scan has twice as many scanning lines as the interlace output method has. Progressive scanning method can provide better and clearer picture quality.
- You must connect the DVD Recorder & VCR to the component(s) before using the Progressive Scan feature.

## AV Receiver Connections

To take full advantage of the movie theatre experience that DVD offers, you may want to connect your DVD Recorder & VCR to a complete Surround Sound system, including an A/V Receiver and six Surround Sound speakers.


If your A/V receiver is equipped with a Dolby Digital Decoder, you have the option to bypass the DVD Recorder & VCR's built-in Dolby Digital Decoder. Use the Digital Audio Out connection below.

To enjoy Dolby digital or DTS sound, you must set up the audio settings (see page 31).

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of Digital Theatre Systems, Inc.

- 1 Connect a Digital Audio coaxial cable from the Digital Audio Out jacks on the rear panel of the DVD Recorder & VCR to their corresponding Digital Audio Input jack on your A/V Receiver:

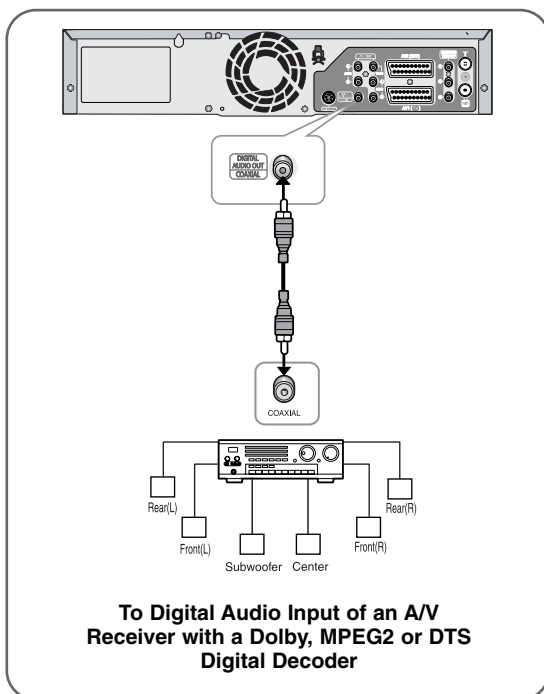

## Connecting an external devices to the AUX jacks

You can connect other audio/video equipment to your DVD Recorder & VCR using audio/video cables if the appropriate outputs are available on the equipment chosen.


- You wish to copy a video cassette with the help of a second VCR.
- You wish to play back and/or copy pictures taken with a camcorder.
- Make sure that both the external devices and the DVD Recorder & VCR are switched off before connecting the cables.

- 1 Connect one end of the video cable into the **VIDEO** or **S-Video** input jack on the front of the DVD Recorder & VCR.

- 2 Plug the other end of the video cable into the appropriate output connector on the other system (VCR or Camcorder, etc).

- 3 Connect one end of the audio cable supplied into the **AUDIO** input jacks on the front of the DVD Recorder & VCR.
  - Take care to respect the colour coding of the up and down channels.

- 4 Plug the other end of the audio cable into the appropriate output connectors on the other system (VCR or Camcorder, etc).

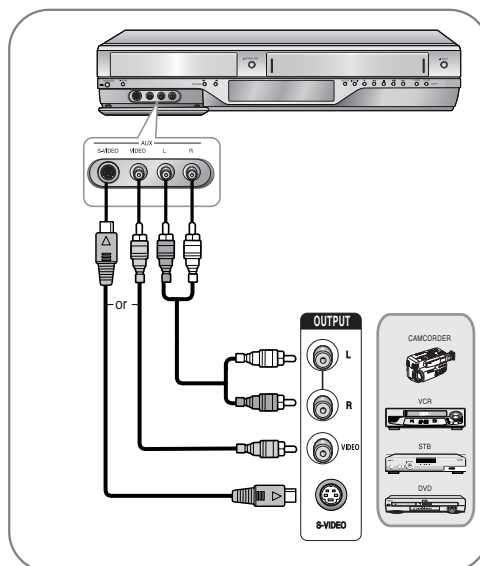


# System Setup

- *On-Screen Menu Navigation* .....23
- *Plug & Auto Setup* .....24
- *Setting the Date and Time* .....25
- *Auto Setup* .....26
- *Manual Setup* .....27
- *Clearing a Preset Station* .....28
- *Changing the Preset Manual Setup Table* ..29
- *VIDEO Output CH* .....30
- *Setting Up the Language Options* .....30
- *Setting Up the Audio Options* .....31
- *Setting Up the Display(Video) Options* ...32
- *Setting Up the Parental Control* .....33
- *VCR Setting* .....34
- *DVD EP Mode Time* .....36
- *Automatic Chapter Creator* .....36
- *Front Display* .....37
- *NICAM* .....38
- *Video Output* .....38
- *Setting up the Progressive scan* .....39
- *Canceling the Progressive scan* .....40

## On-Screen Menu Navigation

The on-screen menus allow you to enable or disable various functions on your DVD Recorder & VCR. Use the following buttons to open and navigate through the on-screen menus.

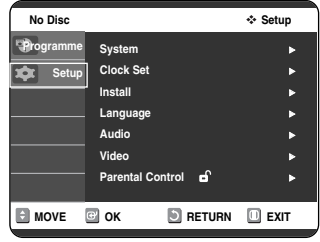

**1 MENU Button**  
 Press this button on the remote control to open the on-screen MENU.  
 Press again to exit the on-screen MENU.

**2 ▲/▼,◀/▶ Buttons**  
 Press these buttons on the remote control to move the selection bar ▲/▼,◀/▶ to cycle through the menu options.

**3 OK Button**  
 Press this button on the remote control to confirm any new settings.

**4 RETURN Button**  
 Press this button on the remote control to return to the previous MENU screen displayed or to exit the on-screen MENU.

System Setup

## Plug & Auto Setup


The DVD Recorder & VCR will automatically set itself up when it is plugged into the mains for the first time. TV stations will be stored in memory. The process takes a few minutes. The DVD Recorder & VCR will then be ready for use.

- 1** Connect the RF cable as indicated on page 18.
  - Connecting Your DVD Recorder & VCR to the TV using the RF Cable.


- 2** Plug the DVD Recorder & VCR into the mains.
  - "Auto" in the front panel display flickers.




- 3** Start the auto setup.

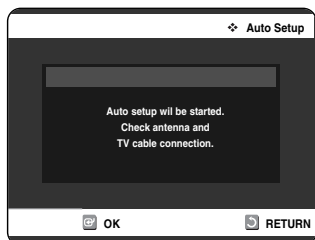

- 4** Start the auto scanning.

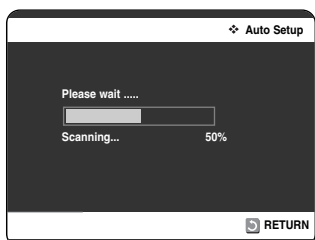

- 5** When the auto scanning is complete, the current time and date will be displayed automatically.

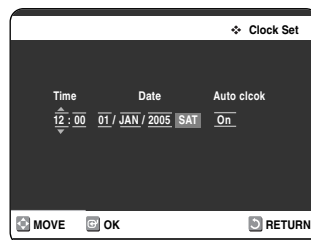


- 6** Check the date and time.
  - if it is: Correct
    - Press **OK** button then the data and time will be saved.
  - if it is: Incorrect
    - Refer to "Setting the Date and Time" (see page 25) menu, when you want to change the date and time.

# Setting the Date and Time


Your DVD Recorder & VCR contains a 24-hour clock and calendar used to:

- Automatically stop programme recording
- Preset your DVD Recorder & VCR to record a programme automatically
- You must set the date and time when you purchase the DVD Recorder & VCR
- Do not forget to reset the time when you change clocks from winter to summer time and vice versa.

- 1 With the unit in Stop mode/No Disc mode, press the **MENU** button.

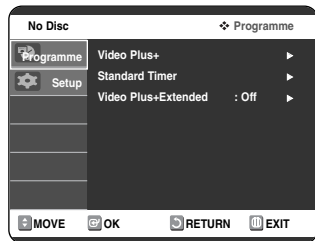


- 2 Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

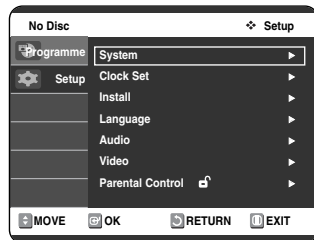

- 3 Press the **▲▼** buttons to select **Clock Set**, then press the **OK** or **▶** button.


- 4 Press the **◀▶** buttons to select the hour, minutes, day, month and year.
  - The option selected highlight.

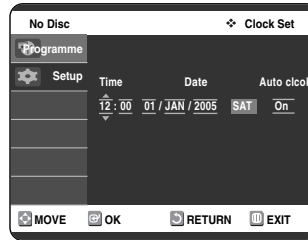

- 5 Press the **▲▼** buttons to increase or decrease the value.
  - The day of the week is displayed automatically.
  - You can hold the **▲▼** buttons down to scroll more quickly through the values.

## Setting the clock Automatically

- 6 Press the **◀▶** buttons to select **Auto Clock**. Press the **▲▼** buttons to select **On**.

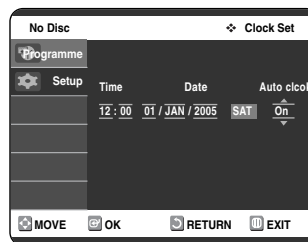

- 7 Press the **OK** button, then the date and time will be saved. If you don't press the **OK** button, it will not be saved.

- 8 Press the **MENU** button to exit the menu.



Note

- You must have the aerial connected to set the Auto Clock. Connecting the RF Cable on page 18.
- If you set "Auto Clock" to "On", the Auto Clock set function is activated whenever the DVD Recorder & VCR is turned off. The time is adjusted automatically by making reference to the time signal from the station.



# Auto Setup


**Note** ■ If your clock is set to the wrong time zone or daylight saving, you can adjust these settings without turning off the Auto Clock Set function.

You do not need to preset the stations if you have already set them automatically (see Plug & Auto Setup on page 24).  
 Your DVD Recorder & VCR contains a built-in tuner used to receive television broadcasts.  
 You must preset the stations received through the tuner. This can be done:


- Plug & Auto Setup (see page 24)
- Auto Setup
- Manual Setup (see page 27~28)

**1** With the unit in Stop mode/No Disc mode, press the **MENU** button.


**2** Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

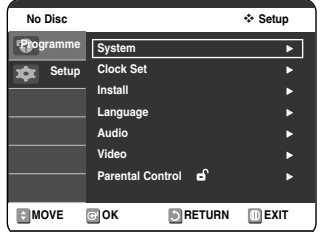


**3** Press the **▲▼** buttons to select **Install**, then press the **OK** or **▶** button.

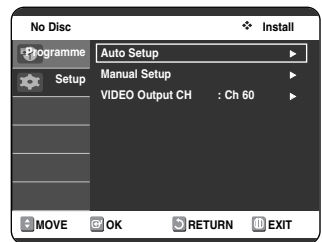

**4** Press the **▲▼** buttons to select **Auto Setup**, then press the **OK** or **▶** button.  
 The message "Your data will be lost. Press [OK] to continue, [MENU] to exit." is displayed.

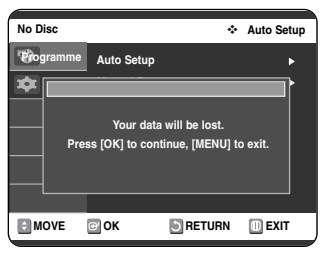

**5** Press the **OK** button to start the auto scanning.

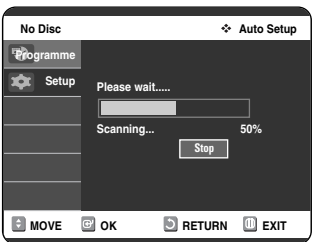

- The first frequency band is scanned and the first station found is displayed and stored. And the DVD Recorder & VCR searches for the second station and so on.
- When the automatic scanning procedure has finished, the DVD Recorder & VCR switches automatically to programme 1.
- The number of stations automatically stored by the DVD Recorder & VCR depends on the number of stations that it has found.

**6** If you wish to cancel the auto scanning before the end, press the **OK** button.


- The time and date are set automatically from the broadcast signal. If the signal is weak or ghosting occurs, the time and date may not be set automatically.
- Once the auto scanning procedure has finished, some stations may have been stored more than once; select the stations with the best reception and delete the ones no longer required.

# Manual Setup


If you have already set them automatically, you do not need to preset the stations manually.

**1** With the unit in Stop mode/No Disc mode, press the **MENU** button.

**2** Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

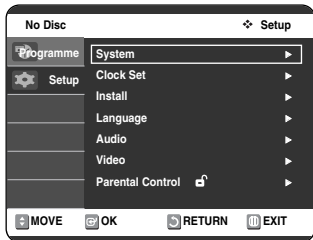


**3** Press the **▲▼** buttons to select **Install**, then press the **OK** or **▶** button.

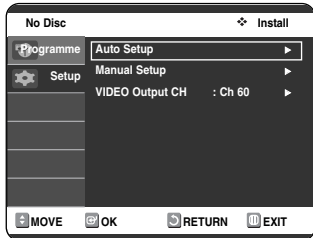


**4** Press the **▲▼** buttons to select **Manual Setup**, then press the **OK** or **▶** button.

**5** Press the **▲▼** buttons to select the desired PR number, then press the **OK** or **▶** button.

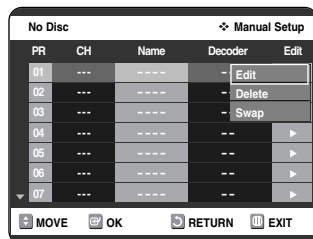


**6** Press the **▲▼** buttons to select **Edit**, then press the **OK** or **▶** button. **Manual Setup** menu is displayed.

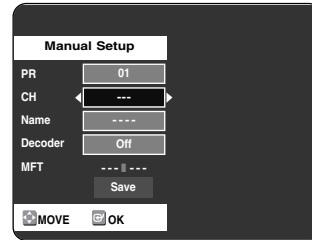

**7** Press the **◀▶** buttons to start scanning the channels. The frequency band is scanned and the first station found is displayed.


**8** Press the **▲▼** buttons to select **Name**. The station name is set automatically from the broadcast signal.

**9** To change the programme's name, press the **▶** button.

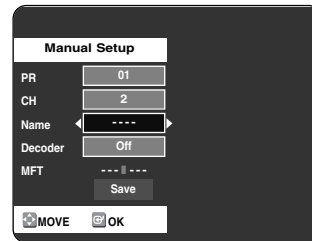


|           |  |  |
|-----------|--|--|
| <b>10</b> | To...<br>Select a Character            | Then....<br>Press the <b>▲▼</b> buttons until the required name character is displayed (letters, numbers or " - " character) |
|           | Move to the next or previous character | Press the <b>◀▶</b> buttons respectively.  |

 Press the **OK** button to save the name.



- 11** Press the ▲▼ buttons to select **Decoder**.  
 Press the ◀▶ buttons to select **On** or **Off**.  
 Indicate whether you wish to use a decoder On or Off.

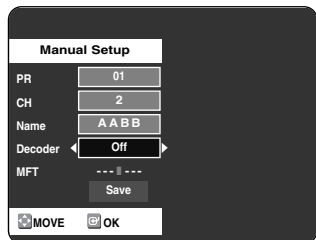

| If you..                                   | Then....   |
|--|--|
| Wish to store the station displayed        | <ul style="list-style-type: none"> <li>• Press the ▲▼ buttons to select MFT .</li> <li>• Press the ◀▶ buttons to adjust the picture, if necessary.</li> <li>• Select Save to store the station.</li> </ul>                             |
| Do not wish to store the station displayed | <ul style="list-style-type: none"> <li>• Press the ▲▼ buttons to select CH.</li> <li>• Press the ◀▶ buttons to go on scanning the frequency band and display the next station.</li> <li>• Go back to the beginning of step.</li> </ul> |

- 13** Press the ▲▼ buttons to select **Save**, then press the **OK** button to confirm manual setting.  
 • Repeat this procedure from step 5 onwards, until all the required stations have been stored.


- 14** Press the **MENU** button to exit the menu.

## Clearing a Preset Station




- If you have stored a TV station:
- That you do not require
  - At the wrong programme position you can cancel it.

- 1** With the unit in Stop mode/No Disc mode, press the **MENU** button.
- 2** Press the ▲▼ buttons to select **Setup**, then press the **OK** or ▶ button.


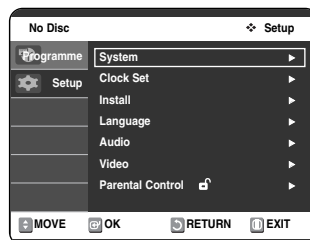


- 3** Press the ▲▼ buttons to select **Install**, then press the **OK** or ▶ button.

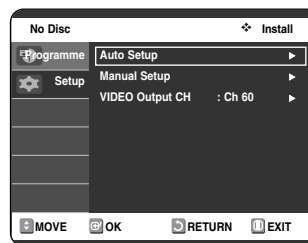

- 4** Press the ▲▼ buttons to select **Manual Setup**, then press the **OK** or ▶ button.

 - 5** Press the ▲▼ buttons to select the desired PR number, then press the **OK** or ▶ button.

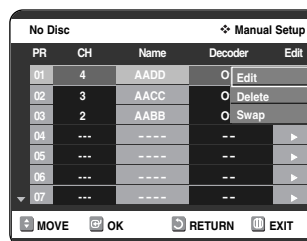

**6** Press the ▲▼ buttons to select **Delete**, then press the **OK** or ► button.


**7** Press the ◀▶ buttons to select **Yes**, and then press the **OK** button.

**8** Repeat the same procedure from Step 5 onwards until all the required stations have been cleared.

**9** Press the **MENU** button to exit the menu.

**4** Press the ▲▼ buttons to select **Manual Setup**, then press the **OK** or ► button.

**5** Press the ▲▼ buttons to select the desired **PR** number, then press the **OK** or ► button.

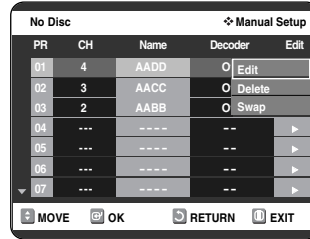

## Changing the Preset Manual Setup Table

You can rearrange the Manual Setup Table and give different programme numbers to the manual setup listed according to your own preferences.



**6** Press the ▲▼ buttons to select **Swap**., then press the **OK** button.

- For example, to move a TV station in programme 1 to programme 3.

**7** Press the ▲▼ buttons to select required position, then press the **OK** button again to swap the position.


**1** With the unit in Stop mode/No Disc mode, press the **MENU** button.


**2** Press the ▲▼ buttons to select **Setup**, then press the **OK** or ► button.

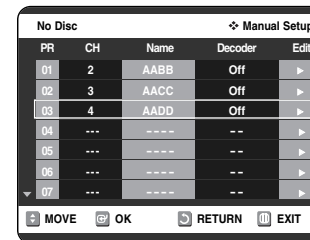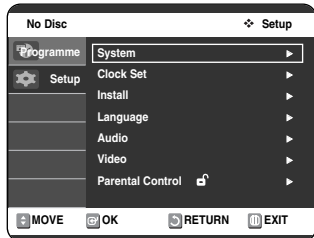

**8** Press the **MENU** button to exit the menu.

 **3** Press the ▲▼ buttons to select **Install**, then press the **OK** or ► button.

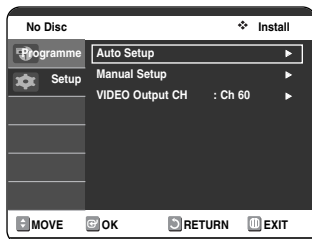





## VIDEO Output CH

Your DVD Recorder & VCR output channel may need to be changed if the pictures suffer from interference or if your TV cannot find the pictures.

- 1 With the unit in Stop mode/No Disc mode, press the **MENU** button.
- 2 Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

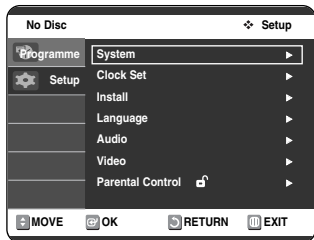


- 3 Press the **▲▼** buttons to select **Install**, then press the **OK** or **▶** button.

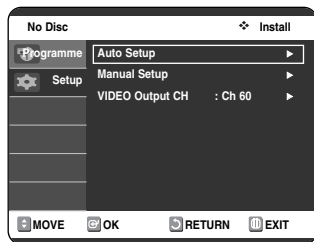

- 4 Press the **▲▼** buttons to select **VIDEO Output CH**, then press the **OK** or **▶** button.


- 5 Press the **▲▼** buttons to select the desired VIDEO Output channel, then press the **OK** or **▶** button.

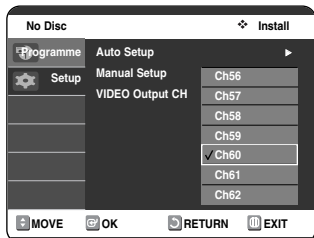


## Setting Up the Language Options

If you set audio, subtitle, disc menu and on-screen menu language in advance, they will come up automatically every time you watch a movie. If the selected language is not recorded on the disc, the original pre-recorded language is selected.


- 1 With the unit in Stop mode/No Disc mode, press the **MENU** button.
- 2 Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

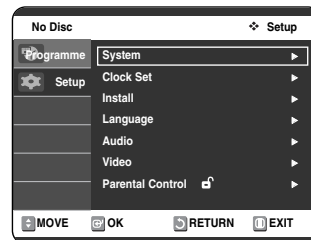


- 3 Press the **▲▼** buttons to select **Language**, then press the **OK** or **▶** button. Language setup menu will be displayed.

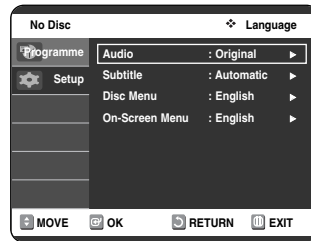

- 4 Press the **▲▼** buttons to select the desired language option, press the **OK** or **▶** button.

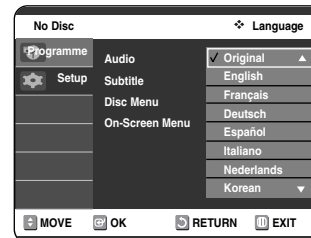

 - **Audio** : For the disc audio language.
- **Subtitle** : For the disc subtitles.
- **Disc Menu**: For the disc menu contained on the disc.
- **On-Screen Menu**: For the on-screen menu of your DVD Recorder & VCR.



- 5 Press the ▲▼ buttons to select the desired language, then press the **OK** or ► button.




Note

- Press the **RETURN** or ◀ button to return to the previous menu. Press the **MENU** button to exit the menu.
- The selected language will only appear if it is supported on the disc.


## Setting Up the Audio Options

Allows you to setup the audio device and sound status settings depending on the audio system in use.

- 1 With the unit in Stop mode/No Disc mode, press the **MENU** button.
- 2 Press the ▲▼ buttons to select **Setup**, then press the **OK** or ► button.

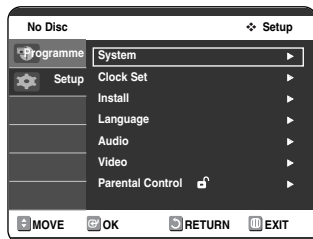

- 3 Press the ▲▼ buttons to select **Audio**, then press the **OK** or ► button. Audio setup menu will be displayed.

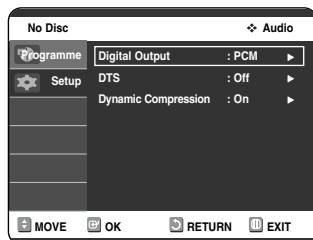

- 4 Press the ▲▼ buttons to select the desired audio option, then press the **OK** or ► button.
- 5 Press the ▲▼ buttons to select the desired item, then press the **OK** or ► button.



Note

- Press the **RETURN** or ◀ button to return to the previous menu. Press the **MENU** button to exit the menu.

## Digital Output

- **PCM** : Converts to PCM(2CH) 48kHz audio. Select PCM when using the Analog Audio Outputs.
- **Bitstream** : Converts to Dolby Digital Bitstream (5.1CH). Select Bitstream when using the Digital Audio Output.



Note

- Be sure to select the correct Digital Output or no audio will be heard.

## DTS

- **Off** : Doesn't output digital signal.
- **On** : Outputs DTS Bitstream via digital output only. Select DTS when connecting to a DTS Decoder.



Note

- When DTS soundtrack is played, sound is not output from Analog Audio Output.

## Dynamic Compression

This is only active when a Dolby Digital signal is detected.


- **On** : When Movie soundtracks are played at low volume or from smaller speakers, the system can apply appropriate compression to make low-level content more intelligible and prevent dramatic passages from getting too loud.
- **Off** : You can enjoy the movie with the standard Dynamic Range.

## Setting Up the Display (Video) Options


This function allows you to setup the TV screen settings.

**1** With the unit in Stop mode/No Disc mode, press the **MENU** button.

**2** Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

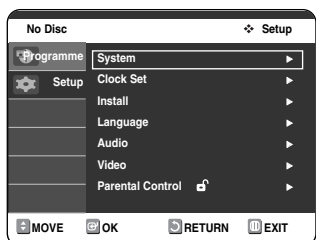

**3** Press the **▲▼** buttons to select **Video**, then press the **OK** or **▶** button. Video option menu will be displayed.

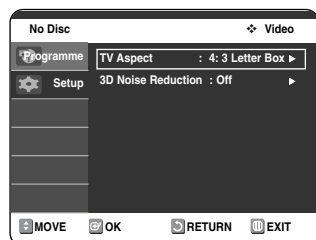

**4** Press the **▲▼** buttons to select the desired video option, then press the **OK** or **▶** button.

**5** Press the **▲▼** buttons to select the desired item, then press the **OK** or **▶** button.



Note

■ Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

### TV Aspect

Depending on the type of television you have, you may want to adjust the screen setting. (aspect ratio)

- **4:3 Letter Box** : Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.
- **4:3 Pan - Scan** : Select this for conventional size TV when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)
- **16:9 Wide** : You can view the full 16:9 picture on your widescreen TV.

### 3D Noise Reduction (motion adaptive noise reduction)

- **Off** : Normal
- **On** : Provides a cleaner picture through noise reduction (for recording).



Note

■ This function depends on disc type. It may not work for some disc types.




# Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating - which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.




**1** With the unit in Stop mode/No Disc mode, press the **MENU** button on the remote control.


**2** Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

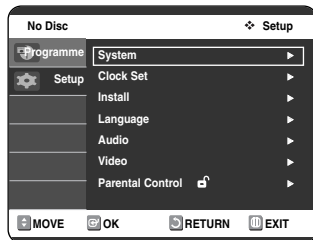


**3** Press the **▲▼** buttons to select **Parental Control**, then press the **OK** or **▶** button.  
 • The 'Create the password' message will be displayed.

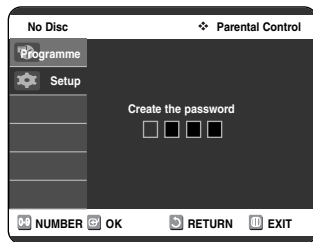

**4** Enter the 4-digit password using the 0 to 9 buttons on the remote control.  
 • The 'Confirm the password' message will be displayed.

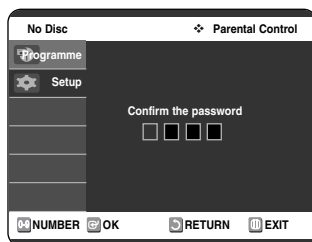

**5** Enter your password again, and then press the **OK** or **▶** button.

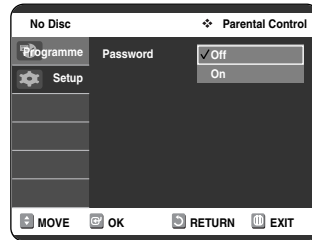



**6** Press the **▲▼** buttons to select **On**, then press the **OK** or **▶** button.  
 The Parental Control screen appears.




- Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.
- Refer to Troubleshooting if you forgot your password. (See page 90)

## About the Rating Level

**1** Press the **▲▼** buttons to select **Rating Level**, then press the **OK** or **▶** button.

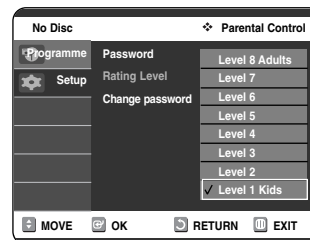
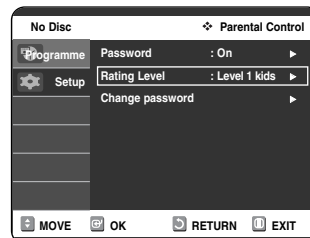


 **2** Press the **▲▼** buttons to select the rating level you want, then press the **OK** or **▶** button.  
 For example, if you select up to Level 6, discs that contain Level 7, 8 will not play. A larger number indicates that the programme is intended for adult use only.




## About the Change Level

- 1 Press the ▲▼ buttons to select **Change Password**, then press the **OK** or ► button.

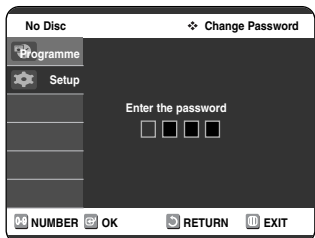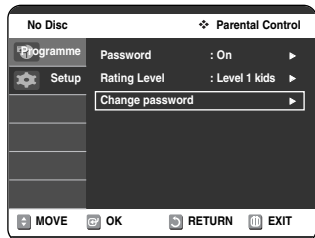

- 2 Enter the 4-digit password using the 0 to 9 buttons on the remote control.
  - The 'Confirm the password.' message will be displayed.

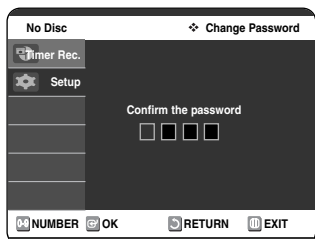

- 3 Enter your password again using the 0 to 9 buttons on the remote control.



Note

- Press the **RETURN** or ◀ button to return to the previous menu. Press the **MENU** button to exit the menu.

## VCR Setting




If you want your videotapes to play automatically when you insert them, turn on Auto Play.




Note

- Only tapes that are missing the Record Safety Tab will play automatically when inserted.



- 1 With the unit in Stop mode/No Disc mode, press the **MENU** button.
- 2 Press the ▲▼ buttons to select **Setup**, then press the **OK** or ► button.

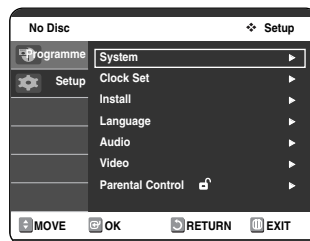

- 3 Press the ▲▼ buttons to select **System**, then press the **OK** or ► button.

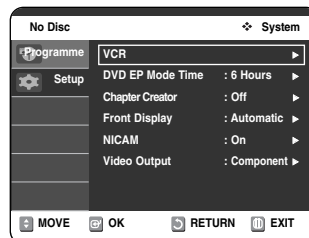

 - 4 Press the ▲▼ buttons to select **VCR**, then press the **OK** or ► button.

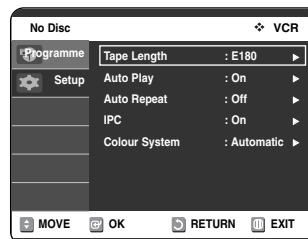


**5** Press the ▲▼ buttons to select the desired VCR option, then press the **OK** or ► button.

**6** Press the ▲▼ buttons to select the desired item, then press the **OK** or ► button.


### Tape Length

This information is usually printed on the tape box. The menu cycles through: E180, E240, E280, E300. Once the type of cassette is set, the VCR can display the amount of time remaining on the tape when you press the **DISPLAY** button.

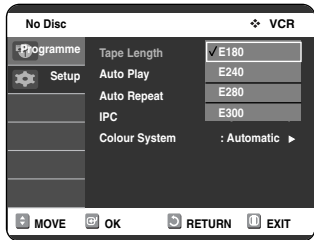


### Auto Play

- **On** - The VCR will automatically begin playing a video tape when it is inserted, as long as the safety tab of the cassette has been removed.
- **Off** - Auto play is disabled.

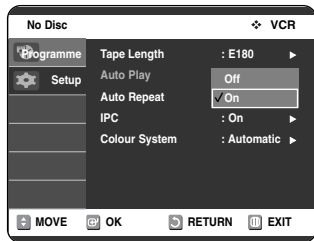

### Auto Repeat


It sets the VCR to play a tape repeatedly (unless a tape control is activated :Stop, Fast Forward or Rewind).

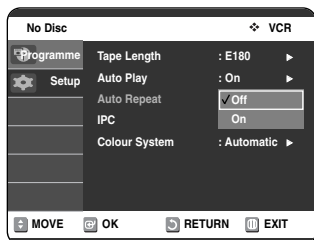

### IPC (Intelligent Picture Control)

The Intelligent Picture Control Feature allows you to adjust the sharpness of the image automatically, according to your own preferences.

- **On** - the sharpness of the image is adjusted automatically.
- **Off** - To adjust the sharpness manually.

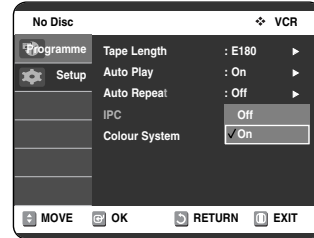


The Intelligent Picture Control Feature can also be turned on by pressing the IPC button.

### Colour System

Before recording or playing back a tape, you can select the required system standard. Otherwise, the system automatically selects the reception standard when you select Automatic.


- When playing back a tape, the standard is automatically selected by the DVD Recorder & VCR.
- **Automatic** : When playing back a tape, the system standard is automatically selected by the DVD Recorder & VCR.
- **PAL** : PAL video system
- **B/W** : Black and White.

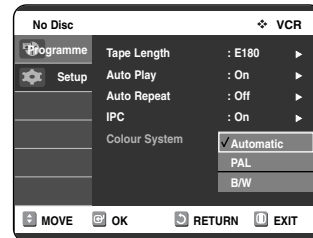


## DVD EP Mode Time

You can set the EP (Extended Play) mode's time setting to 6 or 8 hours.

- 1 With the unit in Stop mode/No Disc mode, press the **MENU** button.
- 2 Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

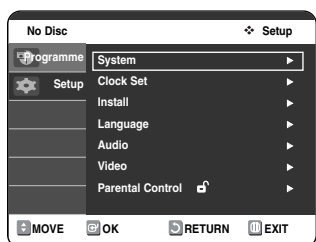

- 3 Press the **▲▼** buttons to select **System**, then press the **OK** or **▶** button.
- 4 Press the **▲▼** buttons to select **DVD EP Mode Time**, then press the **OK** or **▶** button.

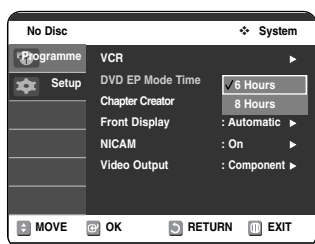


- 5 Press the **▲▼** buttons to select **6 Hours** or **8 Hours**, then press the **OK** or **▶** button.

## Automatic Chapter Creator


This function only works with DVD-RW (V mode) and DVD-R discs.

A DVD-Video consists of 'Titles' and 'Chapters'. When you record one program, it makes one Title. If you use this function, the Title will be divided into Chapters.

- 1 With the unit in Stop mode, press the **MENU** button.
- 2 Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

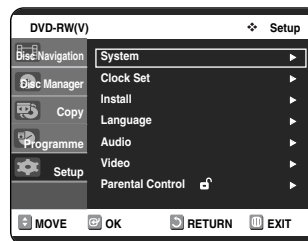


- 3 Press the **▲▼** buttons to select **System**, then press the **OK** or **▶** button.
- 4 Press the **▲▼** buttons to select **Chapter Creator**, then press the **OK** or **▶** button.

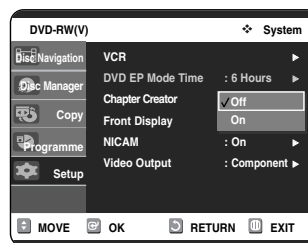

- 5 Press the **▲▼** buttons to select **On**, then press the **OK** or **▶** button. Press the **MENU** button to exit the menu.
- 6 Set the recording speed by pressing the **REC SPEED** button on the remote (see page 58 for more information on recording speeds).


- 7** Press the **REC** button to start recording. The message "Do you want to create the chapter menu after this recording?" is displayed.

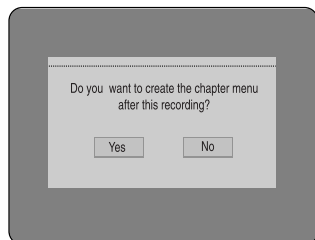


- 8** Press the **◀▶** buttons to select **Yes** and press the **OK** button and recording begins. In XP and SP mode, you must record at least 5 minutes to create a chapter. In LP and EP mode, 15 minutes.

- 9** Press the **STOP** button to stop recording.

- 10** To display the created titles, finalise the disc (see page 86) and then press the **TOP MENU** button. The title menu will be displayed.

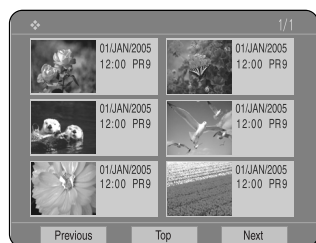

- 11** To display the created chapters, select the desired Title and then press the **DISC MENU** button. The chapter menu for the selected Title will be displayed.

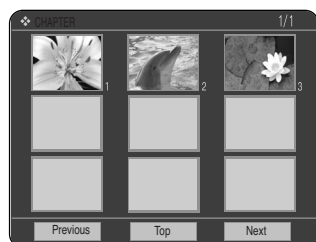

Note

- On DVD-RW discs, additional chapters and titles can be added to a finalised disc by unfinalising and recording again. On DVD-RW discs, once finalised, no additional chapters or titles can be recorded.



CAUTION

- The Automatic Chapter Creator function does not work during Timer Recording or when you turn the power off.
- The DVD-R disc cannot be unfinalised.


## Front Display



Adjust the brightness of the unit's front panel display.


- 1** With the unit in Stop mode/No Disc mode, press the **MENU** button.

- 2** Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

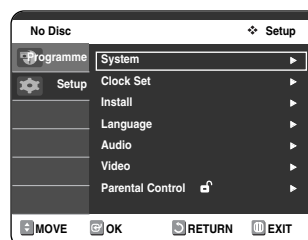

- 3** Press the **▲▼** buttons to select **System**, then press the **OK** or **▶** button.

- 4** Press the **▲▼** buttons to select **Front Display**, then press the **OK** or **▶** button.

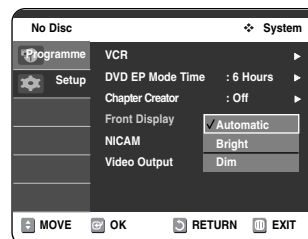

- 5** Press the **▲▼** buttons to select the desired item, then press the **OK** or **▶** button.


- **Automatic** – Front Panel Display will dim automatically during power off.
- **Bright** – Front Panel Display will be bright all the time.
- **Dim** – Front Panel Display will be dim all the time.

## NICAM

NICAM programmes are divided into 3 types. NICAM Stereo, NICAM Mono and Bilingual (transmission in another language). NICAM programmes are always accompanied by a standard mono sound broadcast and you can select the desired sound.


**1** With the unit in Stop mode/No Disc mode, press the **MENU** button.

**2** Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

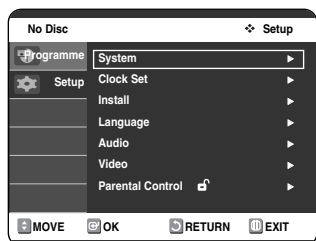

**3** Press the **▲▼** buttons to select **System**, then press the **OK** or **▶** button.

**4** Press the **▲▼** buttons to select **NICAM**, then press the **OK** or **▶** button.

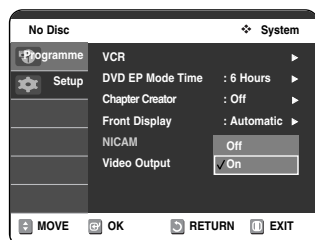

**5** Press the **▲▼** buttons to select **Off** or **On**, then press the **OK** or **▶** button.

**On:** NICAM mode.


**Off:** Only set at this position to record the standard mono sound during a NICAM broadcast if the stereo sound is distorted due to inferior reception conditions.

## Video Output


You can enjoy high quality image through RGB or Component video connection.

**1** With the unit in Stop mode/No Disc mode, press the **MENU** button.


**2** Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.

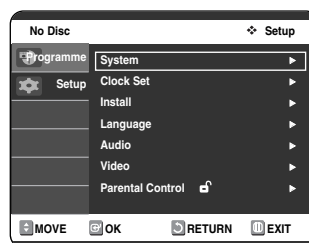

**3** Press the **▲▼** buttons to select **System**, then press the **OK** or **▶** button.

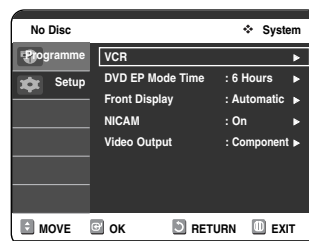

**4** Press the **▲▼** buttons to select **Video Output**, then press the **OK** or **▶** button.

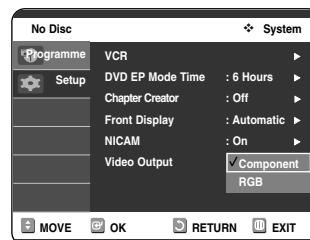

**5** Press the **▲▼** buttons to select **Component** or **RGB**, then press the **OK** or **▶** button.

- **Component** : Select this when the Recorder is connected to a TV with Component jack.
- **RGB** : Select this when the Recorder is connected to a TV using SCART cable.

In Component mode, you can set video output to Progressive or Interlace, see the table below.

Available video output jacks are as follow.


## Available Video Output Jack

| Setting mode<br>Output jack     |           | Component mode                      |  | RGB Mode |
|---------------------------------|-----------|-------------------------------------|--|----------|
|                                 |           | P-SCAN off mode<br>(Interlace mode) | P-SCAN on mode<br>(TV in progressive mode) |          |
| Component Output<br>(Y, Pb, Pr) |           | 0                                   | 0  | X        |
| AV1 Scart                       | R, G, B   | X                                   | X  | 0        |
|                                 | Composite | 0                                   | X  | X        |
| AV2 Scart                       | Composite | 0                                   | X  | 0        |
| Composite Video out             |           | 0                                   | X  | 0        |
| S-Video out                     |           | 0                                   | X  | 0        |

## Setting up the Progressive scan

If your TV supports PAL Progressive Scan, press the **P-SCAN** button on the front of the DVD Recorder & VCR to enjoy the progressive scan.

- 1 With the unit in Stop mode, press the **P-SCAN** button on the front of the DVD Recorder & VCR. The message "Press [Yes] to confirm Progressive scan mode. Otherwise press [No]" will appear. Press the ◀▶ buttons to select **Yes**, and then press the **OK** button.

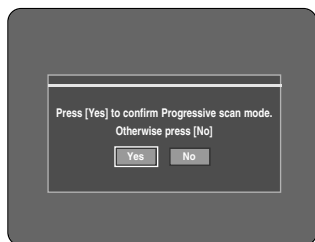

- 2 The message "Please, set your TV to Progressive input. To deactivate, press [STOP] key." will appear. Press the **OK** button.



- 3 The message "Video Output Mode Progressive Scan" will appear.



Note

- Progressive setting is only available when the Video Out is set to Component (See page 38).
- If the **P-SCAN** button on the DVD Recorder & VCR's front panel is pressed during playback, the message "This function is possible only on stop mode" appears on the screen.
- Progressive setting is only available when the DVD Recorder & VCR is in stop mode.

## Canceling the Progressive scan




Note

- Do not press the **P-SCAN** button if you are using a TV that does not support Progressive mode. Nothing will be displayed on the screen if pressed.
- If you press the **P-SCAN** button by mistake when your TV does not support Progressive mode, you need to release the Progressive mode. To release the Progressive mode, press the **P-SCAN** button on the front panel 3 times. The screen will recover after the **PSO** icon on the front panel display turns off.

- 1** With the unit in Stop mode, press the **P-SCAN** button on the front of the DVD Recorder & VCR.


The message "Press [Yes] to confirm Interlace scan mode. Otherwise press [No]" will appear. Press the ◀▶ buttons to select **Yes**, and then press the **OK** button.

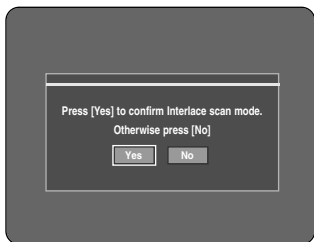

- 2** The message "Please set your TV to Interlace input. To deactivate, press [STOP] key." will appear. Press the **OK** button.



- 3** The message "Video Output Mode Interlace Scan" will appear.

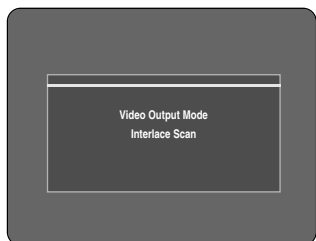



# Playback

This section introduces basic functions of playback by disc type.



Dolby Digital



DTS



Digital Audio



Stereo



PAL broadcast system  
in U.K, France,  
Germany, etc.



MP3

- ◆ **DVD Playback**
  - *Before Playing* ..... 41
  - *Playing a Disc* ..... 42
  - *Using the Disc menu and Title menu* ..... 43
  - *Using the Search & Skip Functions* ..... 43
  - *Slow Motion Play / Step Motion Play* ..... 44
  - *About QUICK* ..... 44
  - *Repeat Play* ..... 45
  - *Selecting the Subtitle & Audio Language* .. 47
  - *Changing the Camera Angle* ..... 48
  - *Zooming-In* ..... 48
  - *Using the Bookmarks* ..... 49
  - *Using the Markers* ..... 50
  - *Playing back an Audio CD (CD-DA)* ..... 51
  - *Playing back an MP3 Disc* ..... 52
  - *Play Option Mode* ..... 53
  - *To Programme Tracks* ..... 53
  - *Playing back a Picture Disc* ..... 54
- ◆ **VCR Playback**
  - *Playing back a VHS Tape (VCR)* ..... 55
  - *Tracking* ..... 55
  - *Special VCR Playback Features* ..... 55
  - *Variable Search System* ..... 56

## Before Playing

Read the following information before playing a disc.

### Region code (DVD-Video only)



Both the DVD Recorder & VCR and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play. The Region Number for this DVD Recorder & VCR is printed on the rear panel of the DVD Recorder & VCR.

### Disc types that can be played

| Disc Types              | Disc Logo | Recorded content | Disc Shape                 | Max. Playing Time         |
|-------------------------|-----------|------------------|----------------------------|---------------------------|
| DVD-VIDEO               |           | AUDIO + VIDEO    | Single sided(5")           | 240                       |
|                         |           |                  | Double sided(5")           | 480                       |
|                         |           |                  | Single sided(3.5")         | 80                        |
|                         |           |                  | Double sided(3.5")         | 160                       |
| AUDIO-CD                |           | AUDIO            | Single sided(5")           | 74                        |
|                         |           |                  | Single sided(3.5")         | 20                        |
| DVD-RAM                 |           | AUDIO + VIDEO    | Single-sided<br>5" (4.7GB) | 1 (XP: Excellent Quality) |
|                         |           |                  |                            | 2 (SP: Standard Quality)  |
|                         |           |                  | Double-sided<br>5" (9.4GB) | 4 (LP: Long Playback)     |
|                         |           |                  |                            | 6 or 8 (EP: Extended)     |
|                         |           |                  |                            | 2 (XP: Excellent Quality) |
|                         |           |                  |                            | 4 (SP: Standard Quality)  |
|                         |           |                  |                            | 8 (LP: Long Playback)     |
|                         |           |                  |                            | 12 or 16 (EP: Extended)   |
| DVD-RW                  |           | AUDIO + VIDEO    | 5" (4.7GB)                 | 1 (XP: Excellent Quality) |
|                         |           |                  |                            | 2 (SP: Standard Quality)  |
|                         |           |                  |                            | 4 (LP: Long Playback)     |
|                         |           |                  |                            | 6 or 8 (EP: Extended)     |
| DVD-R                   |           | AUDIO + VIDEO    | 5" (4.7GB)                 | 1 (XP: Excellent Quality) |
|                         |           |                  |                            | 2 (SP: Standard Quality)  |
|                         |           |                  |                            | 4 (LP: Long Playback)     |
|                         |           |                  |                            | 6 or 8 (EP: Extended)     |
| CD-R/RW<br>DVD-RAM/RW/R |           | JPEG<br>MP3      | -                          | -                         |

### Discs that cannot be played


- DVD-Video with a region number other than "2" or "ALL"
- 3.9 GB DVD-R Disc for Authoring.
- DVD-RAM not recorded following the Video Recording Standard
- Unfinalised DVD-R recorded on other equipment.
- DVD-ROM/DVD+RW/PD/MV-Disc, etc
- CVD/CD-ROM/CDV/CD-G/CD-I



Note

- This DVD Recorder & VCR can only operate with discs that are compatible with DVD-RAM Standard Version 2.0.
- Playback and/or recording may not work for some types of discs, or when specific operations, such as angle change and aspect ratio adjustment, are being performed. Information about the discs is written in detail on the box. Please refer to this if necessary.
- Do not allow the disc to become dirty or scratched, fingerprints, dirt, dust, scratches or deposits of cigarette smoke on the recording surface may make it impossible to use the disc for recording.
- DVD-RAM/-RW/-R discs may not be able to play on some DVD players, depending on the player, disc and the condition of the recording.
- Discs with NTSC programmes recorded on them cannot be recorded using this DVD Recorder & VCR.

## Playing a Disc

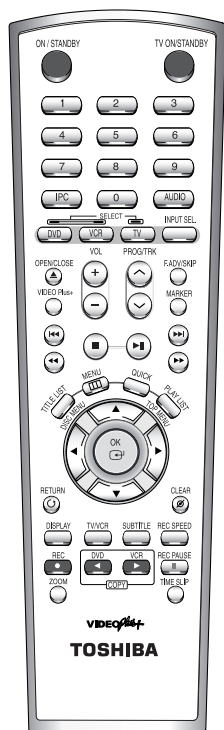

1

Press the **DVD** button to select the DVD mode.

2

Press the **OPEN/CLOSE** button.

3

Place a disc gently into the tray with the disc's label facing up.

4

- Press **OPEN/CLOSE** button to close the disc tray.
- Your DVD Recorder & VCR closes the disc tray and plays the disc automatically.
  - The recorder does not play discs automatically after the initial power on.
  - When the recorder is powered on and a disc is in the tray, the unit will be activated and wait in stop status.
  - Press the **PLAY** button to start playback.
  - If you insert an MP3 Disc, your DVD Recorder & VCR will display the file list on the screen and start playing.
  - If you insert a JPEG Disc, folders and files are displayed in thumbnail picture.

5

Press the **STOP** button to stop playback.



Note

- When you stop playing back a disc, the DVD Recorder & VCR remembers where you stopped. When you press **PLAY** button again, it will pick up where you left off. (unless the disc is removed or the DVD Recorder & VCR is unplugged, or if you press the **STOP** button twice.) This function is only applicable to DVD-VIDEO/DVD-RAM/-RW/-R or audio CDs (CD-DA).



CAUTION

- Do not move your DVD Recorder & VCR while playing, as this may cause damage to the disc.
- Make sure to press the **OPEN/CLOSE** button to open or close the disc tray.
- Do not push the disc tray while it is being opened or closed, as this may cause a product malfunction.
- Do not place foreign materials on or in the disc tray.
- Some functions may perform differently or be disabled depending on the disc type. If this occurs, refer to the instructions written on the disc case.
- Be especially careful that children's fingers are not caught between the disc tray and the tray chassis when it closes.
- After turning power on, it will take about 10 seconds before the DVD Recorder & VCR operates.
- The DVD Recorder & VCR automatically identifies PAL or NTSC video system of a disc and output the respective video system. Connect a multisystem TV (PAL/NTSC compatible) to view a picture. A playback picture may be distorted when detected a signal change between PAL and NTSC on the disc.

## Using the Disc Menu and Title Menu

Some discs contain a dedicated menu system that allows you to select special functions for title, chapters, audio track, subtitles, film previews, information on characters, etc.

### For DVD-VIDEO disc



- 1 Press the **DISC MENU** button to enter the disc menu of the disc.
  - Move to the setup menu related to playback operation.
  - You can select audio language and subtitle etc. provided by the disc.
- 2 Press the **TOP MENU** button to move to the title menu of the disc.
  - Use this button if the disc contains more than one title. Some discs may not support the title menu functionality.

### For DVD-RAM/-RW/-R disc



- 1 Press the **TITLE LIST** button to display title list.



Note

- **Title List** : Title refers to a recorded video stream. Title List shows a list to help you select a title. Since the title list consists of the information on stream that is actually recorded, if one title is deleted, that title cannot be played again.
- **Play List** : This refers to a unit of playback, which is made by selecting a desired scene in the entire Title List. When one playlist is played, only the scene selected by the user will play and then stop. Since only the information necessary for playing a desired scene is included in a playlist, even if that playlist is deleted, the original data will not be deleted.

## Using the Search & Skip Functions

### Searching through a Chapter or Track



During the playback, press the **SEARCH** ◀◀ or ▶▶ button on the remote control. Each time you press the **SEARCH** button, the playback speed will change as follows.

|                          |  |
|--------------------------|--|
| DVD-VIDEO/DVD-RAM/-RW/-R | ▶▶Fast X 2 →▶▶Fast X 4 →▶▶Fast X 8 →<br>▶▶Fast X 16 →▶▶Fast X 32 →▶▶Fast X 128 |
| AUDIO CD(CD-DA)          | →▶▶Fast X 2 →▶▶Fast X 4 →▶▶Fast X 8  |

- You can scan the programme in reverse order. To return to normal speed playback, press the **▶II** button.



Note

- No sound is heard during Scan(Search) mode, except CDs (CD-DA).

### Skipping Chapters or Tracks



During the playback, press the **I◀◀** or **▶▶I** button on the remote control.

- **If you press the I◀◀ button**  
If you press the **I◀◀** button after more than 3 seconds of playback, it moves to the beginning of the chapter, track or marker (DVD-RAM/-RW(VR mode)). Pressing the button again in quick succession to return to the beginning of the previous chapter, track or marker(DVD-RAM/-RW (VR mode) ).
- **If you press the ▶▶I button**  
If you press the **▶▶I** button, it moves to the next chapter, track or marker(DVD-RAM/-RW(VR mode)).

### Skipping ahead 30 seconds



In play mode, press **F.ADV/SKIP** button to skip ahead exactly 30 seconds.

## Slow Motion Play/ Step Motion Play

### ■ Slow Motion Play



During pause mode, press the SEARCH ◀◀ or ▶▶ button on the remote control for more than 1 second.

- Each time you press the ▶▶ button :  
▶ Slow 1/8 → ▶ Slow 1/4 → ▶ Slow 1/2
- Each time you press the ◀◀ button :  
◀ Slow 1/8 → ◀ Slow 1/4 → ◀ Slow 1/2

To return to normal speed playback, press the ▶II button.

### ■ Step Motion Play



During pause mode, press the F.ADV/SKIP button on the remote control.

- Each time the button is pressed, a new frame will appear.

To return to normal speed playback, press the ▶II button.



Note

- No sound is heard during STEP or SLOW mode.

## About QUICK

The QUICK functions allows you to easily search for a desired scene by accessing title, chapter, track and time. You can also change the subtitle and audio settings and set some features including Repeat, Angle and Zoom.

### ■ Moving to a scene directly using the QUICK

- If you want to move to a title, a chapter or a track to find a desired scene.

- 1 Press the **QUICK** button during playback.



- 2 Press the ▲▼ buttons to select **Title**, **Chapter** or **Track**.



- 3 Press the ◀▶ buttons or number (0~9) buttons to select the desired scene. Then, press the **OK** button.

- If you want to move to a desired time to help you find a scene.

**1** Press the **QUICK** button during playback.



**2** Press the **▲▼** buttons to select **Time**.



**3** Enter the time in the sequence of hours, minutes, and seconds using the number buttons, then press the **OK** button.



Note

- This may not work for some discs. When an audio CD (CD-DA) or an MP3 disc is inserted, according to a disc type, the information display may not appear.
- The Time Search function does not operate in some discs.
- To make the screen disappear, press the **QUICK** button again.

## Repeat Play



### ■ Playing Repeatedly (Repeat Playback)



**1** Press the **QUICK** button during playback.



**2** Press the **▲▼** buttons to select **Repeat**.

 


**3** Select repeat mode (Title or Chapter) using **◀▶** button.  
Press the **OK** button.  
• To make the screen disappear, press the **QUICK** or **RETURN** button.



Note


- DVD-RAM, DVD-RW(VR mode), unfinalised DVD-RW (V mode) and unfinalised DVD-R do not repeat a chapter.



## ■ Playing Repeatedly (Repeat Playback)



- 1 Press the **QUICK** button during playback. Repeat is highlighted.

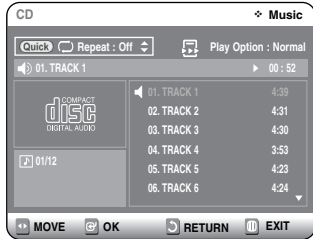

- 2 Press the **▲▼** buttons to select the **Track** or **Disc** you want to play repeatedly. Press the **OK** button. For MP3 discs, you can select **Track**, **Folder** or **Disc**.

- 3 **To return to normal playback**  
Press the **CLEAR** button to return to normal playback.

## ■ Playing a Certain section Repeatedly (A-B Repeat Playback)



- 1 Press the **QUICK** button during playback.



- 2 Press the **▲▼** buttons to select **Repeat**.



 
- 3 Press the **◀▶** button to select the **A-B**, then press the **OK** button.
- 4 Press the **OK** button at the point where you want the repeat play to start (A) and press it again at the point where you want the repeat play to stop (B). Repeat playback of the A-B section starts.



Note

- If you set point (B) before five seconds has lapsed, the prohibition mark (⊘) will appear.
- Audio CDs (CD-DA) and MP3 discs do not support the Repeat A-B function.

- 5 **To return to normal playback**  
Press the **CLEAR** button to return to normal playback.



# Selecting the Subtitle & Audio Language



## Selecting the SUBTITLE language

Subtitle languages may not work depending on the disc type. This is only available during playback.

### Using the SUBTITLE button

- 1 Press the **SUBTITLE** button during playback.



- 2 Press the **▲▼** buttons to select the desired subtitle language.
  - To make the screen disappear, then press the **CLEAR** or **RETURN** button.

### QUICK Using the QUICK button

- 1 Press the **QUICK** button during playback.



- 2 Press the **▲▼** buttons to select **Subtitle**, then press the **◀▶** buttons to select the desired subtitle language.




- Note**
- The subtitle display may be different depending on the disc type.
  - Some discs allow you to select the language from the disc menu only.

## Selecting the Audio language

Audio languages may not work depending on the disc type. This is only available during playback.

### Using the AUDIO button

- 1 Press the **AUDIO** button during playback.

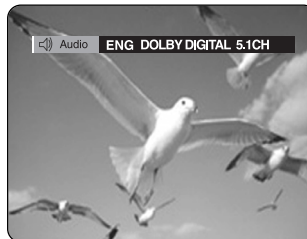

- 2 Press the **▲▼** buttons to select the desired audio language.

### QUICK Using the QUICK button

- 1 Press the **QUICK** button during playback.



- 2 Press the **▲▼** buttons to select **Audio**, then press the **◀▶** buttons to select the desired audio language.



- Note**
- Audio languages may be different because they are disc-specific.
  - Some discs allow you to select the audio language from the disc menu only.



# Changing the Camera Angle



**QUICK** Using the QUICK button

**1** Press the **QUICK** button during playback.



**2** Press the **▲▼** buttons to select **Angle**, then press the **◀▶** buttons or number (0~9) buttons to select the desired angle.



Note

- This function is disc-dependent, and may not work with all DVDs.
- This function does not work when a DVD has not been recorded with a multi-camera angle system.

# Zooming-In




**QUICK** Using the QUICK button

**1** Press the **QUICK** button during playback.



**2** Press the **▲▼** buttons to select **Zoom**, then press the **OK** button. (Ⓞ) will be displayed. You can operate this function by pressing the **ZOOM** button on the remote control.

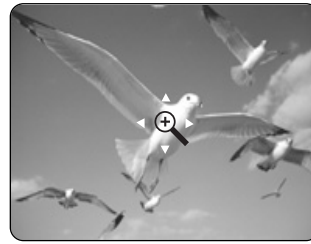

**3** Press **▲▼**, **◀▶** buttons to move to the area you want to enlarge.

**4** Press the **OK** button. The screen will be enlarged to twice the normal size. The screen size will be enlarged to four times the normal size.

|                              |                      |
|------------------------------|----------------------|
| DVD-VIDEO/<br>DVD-RAM/-RW/-R | X2→X4→X2→normal size |
|------------------------------|----------------------|



Note

- When recording is done in the EP mode, the Zoom function will not be supported. (except when the recording has been done in V mode)

Playback




# Using the Bookmarks



(V mode)


Set marks at scenes you want to see again so that you can start playback from the marked position.

- 1 Press the **MARKER** button during playback.

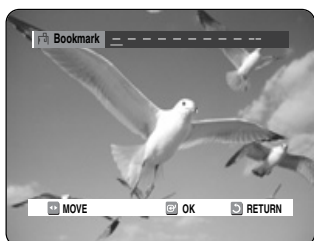

- 2 Press the **OK** button when the desired scene appears.


- The number 1 is displayed and the scene is memorized.

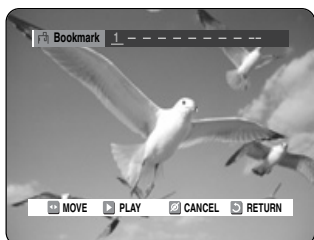

- 3 Press the **◀▶** button to move to the next position.

- 4 Press the **OK** button again when the desired scene appears.


- The number 2 is displayed and the scene is memorized. Repeat above to bookmark other positions. You can bookmark up to 10 scenes.

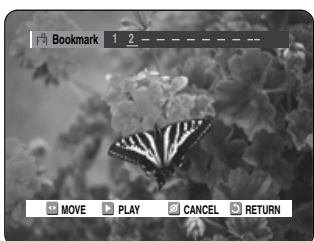

## Playing back a Bookmark

- 1 Press the **MARKER** button.

- 2 Press the **◀▶** buttons to select a bookmarked scene.

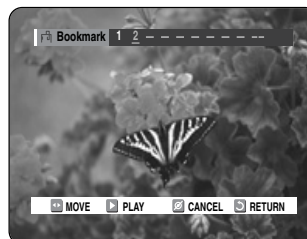


- 3 Press the **OK** or **▶||** button to start playing from the selected scene.


## Clearing a Bookmark

- 1 Press the **MARKER** button.


- 2 Press the **◀▶** buttons to select a bookmarked scene.

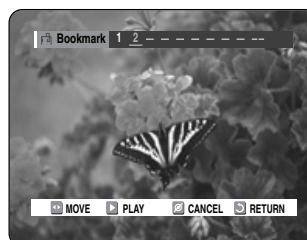


- 3 Press the **CLEAR** button to delete the selected bookmark.

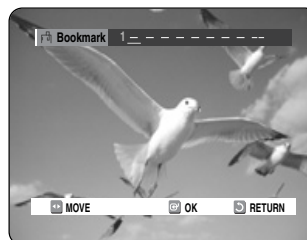

## Using the Markers

 

- 1 Press the **MARKER** button during playback.

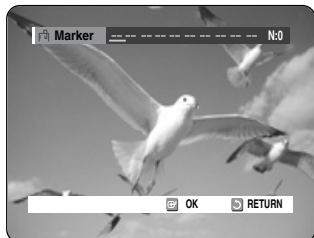


- 2 Press the **OK** button when the desired scene appears.
  - The number 01 is displayed and the scene is memorized.



- 3 Press the **◀▶** button to move to the next position.

- 4 Press the **OK** button again when the desired scene appears.

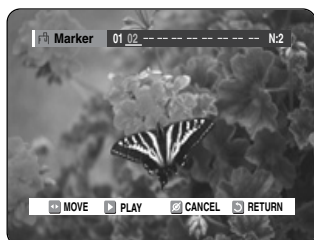


- The number 02 is displayed and the scene is memorized.
- DVD-RAM or DVD-RW (VR mode) discs have the Marker function instead of the Bookmark function. The Marker function allows you to mark up to 99 scenes. Since the scenes may be displayed as many different pages, numbering is necessary. If a disc in use is encoded with disc Protect, Markers cannot be set or delete. Only playback is available.

## Playing back a Marker

- 1 Press the **MARKER** button during playback.

- 2 Press the **◀▶** buttons to select a marked scene.


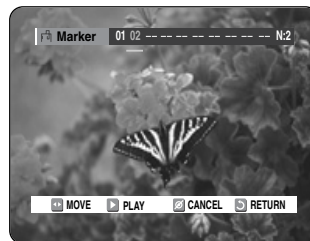


- 3 Press the **OK** or **▶II** button to start playing from the selected scene.
  - If you press the **NEXT SKIP (▶▶I)** button, playback starts from the next marked point.
  - If you press the **PREVIOUS SKIP (I◀◀)** button after playing the marked point for longer than 3 seconds, playback will start from the beginning of the current marked point. To start playback from previous marked point, press **PREVIOUS SKIP (I◀◀)** button again.

## Clearing a Marker

 - 1 Press the **MARKER** button during playback.

- 2 Press the **◀▶** buttons to select a marked scene. Press the **CLEAR** button to delete the selected mark.

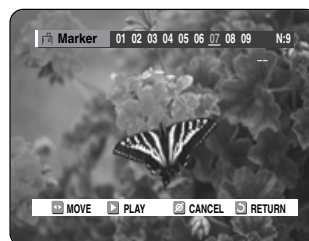


- When a marker is cleared while DVD-RAM/-RW (VR mode) is playing, marker numbers will change. For example, if the 7th marker is cleared after ten markers are registered, the marker numbers after the eighth will automatically move ahead by one and the 8th marker becomes the 7th.

# Playing back an Audio CD (CD-DA)

Each disc has a variety of menu functions available.

## ■ Playing back an Audio CD(CD-DA)


- 1 Insert an audio CD (CD-DA) into the disc tray.
  - The audio CD menu appears and the tracks (songs) are played automatically.

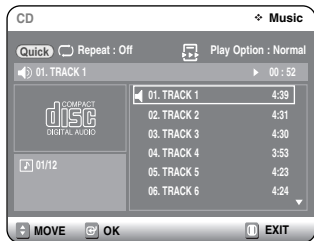

- Press the menu button when the audio CD menu disappears. Press the ▲▼ buttons to select Disc Navigation, and then press the **OK** button twice.


- 2 Press the ▲▼ buttons to select the track (song) to start playback from, and then press the **OK** button.
  - You can also select the track (song) by pressing the number buttons on the remote control.

## ■ Audio CD (CD-DA) Screen Elements

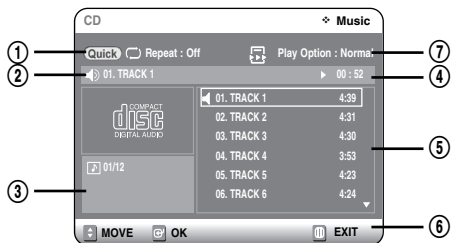

- ① **Repeat mode:** Repeat off/Repeat Track/Repeat Disc.
- ② **Current track (song):** Displays the number of the track currently being played.
- ③ Displays the current play index and total track number.
- ④ This shows the operating state of a disc and a playback time corresponding to a portion that is currently played.
- ⑤ Displays the track list (song list) and the playing time of each track.
- ⑥ Button display.
- ⑦ **Play Option:** Normal, Random, Intro or Playlist

## ■ Buttons on the Remote Control used for CD playback

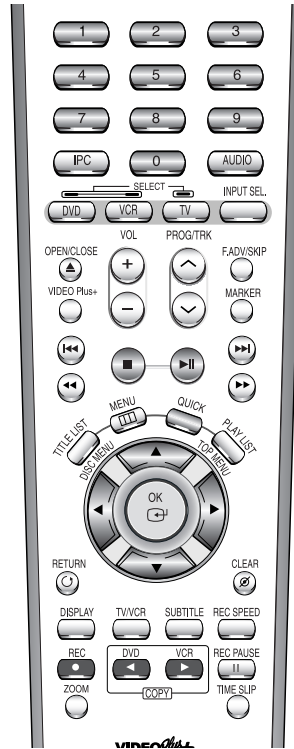


1. ▲▼, 0-9 : Selects a track (song).
2. ► : Plays the selected track (song).
3. **OK button** : Plays the selected track (song).
4. ►► button : Plays the next track.
5. ◀◀ button : Returns to the beginning of the current track when pressed during playback.
  - If pressed again, playback starts from the beginning of the preceding track.
  - If you press this button within three seconds after playback starts, the previous track will be played.
  - If you press this button after three seconds, the current track will be replayed from the beginning.
6. **Press the (◀◀/►►) button** : Fast Play (►►x2, ►►x4, ►►x8)
7. ■ : Stops a track(song).
8. ►| : Plays a track(song) or pauses playback.
9. **QUICK** : To select the top menu on screen display (Repeat or Play Option).

# Playing back an MP3 Disc

## ■ Playing back an MP3 Disc


- 1 Insert an MP3 CD into the disc tray. Press the ▲▼ buttons to select the **Disc Navigation**, and then press the **OK** or ► button.

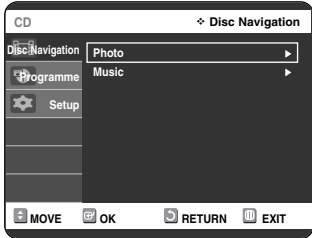

- Only disc with both JPEG files and MP3 files will display the Disc Navigation menu.
- For disc with only mp3 files, the mp3 menu is displayed and the tracks (songs) are played automatically.


- 2 Press the ▲▼ buttons to select the **Music**, and then press the **OK** or ► button.

- 3 Press the ▲▼ buttons to select the folder you want to hear, and then press the **OK** button.

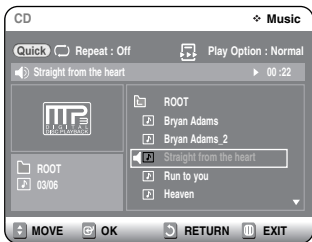


- Press the ▲▼ buttons to select the track (song) you want to hear, and then press the **OK** button.
- You can also select the desired track (song) by pressing the number buttons on the remote control.

## ■ MP3 Screen Elements

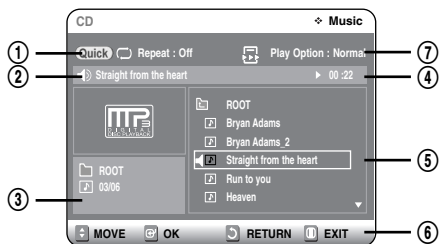

- ① **Repeat mode** : Repeat off, Repeat Track, Repeat Folder or Repeat Disc
- ② **Current track (song)** : Displays the name of the track being played.
- ③ Displays the current folder and play index.
- ④ This shows the operating state of a disc and a playback time corresponding to a portion that is currently played.
- ⑤ Displays the information for the folder and its tracks.
- ⑥ Button display.
- ⑦ **Play Option** : Normal, Random, Intro or Playlist

## ■ Buttons on the Remote Control used for MP3 playback

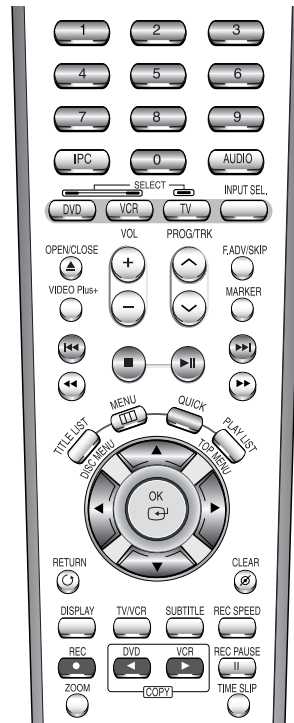


1. ▲▼, 0-9: Selects a track (song).
2. ► : Plays the selected track (song).
3. **OK button**: Plays the selected track (song) or displays the files in the selected folder.
4. **RETURN button**: Moves to the folder to which the current song belongs.
5. ►► button: Plays the next track.
6. ◀◀ button: Returns to the beginning of the current track when pressed during playback. If pressed again, playback starts from the beginning of the preceding track.  
If you press this button within three seconds after playback starts, the previous track will be played. If you press this button after three seconds, the current track will be replayed from the beginning.
7. ■ : Stops a track(song).
8. ►|| : Plays a track(song) or pauses playback.
9. **QUICK** : To select the top menu on screen display (Repeat or Play Option).

## Play Option Mode


The Play Option can be used with an audio CD or MP3 in the Play or Stop mode.

- 1 Press the **QUICK** button during playback. Repeat mode will be highlighted.

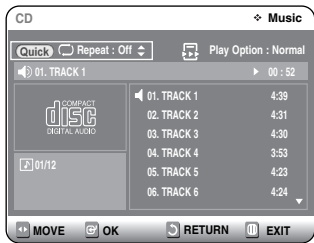

• During Stop, Play option will be highlighted.

- 2 Press the ◀▶ buttons to select **Play Option**.

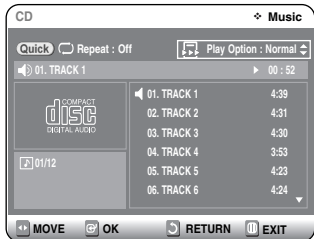


- 3 Press the ▲▼ buttons to select a desired Play option, then press the **OK** button.

- **Normal** : Tracks on a disc are played in the order in which they were recorded on the disc.
- **Random** : The Random option plays a disc's tracks in random order. After a random list is generated and played completely, another random list is generated and played. Random Play is continued until the play option is changed.
- **Intro** : The first 10 seconds of each track will be played. If you want to listen to the music that you have selected, press the **OK** button or **▶II** button. The play option will be changed to Normal Play. When Intro Play is completed, Normal Play is performed.
- **Playlist** : The Playlist playback option allows you to select the order in which you want tracks to play.


## To Programme Tracks

You can register a maximum 30 tracks in the playlist.


- 1 Press the **QUICK** button during playback. Repeat mode will be highlighted.
  - During Stop, Play option will be highlighted.
- 2 Press the ◀▶ buttons to select **Play Option**.
- 3 Press the ▲▼ buttons to select **Playlist**, then press the **OK** button. Playlist screen is displayed.

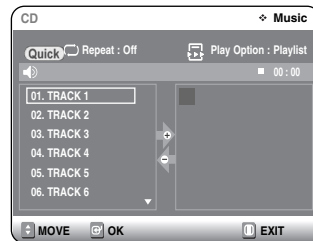

- 4 Press the ▲▼ buttons to select tracks in the order in which you want them to play, then press the **OK** button.

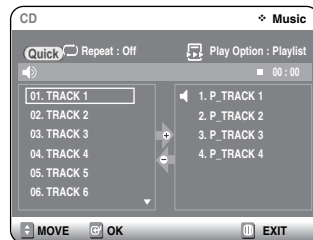

- 5 If you playlisted a wrong track, press the ▶ button, then press the ▲▼ buttons to select wrong track. Press the **CLEAR** button. The wrong track will be removed.

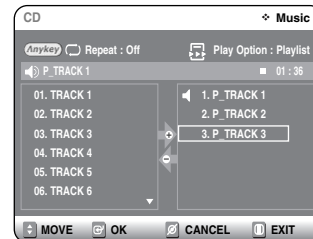


- 6 Press the **PLAY** button to playback the playlist.
  - The playlist will be played continuously until stop button is pressed.

# Playing back a Picture Disc




There are two types of Picture CD. One is a CD with only JPEG files. The other one is a CD with JPEG files and MP3 files.(mixed CD)

**1** Insert a JPEG into the disc tray.

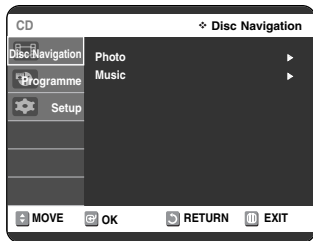


• The picture menu is displayed (as in Step 4) when the CD with only JPEG files are played.

**2** Press the ▲▼ buttons to select the **Disc Navigation**, and then press the **OK** or ► button.

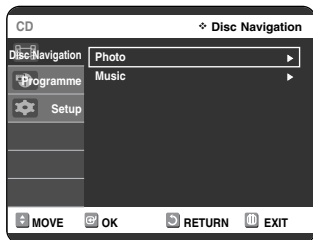

**3** Press the ▲▼ buttons to select the **Photo**, and then press the **OK** or ► button.

**4** Press the ▲▼◀▶ buttons to select a picture.

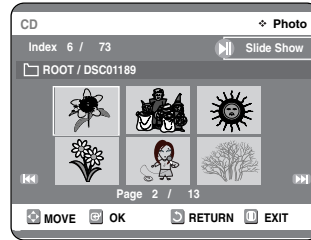


- To see the next 6 pictures, press the ►► button.
- To see the previous 6 pictures, press the ◀◀ button.

**5-1** If you press the ►|| button, the Slide show screen will appear. Press the ◀▶ buttons to set the slide show speed, then press the **OK** button.



**5-2** Press the ◀▶ buttons to select a picture file in Album screen and then press the **OK** button.

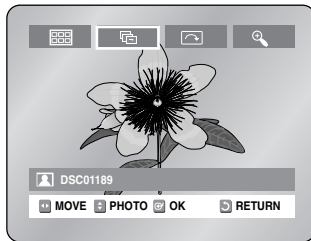


- ☰ : Returns to the Album screen.
- 📄 : The unit enters slide show mode. Before the slide show can begin, the picture interval (Slide show speed) must be set.
- 🔄 : Each time the **OK** button is pressed, the picture rotates 90 degrees clockwise.
- 🔍 : Each time the **OK** button is pressed, the picture is enlarged up to 4X(four times the normal size).  
Normal → 2X → 4X → 2X → Normal

- Press the **QUICK** button to display menu bar.
- Press the **RETURN** button to clear the menu bar.


Playback

## Playing back a VHS Tape (VCR)

To play a standard VHS tape, just insert it into the VCR deck and press the **PLAY** button. You can turn on the Auto Play to enable the VCR deck to play automatically when you insert a videotape that is missing the Record Safety Tab.

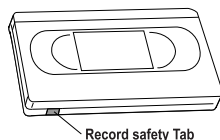

- 1** Insert a standard VHS tape into the VCR deck.
  - When a videotape is inserted, power will turn on automatically.
- 2** Press the **VCR** button to select the VCR mode.
- 3** Press the **▶||** (PLAY/PAUSE) button on the remote control or on the front panel of the unit to start playback. The videotape will begin to play automatically if the Record Safety Tab is removed and Auto Play is turned on.
- 4** Press the **■** (STOP) button on the remote control or on the front panel of the unit to stop playback.

 **Note** ■ The DVD Recorder & VCR only supports PAL tape playback.

## Tracking

The Tracking adjustment removes the white lines that sometimes appear during playback because of slight differences in recording decks. The **PROG/TRK** (  $\wedge/\vee$  ) button will automatically align the recorded tracks with the playback heads to solve this problem. You may also set tracking manually.

- 1** **Adjust Tracking Manually**  
During playback, press the **PROG/TRK** (  $\wedge/\vee$  ) buttons to remove white lines from the picture.

## Special VCR Playback Features

While a videotape is playing, you can enjoy a variety of special playback features, including Still, Frame Advance, Skip, Slow motion, and more.

### ■ Pause

In Play mode, press **▶||**(PLAY/PAUSE) button to still a single frame.


### ■ Frame Advance

In the pause mode, press **F.ADV/SKIP** button to advance to the next frame.

### ■ FPS/RPS

In Play mode, press Forward ( **▶▶** ) button or Rewind ( **◀◀** ) button to FPS/RPS :

- Picture Search - Press and release repeatedly to advance the tape forward or backward at variable speeds.
- Jet Search - Press and hold to advance the tape forward or backward at 7 times normal speed. Upon release, it will resume normal playback.

 **Note** ■ The forward ( **▶▶** ) button and Rewind ( **◀◀** ) button operate slightly different with front Panel buttons and remote control buttons. When the **▶▶/◀◀** button on the front panel is pressed during playback, there is only one search speed available.

### ■ Skip

In Play mode, press **F.ADV/SKIP** button to cue ahead exactly 30 seconds. Press **F.ADV/SKIP** button repeatedly up to 4 times to cue ahead 2 minutes.

### ■ Slow motion

In pause mode, press **▶▶** button for slow motion. Press the **▶▶** button repeatedly to vary slow motion speed from 1/5 to 1/30 of normal playback. Press the **PLAY** button twice to resume normal viewing.



# Variable Search System



Each time you record a cassette on this DVD Recorder & VCR, an **index** is automatically marked on the tape when recording starts. The Search function allows you to fast-forward or rewind to a specific index and start playback from that point. Depending on the direction selected, the indexes are numbered as follows


- This DVD Recorder & VCR uses a standard indexing system (VISS). As a result, it will recognize any indexes marked by other VCRs using the same system and vice versa.

## Go To [0:00:00] Stop

Use this feature when you want to search for the 0:00:00 counter position on a cassette.

- 1 Press the **CLEAR** button at the point on the tape where you want to set the counter to 0:00:00.

- 2 While a cassette is stopped, press the **QUICK** button.

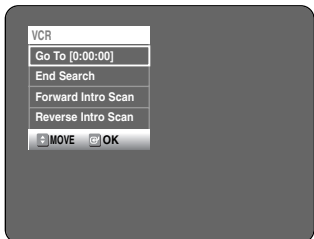


- 3 Press the **▲▼** buttons to select **Go To [0:00:00]**, then press the **OK** button. The VCR will rewind or fast forward, searching for the 0:00:00 counter position, and then automatically stop at that position.



## End Search


Use this feature when you want to search for a blank position to record a programme on a cassette.

- 1 While a cassette is stopped, press the **QUICK** button.

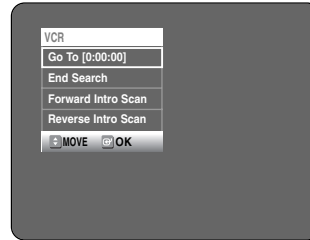

- 2 Press the **▲▼** buttons to select **End Search**, then press the **OK** button.


The VCR will fast forward, searching for a blank position, and then automatically stop at that position. If the VCR reaches the end of the tape during end search, the tape will be ejected.

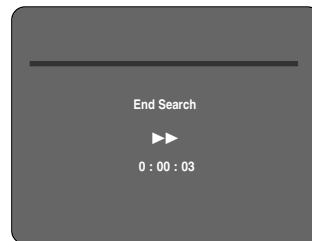


## Forward/Reverse Intro Scan

Use scan and play when you don't know exactly where a programme is located on a cassette tape.

- 1 While a cassette is stopped, press the **QUICK** button.

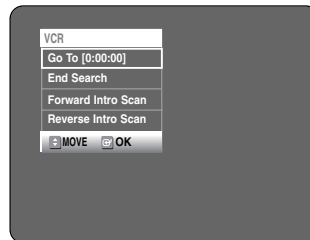

- 2 Press the **▲▼** buttons to select **Forward Intro Scan** or **Reverse Intro Scan**, then press the **OK** button. When an Index mark is found the DVD Recorder & VCR will playback the tape for 5 seconds, after which it will continue searching for the next Index mark.

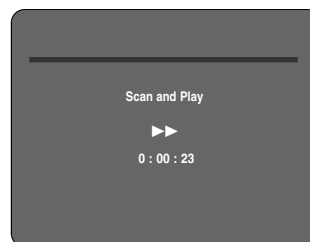



# Recording

This section shows various DVD recording methods.

- ◆ **DVD Recording**
  - *Before Recording* .....57
  - *Recording the current Programme you are watching* .....59
  - *Recording From External Devices* .....60
  - *Watching the Images Being Recorded (Time Slip)* .....60
  - *Making a One Touch Recording(OTR)* ....61
  - *Making a Timer Recording* .....62
  - *Editing the Scheduled Record List* .....63
  - *Deleting the Scheduled Record List* .....64
  - *Using the Video Plus+ Feature* .....65
  - *Video Plus+ Extended* .....66
  
- ◆ **VCR Recording**
  - *Basic VCR Recording* .....66
  - *Check Remaining Time* .....67
  - *Special Recording Features* .....67
  - *Copy to DVD or VCR* .....68

## Before Recording

This unit can record on various types of discs. Before recording, read the following instructions and select the disc type according to your preference.

### Recordable discs

This recorder can record on the following discs.

| DVD-RAM  | DVD-RW  | DVD-R  |
|--|---|--|
| <br>RAM | <br>RW | <br>R |

- DVD-RWs and DVD-RAMs are rewritable.
- DVD-Rs are non-rewritable.

### Compatibility between Toshiba and Other Company's Recorder.

| Disc Types | Recording format | Recording Device | Finalising    | Additional Recording in Toshiba Recorder |
|------------|------------------|------------------|---------------|--|
| DVD-RAM    | VR Mode          | Toshiba          | X             | Recordable                               |
|            |                  | Other Company    | X             | Recordable                               |
| DVD-RW     | VR Mode          | Toshiba          | finalised     | Not recordable                           |
|            |                  |                  | not finalised | Recordable                               |
|            |                  | Other Company    | finalised     | Not recordable                           |
|            |                  |                  | not finalised | Recordable                               |
|            | V Mode           | Toshiba          | finalised     | Not recordable                           |
|            |                  | Other Company    | not finalised | Recordable                               |
| DVD-R      | V Mode           | Toshiba          | finalised     | Not recordable                           |
|            |                  |                  | not finalised | Recordable                               |
|            |                  | Other Company    | finalised     | Not recordable                           |
|            |                  |                  | not finalised | Recordable                               |
|            |                  |                  | finalised     | Not recordable                           |
|            |                  |                  | not finalised | Not recordable                           |



Note

- **Finalise**
  - This closes the DVD-RW/-R so no additional recording can be done.
- **Unfinalise**
  - This allows additional recording on a DVD-RW disc originally recorded on the DVD Recorder & VCR
  - A DVD-RW disc that has been recorded by DAO(Disc At Once) in a PC cannot be unfinalised.
  - A DVD-RW disc that has been recorded in V Mode of a different maker's recorder cannot be unfinalised.
  - A DVD-R disc cannot be unfinalised.

Recording

## Recording Formats

Since available functions differ depending on the disc type, select a disc that best fits your preferences. When you insert an unused disc, the following message appears.


DVD-RAM: Use after formatting the disc.



DVD-RW: When an unused DVD-RW disc is first inserted, the message "Do you want to initialize this disc" will be displayed. If you select Yes, the disc will be formatted in VR mode.



If you want to change the mode, refer to Formatting a Disc on page 85.

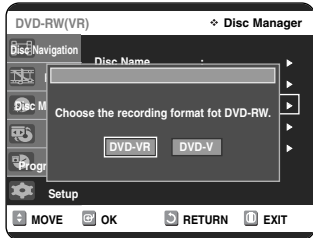

If you want to play this disc in another player, you need to format it as DVD-V and finalise after recording.

DVD-R: Formatting DVD is unnecessary and only V mode Recording is supported.

### DVD-RW (V mode)/-R

- Chapters will be created automatically when you finalise recording on DVD-RW/-R discs in V mode.
- Simple editing (erasing titles/changing title name).

### DVD-RAM/-RW (VR mode)

- This mode involves multiple editing functions (such as deletion of the whole title, partial deletion of a title, etc.).
- Various editing options using a created Playlist.

## Recording Mode

Select one of four recording modes by pressing the **REC SPEED** button repeatedly while the unit is in Stop mode for the desired recording time and picture quality. In general, picture quality improves as the recording time decreases.

In AUTO Mode, the most suitable record mode is adjusted automatically, according to remaining time on the disc and length of the timer recording.


This function is selected only one mode in XP, SP, LP and EP modes and you can use this mode for timer recording.

| Mode                          | Characteristic                                 | Recording Times Data Rates   |
|-------------------------------|--|--|
| XP<br>(high quality mode)     | Select when the video quality is important.    | Approx. 1 hours<br>about 8 Mbps  |
| SP<br>(standard quality mode) | Select to record in standard quality.          | Approx. 2 hours<br>about 4 Mbps  |
| LP<br>(long recording mode)   | Select when a long recording time is required. | Approx. 4 hours<br>about 2 Mbps  |
| EP<br>(extended mode)         | Select when a long recording time is required. | Approx. 6 hours/<br>about 1.2 Mbps<br>Approx. 8 hours/<br>about 0.8 Mbps |
| AUTO                          | for timer recording only<br>see page 62.       | Approx 60 to 480 Min<br>Approx 0.8 to 8Mbps                              |

## Unrecordable video

Pictures with copy protection cannot be recorded on this DVD Recorder & VCR.

When the DVD Recorder & VCR receives a copy guard signal while recording, recording stops and the following message appears on the screen.

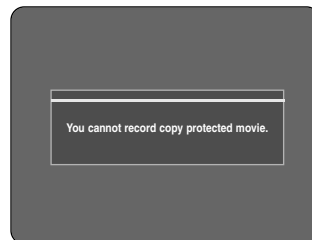

## Concerning Copy Control Signals

TV broadcasts that contain copy control signals may have one of the following three signal types, Copy-Free, Copy-Once and Copy-Never. If you want to record a copy-once type programme, use DVD-RW with CPRM in VR Mode and DVD-RAM.

|                              | Copy-Free | Copy-Once | Copy-Never |
|------------------------------|-----------|-----------|------------|
| DVD-RW(Ver.1.1)              | O         | -         | -          |
| DVD-RW(Ver.1.1)<br>with CPRM |           |           |            |
| VR mode                      | O         | O*        | -          |
| V mode                       | O         |           | -          |
| DVD-R                        | O         | -         | -          |
| DVD-RAM(Ver.2.0)             | O         | O*        | -          |

Once **Copy Once** has been recorded, additional recording cannot be performed.

This \* marked parts are compatible with CPRM.

### - Content Protection for Recordable Media (CPRM)

CPRM is a mechanism that ties a recording to the media on which it is recorded. It is supported by some DVD recorders, but not by many DVD players. Each blank recordable DVD has a unique 64-bit media ID etched in the BCA. When protected content is recorded onto the disc, it can be encrypted with a 56-bit C2 (Cryptomeria) cipher derived from the media ID. During playback, the ID is read from the BCA and used to generate a key to decrypt the contents of the disc. If the contents of the disc are copied to other media, the ID will be absent or wrong and the data will not be decryptable.

## Recording the current programme you are watching




1. Check the antenna cable is connected.
2. Check the remaining time on the disc.  
DVD-RAM/-RW discs should be formatted in advance before beginning recording. Most new discs are sold unformatted. Make sure to format your unformatted discs before recording.

**1** Press the **OPEN/CLOSE** button and place a recordable disc on the disc tray.

**2** Press the **OPEN/CLOSE** button to close the disc tray. Wait until **LOAD** disappears from the front panel display.

**3** Press the **PROG/TRK** (  $\wedge/\vee$  ) buttons or number buttons to select the programme you want to record.

**4** Press the **REC SPEED** button repeatedly, to select the recording speed (quality).  
 • XP (High, approx. 1 hour) → SP (Standard, approx. 2 hours) → LP (Low, approx. 4 hours) → EP (Extended Play, approx. 6hours/8hours)

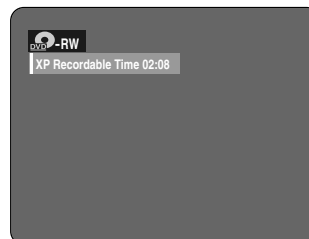

**5** Press the **REC** button.  
 • “●” is displayed on the screen and recording begins.

**6** Press the **STOP** button to stop or finish a recording in progress.  
 • The message “Updating the information of disc. Please wait for a moment” is displayed.

## ■ Pausing / Resuming

- Press the **REC PAUSE** button to pause a recording in progress.
- Press the **REC PAUSE** button again during pause to resume recording.
- You can switch channels by pressing the **PROG/TRK** (  $\wedge/\vee$  ) buttons while recording pauses.



- You can not change the recording mode and the programme while recording.
- Recording will stop automatically if there is no free space left for recording.
- Up to 99 titles can be recorded onto a disc.
- If the power interrupted due to power failure or other reasons, the title being recorded will not be saved onto the disc.
- Recording will stop automatically if a copy protected image is selected.
- Do not use DVD-R authoring discs with this unit.
- This unit only supports PAL input signal.

Recording

## Recording From External Devices

Follow these directions to record onto a disc or a tape from External Devices.

- 1** Connect the output of your External Devices to the SCART input connector by SCART cable or AUX on the front by Audio/Video Cable.
- 2** Power on your DVD Recorder & VCR and switch to AV mode by pressing the **INPUT SEL** button on the remote control. The front panel display changes on the following sequence  

→ PR → AV1 → AV2 → AUX →
- 3** Press the **REC SPEED** button repeatedly to select the recording speed(quality).  

→ SP → LP → EP → XP →
- 4** When your DVD Recorder & VCR is in the stop mode, set the operation mode of your External Devices to play mode.
- 5** Press the **REC** button on your DVD Recorder & VCR when the image from which you want to start recording is displayed.
- 6** Press the **STOP** button on your DVD Recorder & VCR when the recording is finished.



Note

- Also refer to the user manual for your External Devices when recording through Audio/Video or Scart input.
- This unit only supports PAL input signal.

## Watching the Images Being Recorded (Time Slip)

This function allows you to watch the recently recorded images on the screen while a recording is in progress, with a 10 second delay.



### In Stop mode

- 1** Press the **TIME SLIP** button to start recording.
  - The message "Preparing Pause TV mode." is displayed for 10 seconds, and the screen pauses on the first frame of the title that is being played back.



- If paused for 5 minutes without any operation, it returns to normal playback mode.
- You can use playback related buttons to go to the desire scene.
- Forward Scan operation on a title that you are currently recording will switch to normal playback automatically when it reaches 10 seconds ahead of the current recording position.

- 2** Press the **REC** button repeatedly to set the OTR. (One Touch Record)
  - Record length 0:30 appears on the On-Screen Display and the DVD Recorder & VCR will record for exactly 30 minutes.

- 3** If you want to stop recording, press the **TIME SLIP** button.
  - The message "Save the contents of Pause TV program?" is displayed.



- 4** Press the **◀▶** buttons to select Yes, then press the **OK** button.
  - The message "Updating the Information of disc. Please wait for a moment" is displayed.

## In Record mode

- 1 Press the **REC** button.  
Wait 10 seconds and press the **TIME SLIP** button. The recently recorded image are played back on the screen with a 10 second delay.
  - You can use playback related buttons to go to the desire scene.
  - Forward Scan operation on a title that you are currently recording will automatically switch to normal playback when it reaches 10 seconds ahead of the current recording position.
- 2 Press the **REC** button repeatedly to set the OTR. (One Touch Record)
  - Record length 0:30 appears on the On-Screen Display and the DVD Recorder & VCR will record for exactly 30 minutes.
- 3 Press the **STOP** button once, the Time Slip function disappear.
- 4 Press the **STOP** button twice to stop recording.
  - The message "Updating the Information of disc. Please wait for a moment" is displayed.



Note

- MENU, TITLE LIST, and Quick buttons are available. (When you recording by pressing the TIME SLIP button in stop mode, TITLE LIST button is not available)
- During a timer recording, Time Slip function does not operates.
- During Chase Play Mode, when stopping the recording due to disc full/copy protect, playback/recording are stopped, and it saves the title being recorded.

## Making a One Touch Recording (OTR)



One-Touch Recording (OTR) allows you to add recording time from 30 minutes up to 9 hours by pressing the **REC** button:

- 30-minute increment up to 4 hours
- 1-hour increment from the 4th hour to 9 hours

- 1 Press the **PROG/TRK** (  $\wedge$  /  $\vee$  ) buttons or number buttons to select the programme to record. If you want to record through a connected external component, press the **INPUT SEL.** button to select an appropriate external input(AV1, AV2, or AUX).
- 2 Press the **REC** button.
- 3 While in Record mode, press the **REC** button again to activate One-Touch Recording (OTR).
  - Record length 0:30 appears on the On-Screen Display and the DVD Recorder & VCR will record for exactly 30 minutes.
- 4 Continue pressing **REC** to add recording time from 30 minutes to 9 hours.
  - The DVD Recorder & VCR stops recording automatically when the time has elapsed.

### To stop recording

Press the **STOP** (■) button.  
The message "Press **STOP** button once more to cancel Timer Record" is displayed.  
Press the **STOP** (■) button again.  
The message "Updating the Information of disc. Please wait for a moment" is displayed.



Note

- The timer counter decreases by minute to 0:00, then the DVD Recorder & VCR stops recording.


# Making a Timer Recording




1. Check the antenna cable is connected.
2. Check the remaining time of the disc.
3. Check the date and time are correct.
4. Ensure the disc or tape has available space for recording. Otherwise, the recording will not be made or will be recorded partly only.

Make sure the Clock (Setup-Clock Set) must be set before you proceed with a timer recording. (See page 25)

- 1 Press the **OPEN/CLOSE** button, and place a recordable disc on the disc tray.
- 2 Press the **OPEN/CLOSE** button to close the disc tray. Wait until **LOAD** disappears from the front panel display.
- 3 With the unit in Stop mode, press the **MENU** button.
- 4 Press the **▲▼** buttons to select **Programme**, then press the **OK** or **▶** button.

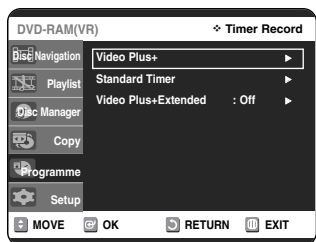

- 5 Press the **OK** or **▶** button twice.
  - The Timer Recording screen is displayed.

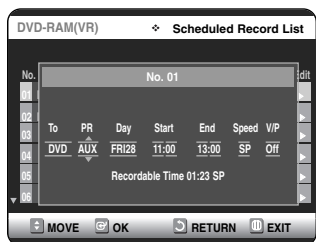

- 6 Fill in the items using the **▲▼◀▶** buttons.
  - ◀▶ : Moves to the previous/next item,
  - ▲▼ : Sets a value.
  - **To** : Select the media to record DVD or VCR.
  - **PR** : The video input source (AV 1, AV 2 or AUX), or the broadcasting channel you want to make a timer recording from.
  - **Day** : Set the recording day.  
Daily, MO-SA, MO-FR, W-SA, ...W-SU, MON01, ...WED31
  - **Start/End Time** : Start and end time of the timer recording.

## Recording Speed (DVD)

**AUTO** : Select when you want to set video quality automatically. In AUTO Mode, the most suitable record mode is adjusted automatically, according to remaining time on the disc and length of the timer recording. This function is selected only one mode in XP, SP, LP and EP modes and you can use this mode for timer recording.

**XP** (high quality) : Select when audio and video qualities are important. (Approx. 1 hour)

**SP** (standard quality) : Select to record in standard quality. (Approx. 2 hours)

**LP** (low quality) : Select when a long recording time is required. (Approx. 4 hours)

**EP** (extended mode) : Select when a longer recording time is required. (Approx.6 hours at 1.2Mbps or Approx. 8 hours at 0.8 Mbps.)

## Recording Speed (VCR)

**AUTO** : Select when you want to set video quality automatically. It depends on remaining time of VCR tape.

**SP** : Standard Play, for best picture quality.

**LP** : Long Play, for maximum recording time (3 times SP).

## V/P(VPS/PDC)

**VPS** : Video Programme System

**PDC** : Programme Delivery Control

• Do not select V/P unless you are sure the programme you wish to record is broadcast with VPS/PDC.

If you do set V/P to On, then you must set up the start-time EXACTLY according to the published TV schedule. Otherwise the timer recording will not operate.



- When you are recording at EP mode on a DVD-RW(V mode)/-R disc, it may not record the full 6 or 8 hours because the unit uses the VBR(Variable Bit Rate) ENCODING system. For example, if you record a programme with a lot of action, it uses a higher bit rate which in turn consumes more disc memory.

- 7 Press the **OK** button.

### If the timer settings overlap

The programmes are recorded in order of priority. If timer recording is set for the first programme and then again for the second programme and both programmes overlap, the following message will appear on the screen: "This setting is identical with 1" The message shows that the first programme has priority. After recording of the first programme is complete, the second programme starts being recorded.

### To exit without saving the current setting

Press the **MENU** or **RETURN** button.

### To return to the previous menu

Press the **RETURN** button if you don't want to set a timer recording.

- 8 Turn the power off to finish the timer recording.
  - will blink if disc or tape is not inserted.
  - will appear on the front panel. It means that a timer recording is registered.



- Timer recording will not work when the power is on. When the power is switched on, programmes registered for recording in Timer recording will be automatically cleared after the start time and date have passed.
- The timer recording time may differ from the set time depending on disc status and overall timer recording status (for example, recording times overlapping, or when the previous recording ends within 3 minutes before the start time of the next recording.)


## Editing the Scheduled Record List




Follow these directions to edit the timer record list.

**1** With the unit in Stop mode, press the **MENU** button.

**2** Press the **▲▼** button to select **Programme**, then press the **OK** or **▶** button.

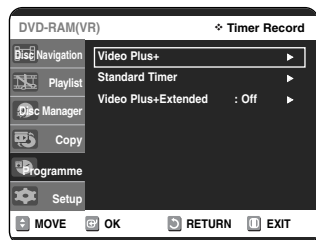


**3** Press the **▲▼** button to select **Standard Timer**, then press the **OK** or **▶** button.

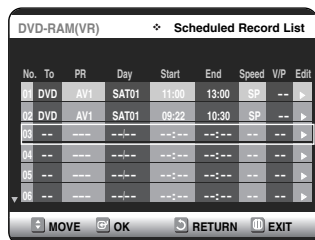


**4** Press the **▲▼** button to select the number of the scheduled record list you want to edit, then press the **OK** or **▶** button.

- The Edit and Delete items are displayed.

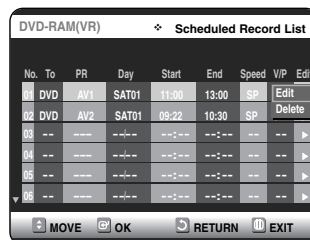

**5** Press the **▲▼** button to select **Edit**, then press the **OK** or **▶** button.

- The Timer Recording screen is displayed. Edit the items you want to modify. See the Timer Recording section for more information on Timer Recording Input items. (See page 62)

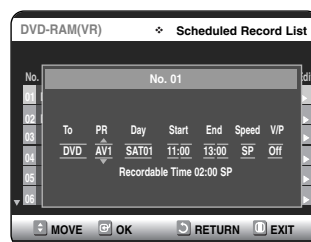

**6** Press the **OK** button to confirm the edited setting.

**7** Press the **MENU** button after finishing the operation. The menu screen will disappear.

Recording




# Deleting the Scheduled Record List




Follow these directions to delete a title from the timer record list.

**1** With the unit in Stop mode, press the **MENU** button.

**2** Press the **▲▼** button to select **Programme**, then press the **OK** or **▶** button.

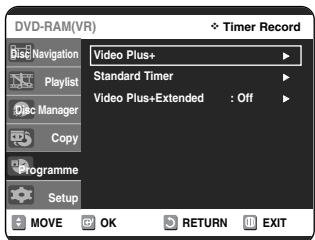


**3** Press the **▲▼** button to select **Standard Timer**, then press the **OK** or **▶** button.

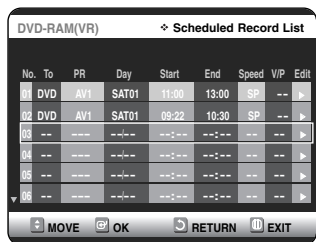


**4** Press the **▲▼** button to select the number of the scheduled record list you want to delete, and then press the **OK** button.

- The Edit and Delete items are displayed.

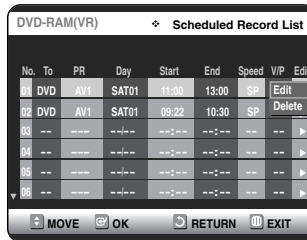

**5** Press the **▲▼** button to select **Delete**, then press the **OK** or **▶** button.

- You will be prompted with the delete confirm message such as "Do you want to delete 'No.01'?".

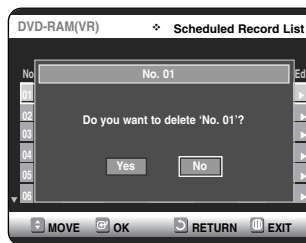

**6** Press the **◀▶** buttons to select **Yes**, then press the **OK** button.

- The selected title will be deleted from the list.

**7** Press the **MENU** button after finishing the operation.

The menu screen will disappear.



Note

- You can not delete programmes that are currently recording.



# Using the Video Plus+ Feature




Before presetting your DVD Recorder & VCR:

- Switch on both the television and your DVD Recorder & VCR.
- Check that the date and time are correct.

Up to twelve programmes can be preset.


**1** With the unit in Stop mode, press the **MENU** button.

**2** Press the **▲▼** button to select **Programme**, then press the **OK** or **▶** button.

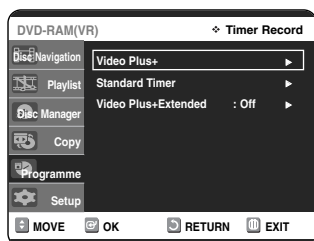

**3** Press the **▲▼** buttons to select **Video Plus+**, then press the **OK** or **▶** button.

- A message is displayed to allow you to enter the Video Plus+ code.


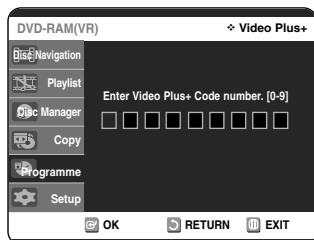


**4** Press the number buttons to enter the code of the programme that you want to record in your television magazine.

- If you want to correct the Video Plus+ code that you are entering:
- Press the **◀** button until the digit to be corrected is cleared.
- Enter the correct digit.

**5** Press the **OK** button.

- The information concerning the programme is displayed.
- When using the Video Plus+ function for the first time with stored stations, the programme number flashes. This one time, you must enter the PR number manually by pressing the **▲▼** buttons or number buttons.

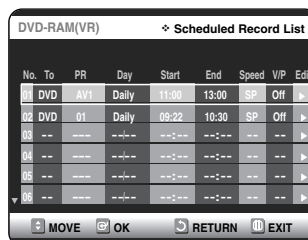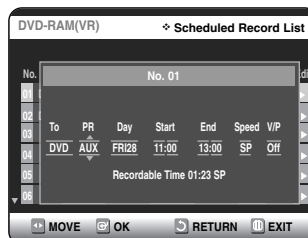

**6** If the programme and times are correct, press the **OK** button.

**7** Turn the power off by pressing the **ON/STANDBY** button to activate the timer recording setting.

**8** Refer to pages 63~64 if you want to:

- Check whether the timer Recording has set correctly or not.
- Cancel a preset recording.



- The numbers next to each TV programme listing in the magazines or newspapers are Video Plus+ code numbers, which allow you to programme your DVD Recorder & VCR instantly with the remote control. Enter the Video Plus+ code for the programme you wish to record.
- Video Plus+ is a trademark of Gemstar Development Corporation. The Video Plus+ system is manufactured under licence from Gemstar Development Corporation.

Recording


## Video Plus+ Extended

To prevent delays or over-runs the DVD Recorder & VCR has a function called Video Plus+ Extended allowing you to extended the recording time by up to 60 minutes.


- Only use if PDC is not available or set to OFF.

**1** With the unit in Stop mode, press the **MENU** button.

**2** Press the **▲▼** buttons to select **Programme**, then press the **OK** or **▶** button.

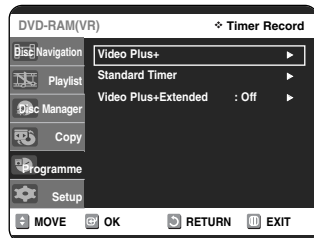

**3** Press the **▲▼** buttons to select **Video Plus+ Extended**, then press the **OK** or **▶** button.

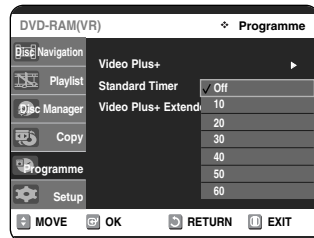

**4** Press the **▲▼** buttons to select the Video Plus+ Extended time, then the press **OK** or **▶** button.

**5** Press the **MENU** button to exit the menu.

## Basic VCR Recording

### Before starting

1. Check TV channel and Antenna connections.
2. Check the remaining time on the tape.

You can record a TV show in progress by inserting a blank tape and pressing the **●(REC)** button. You can even add recording time from 30 minutes up to 9 hours by pressing the **●(REC)** button repeatedly.

**Note** ■ Be sure your videotape has a Record Safety Tab. If the tab is missing, you can cover the opening with a small piece of tape.

**CAUTION** ■ **Warning:** Do not cover this opening unless you are sure you want to record over the tape.

**1** Insert a blank VHS tape into the VCR deck.  
• Make sure the tape is long enough to record the entire programme.

**2** Press **VCR** button to select the VCR mode.

**3** Press the **0-9** buttons or the **PROG/TRK** (  $\wedge/\vee$  ) buttons to select the desired channel. Press the **INPUT SEL.** button to select AV1, AV2 or AUX if recording from an external device connected to the front or rear inputs, respectively.

**4** Press the **REC SPEED** button on the remote control to set the Record Speed to one of the following options:

- **SP** – Standard Play, for best picture quality.
- **LP** – Long Play, for maximum recording time (3 times SP).

**Note** ■ The selected Record Speed will appear on the front panel display and on-screen display.

- This unit only supports PAL input signal.

## Maximum Recording Time - SP vs. LP

| Tape Length | Recording Time (in SP)         |
|-------------|--------------------------------|
| E180        | 180 mins or 3 hours            |
| E240        | 240 mins or 4 hours            |
| E280        | 280 mins or 4 hours and 40mins |
| E300        | 300 mins or 5 hours            |



Note

- When you watch or record on the VCR during DVD Recording, some function buttons may not operate.  
The message "This function is not available." will be displayed.

- Press the **●(REC)** button on the remote control or front panel.  
For options while recording is in progress, see "Special Recording Features".


- Press the **STOP** button to stop or finish a recording in progress.

## Pausing / Resuming

- Press the **REC PAUSE** button to pause a recording in progress.
- Press the **REC PAUSE** button again during pause to resume recording.
- You can switch programme by pressing the **PROG/TRK** (  $\wedge/\vee$  ) buttons while recording pauses.

## Check Remaining Time

- Press **DISPLAY** button on the remote control. Following information will be displayed.  
(Current deck status, recording speed, remaining time, input mode, current time.)

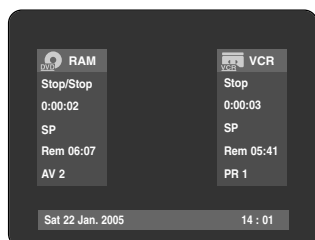

## Special Recording Features

While a recording is in progress, you can watch a different channel, watch a different media, or add recording time. (see page 61)

### 1 Watch a different channel

When a TV is connected with an antenna cable only, press **TV/VCR** to select the TV position. Change the channel by using the TV channel selector.  
When a TV is connected through AV input during recording, change the input of your TV from AV to Antenna. Select the programme you want to watch.

### 2 Watch a different media during recording

You can watch a DVD during VCR recording or watch a Video tape during DVD recording.

- During VCR recording, insert a DVD in the DVD deck. The output will automatically change to the DVD and start playback.
- During DVD recording, insert a Video tape in the VCR deck. The output will automatically change to the VCR and start playback. (Only if tape is missing the safety tab)

### 3 Add recording time

Refer to the One-Touch Recording (OTR).  
(See page 61)

### 4 Recording DVD and VCR at the same time

You can record DVD and VCR at the same time, but both modes must be set up to record separately.

- Press the **DVD** or **VCR** button to set the unit to DVD or VCR mode respectively.
- Choose input mode (PR, AV1, AV2 or AUX) for DVD or VCR.
- Choose **REC SPEED** for DVD or VCR.
- Press **REC** button for DVD or VCR.



Note

- When DVD Recorder & VCR is connected to your TV using S-Video or component video cable, the playback screen on the video tape will not display during DVD recording.
- You cannot record different channels at the same time, however you can record from different input source at the same time.
- The DVD and VCR cannot start recording at the exact same time. You must set one mode to start recording, then the other.

# Copy to DVD or VCR



You can copy from the DVD to VCR or VCR to DVD. Check the remaining time on the tape.


## To copy from DVD to VCR




(VCR mode)

**1** With the unit in Stop mode, press the **MENU** button.


**2** Press the **▲▼** buttons to select **Copy**, then press the **OK** or **▶** button.

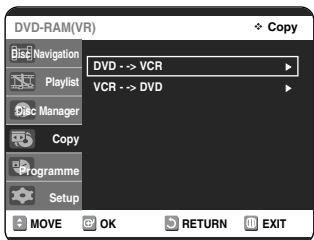


**3** Press the **▲▼** buttons to select **DVD → VCR**, then press the **OK** or **▶** button.

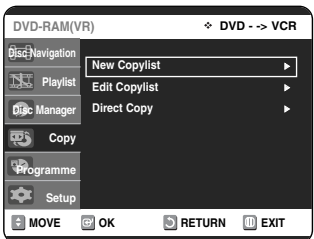


**4** Press the **▲▼** buttons to select **Edit Copylist**, then press the **OK** or **▶** button.

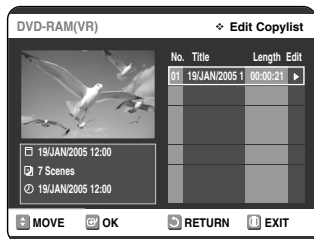

**5** Press the **▲▼** buttons to select desired copylist, then press the **OK** or **▶** button.

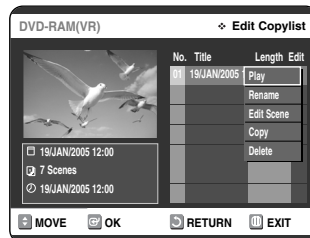

**6** Press the **▲▼** buttons to select **Copy**, then press the **OK** or **▶** button.

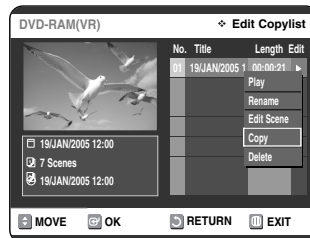

## Direct copy DVD to VCR

- Insert a DVD disc you want to copy.
- Insert a VHS tape.
- Press the VCR copy button on the remote control or TO VCR button on the front panel.
- To stop recording, press the **STOP** button.




- If you want to make a new Copylist and copy this scene directly from the Edit Copylist, select the **New Copylist** and make scene. This is the same function as creating the **New Playlist** (See page 76).


## ■ To copy from VCR to DVD

**1** With the unit in Stop mode, press the **MENU** button in stop mode.


**2** Press the **▲▼** buttons to select **Copy**, then press the **OK** or **▶** button.

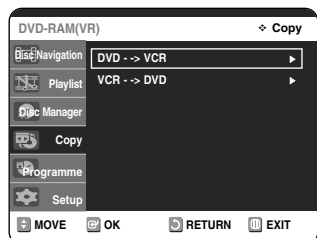

**3** Press the **▲▼** buttons to select **VCR-->DVD**, then press the **OK** or **▶** button.

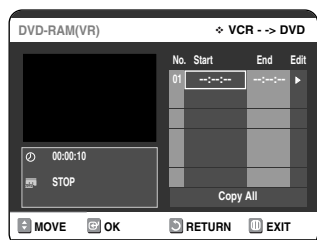


**4** You can use the **▶II**, **I◀◀** or **▶▶I**, **◀◀** or **▶▶** buttons to search for the Start position. Press the **OK** button at the start point.

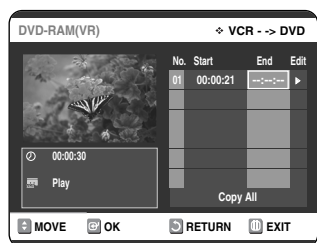


**5** You can use the **▶II**, **I◀◀** or **▶▶I**, **◀◀** or **▶▶** buttons to search for the end position. Press the **OK** button at the end point.


- A copylist will be generated.
- Repeat the above steps to create the copylist.
- In VCR mode, the copylist cannot be saved.

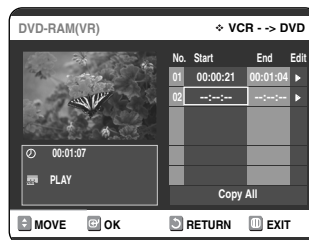

**6** Press the **▲▼** buttons to select desired copylist, then press the **OK** or **▶** button.

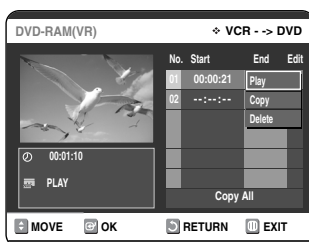

**7** Press the **▲▼** buttons to select **Copy**, then press the **OK** or **▶** button.

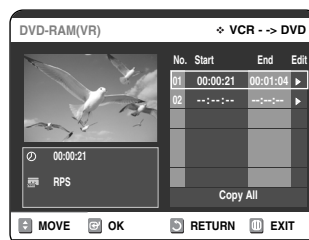

- The VCR will fast forward, searching for a start position and then automatically start a copy.
- It may not be match up with Start and END point exactly.
- If you want to copy all copylists, select **Copy All**.

## ■ Direct copy VCR to DVD

- Insert the VHS tape you want to copy.
- Insert Recordable DVD disc.
- Press DVD copy button on the remote control or TO DVD button on the front panel.
- To stop recording press the **STOP** button.

Recording

# Editing

This section introduces basic functions of DVD editing and explains both edit functions for the recording on a disc and edit functions for the entire disc.

- *Playing the Title List* .....70
- *Basic Editing (Title List)* .....72
- *Advanced Editing (Playlist)* .....76
- *Disc Manager* .....84


## Playing the Title List



Follow these instructions to play back a scene from the Title List.

### Using the TITLE LIST button

- 1 Press the **TITLE LIST** button.  
The Title List screen is displayed.

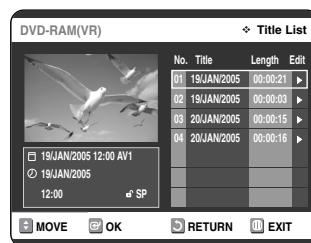


- 2 Press the **▲▼** buttons to select a title you want to play from Title List, and then press the **PLAY** button.  
The selected title will be played back.


- 3 To stop title play, press the **STOP** button.  
To return the title list screen, press the **TITLE LIST** button.

### Using the MENU button


- 1 Press the **MENU** button.

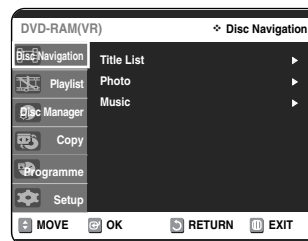


- 2** Press the **▲▼** buttons to select **Disc Navigation**, then press the **OK** or **▶** button twice. The Title List screen is displayed.

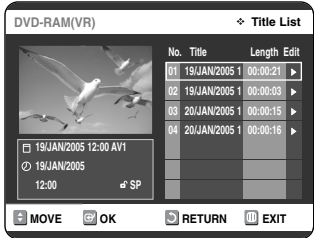

- 3** Press the **▲▼** buttons to select **Title**, then press the **OK** or **▶** button. The Edit menu is displayed: Play, Rename, Delete, Edit, Protection (See pages 72~75)

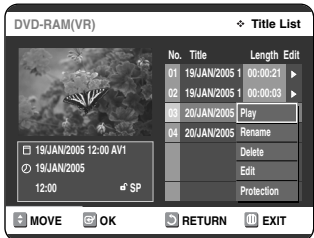


- 4** Press the **▲▼** buttons to select **Play** to play the title list, then press the **OK** button. The selected title will be played back.

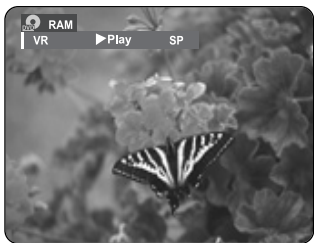

- 5** Press the **STOP** button to stop playing. To return the title list screen, press the **TITLE LIST** button.




- You can also play a recorded programme by pressing the **QUICK** button.

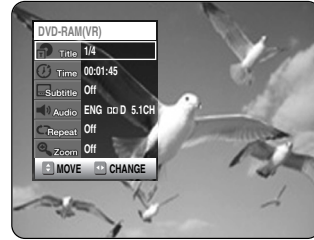

- Press the **▲▼** buttons to select **Title**.
- Press the **◀▶** buttons to select to play the title list, then press the **OK** button.

### Title List Screen Elements

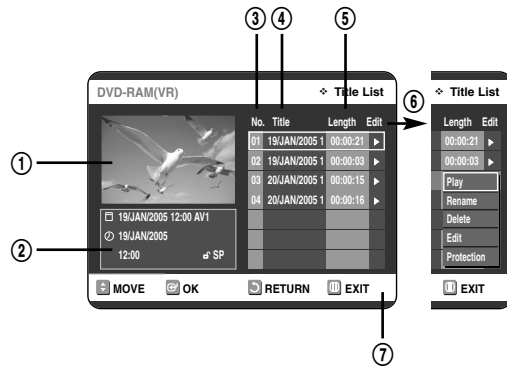

- Playback screen for recorded titles.
- Information window for the selected title: Title name, recording date, recording time, lock status, recording mode
- Recorded title No.
- Recorded title name
- Recording Length (i.e., the playing time)
- Edit menu
  - Play: Plays the selected title.
  - Rename: Renames the title of a selected title.
  - Delete: Deletes the selected title from the list.
  - Edit: Deletes a section of title.
  - Protection: Locks or unlocks the selected title.
- Button display.



- This may depend on the type of disc.
- DVD-RW (V mode)/-R has limited editing function.

# Basic Editing (Title List)

## 1 Renaming (Labeling) a Title


Follow these instructions to rename a title list, i.e., to edit the title of a recorded programme.




**1** Press the **TITLE LIST** button.  
The Title List screen is displayed.

Or use the **MENU** button:



- Press the **MENU** button.
- Press the **▲▼** buttons to select **Disc Navigation**, then press the **OK** or **▶** button twice.

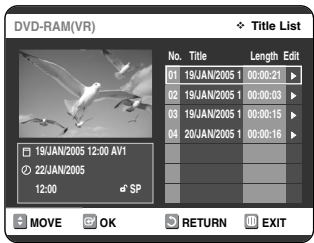


**2** Press the **▲▼** buttons to select a title you want to rename from the **Title List**, then press the **OK** or **▶** button.

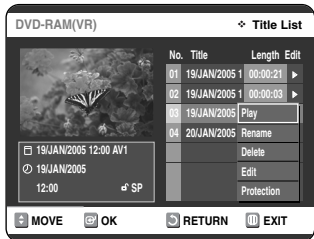

**3** Press the **▲▼** buttons to select **Rename**, then press the **OK** or **▶** button.  
The Rename screen is displayed.

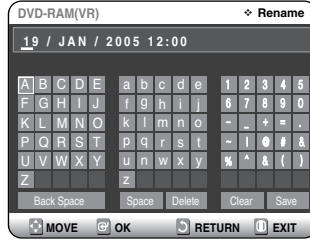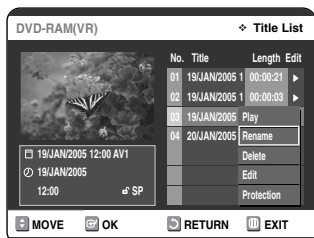


**4** Select the desired characters using the **▲▼◀▶** buttons, press the **OK** button.

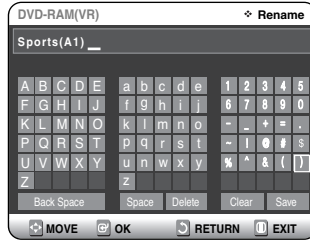

- **Back Space:** Moves the cursor one position backwards.(Equivalent to the **CLEAR** button)
- **Space:** Enters a blank and moves the cursor one forward (to the right).
- **Delete:** Deletes the character at the cursor position.
- **Clear:** Deletes all the character inputs.
- **Save:** Registers the character inputs.

**5** Press the **▲▼◀▶** buttons to select **Save**, and then press the **OK** button.  
The changed title name is displayed in the title field of the selected title.

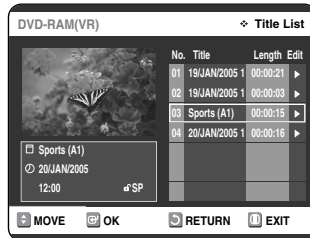



## 1 Locking (Protecting) a Title

Follow these instructions to lock a title to protect it from accidental deletion.




- 1 Press the **TITLE LIST** button.  
The Title List screen is displayed.

Or use the **MENU** button:



- Press the **MENU** button.
- Press the **▲▼** buttons to select **Disc Navigation**, then press the **OK** or **▶** button twice.




- 2 Press the **▲▼** buttons to select a title you want to protect in the **Title List**, then press the **OK** or **▶** button.

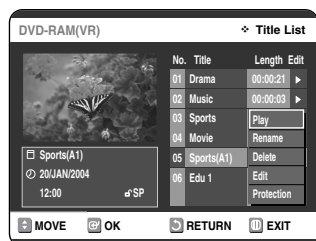

- 3 Press the **▲▼** buttons to select **Protection**, then press the **OK** or **▶** button.

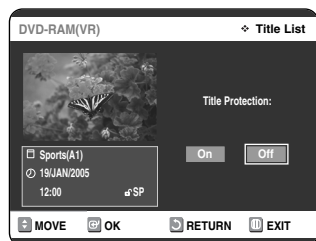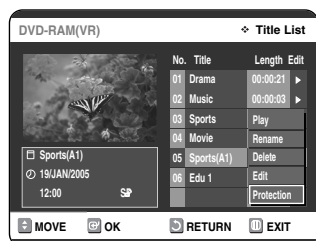

- 4 Press the **◀▶** buttons to select **On**, then press the **OK** button. The key icon on the information window for the selected title changes to the locked status. (🔒 → 🔒)

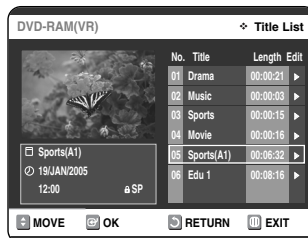

## 1 Deleting a Title


Follow these instructions to delete a title from the Title List.




- 1 Press the **TITLE LIST** button.  
The Title List screen is displayed.

Or use the **MENU** button:


- Press the **MENU** button.
- Press the **▲▼** buttons to select **Disc Navigation**, then press the **OK** or **▶** button twice.

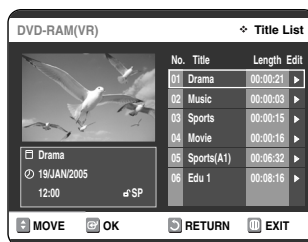


- 2 Press the **▲▼** buttons to select a title you want to delete in the Title List, then press the **OK** or **▶** button.

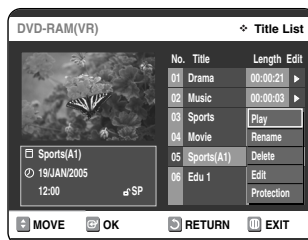

- Press the ▲▼ buttons to select **Delete**, then press the **OK** or ► button.

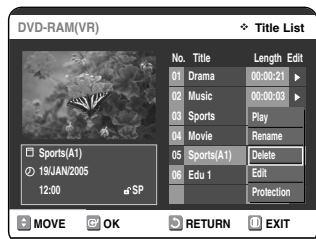

You will be prompted with a confirmation message. DVD-RAM/-RW (VR mode): Since Playlist is present, the message 'Do you want to delete?(Related playlists may be deleted.)' is displayed.

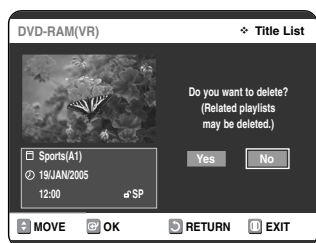

DVD-RW (V mode)/-R: Since Playlist is not present, the message 'Do you want to delete?' is displayed.

- The message depend on the type of disc.

- Press the ◀▶ buttons to select **Yes**, then press the **OK** button.



Note

- You cannot delete a protected title. If you want to delete a protected title, select **Off** in the Title Protection menu. (See page 73)
- Once a title is deleted from the Title List it cannot be recovered.
- Once DVD-R, DVD-RW is finalised, it cannot be deleted.
- With DVD-R, titles are only deleted from the menu, however, the Title remains physically on the disc.

## Deleting a Section of a Title

Follow these instructions to delete a section of a Title List title.



(VR mode)


- Press the **TITLE LIST** button. The Title List screen is displayed.

Or use the **MENU** button:


- Press the **MENU** button.
- Press the ▲▼ buttons to select **Disc Navigation**, then press the **OK** or ► button twice.




- Press the ▲▼ buttons to select a title you want to delete from the Title List, then press the **OK** or ► button.

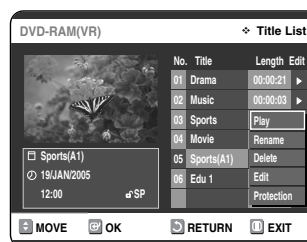


- Press the ▲▼ buttons to select **Edit**, then press the **OK** or ► button. The Edit Title List screen is displayed.

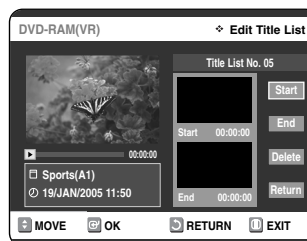


- 4** Press the **OK** button at the starting point.  
The image and starting point time are displayed in the section deletion starting point window.

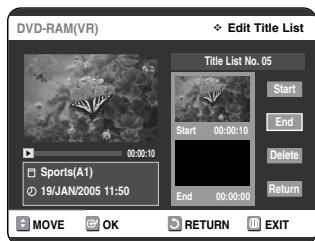


- 6** Press the **▲▼** buttons to select **Delete**, then press the **OK** button.

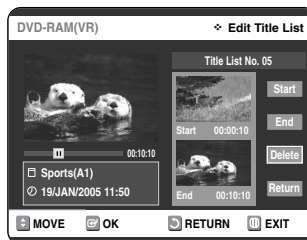

### Edit Title List Screen Elements

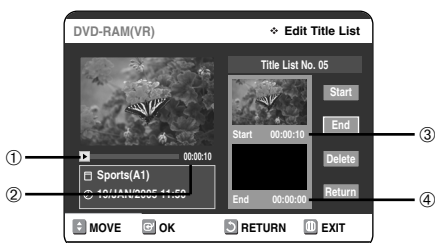


- ① Playback bar
- ② Playtime
- ③ Section deletion starting point window and time
- ④ Section deletion end point window and time
  - Select the start and end points of the section you want to delete using the playback related buttons.
  - Playback related buttons: (▶||, I◀◀, ◀◀, ▶▶).

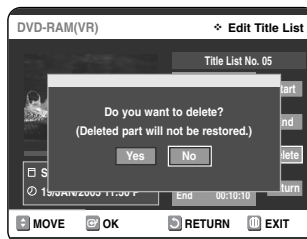

- 7** Press the **◀▶** buttons to select **Yes**, then press the **OK** button.  
The selected section has been deleted.  
To return to the Title List, press the **▲▼** buttons to select **Return**.

- 5** Press the **OK** button at the end point.  
The image and end point time are displayed in the Section deletion ending point window.

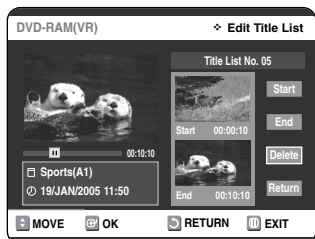

Note

- The length of the section to be deleted must be at least 5 seconds long.
- If the length of the section to be deleted is less than 5 seconds, you will be prompted with the message 'The range is too short.'
- If the end time precedes the starting time, you will be prompted with the message 'End point cannot be marked earlier than start point'.
- The section cannot be deleted when it includes a still picture.
- Press the **MENU** button after the operation has finished.  
The Title List screen will disappear.

# Advanced Editing (Playlist)


## ■ Creating a Playlist

Follow these instructions to create a new playlist from a recorded title.




**1** With the unit in Stop mode, press the **MENU** button.


**2** Press the **▲▼** buttons to select **Playlist**, then press the **OK** or **▶** button.

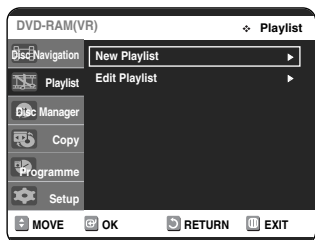

**3** Press the **▲▼** buttons to select **New Playlist**, then press the **OK** or **▶** button. The Make Scene screen is displayed.

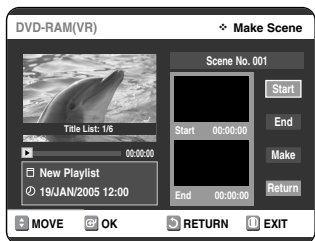


**4** Press the **OK** button at the start point.

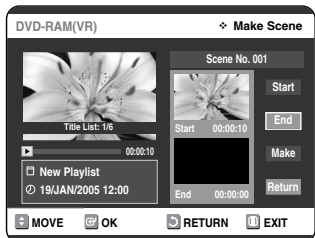

- The image and time at the start point are displayed on the Start window.
- The yellow-coloured selection bar moves to the End item.
- Select the starting point of the section from which you want to create a new scene using the playback related buttons (**▶||, I◀◀▶▶I, ◀◀, ▶▶**).

**5** Press the **OK** button at the end point.

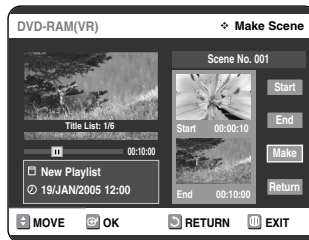

- The image and end point time are displayed in the End window.
- The yellow-coloured selection bar moves to the Make icon.

- To make a new playlist -

**6** Press the **▲▼** buttons to select **Make**, then press the **OK** button.

A new Make Scene screen is displayed.  
A new Scene will be added to the current Playlist.




Note

- You can check and see all the scenes on Edit Playlist screen. (See page 79)
- Repeat steps 1~6 if you want to make a new playlist.
- Repeat steps 3~6 if you want to make scenes of the playlist.

- To return to Edit Playlist menu -

**7** Press the **▲▼** buttons to select **Return**, then press the **OK** button.

The Edit Playlist screen is displayed.

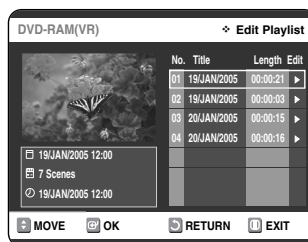

**8** Press the **MENU** or **PLAY LIST** button after the operation has finished.

The Edit Playlist screen will disappear.




Note


- You can create up to 99 playlist titles.
- Depending on the kind of disc, the displayed screen may have a slight difference.

## ■ Playing Titles in the Playlist

 Follow these instructions to play the playlist titles.




- 1 Press the **PLAY LIST** button with the disc stopped. The Edit Playlist screen is displayed.

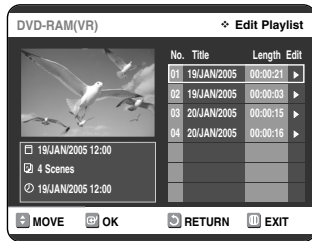

Or use the **MENU** button:



- Press the **MENU** button with the disc stopped.
- Press the **▲▼** buttons to select **Playlist**, then press the **OK** or **▶** button.
- Press the **▲▼** buttons to select **Edit Playlist**, then press the **OK** or **▶** button.

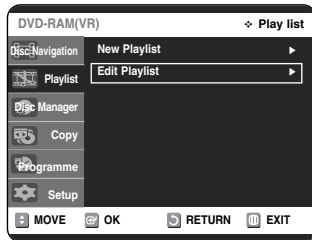

- 2 Press the **▲▼** buttons to select the title you want to play from the Playlist, then press the **OK** or **▶** button.

The Edit Playlist menu is displayed : Play, Rename, Edit Screen, Copy, Delete.


- 3 Press the **▲▼** buttons to select **Play**, then press the **OK** or **▶** button. The playlist titles will be played back.

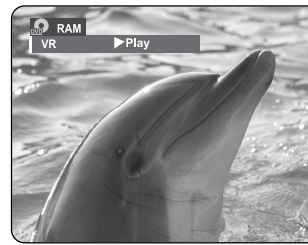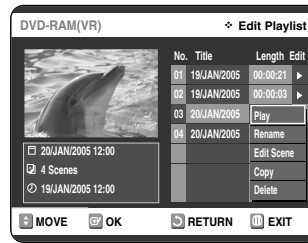


- 4 Press the **STOP** button to stop playing. The screen returns to the Edit Playlist screen.

## Renaming a Playlist Title

 Follow these instructions to rename a playlist Title, i.e. to edit the title of a playlist title.




- 1 Press the **PLAY LIST** button with the disc stopped. The Edit Playlist screen is displayed.

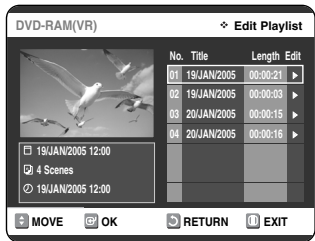



Or use the **MENU** button:

- Press the **MENU** button with the disc stopped.
- Press the **▲▼** buttons to select **Playlist**, then press the **OK** or **▶** button.
- Press the **▲▼** buttons to select **Edit Playlist**, then press the **OK** or **▶** button.


- 2 Press the **▲▼** buttons to select the title you want to rename from the Playlist, then press the **OK** or **▶** button. The Edit Playlist menu is displayed :Play, Rename, Edit Scene, Copy, Delete

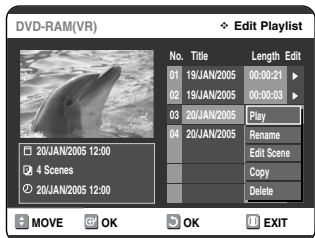

- 3 Press the **▲▼** buttons to select **Rename**, then press the **OK** button. The Rename screen is displayed.

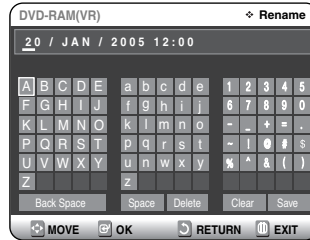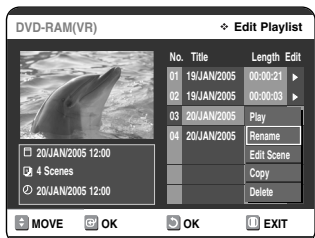


- 4 Enter the desired characters using the **▲▼◀▶** buttons.

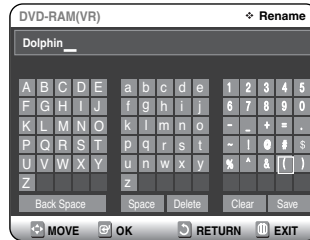


- This function is the same as the Rename function in the renaming the title list. (See page 72)
- The maximum number of characters that can be entered is 31.

- 5 Press the **▲▼◀▶** buttons to select **Save**, then press the **OK** button. The changed title is displayed in the title field of the selected playlist title.

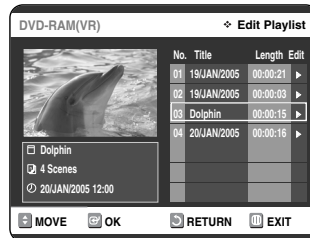


## ■ Editing a Scene for the Playlist

 Follow these instructions to edit scenes for a playlist.




- 1 Press the **PLAY LIST** button with the disc stopped. The Edit Playlist screen is displayed.

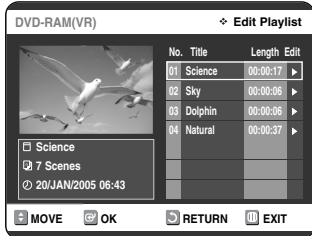



Or use the **MENU** button:

- Press the **MENU** button with the disc stopped.
- Press the **▲▼** buttons to select **Playlist**, then press the **OK** or **▶** button.
- Press the **▲▼** buttons to select **Edit Playlist**, then press the **OK** or **▶** button.

- 2 Press the **▲▼** buttons to select the title you want to edit from the Playlist, and then press the **OK** or **▶** button. The Edit Playlist menu is displayed: Play, Rename, Edit Scene, Copy, Delete

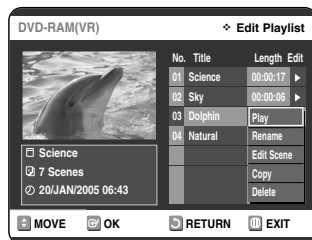


- 3 Press the **▲▼** buttons to select **Edit Scene**, then press the **OK** or **▶** button. The Edit Scene screen is displayed.

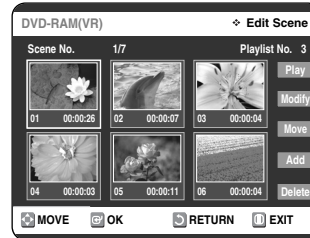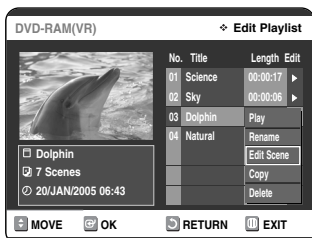


### Playing a Selected Scene

- 4 Press the **▲▼◀▶** buttons to select the scene you want to play, then press the **OK** button. The playlist title to be played is selected.

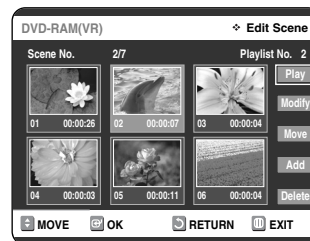

- 5 Press the **OK** button again. The selected scene will be played back.

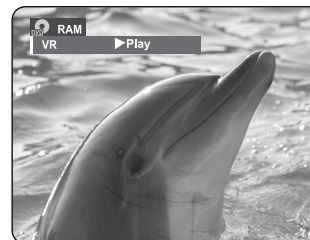


- To stop scene play, press the **STOP** button.


## Modifying a Scene (Replacing a Scene)

To setup, follow steps 1 to 3 in page 79.


- 4 Press the ▲▼◀▶ buttons to select the scene you want to modify, then press the **OK** button.

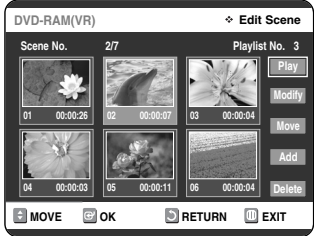

- 5 Press the ▲▼ buttons to select **Modify**, then press the **OK** button.  
The Modify Scene screen is displayed.

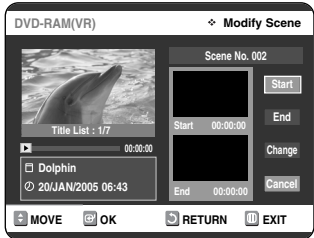


- 6 Press the **OK** button at the start point of the scene.

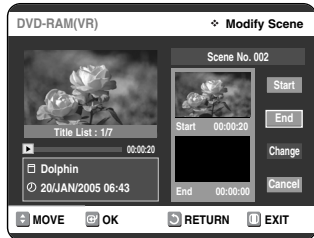


- The image and starting point time are displayed on the Start window.
- Select the starting or ending point of the section you want to modify using the playback related buttons (▶II,I◀◀,▶▶I,▶▶◀◀).

- 7 Press the **OK** button at the end point of the scene.

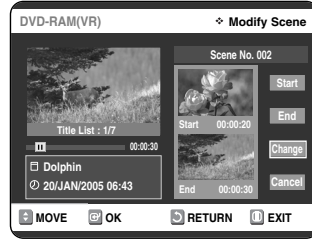

- The image and ending point time are displayed in the End window.

- 8 Press the ▲▼ buttons to select **Change**, then press the **OK** button.

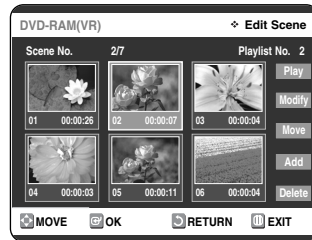


- The scene you want to modify is changed with the selected section.




### Moving a Scene (Changing the Position of a Scene)

To setup, follow steps 1 to 3 in page 79.

- Press the ▲▼◀▶ buttons to select the scene you want to move (change the position), then press the OK button.

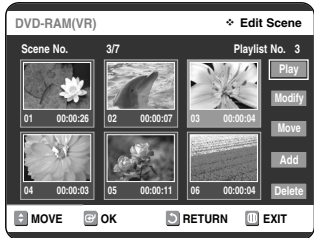


- Press the ▲▼ buttons to select **Move**, then press the OK button.

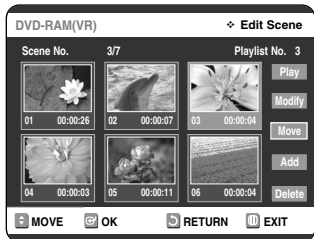


- A yellow selection window is displayed on the scene to be moved.

- Press the ▲▼◀▶ buttons to select the position to which you want to move the selected scene, then select the OK button.

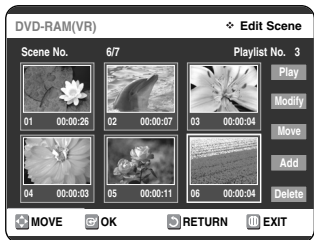

- The selected scene is moved to the selected position.

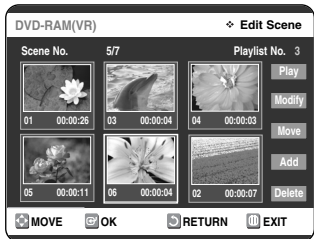


Note

- You cannot move the selected scene to the position of the next scene, because the selected scene should be inserted before that position, which requires no action.
- Depending on the kind of disc, the displayed screen may have a slight difference.


### Adding a Scene

To setup, follow steps 1 to 3 in page 79.


- Press the ▲▼◀▶ buttons to select the scene that will have a new scene inserted before it, then press the OK button.  
A yellow selection window is displayed on the scene to be added as the new scene.

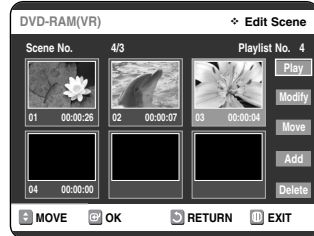

- Press the ▲▼ buttons to select **Add**, then press the OK button.  
The Add Scene screen is displayed.

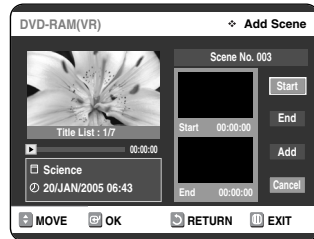


- Press the OK button at the starting point of the scene.

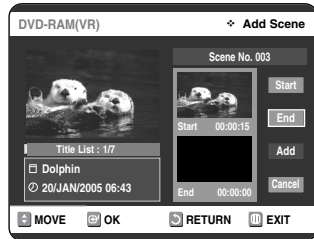


- The image and starting point time are displayed in the Start window.
- Select the end point of the section where you want to add the new scene using the playback related buttons (▶||, I◀◀, ▶▶, I▶▶).

**7** Press the **OK** button at the end point of the scene.

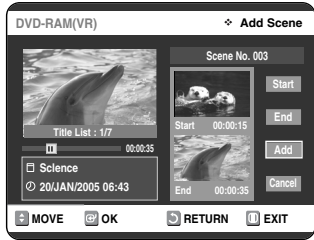

- The image and time of the end point are displayed in the End window.
- To cancel, press the ▲▼ buttons to select cancel and then press the **OK** button.

**8** Press the ▲▼ buttons to select **Add**, then press the **OK** button.

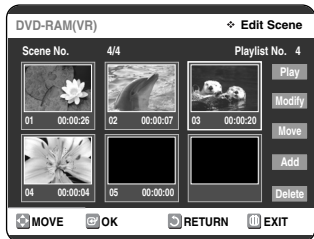


- The section you want to add is inserted prior to the scene selected in step.


## Deleting a Scene

To setup, follow the steps 1 to 3 in page 79.

**4** Press the ▲▼◀▶ buttons to select the scene you want to delete, and then press the **OK** button.

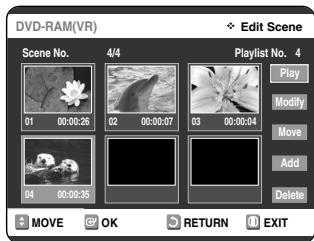


**5** Press the ▲▼ buttons to select **Delete**, then press the **OK** button.

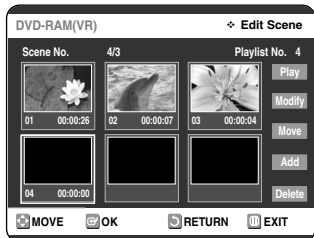

## Copying a Playlist to the VCR

**1** Press the **PLAY LIST** button with the disc stopped. The Edit Playlist screen is displayed.

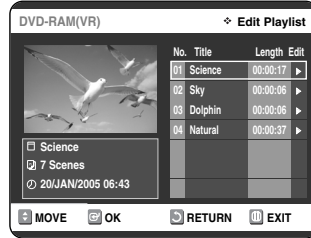


Or use the **MENU** button:

- Press the **MENU** button with the disc stopped.
- Press the ▲▼ buttons to select **Playlist**, then press the **OK** or ▶ button.
- Press the ▲▼ buttons to select **Edit Playlist**, then press the **OK** or ▶ button.


**2** Press the ▲▼ buttons to select the title you want to edit from the Playlist, and then press the **OK** or ▶ button.

The Edit Playlist menu is displayed: Play, Rename, Edit Scene, Copy, Delete

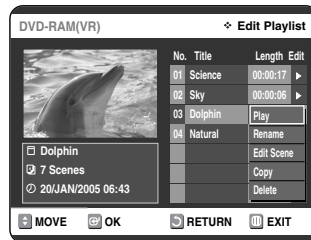

**3** Press the ▲▼ buttons to select **Copy**, then press the **OK** button.

- The title you choose is played and copied to VCR tape.

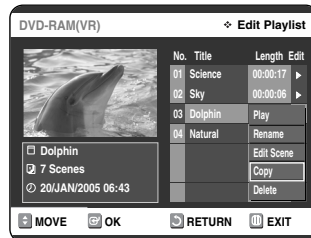

**4** Press the **MENU** button after the operation has finished. The menu screen will disappear.




Note

- The playlist can contain up to 99 playlist titles.

## ■ Deleting a Playlist from the Playlist


- 1 Press the **PLAY LIST** button with the disc stopped. The Edit Playlist screen is displayed.

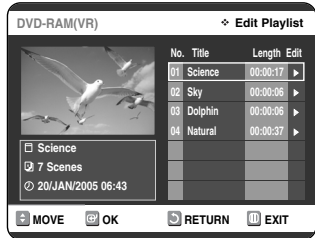


Or use the **MENU** button:

- Press the **MENU** button with the disc stopped.
- Press the **▲▼** buttons to select **Playlist**, then press the **OK** or **▶** button.
- Press the **▲▼** buttons to select **Edit Playlist**, then press the **OK** or **▶** button.


- 2 Press the **▲▼** buttons to select the title you want to edit from the Playlist, then press the **OK** or **▶** button. The delete Playlist menu is displayed: Play, Rename, Edit Scene, Copy, Delete

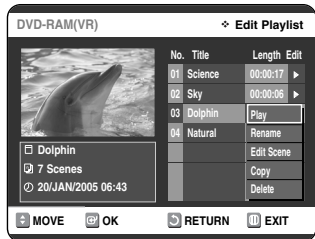

- 3 Press the **▲▼** buttons to select **Delete**, then press the **OK** button.


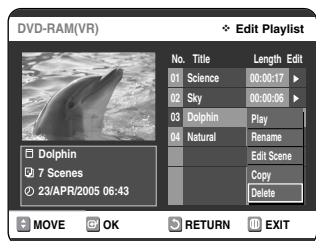


- You will be prompted with the delete confirmation message 'Do you want to delete?'.

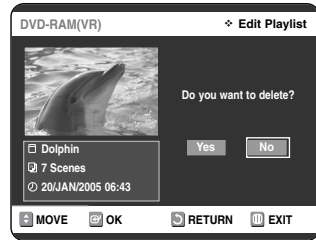

- 4 Press the **◀▶** buttons to select **Yes**, then press the **OK** button.

You automatically returned to the Edit Playlist screen after the delete operation has finished.

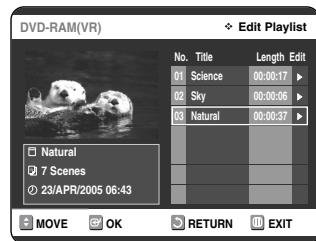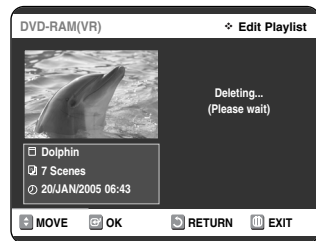


# Disc Manager

## ■ Editing the Disc Name


Follow these instructions to give a name to a disc.




**1** With the unit in Stop mode, press the **MENU** button.

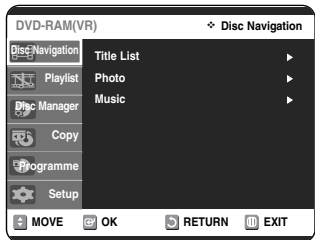


**2** Press the **▲▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.

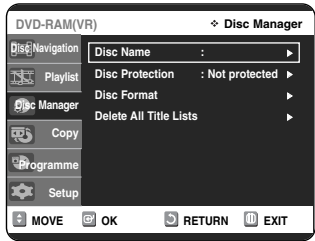


**3** Press the **▲▼** buttons to select **Disc Name**, then press the **OK** or **▶** button. The Edit Name screen is displayed.

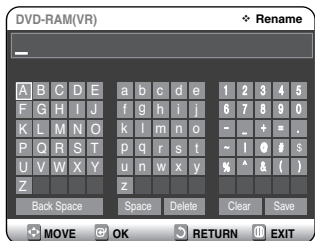

**4** Enter the desired characters using the **▲▼◀▶** buttons.

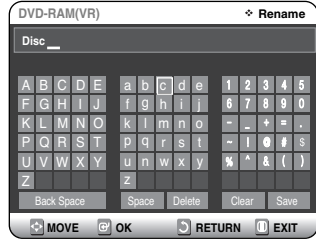

**5** Press the **▲▼◀▶** buttons to select **Save**, then press the **OK** button. A disc name is given to the disc.

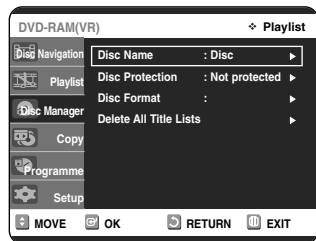

- Note**
- You may need to clear disc protection before beginning editing.
  - Depending on the kind of disc, the displayed screen may be different.


Editing

## ■ Disc Protection


Disc Protect allows you to protect your discs from being formatted or deleted due to unintended operations.




- 1 With the unit in Stop mode, press the **MENU** button.

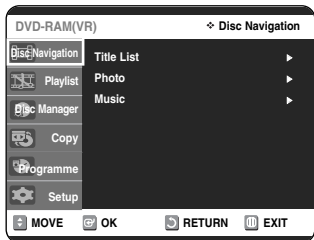


- 2 Press the **▲▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.

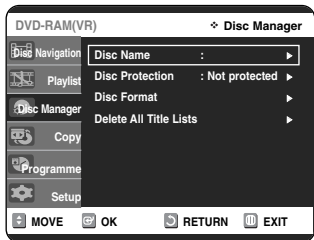

- 3 Press the **▲▼** buttons to select **Disc Protection**, then press the **OK** or **▶** button.

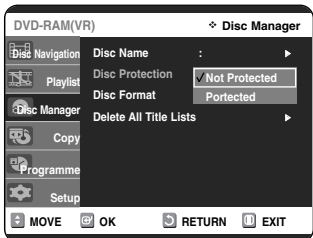

- 4 Press the **▲▼** button to select **Protected**, then press the **OK** or **▶** button.

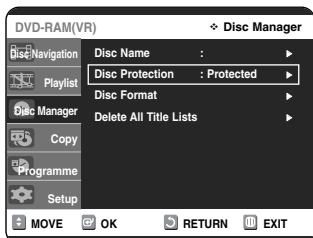


## ■ Formatting a Disc


Use these instructions to format a disc. The disc protect should be cleared




- 1 With the unit in Stop mode, press the **MENU** button.

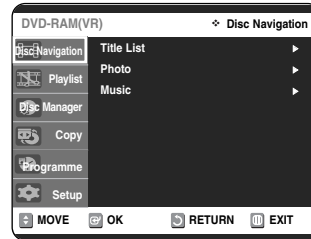

- 2 Press the **▲▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.

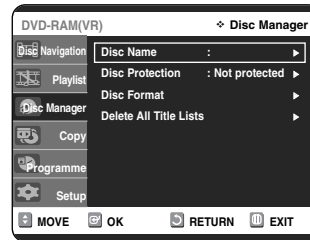


- 3 Press the **▲▼** buttons to select **Disc Format**, then press the **OK** or **▶** button.

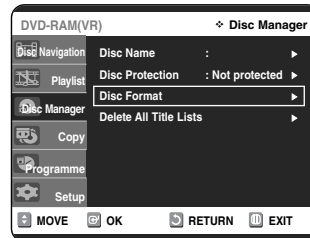

### DVD-RAM


- You will be prompted with the confirmation message 'Do you want to format disc?'.

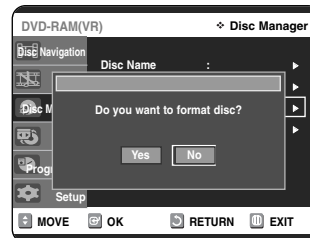

- If you select "Yes", you will be prompted with the confirmation message 'All data will be deleted. Do you want to continue?'.

### DVD-RW

- You will be prompted with the confirmation message 'Choose the recording format for DVD- RW.'

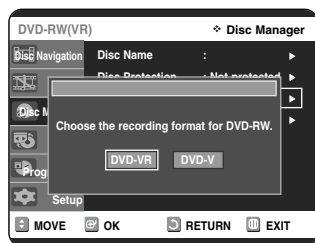

- Press the ◀▶ buttons to select **Yes**, then press the **OK** button. The disc is formatted.

DVD-VR mode and DVD-V mode are defined according to their recording format.

|      | DVD-VR mode       | DVD-V mode      |
|------|-------------------|-----------------|
| DISC | DVD-RAM<br>DVD-RW | DVD-RW<br>DVD-R |


If you want to play this disc in another player, you need to format it as DVD-V and finalise after recording.

## Finalising a disc




After you record titles onto a DVD-RW/-R disc with your DVD recorder, it needs to be finalised before it can be played back on external devices.



- With the unit in Stop mode, press the **MENU** button.

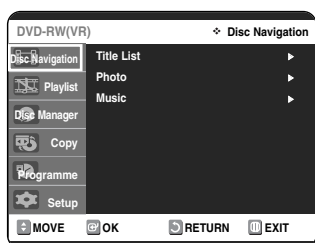

- Press the ▲▼ buttons to select **Disc Manager**, then press the **OK** or ▶ button.

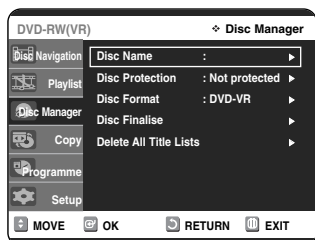

- Press the ▲▼ button to select **Disc Finalise**, then press the **OK** or ▶ button.

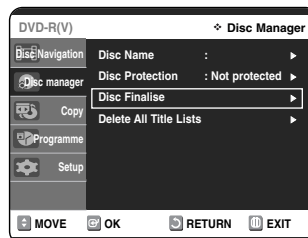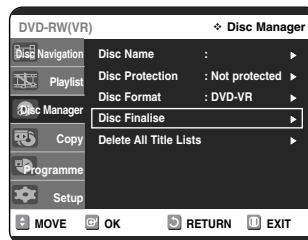

You will be prompted with the message 'Do you want to finalise disc?'.



If you select Yes, you will be prompted again with the message 'Disc will be finalised. Do you want to continue?'.



- Press the ◀▶ buttons to select **Yes**, then press the **OK** button. The disc is finalised.




Note

- Once a disc is finalised, you cannot delete titles from the record list.
- After being finalised, the DVD-RW(V mode)/-R operates in the same manner as a DVD-Video.
- Depending on the disc type, the displayed screen may be different.
- Finalising time may be different depending on the amount of data recorded on the disc.
- Data on the disc will be damaged if the recorder is powered off during finalise process.

## 1 Unfinalising a disc (V/VR mode)




- 1 With the unit in Stop mode, press the **MENU** button.

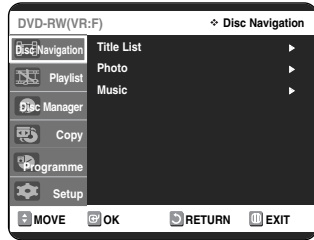

- 2 Press the **▲▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.



- 3 Press the **▲▼** button to select **Disc Unfinalise**, then press the **OK** or **▶** button. You will be prompted with the message 'Do you want to unfinalise disc?'.

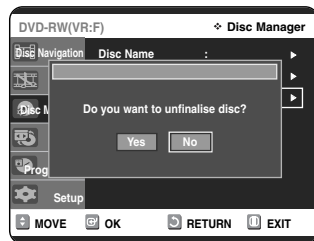

If you select Yes, you will be prompted again with the message 'Disc will be unfinalised. Do you want to continue?'.



- 4 Press the **◀▶** buttons to select **Yes**, then press the **OK** button. The disc is unfinalised.



Note

- A DVD-RW can be finalised or unfinalised in V mode.

|           | Finalise          | Unfinalise  |
|-----------|-------------------|---|
| Mark      | DVD-Video(RW)     | DVD-RW(V mode)  |
| Operation | Same as DVD-Video | Additional recording, protection and deletion are possible. |


- A DVD-RW can be finalised or unfinalised in VR mode.

|           | Finalise  | Unfinalise  |
|-----------|---|---|
| Mark      | DVD-RW(VR:F)  | DVD-RW(VR mode)   |
| Operation | Additional recording, deletion, editing, and protection are impossible. | Additional recording, deletion, editing, and protection are possible. |


## Delete All Title Lists




**1** With the unit in Stop mode, press the **MENU** button.

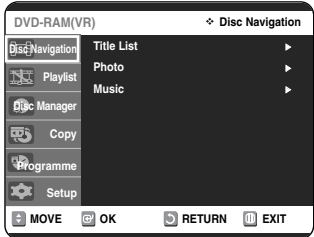


**2** Press the **▲▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.

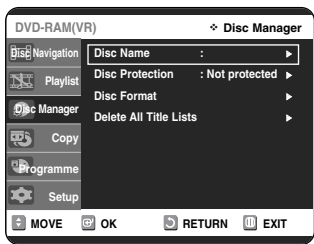

**3** Press the **▲▼** button to select **Delete All Title Lists**, then press the **OK** or **▶** button.

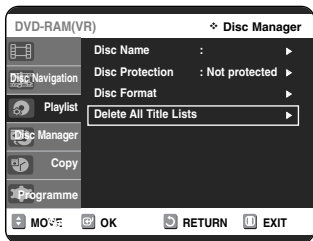



- You will be prompted with the confirmation message 'Do you want to delete all title lists?'.

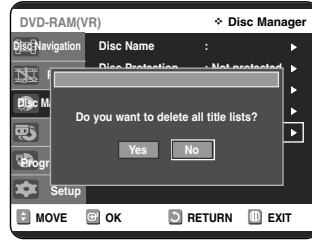

- When Protected Title exists: The Delete All Title List function will not operate. If there is a title containing a still picture, however, that function will not operate. If you want to delete a protected title, disable Protect for it on the Lock item.

 **4** Press the **◀▶** buttons to select **Yes**, then press the **OK** button. All title lists are deleted.



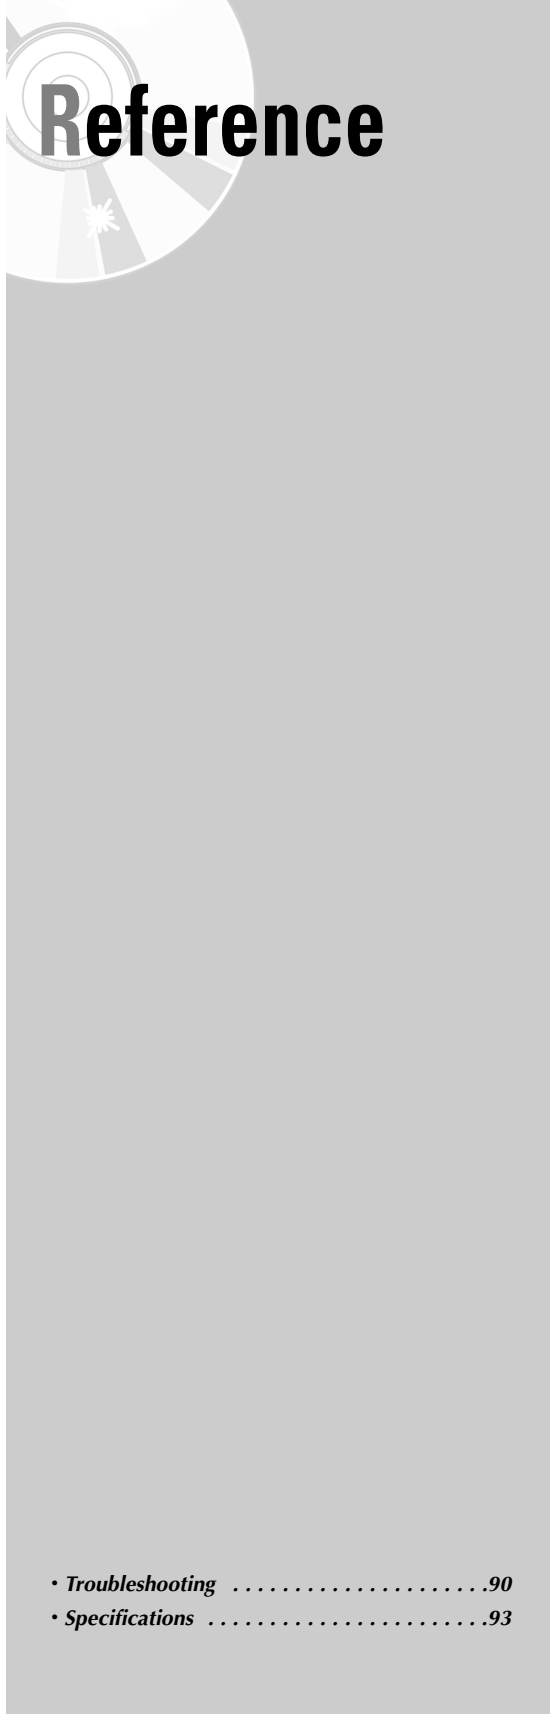

# Reference

 
 
 
- *Troubleshooting* .....90
- *Specifications* .....93

**Troubleshooting**



**Specifications**

**Reference**



# Troubleshooting

## (DVD-VIDEO/DVD-RAM/-RW/-R)



If your product malfunctions, go through the check points below before contacting a Toshiba authorized service centre.

| Problem  | Explanation/Solution   |
|--|--|
| <b>No power.</b>   | <ul style="list-style-type: none"> <li>• Check whether the power cord is securely plugged into the power outlet.</li> <li>• Did you press the I/O <b>ON/STANDBY</b> button of your DVD Recorder &amp; VCR.</li> </ul>  |
| <b>The input is displayed for a while when the power turns on.</b> | The DVD Recorder & VCR requires some time to initialize after it is turned on.   |
| <b>Cannot record TV programmes.</b>                                | <ul style="list-style-type: none"> <li>• Check whether the power cord is securely plugged into the power outlet.</li> <li>• Did you set the DVD Recorder &amp; VCR programme settings correctly?</li> <li>• Check the free space on your DVD-RAM/-RW/-R disc.</li> <li>• Check the antenna cable is connected.</li> </ul>  |
| <b>Timer recording does not work properly.</b>                     | <ul style="list-style-type: none"> <li>• Check the recording time, end time and current time settings again.</li> <li>• Recording will be cancelled if the power is interrupted due to a power failure or other reason during recording.</li> </ul>  |
| <b>Cannot record.</b>  | <ul style="list-style-type: none"> <li>• Check whether the disc is formatted. This product can record on formatted discs only.</li> <li>• Check whether your DVD-RAM/-RW/-R disc has a sufficient free space.</li> </ul>   |
| <b>I pressed the REC button but there is no response.</b>          | Recording is available on DVD-RAM/-RW/-R discs only.<br>If a programme is copy protected, you cannot record it.  |
| <b>I forgot the password for parental lock.</b>                    | Press and hold ►► button on the front panel of your DVD Recorder & VCR when the power is on. All settings including password will revert to factory settings.<br>Do not use it if not absolutely required.<br>(Note that this function is available only when there is no disc inserted.)  |
| <b>Cannot play the disc.</b>                                       | <ul style="list-style-type: none"> <li>• Check whether the disc is inserted correctly with the label facing up.</li> <li>• Check the regional code of your DVD disc.</li> <li>• This DVD Recorder &amp; VCR cannot playback some types of disc.</li> </ul>   |
| <b>No sound.</b>   | <ul style="list-style-type: none"> <li>• Are you watching a programme in slow or skip mode?<br/>If you are playing a programme at a speed other than normal speed, sound is not output.</li> <li>• Check the connections and initial settings.</li> <li>• Check whether the disc is damaged.<br/>Clean up the disc, if necessary.</li> <li>• Check whether the disc is inserted correctly with the label facing up.</li> </ul> |

# Troubleshooting (DVD)



| Problem  | Explanation/Solution   |
|--|--|
| ⊙ icon appears on the screen.  | You cannot use the operation or function due to one of the following reasons:<br>(1) Your DVD disc does not support the feature (for example, angles)<br>(2) You've requested a title, chapter, or scan time that is out of the correct range.   |
| Play mode settings are different from the settings configured with the Setting menu. | The disc does not support all the selected functions.<br>In this case, some settings you configure on the Setting menu may not work properly.  |
| Cannot change the aspect ratio.  | Aspect ratio is fixed for DVD disc.  |
| No audio output.   | Check whether you selected correct digital output options in the Audio Output Options menu.  |
| No video or audio output. The disc tray is ejected after 2 to 5 seconds.             | Did you move your DVD Recorder & VCR suddenly from a cold place to a warm place? In this case, remove discs and wait for one to two hours with the power on, and then, insert the disc and try to playback again. It will work properly when condensation has evaporated.  |
| Angle operation does not work during playback of a DVD disc.                         | Angle operation is available only when the disc contains images captured at different angles.  |
| The disc revolves, but no image or bad quality images are output.                    | <ul style="list-style-type: none"> <li>• Check whether there is damage or foreign materials on your disc.</li> <li>• Some discs with bad manufacturing quality may not be played back.</li> <li>• If the scene changes from dark to bright suddenly, the screen may jitter temporarily, but it is not a defect.</li> </ul> |
| Desired audio language and subtitle language are not played.                         | Audio languages and subtitle languages are disc-specific.<br>Only the sound and subtitle languages contained on a DVD disc are available and displayed on the disc menu.   |
| No progressive output.   | <ul style="list-style-type: none"> <li>• Check whether PSO is displayed on front panel.</li> <li>• Make sure to change the component video output using the Progressive button when the disc is stopped.</li> </ul>  |
| The remote control doesn't work.   | <ul style="list-style-type: none"> <li>• Point the remote control at the remote control sensor on your DVD Recorder &amp; VCR. Operate within distance. (15ft)</li> <li>• Remove obstacles between your DVD Recorder &amp; VCR and remote control.</li> <li>• Check whether the batteries are depleted.</li> </ul>         |
| Other problems   | <ul style="list-style-type: none"> <li>• Read the table of contents and then find and read the sections describing your problem, and follow the directions given.</li> <li>• Turn the unit off and on.</li> <li>• If your problem still persists, contact your nearest Toshiba service centre.</li> </ul>                  |

# Troubleshooting (VCR)



Before contacting a Toshiba authorized service centre, perform the following simple checks.

| Problem  | Explanation/Solution  |
|--|---|
| No power   | <ul style="list-style-type: none"> <li>• Check that the power plug is connected to a wall outlet.</li> <li>• Have you pressed the ON/STANDBY button?</li> </ul>   |
| You cannot insert a video cassette   | <ul style="list-style-type: none"> <li>• A video cassette can only be inserted with the window side up and the safety tab facing you.</li> </ul>  |
| The television programme was not recorded  | <ul style="list-style-type: none"> <li>• Check the DVD Recorder &amp; VCR antenna connections.</li> <li>• Is the DVD Recorder &amp; VCR tuner properly set?</li> <li>• Check if the safety tab is intact on the cassette.</li> </ul>  |
| Timer recording was unsuccessful   | <ul style="list-style-type: none"> <li>• Re-check the recording start/stop time settings and the current time</li> <li>• Check whether you insert a tape which has enough time record</li> </ul>  |
| No playback picture or the picture is distorted  | <ul style="list-style-type: none"> <li>• Check to see if you are using a prerecorded tape.</li> </ul>   |
| You cannot see normal broadcasts   | <ul style="list-style-type: none"> <li>• Check the tuner/external setting. It should be on tuner.</li> <li>• Check the TV antenna connections.</li> </ul>   |
| Noise bars or streaks on playback  | <ul style="list-style-type: none"> <li>• Press the PROG/TRK ( ^ / v ) buttons to minimize this effect.</li> </ul>   |
| When the ►   button is pressed during playback, the still picture has severe "noise bar" streaks | <ul style="list-style-type: none"> <li>• A still picture may have "noise bars", depending on the condition of the tape. Press the PROG/TRK ( ^ / v ) buttons during slow motion to minimize this effect.</li> </ul>   |
| Video Head Cleaning  | <ul style="list-style-type: none"> <li>• If poor pictures appear on a variety of cassettes, the video heads may need cleaning. This is not a common problem and unless it appears, the heads should not be cleaned. When cleaning the video heads, read all instructions provided with the head cleaning cassette. Incorrect head cleaning can permanently damage the video heads.</li> </ul> |

If you are unable to solve the problem after reading the above instructions, note:

- The model and serial number on the rear of your DVD Recorder & VCR
- The warranty information
- A clear description of the problem

Then contact your nearest TOSHIBA authorized service centre.



# Specifications

 
 
 


|                |                                 |  |
|----------------|---------------------------------|--|
| <b>General</b> | Power requirements              | AC 220 - 240V, 50Hz  |
|                | Power consumption               | 45 Watts   |
|                | Weight                          | 4,8 Kg   |
|                | Dimensions                      | 430(W) x 321(D) x 84(H)  |
|                | Operating temp.                 | +5°C to +35°C  |
|                | Other conditions                | Keep level when operating. Less than 75% operating humidity              |
| <b>Input</b>   | Video input (Rear)              | Euro Scart socket : 1.0Vp-p(unbalanced) 75Ω                              |
|                | Audio input (Rear)              | Euro Scart socket : -8dBm, 47Kohm unbalanced                             |
|                | Front input                     | RCA jack, S-Video In   |
| <b>Output</b>  | RF out                          | UHF 21-69 (Initial CH60)   |
|                | Audio (DVD, VCR)                | RCA jack, Euro Scart socket, Audio L/R                                   |
|                | Audio (DVD Only)                | Digital audio out COAXIAL  |
|                | Video (DVD, VCR)                | RCA jack, Euro Scart socket (Composite, RGB), S-Video Out, Component Out |
| <b>VCR</b>     | Tape format                     | VHS type video tape  |
|                | Colour system                   | PAL  |
|                | Tuning system                   | I  |
|                | Video S/N                       | Above 43dB (standard recording)  |
|                | Resolution                      | Above 240 lines (standard recording)                                     |
|                | Audio S/N                       | Above 68dB (Hi-Fi), 39dB(Mono)   |
|                | Audio frequency characteristics | 20Hz-20KHz (Hi-Fi)   |
| <b>DVD</b>     | Picture Compression format      | MPEG-2   |
|                | Audio Compression format        | Dolby AC-3 256kbps   |
|                | Recording Quality               | XP (8 Mbps), SP (4 Mbps), LP (2 Mbps), EP (1.2/0.8 Mbps)                 |
|                | Video S/N                       | Ratio Min. 50dB at standard recording                                    |
|                | Audio S/N                       | Ratio Min. 75dB  |
|                | Audio frequency characteristics | 20 Hz ~ 20 KHz   |

## Audio Output

For DVD discs, audio signals recorded at 96kHz sampling frequency are converted into and output at 48kHz.

| Disc Type            | DVD        | AUDIO CD(CD-DA) |
|----------------------|------------|-----------------|
| Analog Audio Output  | 48 / 96KHz | 44.1KHz         |
| Digital Audio Output | 48KHz      | 44.1KHz         |



**TOSHIBA**

Printed in Slovakia  
BY634960

---

