

# TOSHIBA

Digital TV recorder

## HDR5010KB

OWNER'S MANUAL



## Important Safety Information

Thank you for choosing this Toshiba Digital TV recorder.

Before using the Digital TV recorder, please take a minute to read the following important safety information.

- Although this appliance has been carefully manufactured and rigorously checked prior to leaving the factory, as with all electrical appliances it is possible for problems to develop. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the mains power socket immediately.
- Ensure that the unit is sufficiently ventilated! Never place next to or underneath curtains!
- Only use the supplied AC mains adaptor.
- This AC mains adaptor should only be connected to an AC 240V/50Hz mains power supply - do not attempt to connect it to any other type of supply.
- The socket-outlet must be installed near the equipment and easily accessible.
- **DO NOT** cut off the supplied AC mains adaptor's plug.
- Keep away from rodents. Rodents (and also cockatiels) enjoy biting into electric flexes.
- The animal can cause a short cut (fire hazard!) and receive a fatal electric shock.
- Always hold plug when pulling out plug from power mains supply system. **DO NOT** pull on flex. The flex can become overloaded and cause a short cut.
- Set up unit so that no one is able to trip over the flex.
- This unit is recommended to be installed on shock-free benches in order to avoid any danger from falling.
- Take note that toddlers can pull the unit down from the table or cupboard by means of its flex. Children can hurt themselves when doing this.
- **DO NOT** use the unit near heat sources. The casing and flex could be damaged by the impact of heat.
- Any repairs must be carried out by qualified service personnel only.
- **DO NOT** open this unit. A non-expert attempting to repair the unit could be dangerous and potentially cause a fire hazard.
- Avoid placing the unit on any surfaces that may be subject to vibrations or shocks.
- Leave a space of at least 10cm around the unit to allow for adequate ventilation.
- Place the unit on a stable surface.
- **DO NOT** place any magnetic objects (including speakers) on or near the unit.
- **DO NOT** place any objects on the unit.
- **DO NOT** obstruct the ventilation on the underside of the unit.
- **DO NOT** expose the unit to shocks or vibrations as this could cause disk failure.
- To protect the unit during a thunder storm unplug the AC power cord and disconnect the aerial.

# Important Safety Information

- **CAUTION: DO NOT touch the aerial connector.**
- When you leave your home for a long period of time, unplug the AC mains adaptor for safety reasons.
- The unit becomes warm when in operation. **DO NOT** place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked.  
**DO NOT** set up near radiators. **DO NOT** place in direct sunshine.
- **DO NOT** allow the unit to get wet.
- **DO NOT** use the unit in hot, humid or excessively dusty places.
- **DO NOT** expose the unit to rain or moisture.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Liquids spilled into the unit can cause serious damage. Switch the set **OFF** and disconnect the mains power supply, then consult a qualified service person before attempting to use the unit again.
- Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense inside this unit.

Moisture condensation occurs during the following cases.

- When you bring the unit directly from a cold place to a warm place.
- When you use the unit in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.

- In summer, when you use the unit in a hot and humid place just after you move the unit from an air conditioned room.
- When you use the unit in a humid place.

## **DO NOT use the unit when moisture condensation may occur.**

If you use the unit in such a situation, it may damage Hard disk drive and internal parts. Leave the unit for two or three hours. After two or three hours, the unit will have warmed up and evaporated any moisture.

- To clean the unit, use a lightly dampened, soft cloth. **DO NOT** use any kind of abrasive cloth, sponge or cleaner.
- To help prevent Screen burn on Plasma or LCD screens and CRT displays. Never leave static pictures on the screen for long periods of time.
- Never place hot objects of open flame sources, such as lighted candles or nightlights, on or close to the unit.
- High temperatures can melt plastic and lead to fires.
- **DO NOT** stand the unit vertically. Use the unit in a horizontal (flat) position only.

## General Information

---

Toshiba is not liable for any damage or loss caused directly or indirectly by the malfunction of this unit, including, without limitation, any one of the following:

- Failure to record contents intended to be recorded by the consumer.
- Failure to edit contents as intended by the consumer.

### HDD Handling

HDD is a precision apparatus that is susceptible to vibration, strong impact or dirt. Depending on the installation environment or handling, the unit may become partially damaged or in the worst case, recording or replaying may not be available. Especially while the HDD is in motion, do not subject it to vibration or strong impact or pull out the power plug. And if a power failure occurs, the content of the recording / replaying programme may be lost.

HDD rotates at high speed when in operation. Be sure that rotation has stopped and then move the unit without subjecting it to strong impact or vibration.

### About HDD

HDD is a special device which has high recording density and is suited for long-time recording or high-speed cueing but by contrast, has many factors which can cause breakage.

- When an HDD fails, recovery of recorded content (data) may be impossible.
- HDD is not a permanent storage location of the recorded contents.

### About the remaining capacity of HDD recording time:

In recording to HDD, the Remaining Capacity Display may differ from the actual recordable time as this unit adopts Variable Bit Rate encoding, which varies the recording (storage) amount of data in conformity with the amount of information in the video signal. Before recording to the HDD, ensure there is sufficient space on the HDD by deleting unnecessary titles in advance.

## Notes on Copyright

---

### About Copyright

Unauthorised copying, broadcasting, public performance and lending of discs are prohibited. This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorised by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Rovi Corporation. Reverse engineering or disassembly is prohibited.

# Notes on Copyright

## Copyright protection system

To play back the digital video images of a DVD via an HDMI connection, it is necessary that both the player and the display device (or an AV amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system).

- HDCP is copy protection technology that comprises data encryption and authentication of the connected AV device.
- This unit supports HDCP.
- Please read the operating instructions of your display device (or AV amplifier) for more information.
- Because HDMI is an evolving technology, it is possible that some devices with an HDMI input may not operate properly with this unit.
- When using an HDCP-incompatible display device, the image will not be viewed properly.
- When the power failure occurs, or when you unplug the unit, some problems in the HDMI setting might occur.

Please check and set the HDMI setting again.

\* HDMI: High Definition Multimedia Interface

## Environmental Information

### Following information is only for EU-member states:



The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### Disposal of batteries and/or accumulators



Hg Cd Pb

The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.

If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.



Pb

By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the product.

In conformity with the EEE Regulation.

## End User Licence

---

This product includes software code developed by third parties, including software code subject to the GNU General Public License ('GPL') or GNU Lesser General Public License ('LGPL'). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL Code and LGPL used in this product, are available to you - please contact the manufacturer.

The GPL Code and LGPL Code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL Code and LGPL Code for this product and the terms of the GPL and LGPL.

## Trademark Acknowledgements

---

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.
- DVB is a registered trademark of the DVB Project. This logo indicates that the product is compliant with European Digital Broadcasting.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

# Table of Contents

## Introduction

Important Safety Information .....	2
General Information .....	4
Notes on Copyright .....	4
Environmental Information .....	5
End User Licence .....	6
Trademark Acknowledgements .....	6

## Getting Started

Package Contents .....	8
Overview of the Digital TV Recorder .....	9
Overview of the Remote Control .....	10
Inserting the Batteries into the Remote Control .....	12
Connecting your Digital TV Recorder .....	13
Switching your Digital TV Recorder On .....	14
Automatically Tuning .....	15


## Using your Digital TV Recorder

Everyday Use .....	16
Common Symbols .....	17
The Electronic Programme Guide (EPG) .....	18
The Channel List .....	19
The Info Display .....	20
Picture In Picture (PIP) .....	21
Recording Programmes .....	22
Timeshifting .....	25
The Timers Screen .....	26
Modifying Timers .....	27
The Library Screen .....	29
The Photo Viewer .....	31
The Main Menu .....	33
Main Menu Structure .....	33
Main Menu Options .....	34

## Additional Information

Programming the Remote Control .....	40
Manually Programming the Remote Control .....	41
Finding the Remote Control's Current Codes .....	41
Troubleshooting .....	42
Specifications .....	44
Remote Control Brand Codes .....	46

# Package Contents

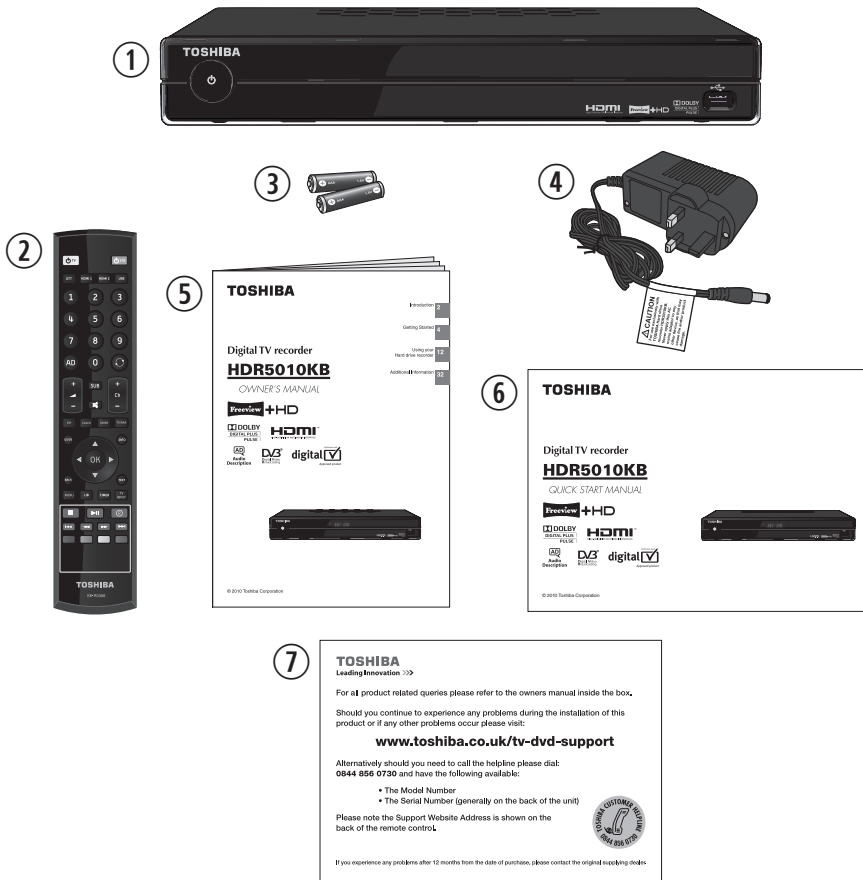


- ① Digital TV recorder
- ② Remote control
- ③ Batteries (2x AAA/R03)
- ④ AC mains adaptor\*
- ⑤ Owner's manual
- ⑥ Quick start guide
- ⑦ Help leaflet

\* For use exclusively with this Digital TV recorder. Never use this AC mains adaptor with any other device, as it may cause fire and/or product damage.




# Overview of the Digital TV Recorder

## Front Panel

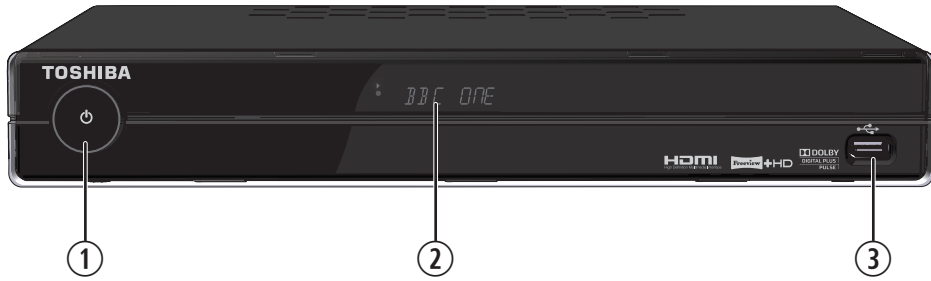


- ① Power switch/LED
- ② Front panel display
- ③ USB socket

## Rear Panel

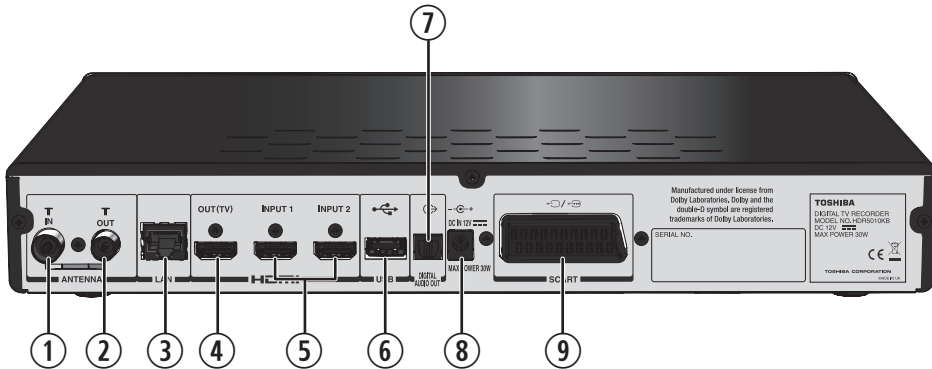

- ① Aerial input socket
- ② Aerial (loop through) output socket
- ③ Ethernet socket
- ④ HDMI output socket
- ⑤ HDMI input sockets 1/2
- ⑥ USB socket
- ⑦ SPDIF output (Standard TOS link connector)
- ⑧ Power socket
- ⑨ SCART output socket


# Overview of the Remote Control

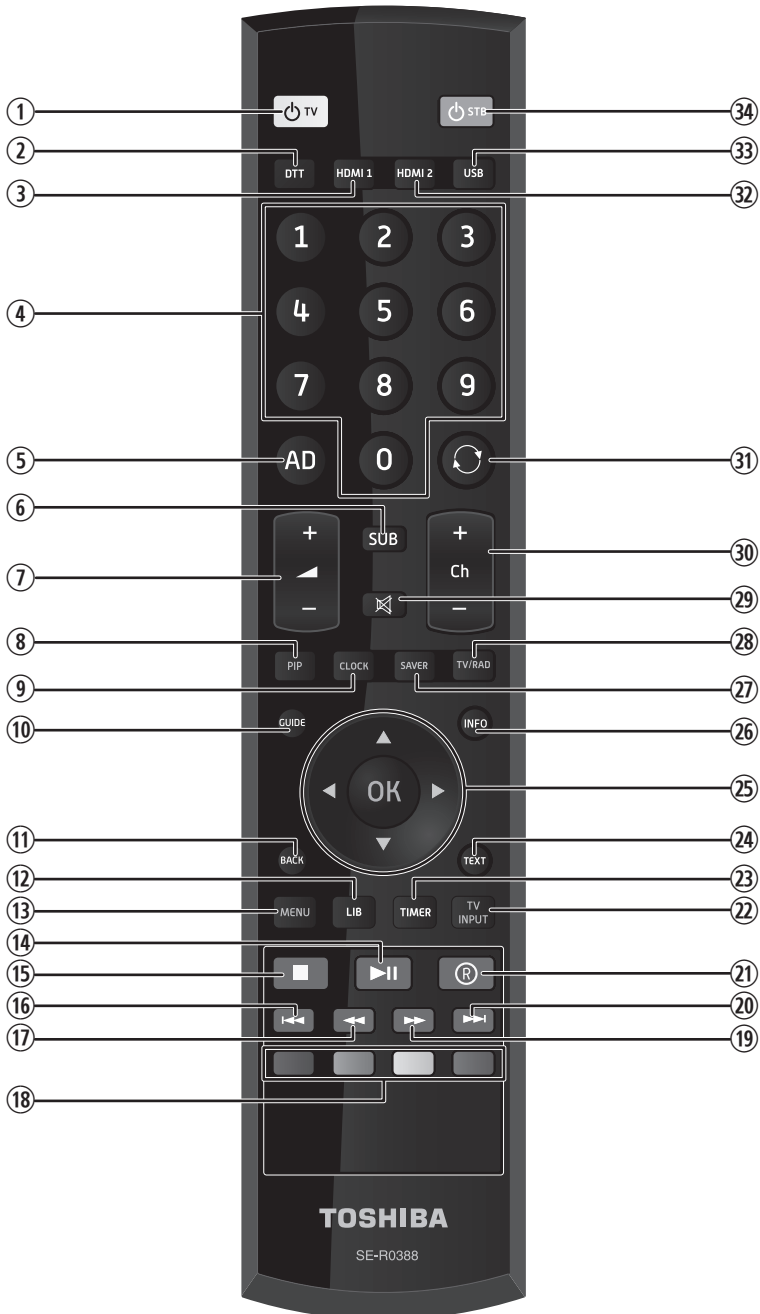

- ① **TV** - Switches the TV on/into Standby\*.
- ② **DTT** - Switches the viewing mode to DTT.
- ③ **HDMI 1** - Switches the viewing mode to HDMI 1.
- ④ **0-9** - Selects channels, enter PIN.
- ⑤ **AD** - Switches Audio Description on or off. Refer to page 16 for more information.
- ⑥ **SUB** - Displays subtitles (if available).
- ⑦ **▲ +/-** - Adjusts the TV's volume\*.
- ⑧ **PIP** - Enters Picture In Picture mode. Refer to page 21 for more information.
- ⑨ **CLOCK** - Displays the clock.
- ⑩ **GUIDE** - Switches the Electronic Programme Guide (EPG) on/off. Refer to page 18 for more information.
- ⑪ **BACK** - Returns to the previous level in the menu. Exits EPG, Info and menu (first level).
- ⑫ **LIB** - Displays the Library of recorded programmes. Refer to page 29 for more information.
- ⑬ **MENU** - Displays/exits the menu.
- ⑭ **▶||** - Pauses and resumes live TV. Refer to page 25 for more information.  
Plays and pauses recordings in the Library.
- ⑮ **■** - Stops playback when viewing recordings.
- ⑯ **⏮** - Skips back 30 seconds when viewing a recording or watching live TV. Press and hold to skip to the start when viewing a recording or skip to the start of the pause buffer when watching live TV.
- ⑰ **◀◀** - Rewinds live TV and recordings. Press repeatedly to increase the rewind speed.
- ⑱ **Coloured buttons** - Selects options in digital text/EPG/Channel List/menu.
- ⑲ **▶▶** - Fast forwards recordings. Press repeatedly to increase the fast forward speed. When pausing live TV or recordings, press to watch in slow motion.
- ⑳ **▶▶|** - Skips forward 30 seconds when viewing a recording. Press and hold to skip to the end when viewing a recording.
- ㉑ **Ⓜ** - Records live TV. Sets highlighted programmes to timer record in the EPG.
- ㉒ **TV INPUT** - Switches between the available TV input modes (eg DTT, HDMI or AV)\*.
- ㉓ **TIMER** - Displays the Timers screen. Refer to page 26 for more information.
- ㉔ **TEXT** - Displays digital text (if available).
- ㉕ **OK/▲/▼/◀/▶** - Displays the Channel List/confirms a selection (**OK** button). Navigate the EPG/menu/Channel List/Info menu (**▲/▼/◀/▶** buttons).
- ㉖ **INFO** - Displays programme and recording information. Refer to page 20 for more information.
- ㉗ **SAVER** - Displays the screen saver.
- ㉘ **TV/RAD** - Switches between Digital TV channels and Digital Radio channels.
- ㉙ **🔊** - Turns the TV's sound on/off\*.
- ㉚ **Ch. +/-** - Selects the next/previous channel.
- ㉛ **⌛** - Returns to the previous channel watched. Switches between 4 and 24 hours advance in EPG.
- ㉜ **HDMI 2** - Switches the viewing mode to HDMI 2.
- ㉝ **USB** - Switches the viewing mode to USB.
- ㉞ **TV STB** - Switches the Digital TV recorder on/into Standby.

\*The remote control must first be programmed to operate your equipment. Refer to page 40.

## Inserting the Batteries into the Remote Control

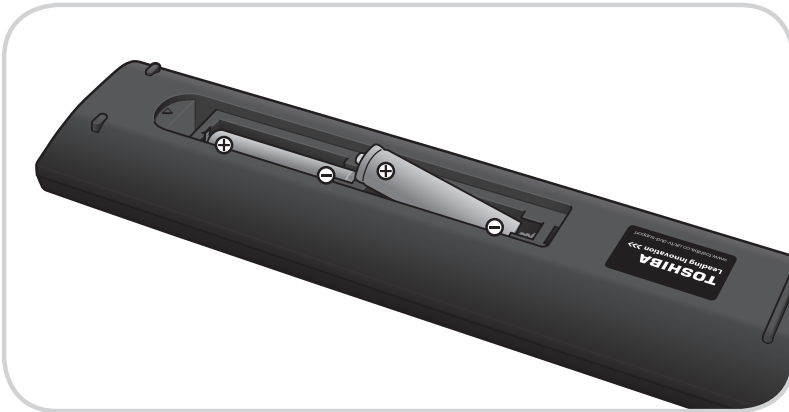


1. Lift open the battery compartment cover (as shown).
2. Install 2 “AAA/R03” batteries (included); the correct polarity is shown inside the battery compartment. Always check the positive/negative symbols on the batteries to ensure they are inserted correctly.
3. Replace the battery compartment cover and push down until it clicks shut.

**Note:**

- Always dispose of old batteries safely. Check with your local council for how you should get rid of batteries. Never put batteries on a fire or in the bin with normal household waste.
- A label with support information is located on the back of the remote control.

# Connecting your Digital TV Recorder

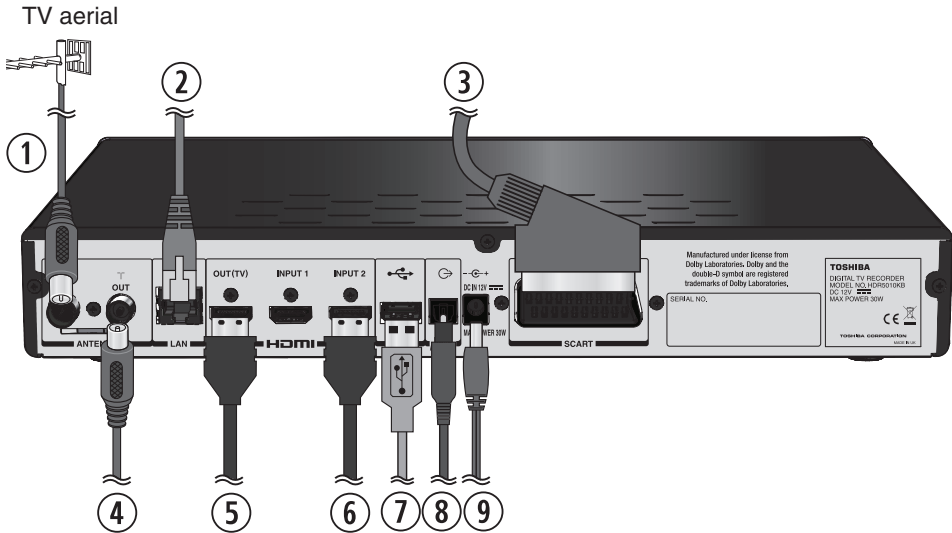


- 1 Plug your aerial lead into the **RF IN** socket of the recorder.
- 2 Plug an Ethernet cable between the **Ethernet** socket and a modem or router. Refer to page 37 for more details. *Cable not supplied.*
- 3 If required, plug a SCART cable between the **SCART OUTPUT** socket of the recorder and your TV, Video or DVD recorder. *Cable not supplied.*
- 4 Plug a RF cable between the **RF OUT** socket of the recorder and your TV, Video or DVD recorder. *Cable not supplied.*
- 5 Plug a HDMI cable between the **HDMI OUT** socket of the recorder and your TV. *Cable not supplied.*
- 6 If required, plug a HDMI cable between your DVD player, DVD recorder, Set-top box, Games console and the **HDMI IN 1/2** socket of the recorder. *Cable not supplied.*
- 7 Plug a USB Flash drive or a cable from a Digital still camera or Card reader in to the **Photo** socket. Refer to page 31 for more details.
- 8 If required, plug an Optical cable (TOS link) between the **SPDIF output** socket of the recorder and your Hi-Fi or Surround Sound System. *Cable not supplied.*
- 9 Plug the supplied AC mains adaptor between the power socket of the recorder and a standard wall socket. **Only switch on the wall socket when all cables have been attached.** (Do not cut off the supplied AC mains adaptor's plug.)

Refer to page 16 for more information on how to change the input mode to HDMI 1/2 and USB. A HDMI cable is recommended as it gives higher quality picture and sound and is required for High Definition viewing.

## Note:

- Socket names vary according to make and model of your equipment.
- Photo Viewer socket does not support all USB devices or cameras.

## Switching your Digital TV Recorder On

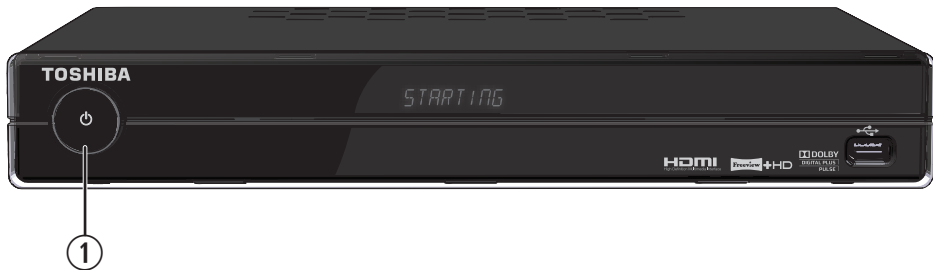

### To Turn On Power to the Unit:

1. Switch On power at the wall socket, if required.
2. Within a few seconds the front panel will display “Starting” and the Power ring LED will light.
3. After start up is complete, an image is displayed on your TV screen and the Power ring LED will change to **Blue**.

### To Turn Off Power to the Unit:

1. Press the [⏻] button on the remote control or the Standby button on the front of the unit ①. The Power Ring changes to **Red**.
2. Press the switch on the wall socket to completely turn Off the power to the unit.

### Standby Mode

When the **Red** Power LED is on the unit is in Standby mode. You can go In/Out of Standby mode by pressing the [⏻] button on the remote control or the Standby button on the front of the unit ①.

#### Note:


- It is recommended that the unit be left in Standby mode rather than switching Off completely, in order to allow important updates to be received via your aerial.
- Whenever the unit receives a signal from the remote control, the Power LED blinks Red.
- After turning On, it takes some time before the unit starts up. Please note that buttons on the remote control and the unit do not work during this period of time.
- Do not switch the power On/Off repeatedly within a short period of time. It could cause a malfunction.
- If a power cut occurs when using the unit, unplug the AC mains adaptor to avoid sudden surges of electricity when the power comes back on.

### Front Panel Display

This will give you information about the DTT/Radio channel that is currently being watched or listened to. It also displays symbols such ▶/||/●/◀◀/▶▶ when using the Digital TV recorder functions. When using the Photo Viewer function “Photo” is displayed.

## Automatically Tuning


1. Once the unit has powered up, the following menu is displayed. Press the [OK] button to continue.

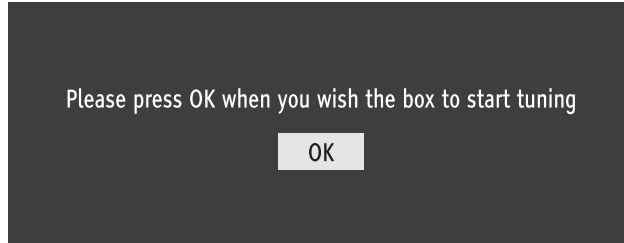


Getting Started

2. The Digital TV recorder will now scan and store all available channels. Depending on the quality of your reception, this may take several minutes. Please be patient and do not press any buttons.



 If no channels are found, a message is displayed asking you to check your aerial. Confirm that your aerial is connected correctly and press the [OK] button to restart automatically tuning.

3. Once the automatic tuning is complete, a summary screen is displayed.

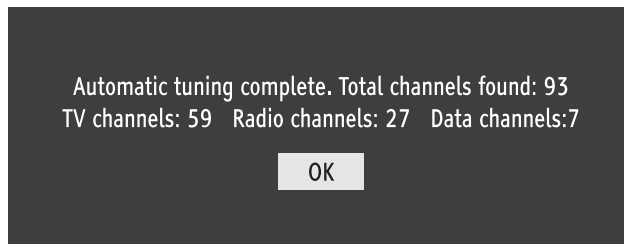

4. Press the [OK] button to exit the automatic tuning process.

**Congratulations ! The Digital TV recorder is now ready to use.**

## Everyday Use

---

### Changing channels

Type in the channel number using the [0]-[9] buttons. Alternatively, press the [Ch+] and [Ch-] buttons to select the next/previous channel.

### Channel hopping

Press the [C] button to return to the previous channel watched. Hop between the current and previous channel watched

### Adjusting the volume\*

Press the [▲ +] and [▲ -] buttons to increase/decrease the volume.

### Muting the sound\*

Press the [M] button to mute the sound. Press again to restore.

### Displaying Digital Text

Press the [TEXT] button to display digital text (if available). Press again to exit digital text.

### Displaying subtitles

Press the [SUB] button to display subtitles (if available). Press again to switch off the subtitles.

### Audio Description

Audio Description is a spoken explanation that describes all important information on a programme, such as body language, facial expressions, scenery, action, costumes or anything that helps to describe the plot of the story, event or image.

Press the [AD] button to switch on the Audio Description. Press again to switch off the Audio Description.

### Switching between TV and Radio channels

The Digital TV recorder stores all the Digital TV channels together and all the Digital Radio channels together. Press the [TV/RAD] button to quickly switch between Digital TV and Digital Radio channels.

When you are listening to a radio channel, the screen saver will automatically start if you do not press any button for a few minutes. Alternatively, press the [SAVER] button to display the screen saver right away. To remove the screen saver, press any button on the remote control.

### Switching between DTT, HDMI 1-2 or USB

While watching Digital TV programmes you can use the [DTT], [HDMI 1], [HDMI 2] or [USB] buttons to switch the viewing mode.

#### Note:


- HDMI pass through is only available when the unit is powered out of Standby mode and using HDMI output from this unit..

\*The remote control must first be programmed to operate your equipment. Refer to page 40.



## Everyday Use

### Using Standby

When you're not watching TV, you should set the Digital TV recorder to Standby. Press the  button to switch between On (**Blue** Power ring LED on the front panel) and Standby (**Red** power LED on the front panel). This unit has a low power feature which means that when left in Standby for a long period, it may take longer than normal to power up.






 
















It is safe to put the Digital TV recorder into Standby mode when you have set programmes to record. The Digital TV recorder will automatically wake up from Standby mode to make the recording. If you plan to leave the Digital TV recorder unattended for a long period and have not set any programmes to record, put the Digital TV recorder into Standby and wait for 20 seconds before switching it off at the mains.

### Automatic Standby

To help reduce the amount of electricity it uses, the Digital TV recorder will automatically switch to Standby mode at 3am every day, if there has been a period of inactivity. If you are still watching TV at this time, a screen will be displayed allowing you to stop the Digital TV recorder entering Standby mode. If no button is pressed while this screen is displayed, the Digital TV recorder will enter Standby mode after a few seconds. It is possible to deactivate this automatic Standby mode by setting the Auto Standby option in the General Settings menu to Off. Refer to page 35.


## Common Symbols

The following symbols may be visible in the Electronic Programme Guide, Channel List, Info display, Timers screen and Library menu.

	Locked channel.		Multiple audio languages available.
	Encrypted/scrambled channel.		Teletext available.
	Radio Channel.		Timer has been set.
	Channel selected for moving.	[S]	Subtitles available.
	Recording has been viewed.		Selected channel is hidden.
	Timer is set to "Series Record".		Playback of recording has been locked.
	Recording has been protected from deletion.		Play.
	Pause.		Record.
	Slow motion.		Fast Forward.
	Rewind.		Fast Forward (x16).
	Fast Rewind (x16).		Fast Forward (x128).
	Fast Rewind (x128).	<b>HD</b>	High Definition.
<b>AD</b>	Audio Description available.		

## The Electronic Programme Guide (EPG)

The EPG displays programme information for the next 8 days (when transmitted by broadcasters). You can also set programmes to be recorded from the EPG.

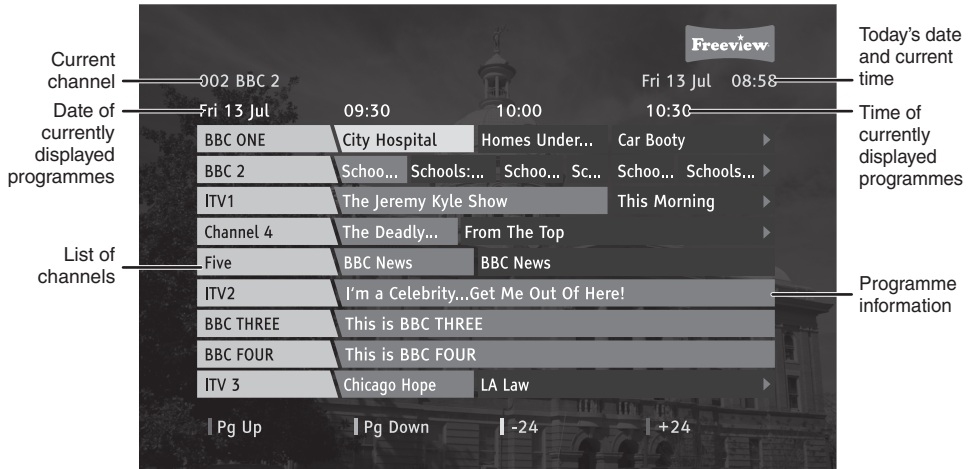


To	Press
Access the EPG...	[GUIDE] button.
Move around the EPG...	[▲/▼/◀/▶] buttons or [0]-[9] buttons to directly enter the channel number.
Display the previous nine channels in the list...	[RED] button.
Display the next nine channels in the list...	[GREEN] button.
Move forward 4 or 24 hours...	[BLUE] button. (Press  to switch between 4 and 24 hours)
Move back 4 or 24 hours...	[YELLOW] button. (Press  to switch between 4 and 24 hours)
View information for the highlighted programme...	[INFO] button. Press again to return to the EPG.
Set a highlighted programme to record...	[Ⓜ] button. Refer to page 23 for Recording options.
Preview a current programme (in the background)...	[OK] button.
Exit the EPG and switch to a previewed programme...	[OK] button.
Exit the EPG...	[GUIDE] or [BACK] button.

If you accidentally set a wrong programme to record, press the [Ⓜ] button again to cancel.

# The Channel List

The Channel List displays all the available channels.

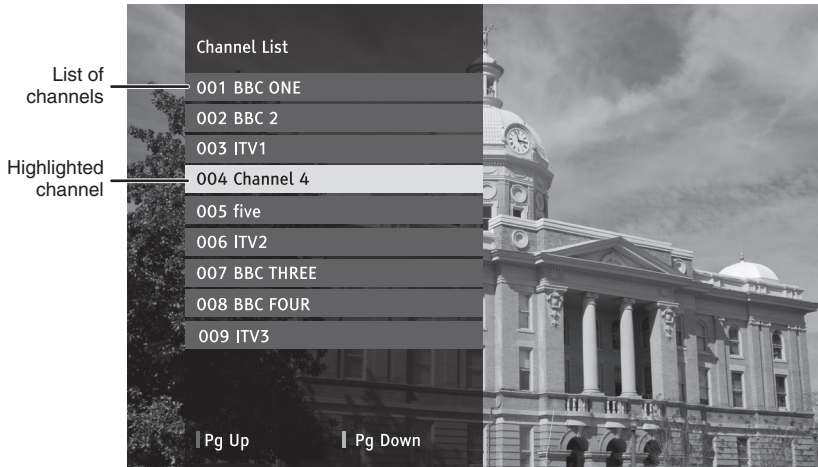


Using your Digital TV recorder

To	Press
Access the Channel List...	[OK] button while watching TV.
Select channels...	[▲/▼] buttons.
Display the previous nine channels in the list...	[RED] button.
Display the next nine channels in the list...	[GREEN] button.
Switch to the selected channel...	[OK] button.
Exit the Channel List...	[BACK] button.

## The Info Display


When watching TV, the Info display gives brief information on the current and future programmes (when the programme information is transmitted by broadcasters). You can also set programmes to be recorded from the Info display. When watching a recording, the Info display gives brief information on the recorded programme.

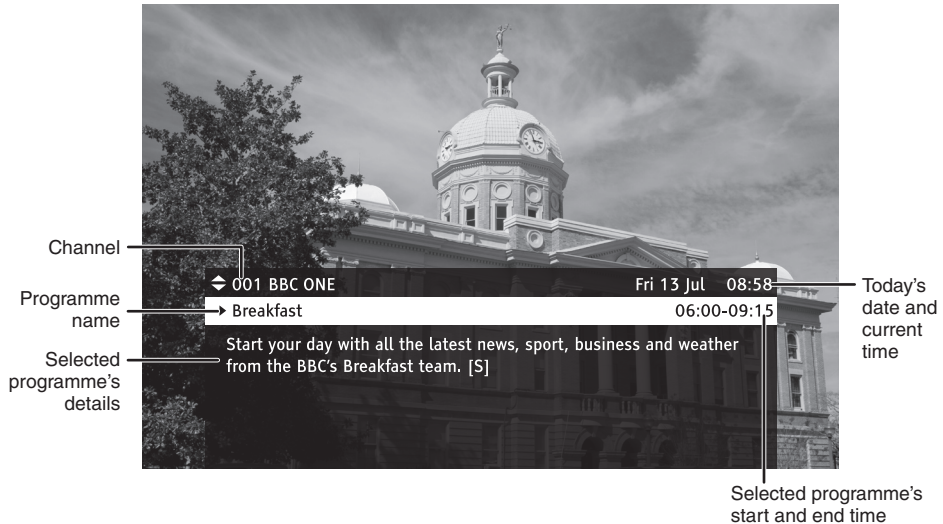

To	Press
Access Info for the current programme/ recording...	[INFO] button.
View information for future programmes on the current channel...	[RIGHT] button.
View information for programmes on other channels...	[▲/▼] buttons.
Change the Audio setting (if available)...	[RED] button.
Change the Subtitle setting (if available)...	[GREEN] button.
Switch to another channel (when viewing that channel's information)...	[OK] button.
Set a future programme to record...	[Ⓜ] button (whilst viewing that programme's information). Refer to page 22 for more information.
Exit Info...	[INFO] or [BACK] button.

## Picture In Picture (PIP)

Picture In Picture allows you to watch two channels at the same time. The sound from the main picture is always played.

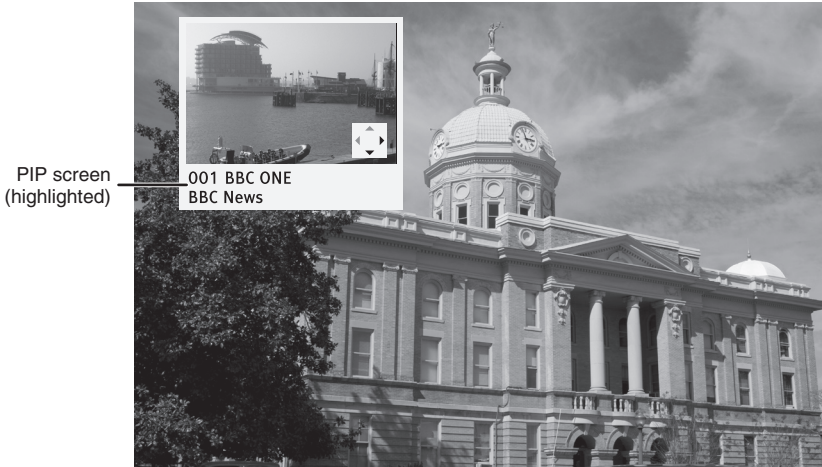

To	Press
Switch on Picture In Picture...	[PIP] button.
Move the PIP screen...	[▲/▼/◀/▶] buttons.
Select/highlight the PIP screen..	[PIP] button.
Change the channel displayed in the PIP screen....	[Ch+/-] buttons, when the PIP screen is selected.
Change the channel displayed in the main picture....	[0]-[9] buttons. The [Ch+/-] buttons can also be used when the PIP screen is not selected.
Swap the channels on the PIP screen and the main picture...	[C] button.
Exit Picture In Picture...	[PIP] button, when the PIP screen is selected/highlighted.

💡 Picture In Picture is not available when recording programmes.

## Recording Programmes

---

This Digital TV recorder has twin tuners, making it possible to record two programmes at the same time.

When recording two programmes at the same time you can also:

- watch either of the programmes you are recording.
- start to playback one of the recordings, even though it's still recording !
- playback a previously recorded programme - watch either of the programmes being recorded.

When recording two programmes at the same time you can **not**:

- timeshift/pause live TV.
- use Picture In Picture.
- watch a third TV channel.

---

### Recording TV Programmes

There are 4 different ways to record programmes:

#### 1. Instant recording

- While watching a programme, press [Ⓜ] to start recording.
- Press [■] to stop recording.

#### 2. Recording from the Electronic Programme Guide (EPG)

- With the required programme highlighted in the EPG, press the [Ⓜ] button to set the recording.

💡 For full details on the EPG, refer to page 18.

#### 3. Recording from the Info display

- With the required programme highlighted in the Info display, press the [Ⓜ] button to set the recording.

💡 For full details on the Info display, refer to page 20.

#### 4. Manually recording

You can manually set a recording from the Timers screen.

- With the Timers screen displayed, press the [YELLOW] button to manually set a recording.

💡 For full details on the Timers menu, refer to page 26.

# Recording Programmes

## Recording Options

Below is the bottom part of an on screen menu that may appear when you make a recording. The number of options available may vary.



If you do not wish to use any of these options press the **[OK]** button or simply wait until the menu disappears.

There are 3 options that you may see in this menu:

### 1. HD alternative

When setting a Standard Definition (SD) programme to record, the HD Alternative option will appear if there is a HD version of this programme available. Press the **[RED]** button and HD alternative will be recorded instead.

### 2. Recommendations (Try this)


This allows you to record a selected list of related programmes. If, for example, you set a recording for Panorama, the recommendations would contain similar programmes such as Horizon. Press the **[YELLOW]** button if you would like these programmes to be recorded.

To ensure that the series and recommendations are also for HD, choose the HD option before selecting Series or Recommendation options.

#### Note


- The broadcaster controls the content of the recommendations and these may be the same as the recordings for the Series.

### 3. Series record

This allows you to record an entire series at the push of a button (when supported by broadcasters). If the programme you are setting is part of a series, press the **[BLUE]** button to record the entire series. Programmes set to record as part of a series are identified in the “Timers” menu with a  symbol.

### Trailer booking

When there is a trailer for a TV programme (e.g. just before or after Eastenders) a symbol may be displayed on screen (when supported by broadcasters). To use this feature press the **[GREEN]** button and select the programme(s) you wish to record.

-  Go to the Timers screen to check the recorded program, and the timer can be modified (Refer to page 26/27 for more information).


## Recording Programmes

### Recording Conflicts

Your Digital TV recorder can record up to two programmes at the same time.

If you attempt to record three or more programmes that overlap, the unit will try to resolve the conflict automatically by recording the programme at a different time or on a different channel. If it can not, you will be asked to either select an alternative time to record the programme (Resolve conflict) or cancel the recording request you have just made (Cancel timer).

You will then be presented with a list of all the programmes that overlap.

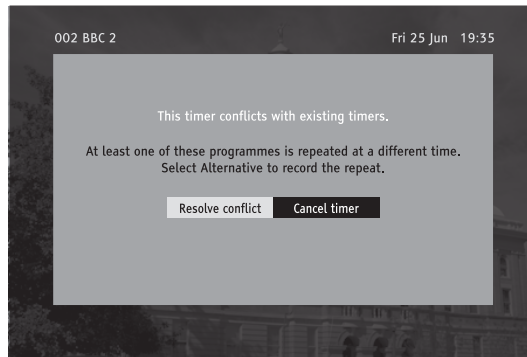

If one of the programmes is repeated later in the week then, when it is highlighted, the box will give you the option to press the **[GREEN]** button (Alternative) to record the repeated programme instead. If none of the programmes are repeated, simply delete one of the planned recordings by pressing the **[RED]** button (Delete).



#### Note:

- The Digital TV recorder will record programmes even if the programme is shown later than advertised e.g. due to a previous programme overrunning. Please note, this is not applicable for timers set manually.
- It is safe to put the Digital TV recorder into Standby mode when you have set programmes to record. The Digital TV recorder will automatically wake up from Standby mode to make the recording.
- The Digital TV recorder will also automatically add 3 minutes to the end of each recording to make sure the entire programme is recorded. However, if any subsequent recording starts during those 3 minutes, then the first recording will be stopped to allow the new recording to commence.



# Timeshifting


Timeshifting, also known as Pause live TV, lets you pause a broadcast programme and continue watching it later. The maximum length of time you can pause is 4 hours.



Timeshift banner

## Pausing Live TV

- Press **||** to pause live TV. Press **▶** to resume.

 When live TV is paused, the timeshifting banner is displayed indicating how long the programme has been paused.

The length of time you can pause a programme can be adjusted in the menu. See 'Pause Buffer Size' on page 35.

## Rewinding Live and Timeshifted TV

- Press **<<** to rewind live TV. Press **▶** to resume.

 You can press **<<** a further 3 times to rewind faster.

## Fast Forwarding Timeshifted TV

- Press **>>** to fast forward timeshifted TV. Press **▶** to resume.

 You can press **>>** a further 3 times to fast forward faster.

## Watching in Slow Motion


- Press **||** to pause live TV or a recording.
- Press **>>** to watch in slow motion. Press **▶** to return to normal.

## Stopping Timeshifting

- Press **■**.

## The Timers Screen

The Timers screen displays all the programmes that are currently set to record. You can also set a manual timer and modify or cancel an existing timer from the Timers screen.

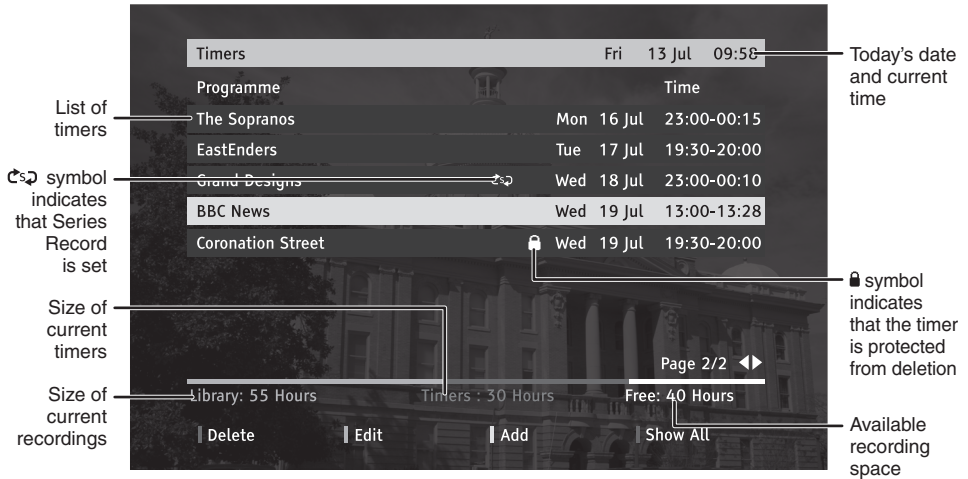

To	Press
Access the Timers menu...	[TIMER] button.
Select a timer event...	[▲/▼] buttons.
View additional pages of timer events (if available)...	[◀/▶] buttons.
Delete the selected timer event...	[RED] button. If the timer selected is for a series you will be asked whether to delete all timers in the series or just this instance.
Modify the selected timer event...	[GREEN] button (see following page for more details).
Manually set a timer...	[YELLOW] button (see following page for more details).
Show all timers currently set (including all 'Series Record' programmes) ...	[BLUE] button. Press again to display a summary of all timers currently set.
Exit the Timers menu...	[TIMER] or [BACK] button.

### Note:

- The number of hours displayed as **Free** and for the **Library** and **Timers** are approximate only. These are based on recording Standard Definition TV programmes. If recording High Definition TV programmes then the number of hours will change.

# Modifying Timers

## Modifying a Timer

You can edit a current timer to change the **Type**, **Channel**, **Start** and **End time/date**.

1. With the required timer highlighted, press the **[GREEN]** button. If the timer is protected, use the **[0]-[9]** buttons to enter the PIN.



2. Press **[▲]** or **[▼]** to highlight the required setting. Use the **[▲/▼/◀/▶]** and **[0]-[9]** buttons to make changes.
3. Press the **[GREEN]** button to save the changes.

The following settings are available:

### Type:


'Series'	This is displayed if you have set a series record (see page 23 for details). Only the <b>Change/Delete</b> or <b>Playback</b> settings can be changed.
'Programme'	This is displayed if you set a programme to record that is not part of a series. Only the <b>Type</b> , <b>Change/Delete</b> & <b>Playback</b> settings can be changed.  If the timer <b>Type</b> is changed to manual, then <b>Programme</b> will be changed to <b>Channel</b> . The TV channel you originally set to record (eg. 1 BBC ONE) will be displayed. All of the settings can then be changed.
'Manual'	This is displayed if you manually set a timer (see next page). The <b>Channel</b> , <b>Start time</b> , <b>End time</b> , <b>Change/Delete</b> & <b>Playback</b> can all be changed.

## Modifying Timers

---

### Change/Delete:


---

'Allowed'	The timer can be changed or deleted.
'Disallowed'	The PIN must be entered correctly before the timer can be changed/ deleted.  A  symbol will be added to recordings that have been protected from change or deletion.

---

### Playback:

---

'Allowed'	The recording can be viewed (even if it was recorded from a locked channel).
'Disallowed'	The recording can not be viewed. The PIN must be entered correctly before the recording can be viewed.  A  symbol will be added to recordings that have been protected from playback.
'Use parental settings'	If the recording is made from a locked channel, the PIN must be entered correctly before the recording can be viewed (see Parental Control on page 38).

---

## Manually Setting a Timer

1. With the 'Timers' menu displayed, press the **[YELLOW]** button.
2. Press **[▲]** or **[▼]** to highlight the required setting. Use the **[▲/▼/◀/▶]** and **[0]-[9]** buttons to make changes. All settings apart from **Type** can be changed.
3. Press the **[GREEN]** button to save the changes.

# The Library Screen

The Library menu displays all the recordings currently stored on the hard disk. You can also browse and manage your recordings from the Library menu. The Library menu will take longer to load if you have lots of recordings stored on the hard disk.

The screenshot shows the Library menu with the following callouts:

- List of recordings:** Points to the list of recording titles.
- ✓ symbol indicates that the recording has been watched:** Points to the checkmark next to 'BBC News'.
- Size of current timers (approx):** Points to the 'Timers : 30 Hours' bar.
- Size of current recordings (approx):** Points to the 'Library: 55 Hours' bar.
- Available recording space (approx):** Points to the 'Free: 40 Hours' bar.
- 🔒 symbol indicates that the recording is protected from playback:** Points to the lock icon next to 'BBC News'.
- Length of recording in minutes (approx):** Points to the '33' value for 'BBC News'.
- 🔒 symbol indicates that the recording is protected from deletion:** Points to the lock icon next to 'Deal Or No Deal'.

Programme	Date	Time	Length (Mins)	Protection	Watched
Programme - Oldest	Fri	13 Jul	09:58		
EastEnders	Thu	5 Jul	33		
✓ BBC News	Mon	9 Jul	35	🔒	✓
The Sopranos	Mon	9 Jul	80		
✓ Emmerdale	Tue	10 Jul	33	🔒	✓
The Simpsons	Wed	11 Jul	33	🔒	
✓ Coronation Street	Wed	11 Jul	33		✓
✓ Grand Designs	Wed	11 Jul	62		✓
✓ Deal Or No Deal	Thu	12 Jul	47	🔒	✓

Page 3/4

Library: 55 Hours    Timers : 30 Hours    Free: 40 Hours

Buttons: Delete, Edit, Playlist, Sort

Using your Digital TV recorder

To	Press
Access the Library menu...	[LIB] button.
Select a recording...	[▲/▼] buttons.
View additional pages of recordings (if available)...	[◀/▶] buttons.
Play the selected recording from the last played position...	[▶] button.
Play the selected recording from a specific position...	[OK] button (see following page for more details).
Delete the selected recording...	[RED] button.
Edit the selected recording (to set protection and playback options)...	[GREEN] button (see following page for more details).
Add the selected recording to the playlist...	[YELLOW] button (see following page for more details).
Sort the recordings...	[BLUE] button. Press the corresponding colour button to select the required sort option.
Exit the Library menu...	[LIB] or [BACK] button.

## The Library Screen

### Playing a Recording from a Specific Position

You can play a recording from the start, the end, the last played position or from any point within the recording.

1. With the required recording highlighted, press the **[OK]** button.
2. Press **[▲/▼/◀/▶]** to highlight the required option. (For 'Start playback from', use the **[0]-[9]** buttons to enter the required time.) Press the **[OK]** button to play the recording.

A ✓ symbol will be added to recordings that have been played.

### Setting Protection and Playback Options

You can prevent a recording from being deleted or played unless the PIN is entered correctly. This can be used to stop accidental deletion or prevent children watching inappropriate recordings.

3. With the required recording highlighted, press the **[GREEN]** button.
4. Press **[▲]** or **[▼]** to highlight the required setting. Use the **[◀]** and **[▶]** buttons to make changes. Press the **[GREEN]** button to save any changes.

A 🔒 symbol will be added to recordings that have been protected from deletion.

A 🚫 symbol will be added to recordings that have been protected from playback.

### Using the Playlist

You can set multiple recordings to be played one after another. This can be useful when saving multiple recordings to a Video tape/DVD or just to watch several recordings in one go.

5. With the required recording highlighted, press the **[YELLOW]** button. A '🕒' is added by the recording's name. Repeat to add further recordings to the playlist.

🕒 To remove a recording from the playlist, highlight the recording and press the **[YELLOW]** button.

6. With one of the recordings in the playlist highlighted, press the **[OK]** button. Press **[▲]** or **[▼]** to highlight 'Start playlist'. Press the **[OK]** button to play the playlist. If you are saving recordings to a Video tape/DVD, don't forget to start recording on your Video or DVD recorder.

🕒 While the playlist is playing, press and hold **▶▶** to skip to the next programme in the playlist. Press and hold **◀◀** to return to the start of the current programme.

# The Photo Viewer

The Photo viewer function, allows you to view photos from devices, such as, Digital still cameras (DSC), USB Card readers and USB Flash drives.



## Operating the Photo Input

1. Prepare the Photo input equipment as follows:

### Digital Still Camera:

Set up according to the instructions for “connecting to PC” in the camera’s User’s manual.

### USB Card Reader:

Insert only one memory card.

### USB Flash Drive:


No preparation required.

2. Connect the USB cable or USB Flash drive to the USB socket ①. Alternatively you can use the USB socket on the back panel.
3. Select the USB viewing mode (see page 16). If connecting a camera, turn it On, as instructed in the camera’s User’s manual.
4. Refer to the following page for operation of the viewer / slide show.
5. To prevent possible loss of data, switch to a different input mode and switch off the USB device before removing it.


### Note:


- Do not connect any apparatus other than a DSC, USB Card reader or USB Flash drive to the Photo input socket. It may cause a malfunction.
- Do not connect a DSC, USB Card reader or USB Flash drive using a USB Hub. Pictures may not be displayed correctly, or it may cause a malfunction.
- Certain types of USB device may not work with this Photo Viewer function.

## The Photo Viewer

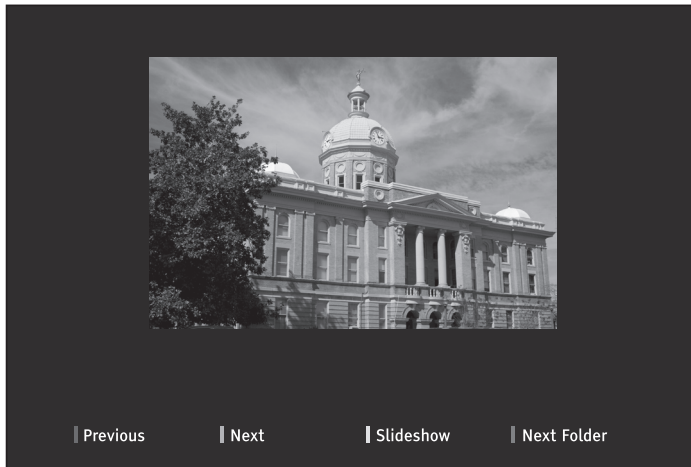

To	Press
Switch on Photo Viewer...	[ <b>USB</b> ] button.
Move to next picture...	[ <b>GREEN</b> ] button.
Move to previous picture..	[ <b>RED</b> ] button.
Change to slide show mode...	[ <b>YELLOW</b> ] button.
Change to next folder on the USB device...	[ <b>BLUE</b> ] button.
Exit Photo Viewer...	[ <b>DTT</b> ], [ <b>HDMI 1</b> ] or [ <b>HDMI 2</b> ] button.

 Whilst operating the Photo Viewer function the control banner may disappear from the bottom of the screen. Press any other button on the remote control for it to reappear.

 **CAUTION!** Whilst displaying images, a blinking LED may be seen on the DSC / USB Flash Drive. This indicates that it is being accessed. Do not turn the power Off or put the unit into Standby mode and do not remove or insert the USB cable or memory card.

Do not use this function other than for private purposes. It might infringe copyright laws.


Back up all data in the memory card to avoid accidental data loss. We do not assume any liability for losses caused by misuse or malfunction.

### Note:

- Not all file types or resolutions are supported
- Pictures that have been copied, viewed or edited by computers, and other devices, may not be displayed in this function.
- DSC with low battery power may not properly display photos in this function.
- The response time may vary when switching pages or loading files, according to the contents of each image.
- An Error Message will be displayed if there are no compatible images on the memory device.
- Functions, such as Picture In Picture and Channel selection are not available during photo viewing.




# The Main Menu

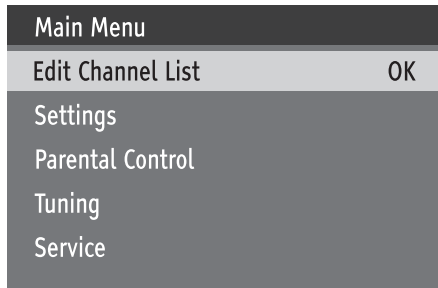

To	Press
Access the Main Menu...	[MENU] button.
Highlight an option...	[▲/▼] buttons.
Select an option...	[OK] button.
Adjust an option's settings...	[◀▶] buttons.
Go back a step...	[BACK] button.
Exit the Main Menu...	[MENU] button.

## Main Menu Structure

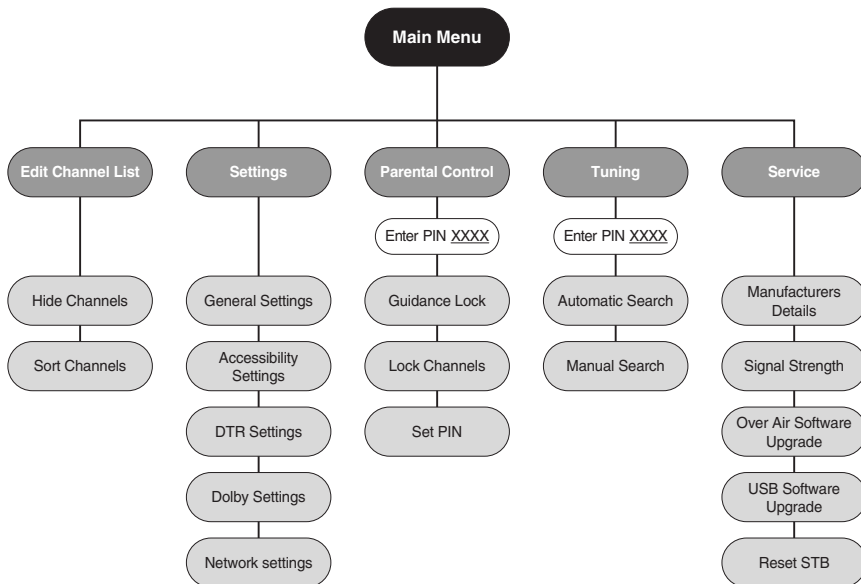

## Main Menu Options

---

### Edit Channel List Menu

- **Hide Channels**

Allows you to hide unwanted channels. Press the **[OK]** button to select a channel to hide.

- **Sort Channels**

Allows you to rearrange the channel order. Press the **[OK]** button to select the channel you wish to move. Press **[▲]** or **[▼]** to select the new position, then press the **[OK]** button.

---

### Settings Menu

- **General Settings**

#### Audio

Allows you to set your preferred audio setting (if available).

#### HDMI Output


Allows you to change the HDMI output resolution. Default setting is Auto. This selects the best possible resolution supported by your TV. If preferred the resolution can be changed. Refer to page 45 for more information.

#### TV Out

Allows you to switch the SCART output between RGB and CVBS. The default setting is RGB which gives you the best picture quality. If your TV is not compatible with RGB or you are having problems with the picture, switch to CVBS.


#### Picture Mode

Allows you to switch between widescreen, 4:3 normal and 4:3 letterbox picture.

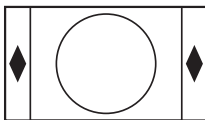


#### Widescreen

 This is the default setting and is best if you have a widescreen TV.



#### 4:3 normal

 Choose this option if you do not want to have a black bar at the top and bottom of the screen. Programmes broadcast in widescreen will fill the whole screen but you will lose the left and right edges of the picture.



#### 4:3 letterbox

We recommend you choose this option if you have an older 4:3-format TV. Any programmes broadcast in widescreen will fit onto the screen, but will have a black bar at the top and bottom.

# Main Menu Options

## Display

Allows you to change how the front panel display functions.

The following options are available:

### 1. Normal <default>.

The front panel display will show information about the DTT/Radio channel currently being watched or listened to. It also displays symbols such as ►/||/●/◀◀/▶▶ when using the Digital TV recorder functions. The clock will be displayed when in Standby.

### 2. Clock.

The front panel display will show the time when the Digital TV recorder is on and nothing when in Standby.

### 3. Off.

The front panel display will be off all the time.

## Auto Standby

Allows you to select whether the Digital TV recorder automatically switches to Standby mode at 3am, every day. Default setting is On.

## Update Channels

Allows you to update the Channel List automatically or manually. Default setting is Off.

## • Accessibility

### Subtitle

Allows you to set your preferred subtitles setting (if available). Choose between Normal or Hard of Hearing. Hard of hearing adds more description of the sounds to the text (when available).

### Audio Description

Allows you to set your preferred language for Audio Description (if available).

### Audio Description Level

Allows you to set the volume of Audio Description relative to the main sound volume (when AD is available).

## • DTR Settings

### Pause Buffer Size

Allows you to set the length of time the Digital TV recorder will pause a programme. This setting also determines how far back you can rewind live TV. Choose between 2, 4 hours or disable the setting so that Pause live TV will not operate.


## Main Menu Options

### Auto Delete

You can set the Digital TV recorder to automatically delete recorded programmes based on their size or if they have been watched. Programmes will only be deleted when there is not enough hard disk space available for new recordings. Default setting is Never.

### Format Disk

Allows you to delete all recorded programmes.

 **CAUTION !** Formatting the hard disk will delete all the recorded programmes stored on the hard disk. This may take around 10 minutes.

## • Dolby Settings

### Downmix

Allows you to select the output audio type. Select the setting that best suites your equipment.

The following options are available:

#### 1. Automatic <default>.

This is the best option to select if connecting to an audio device using a HDMI cable.

- Your audio device will be interrogated over the HDMI cable to find the best quality sound supported by your TV/Amplifier. If Dolby Digital 5.1 is supported, then this will be sent over HDMI, otherwise 2-channel PCM Stereo (with Dolby Surround) will be sent.
- The optical output (SPDIF) will carry 2-channel PCM Stereo (with Dolby Surround).
- The SCART will carry Stereo (with Dolby Surround).

#### 2. Dolby Digital.

Select this option if connecting to a Dolby Digital compatible TV/Amplifier, using a digital optical lead (SPDIF).

- The optical output (SPDIF) will send Dolby Digital 5.1 (if supported).
- The HDMI will carry Dolby Digital 5.1 if supported, otherwise it will carry 2-channel PCM Stereo (with Dolby Surround).
- The SCART will carry Stereo (with Dolby Surround).

# Main Menu Options

### 3. Dolby Surround.

Select this option if connecting to a TV/Amplifier that supports Dolby Surround Pro Logic, Dolby Pro Logic II, Dolby Pro Logic IIx or Dolby Pro Logic IIz decode.

- All outputs will carry Stereo (with Dolby Surround).

### 4. Stereo.

Select this mode if connecting to a Stereo audio device.

- All outputs will carry Stereo (without Dolby Surround).

### Audio Delay

Allows you to delay the audio timing so that it synchronises with the TV picture. This allows for delays that may be introduced by some TVs.

### Dynamic Range Control

The following options are available:

#### 1. Off mode <default>.

The sound output is as is intended by the programme being watched.

#### 2. TV mode.

Default values of **Cut** and **Boost** are selected to both reduce high volume and increase low volume sound, relative to the main sound volume through your TV.

#### 3. On mode.

Allows Cut and Boost values to be changed.

**Cut:** Allows you to reduce high volume sounds such as explosions, relative to the main sound volume. The maximum reduction is 100.

**Boost:** Allows you to increase low volume sounds such as speech or background sounds, relative to the main sound volume. The maximum increase is 100.

#### Note:

- These settings are only effective if supported by the broadcaster.

## • Network Settings

The following options are available:

#### 1. Auto <default>.

This is the default option. All settings (IP address, DNS server, MAC address etc) are automatically selected (DHCP). The settings cannot be changed.

## Main Menu Options

---

### 2. Manual.

Allows you to manually change your IP settings (for advanced users only). Use the [▲/▼/◀/▶] buttons to navigate through the table and enter your own numbers using the [0] - [9] buttons.

**Note:**

- If you choose invalid IP settings the Digital TV recorder may not operate correctly.

---

## Parental Control Menu

- **Guidance Lock**

Allows you to automatically lock playback of recorded programmes that are parentally advised.

- **Lock Channels**

Allows you to select the channels you would like to lock. Locked channels can only be viewed once the correct PIN is entered. The default PIN is 0000.

- **Set PIN**

Allows you to set your PIN.

---

## Tuning Menu

Allows you to automatically or manually tune channels. You will be asked to enter your PIN. The default PIN is 0000.

---

## Service Menu

- **Manufacturer's Details**

Allows you to check the software and hardware versions and serial number of your Digital TV recorder.

- **Signal Strength**

Allows you to check the DTT signal strength, quality and transmitter name.

- **Over Air Software Upgrade**

Allows you to search for software updates through your aerial (when available).

- **USB Software Upgrade**

Allows you to upgrade your Digital TV recorder using a USB Flash drive connected to the USB socket.

## Main Menu Options

To upgrade, follow these instructions;

1. Download the upgrade file from the [www.toshiba.co.uk/tv-support](http://www.toshiba.co.uk/tv-support) website.
2. Transfer the file to the root directory of your USB Flash drive.
3. Plug your USB Flash drive into the USB socket.
4. Select **USB Software Upgrade** from the **Service menu**.
5. When prompted, select **Yes** to upgrade the unit.
6. After a few minutes the unit will reset. When it starts again, use as normal.  
(You can check the new version in manufacturer's details)

### • Reset Set Top Box

Allows you to reset the Digital TV recorder to its default state.


- ⚠ CAUTION ! Resetting the Digital TV recorder will clear all settings and all channel information. After resetting, the Digital TV recorder will need to retune all channels. Only recorded programmes stored on the hard disk will be kept.


 

 

## Programming the Remote Control


The Digital TV recorder's remote control can be programmed to operate certain TVs. Follow the procedure below to programme the remote control.



1. Find the 3 digit code for your brand of TV from the brand codes, starting on page 46.

 If your brand is not included in the list or the codes for your brand do not operate your equipment, refer to the following page for an automatic method of programming the remote control.

2. Press and hold the  button and the **[AD]** button for 3 seconds, then the  button flashes twice and lights ON.
3. Use the **[0]-[9]** buttons to enter the 3 digit code for your brand. The  button flashes when each digit of the code is entered.
4. If a valid code has been entered, the  button will flash twice, slowly and then goes off.
5. Check that the remote control operates your equipment by pressing the  button. If not, repeat the above procedure and try another code for your brand.

 The codes you enter may be lost if weak batteries are not replaced immediately. Even if your TV brand is listed in the code table, in some instances it may not be possible to operate all of the available functions.




## Manually Programming the Remote Control

If your TV brand is not included in the code list, or the brand codes in the list do not operate your equipment, it may still be possible to programme the remote control to operate your equipment.

1. Press and hold the [○] button and the [AD] button for 3 seconds, then the [⏻TV] button flashes twice and lights ON.
2. Aim the remote at the target TV, press the [Ch+] or [Ch-] button to enter Manual Search Mode, the [⏻TV] button starts to flash. Press the [Ch+] button to search forward or [Ch-] to search backward through the brand codes. Continuously press the [Ch+] or [Ch-] button until the target TV set is switched off, then press the [OK] button to save the codeset and the [⏻TV] button goes off.
3. Check the other buttons, [◀ +/–], [⊗], [TV Input] work or not. If they don't, go back to steps (2) and (3).

## Finding the Remote Control's Current Codes

If you have used the procedure above to programme the remote control to operate your TV, it may be useful to know the correct code for your equipment.

 Knowing the codes that operate your equipment will allow you to re-programme the remote control quickly using the procedure on the previous page, should the need arise. Make a note of your code and keep it in a safe place.

1. Press and Hold the [○] button and [GUIDE] button at the same time for 3 seconds, then the [⏻TV] button flashes twice and switches OFF.
2. Press the [1] button and count the number of times the [⏻TV] button flashes. The number of flashes is the first number of the code. No flashes indicates a zero.
3. Press the [2] button and count the number of times the [⏻TV] button flashes. The number of flashes is the second number of the code. No flashes indicates a zero.
4. Press the [3] button and count the number of times the [⏻TV] button flashes. The number of flashes is the third number of the code. No flashes indicates a zero.

## Troubleshooting

Should you experience a problem with your Digital TV recorder which can't be resolved using the table below, put the unit into Standby mode, then unplug completely from the mains. Leave the unit unplugged for at least one minute before connecting again to the mains.

### Picture

Problem	Possible cause/remedy
No picture/distorted picture	<ul style="list-style-type: none"> <li>• Check the Digital TV recorder is switched On.</li> <li>• Check the aerial is correctly connected to the unit.</li> <li>• Check all connections between the unit and TV.</li> <li>• Check the TV is displaying the correct AV input (refer to the instruction manual supplied with your TV for details).</li> <li>• Check the signal strength (refer to Service menu on page 38).</li> <li>• Power your TV Off and then On at the mains.</li> </ul>
Banner is displayed saying "Your box is too Hot. Please check that it is properly ventilated"	<ul style="list-style-type: none"> <li>• Unit ventilation is blocked or unit is not positioned correctly. Reposition unit such that all ventilation holes top/bottom are open and there is nothing blocking them. Also consider moving the unit to a more suitable position (i.e not on top/under other equipment).</li> </ul>

### Sound

Problem	Possible cause/remedy
No sound	<ul style="list-style-type: none"> <li>• TV is muted.</li> <li>• Check the aerial is correctly connected to the unit.</li> <li>• Check all connections between the unit and TV/Hi-Fi or Surround Sound System.</li> <li>• Check the signal strength for the channel you are watching. If the signal is weak then you may have picture but no sound (refer to Service menu on page 38).</li> <li>• Power your TV Off and then On at the mains.</li> </ul>

### Power

Problem	Possible cause/remedy
No power	Check the AC mains adaptor is correctly connected and the unit is switched on.
Digital TV recorder takes a long time to switch on	The hard disk is nearly full. Delete some recordings.

# Troubleshooting

## Remote Control

Problem	Possible cause/remedy
Remote control does not work	<ul style="list-style-type: none"><li>• If the remote control does not operate your TV, re-programme the remote control (refer to page 40).</li><li>• Replace the batteries.</li></ul>

## Recording

Problem	Possible cause/remedy
Digital TV recorder does not record	<ul style="list-style-type: none"><li>• Use the Library menu to check if there is any free space on the hard disk. If there is little or no space, delete some recordings.</li><li>• Put the Digital TV recorder into Standby mode, then unplug completely from the mains. Leave the unit unplugged for at least one minute before connecting again to the mains.</li><li>• Use the Reset Set Top Box option in the Service menu (refer to page 39). Please note this resets the box - your recordings will be preserved, but you will lose all other settings and timers. You will also need to retune the box after carrying out this option.</li><li>• Reformat the hard disk (refer to page 36). Please note that this should only be done as a last resort as formatting the hard disk will permanently delete all recordings.</li></ul>

Additional Information

**Toshiba Helpline:**  
**Toshiba Website:**

0844 856 0730 (calls charged at national rate)  
[www.toshiba.co.uk/tv-dvd-support](http://www.toshiba.co.uk/tv-dvd-support)

# Specifications

## Physical Specification

Size	(W) 360mm x (H) 60mm x (D) 270mm
Weight	1.9 kg

## Power Requirements

Input voltage	12V DC 2.5A (with supplied AC mains adaptor)
DC jack connector	6mm (2.1mm Pin) DC Jack
Power consumption (On)	< 30W Max
Power consumption (STBY)	< 1W
Operating temperature	+5°C to +40°C
Storage temperature	-20°C to +60°C

## Twin Tuners

RF input / output connectors	1x IEC 75R (female) / 1x IEC 75R (male)
Channel coverage	UHF 474~850MHz (B21~B68)

## Demodulator

Modulation	Standard Definition OFDM/QPSK, 16QAM, 64QAM FFT: 2k, 8K Code Rate: 1/2, 2/3, 3/4, 5/6, 7/8 Guard Interval: 1/32, 1/16, 1/8, 1/4
	High Definition OFDM/QPSK, 16QAM, 64QAM, 256QAM FFT: 1K, 2K, 4K, 8K, 8Kext, 16K, 16Kext, 32K, 32Kext Code Rate: 1/2, 3/5, 2/3, 3/4, 4/5, 5/8 Guard Interval: 1/4, 1/8, 1/16, 1/32, 1/128, 19/128, 19/256

## Video Decoder

Video decoding	Standard Definition – MPEG2 Main level / Main profile High Definition – MPEG-4 AVC
Video formats	16:9 / 4:3 Letterbox / 4:3

## Audio Decoder

Audio decoding	Standard Definition – MPEG-2 layer 1 and 2 High Definition – Dolby E-AC3 / MPEG-4 HE-AAC
Audio mode	Mono / Stereo / Dual

## AV Connectors

HDMI input ports	2 x HDMI type A (19-pin) - selectable
HDMI output port	1 x HDMI type A (19-pin)

# Specifications

Video output	21-pin SCART connector - Composite video (1.0 V pk to pk 75 ohm) RGB (0.7V pk to pk 75 ohm)
Audio output	21-pin SCART connector - Left & Right audio (2V rms 10K ohm)
Audio line out	Digital optical (SPDIF) – TOS link connector

## Data Connectors

Front of unit	
USB port	USB-A female connector / 500mA
Rear of unit	
USB port	USB-A female connector / 500mA
Ethernet port	RJ45 connector Ethernet (10 Base-T / 100 Base-Tx) / HP Auto MDI/MDI-X

## Media Storage Device

SATA HDD (Hard Disk Drive)	500GB, 3.5" platter
----------------------------	---------------------

## Photo Viewer

Supported formats	JPG, .BMP, .PNG
-------------------	-----------------

## Supplied Accessories

Remote control	Quick start guide
Batteries (2x AAA/R03)	Help leaflet
Owner's manual	AC mains adaptor

Design and specifications are subject to change without notice. All information correct at time of going to press.

## HDMI v1.3a Inputs – Supported Resolutions (pass-through)

No.	Signal name
1	480i/480p
2	576i/576p
3	720p
4	1080i
5	1080p
8	HDCP (pass-through)
9	CEC (pass-through)

## HDMI Output (not from HDMI pass-through)

No.	Signal name
1	1080p
2	1080i
3	720p
4	576p
5	576i

## Remote Control Brand Codes

Use the brand codes in the following list when programming the remote control to operate your TV (refer to page 40).

### TV Brand List

Brand	Code(s)	Brand	Code(s)	Brand	Code(s)
Aiwa:	035, 112, 114, 163	JVC:	004, 008, 012, 029, 055, 060, 075, 091, 105, 106, 111	Pye:	011, 056, 059, 083, 164
Alba:	001, 004, 010, 029, 031, 034, 046, 048, 055, 060, 065, 072, 087, 109, 116, 136	LG:	007, 015, 022, 083, 103, 116, 117, 153	Samsung:	001, 003, 004, 006, 007, 009, 012, 022, 026, 030, 035, 039, 054, 055, 070, 083, 088, 096, 103, 110, 118, 128
Baird:	009, 010, 016, 026	Loewe:	011, 040, 076, 101, 107	Sanyo:	002, 004, 006, 009, 014, 015, 017, 020, 026, 035, 045, 054, 059, 075, 082, 113, 158, 169
Beko:	166, 167, 168	Logik:	001, 002, 007, 009, 055, 133	Sharp:	001, 004, 012, 017, 073, 105, 109, 129, 141, 143, 170, 173
Bush:	001, 004, 026, 029, 031, 035, 037, 043, 048, 055, 056, 072, 083, 087, 108, 109, 116, 136, 160	Matsui:	001, 002, 003, 004, 009, 021, 024, 026, 031, 043, 046, 048, 055, 063, 065, 068, 072, 083, 086, 099, 116, 136	Sony:	002, 004, 012, 013, 017, 020, 047, 105, 130, 149, 155
Ferguson:	010, 016, 024, 038, 043, 065, 084, 098, 136	Mitsubishi:	002, 004, 011, 012, 015, 022, 024, 076, 079, 083, 136	Teac:	001, 020, 022, 035, 037, 059, 060, 068, 076, 109, 115, 116, 124, 136, 146, 158
Fidelity:	035, 055, 059, 062, 076, 078	Orion:	002, 021, 022, 031, 035, 042, 048, 059, 065, 078, 083, 107, 116, 133, 161, 163	Tevion:	083, 104, 109, 116, 127, 136, 138
Goodmans:	002, 003, 004, 009, 029, 031, 035, 043, 055, 056, 072, 074, 083, 084, 086, 088, 100, 102, 108, 109, 116, 127, 133, 136, 141, 160, 162, 172	Panasonic:	003, 009, 015, 026, 030, 053, 062, 075, 105, 131, 154, 174	Thomson:	016, 038, 043, 084, 098
Grundig:	001, 004, 008, 024, 065, 072, 079, 083, 088, 100, 111, 115	Philips:	000, 001, 006, 011, 015, 022, 056, 062, 076, 083, 126, 147, 159, 164	Thorn:	003, 004, 009, 010, 014, 016, 035, 043, 074, 076, 079

## Remote Control Brand Codes

Hitachi:	001, 003, 004, 005, 009, 013, 015, 016, 017, 022, 023, 037, 069, 074, 075, 085, 099, 102, 119, 120, 121, 134, 136, 137, 138, 142, 144, 148, 152, 169, 172	Pioneer:	002, 016, 019, 020, 038, 062, 071, 076, 125	Toshiba:	001, 002, 003, 004, 006, 007, 008, 012, 013, 016, 019, 024, 035, 059, 062, 075, 096, 103, 105, 116, 118, 141, 150, 156
----------	---	----------	---	----------	--

Additional Information



U-MAN-002-08

# TOSHIBA

71-800-044-10

